

# Smart Cam

**Mobile APP**

**User Manual**

Model: K10 / K10H


# Content

1	Camera list.....	3
2	Camera live view.....	4
3	Camera audio listening and speaking.....	5
4	Camera remote playback.....	6
5	Camera screen snapshot.....	7
6	Edit camera.....	8
7	Password reset.....	9
8	Video setting.....	10
	8.1 Video quality.....	10
	8.2 Video flip.....	11
	8.3 Environment mode.....	12
9	WIFI setting.....	13
10	Event setting.....	14
	10.1 Video motion detection.....	14
	10.2 PIR motion detection.....	15
11	Recording setting.....	16
12	Format SD Card.....	17
13	Time zone.....	18
14	Device information.....	19
15	About.....	20

# 1 Camera List

**POSITION:** CAMERA LIST


**DESCRIPTION:** TO ADD A NEW CAMERA AND TO LIST ALL ADDED CAMERAS.

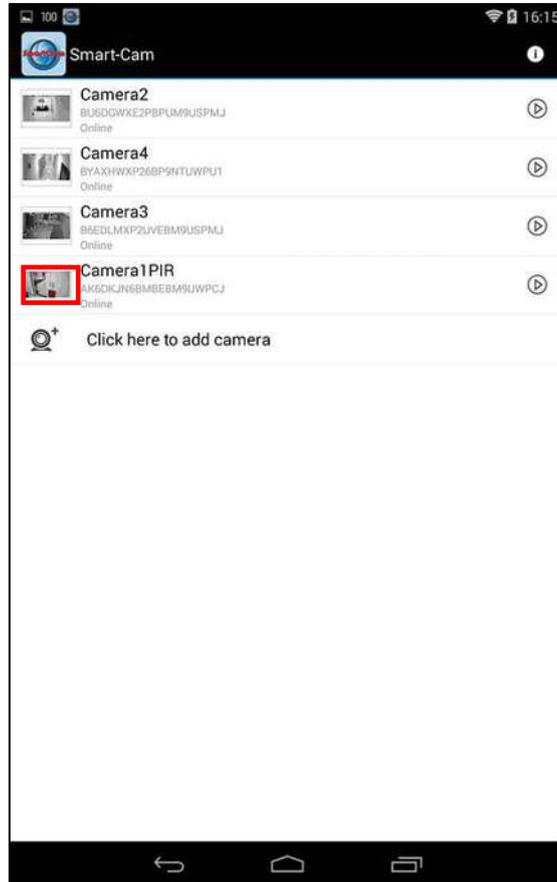

## 2 Camera live view

**POSITION:** CAMERA LIST / LIVE VIEW

**DESCRIPTION:** TO CHECK LIVE VIEW AFTER P2P CONNECTION.

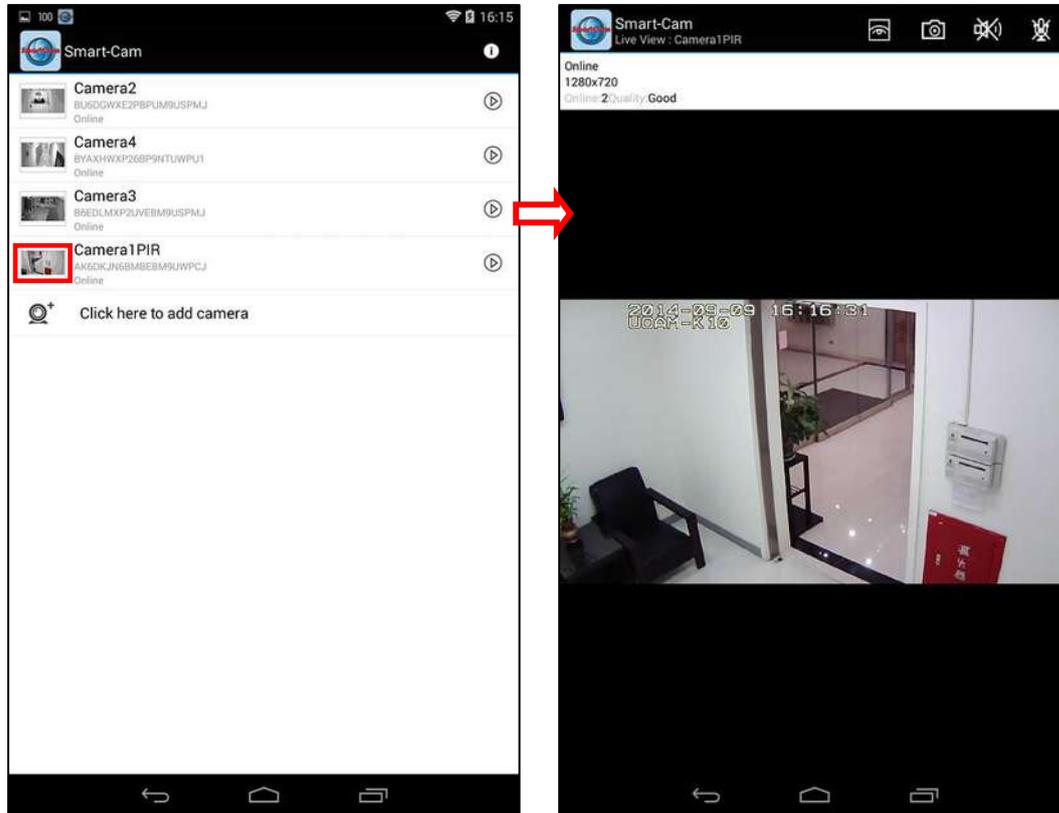

### 3 Camera audio listening and speaking

**POSITION :** CAMERA LIST / LIVE VIEW

**DESCRIPTION :** TO LISTEN / SPEAK FROM THE REMOTE SITE

AUDIO BETWEEN CAMERA AND SMART PHONE



Listen




Talk



## 4 Camera remote playback

**POSITION:** CAMERA LIST / VIEW EVENT / CLICK CHOOSE CLICK / CHOOSE EVENT

**DESCRIPTION:** TO CHECK AND TO VIEW THE EVENT OF A CHOOSEN  
TIME PERIOD

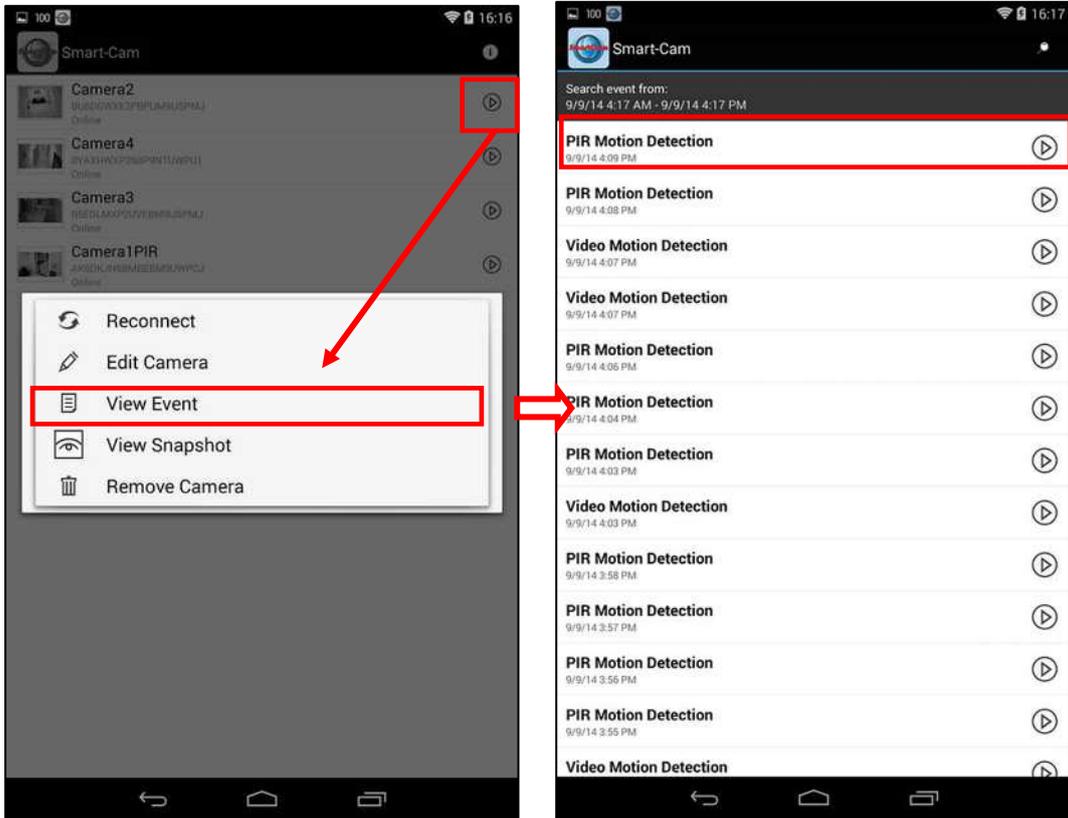


## 5 Camera screen snapshot

**POSITION:** CAMERA LIST / SNAPSHOT /



**DESCRIPTION:** TO TAKE A PHOTO FROM A VIEWING SCREEN FOR REVIEW AFTER SAVE

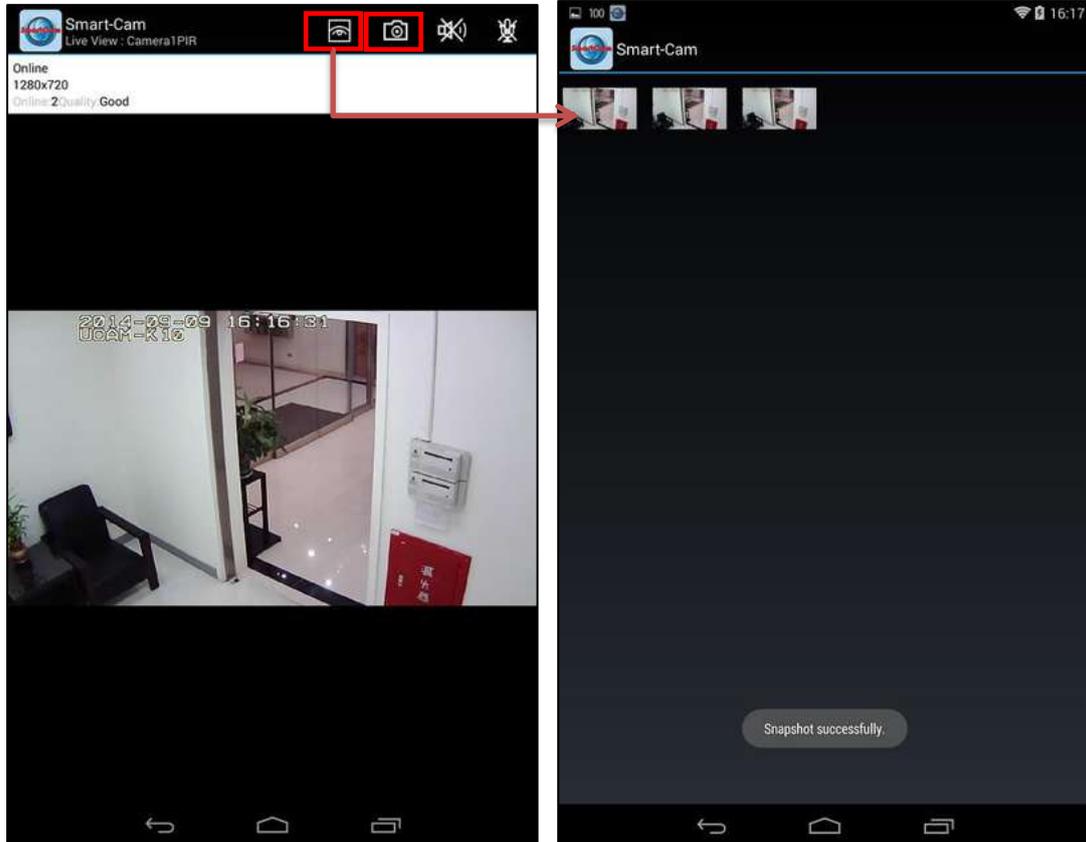


## 6 Edit Camera

**POSITION:** CAMERA LIST / EDIT CAMERA

**DESCRIPTION:**


- TO ENTER DEFAULT PASSWORD
- TO RE-NAME CAMERA
- TO SET UP THE ADVANCED MODE

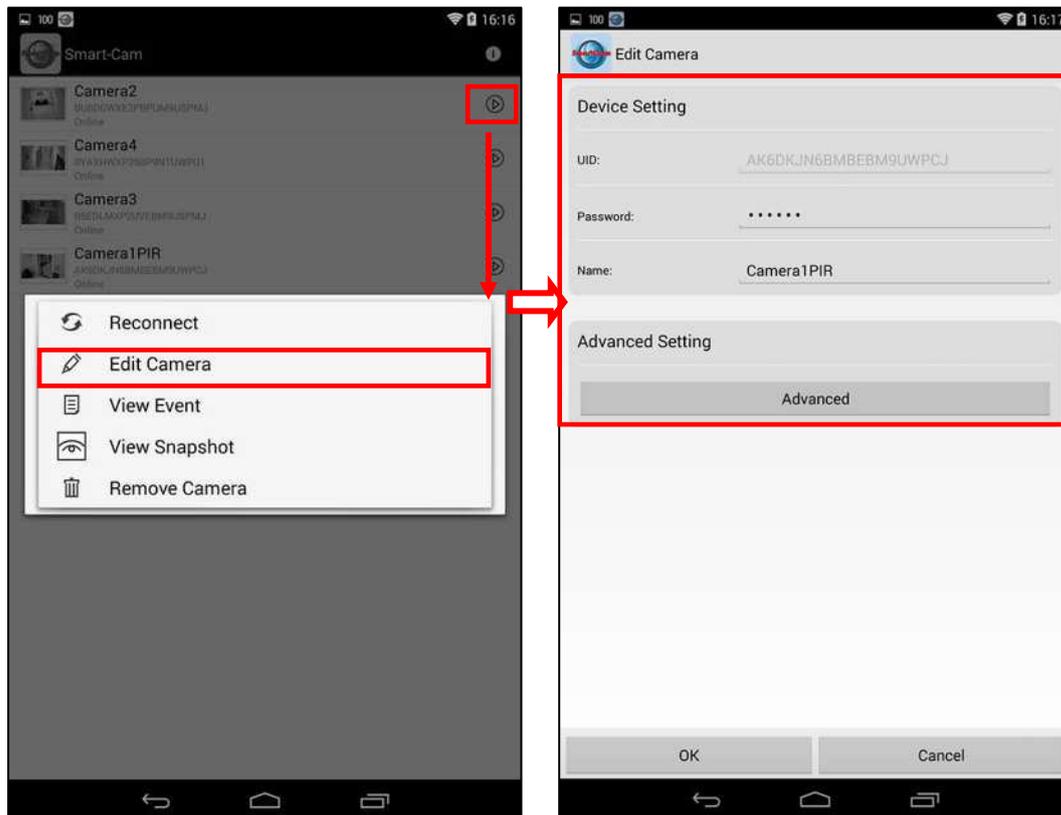

## 7 Password reset

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / PASSWORD RESET

**DESCRIPTION:** TO MODIFY CAMERA PASSWORD

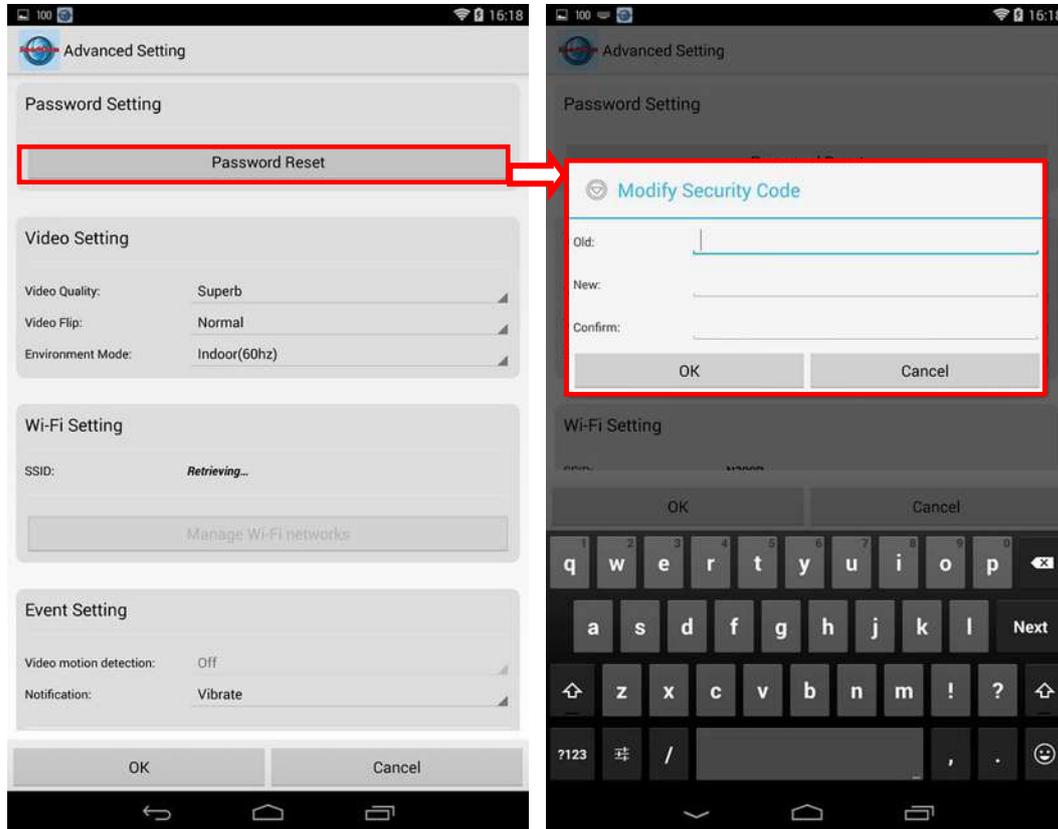

# 8 Video setting


## 8.1 VIDEO QUALITY

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / VIDEO QUALITY

**DESCRIPTION:**

- TO SELECT A NEEDED VIDEO QUALITY .
- VIDEO QUALITY PARAMETER AS BELOW


	Resolution	Frame rate ( FPS )	Bit rate ( kbps )
Superb	1280x720	10	1024
Fine	640x480	10	512
Normal	320x240	10	256

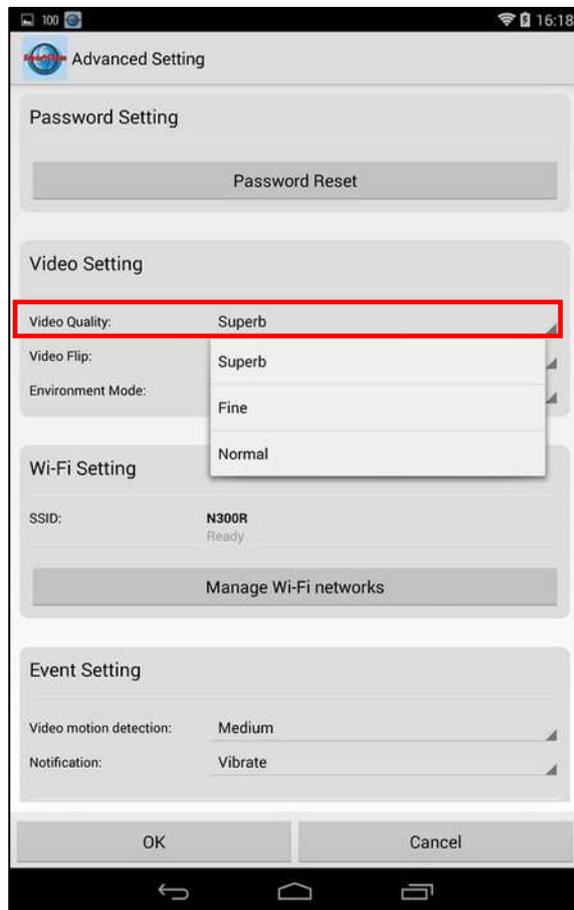

## 8.2 VIDEO FLIP

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / VIDEO FLIP


**DESCRIPTION:** TO FLIP OR TO TURN AROUND THE LIVE VIEW SCREEN WHEN INSTALL IT AGAINST THE CEILING / WALL

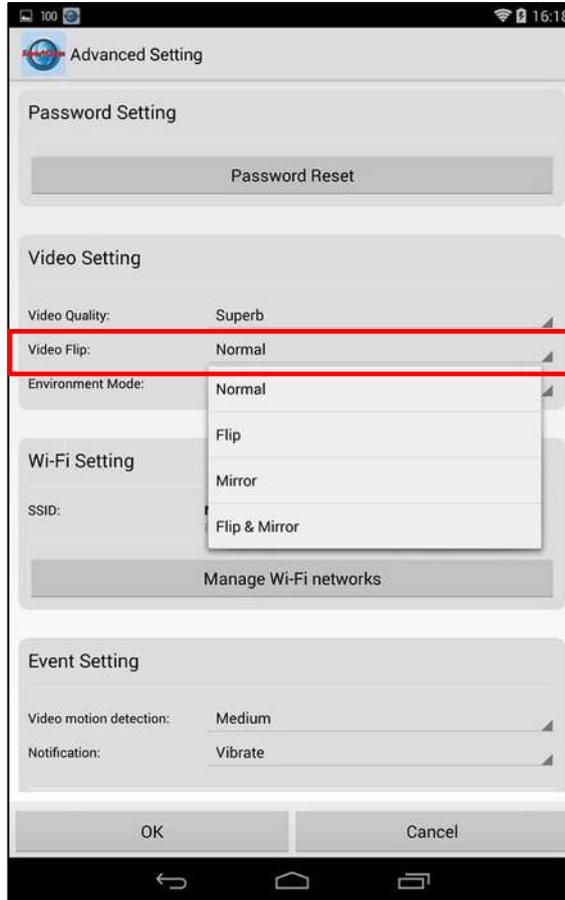

### 8.3 ENVIRONMENT MODE

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING /ENVIRONMENT MODE


**DESCRIPTION:** TO SELECT INDOOR / OUTDOOR / NIGHT MODE, ACCORDING TO ENVIRONMENT CONDITION.

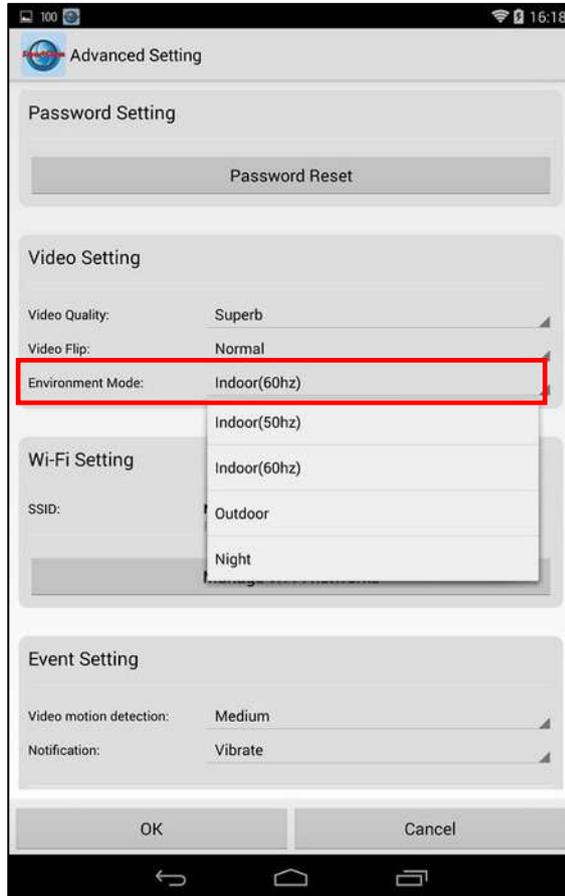

## 9 WI-FI setting

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / WI-FI SETTING

**DESCRIPTION:** TO SET UP CAMERA FOR WI-FI INTERNET ACCESS

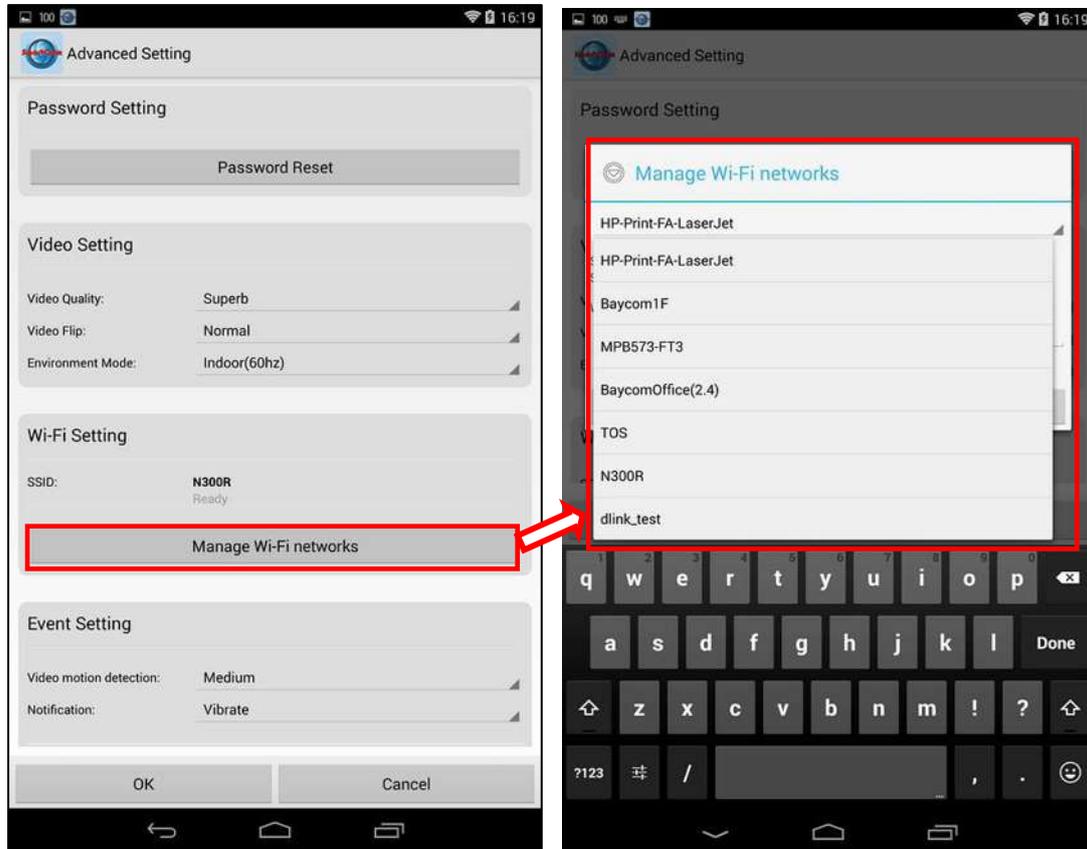


# 10 Event Setting

## 10.1 VIDEO MOTION DETECTION

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / EVENT SETTING / VIDEO MOTION DETECTION

**DESCRIPTION:**

- VIDEO MOTION DETECTION: TO RECORD AN EVENT WHEN A MOVEMENT IS DETECTED IF THE “EVENT” RECORD FUNCTION IS ON.
- NOTIFICATION: PUSH ALERT NOTIFICATION TO YOUR MOBILE DEVICE WHEN THE CAMERA MOTION TRIGGERED.

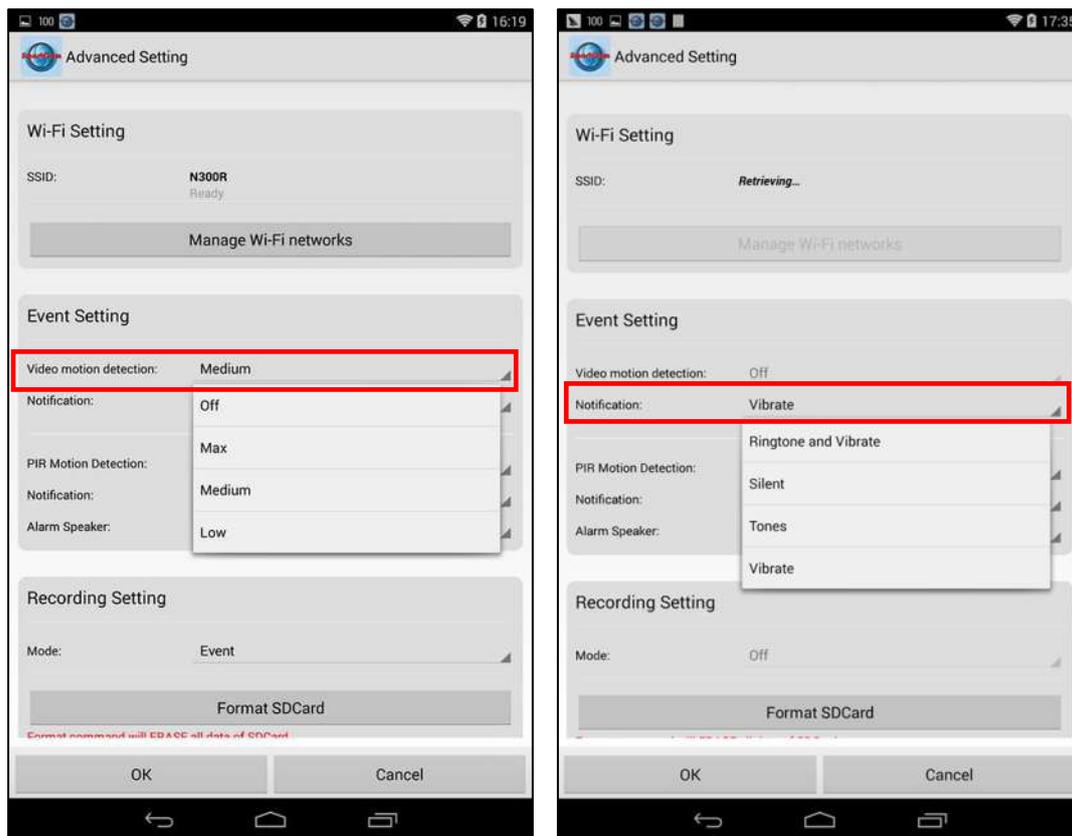


## 10.2 PIR MOTION DETECTION

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / EVENT SETTING / PIR MOTION DETECTION

**DESCRIPTION:**

- PIR MOTION DETECTION: TO RECORD AN EVENT WHEN A PIR SENSOR IS DETECTED IF THE “EVENT” RECORD FUNCTION IS ON.
- NOTIFICATION: PUSH ALERT NOTIFICATION TO YOUR MOBILE DEVICE WHEN CAMERA MOTION TRIGGERED.
- ALARM SPEAKER : SOUND ALARM 5 SECONDS WHEN THE CAMERA PIR MOTION TRIGGERED (REQUIRES EXTERNAL SPEAKER)

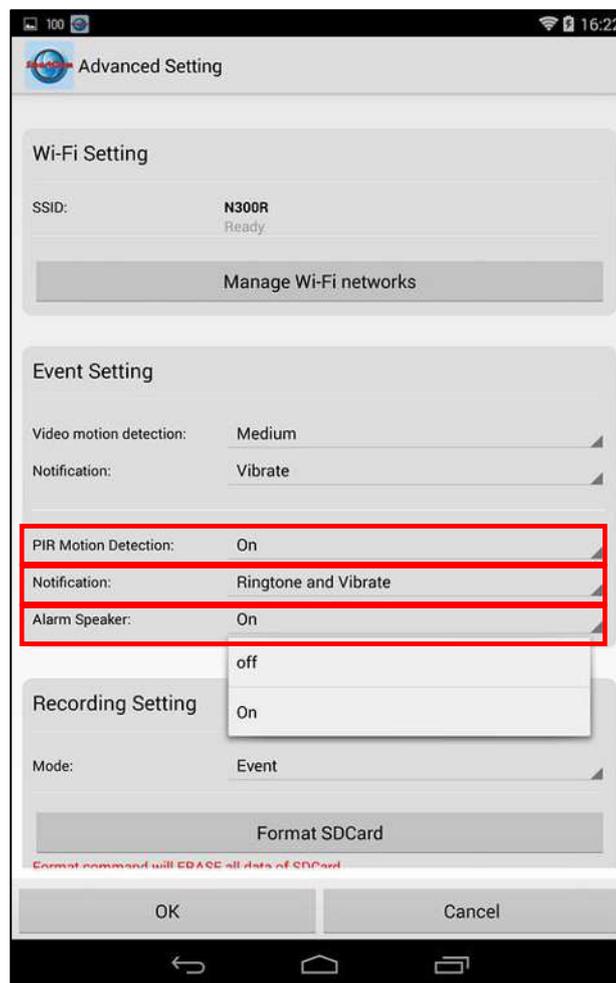


# 11 Recording Setting

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / RECORDING SETTING

**DESCRIPTION:** TO SET UP RECORDING MODE:

OFF	NO NEED RECORD ANYTIME
Full Time	TO RECORD CONTINUOUSLY 24 HOURS
Event	TO RECORD FOR 12 SECONDS VIDEO CLIP WHEN THE MOTION DETECTION IS TRIGGERED.

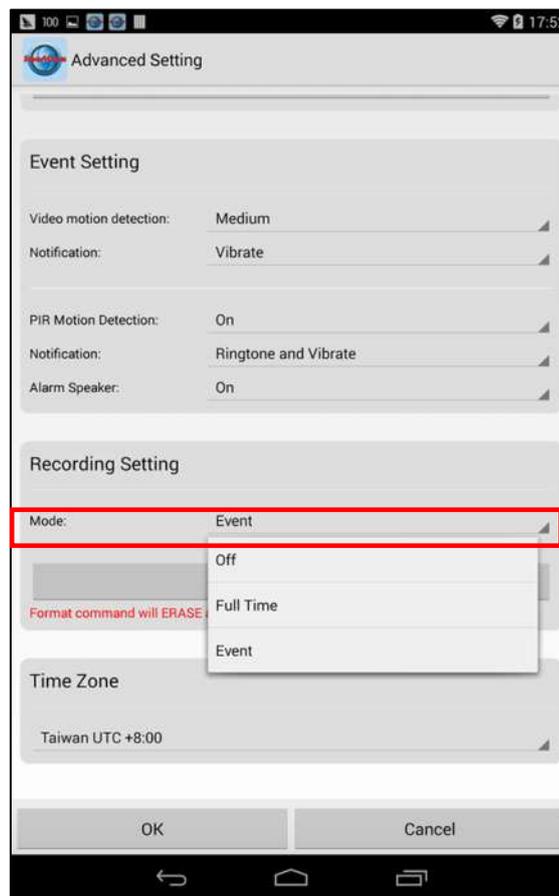


## 12 Format a SD Card

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / RECORDING SETTING

**DESCRIPTION:** TO INITIALIZE SD CARD OR TO DELETE THE EXISTING RECORDS.


( BEFORE FORMAT SD , RECORDING MODE STATUS NEED CHANGE TO "OFF " )

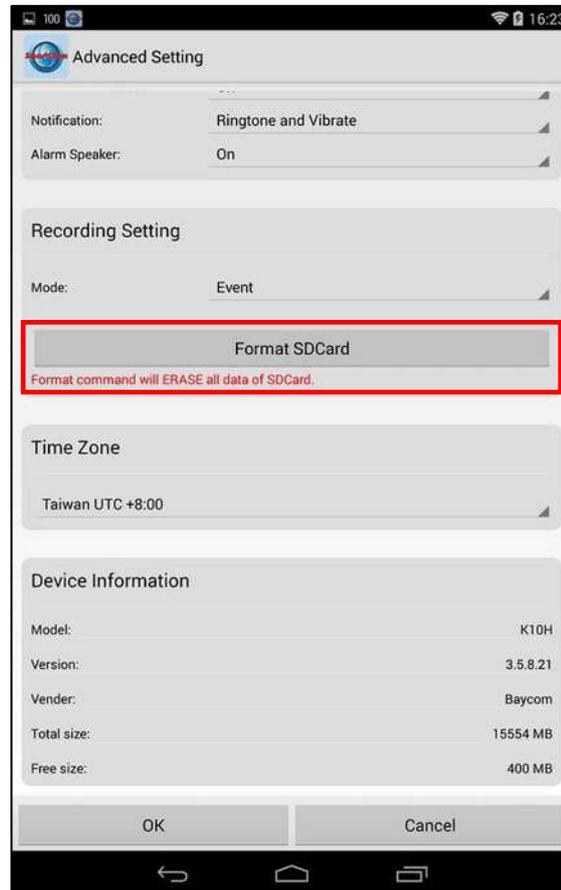

## 13 Time Zone

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / TIME ZONE


**DESCRIPTION:** SYNC NTP AND DISPLAY THE CAMERA LOCAL TIME ON THE SCREEN

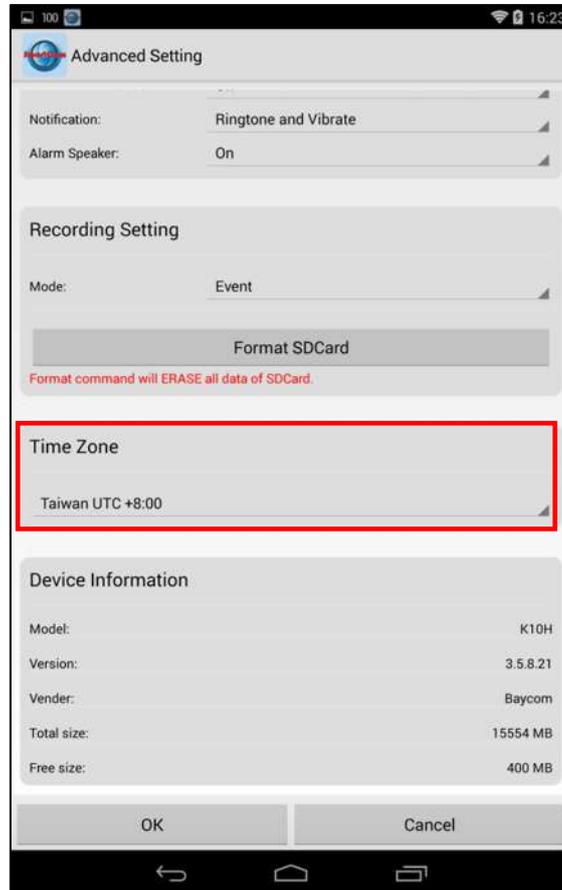

## 14 Device information

**POSITION:** CAMERA LIST / EDIT CAMERA / ADVANCED SETTING / DEVICE INFORMATION

**DESCRIPTION:** TO CHECK CAMERA MODEL, FIRMWARE VERSION, VENDOR NAME, TOTAL SIZE OF STORAGE CAPACITY, FREE SIZE OF STORAGE CAPACITY

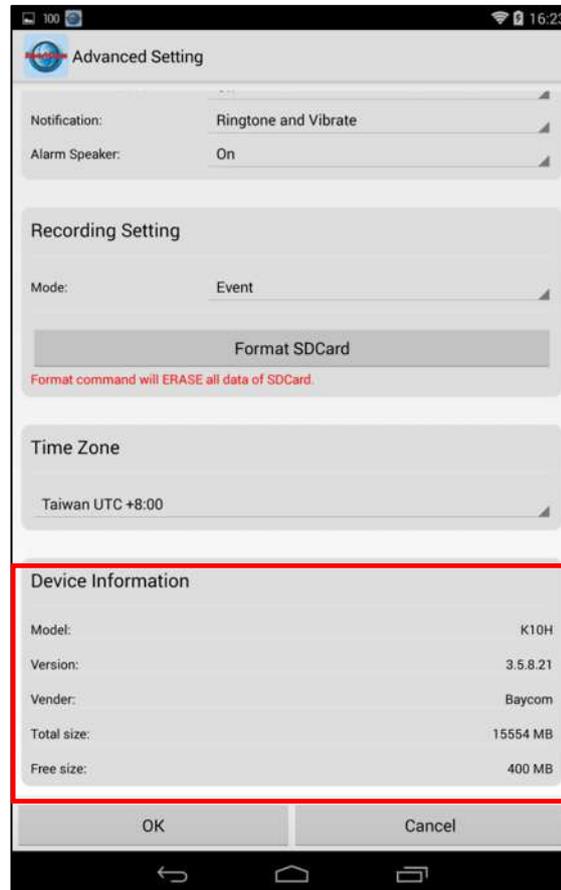

# 15 About

**POSITION:** CAMERA LIST / ABOUT

**DESCRIPTION:** TO CHECK APP NAME AND VERSION

