


# BLACK & DECKER™


## Instructions

### No. 80-340 Grass Catcher For 18" Single Blade Lawn Mowers

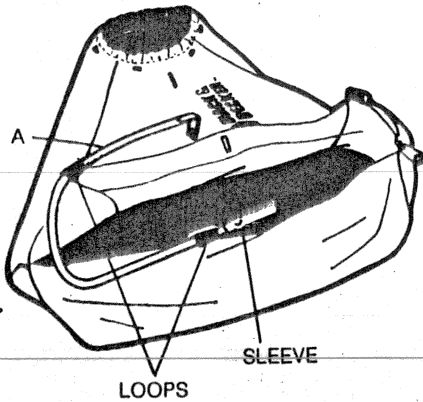


**1.**

Unzip back panel of bag. Slide rod "A" (the one with the sleeve on the end) around through the two bag loops as shown. Note that bend in flattened end of rod should point downward.

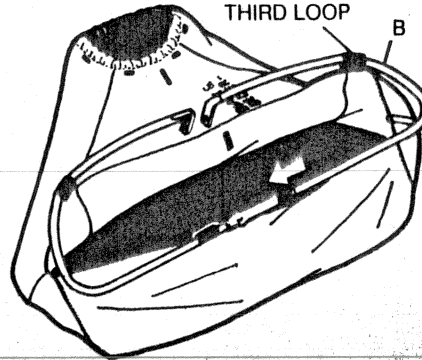


**2.**

Slide rod "B" (without sleeve on end) around through third loop as shown. Push round end of rod "B" into sleeve on end of rod "A".

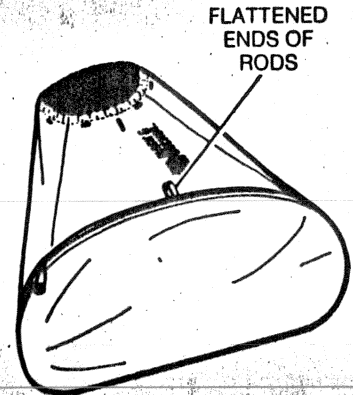


**3.**

Pull zippered end of bag up and over support rods. Push bent, flattened ends of rods through hole in top of bag.

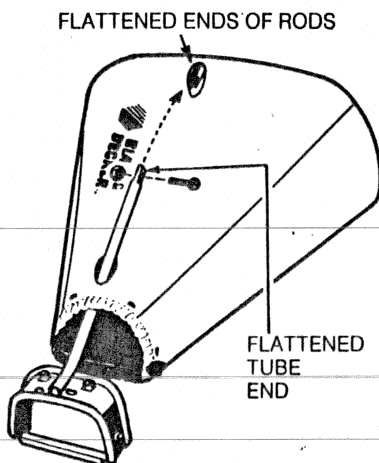

**4.**

Slide flattened end of handle tube through hole in bag as shown. Insert flattened ends of rods INTO the flattened end of the handle tube. Line up the holes and attach the tube and rod ends with screw and nut shown.

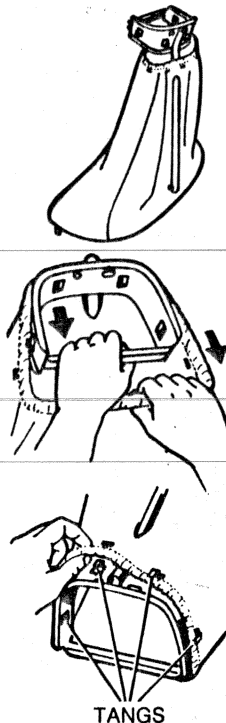


**5.**

STEP A — Stand bag on zippered end.

STEP B — Pull garter over tube side of chute.

STEP C — Exert slight downward pressure on the frame while pulling garter into channel at bottom of chute.

STEP D — Position garter at top and sides of the chute, placing 4 garter holes over 4 tangs on the chute. Push gathered material and garter under each hook.

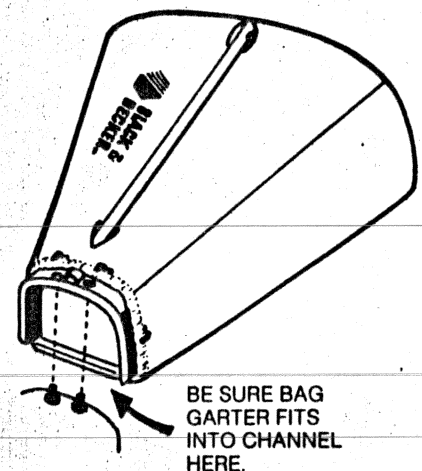

**6.**

Mount the grass bag assembly on the mower by placing the holes in the chute over posts.

WARNING: Fabric is subject to wear and deterioration under normal usage. Check bag frequently for wear. Replace when worn with Replacement Bag No. 80-110 available from your dealer or B&D Service Center.

**BLACK & DECKER (U.S.) INC.**

10 North Park Drive, P.O. 798, Hunt Valley, MD 21030-0798