Mobile Phone Monitor Software User's Manual

For Android only

## **Table of Contents**

1	OVERVIEW
1.1	General Introduction3
1.2	Feature
1.3	Environment3
2	INSTALLATION AND OPERATION4
3	DVR SETUP8
3.1	Encode
3.2	Account

## 1 Overview

## 1.1 General Introduction

This user's manual is to help you install and use the mobile phone monitor software based on Android mobile phone.

## 1.2 Feature

This software has the following features:

- Use mobile phone to view real-time video.
- Support PTZ control operation.

### 1.3 Environment

Gphone HTC , HTC G1, HTC Magic, HTC Hero, HTC G5 and etc.

## 2 Installation and Operation

Please follow the steps listed below to install the software.

1) Copy DMSS.apk installation package to the Android mobile phone via the data cable. See Figure 2-1.




Figure 2-1

2) Find the DMSS.apk in the specified folder. Click the DMSS application package to begin the installation. The interface is shown as below after the installation. See Figure 2-2.



Figure 2-2

3) Click DMSS button, the initial interface is shown as below. See Figure 2-3.

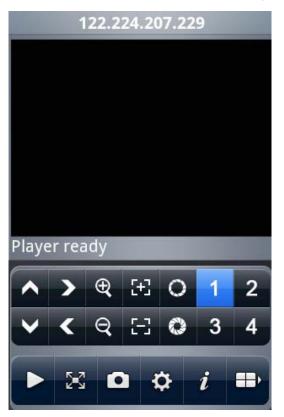



Please refer to the following sheet for detailed information.

^	PTZ up	>	PTZ right	æ	Zoom in
5+3	Focus +	0	Aperture +	1	Channel 1
2	Channel 2	~	PTZ down	<	PTZ left
Q	Zoom out	83	Focus -	0	Aperture -
3	Channel 3	4	Channel 4		Play/Pause
2-3	Full- screen/normal screen	D	Snapshot	<b>¢</b>	Setting
i	About		Next channel group		

#### Important

The snapshot image is saved in default Android image folder.

4) If it is your first time to use the software, or you want to modify current setup, please click button to modify the setup. See Figure 2-4.

- Address: DVR IP in WAN or dynamic domain.
- Port: DVR port value.

- User ID: The user name you login the IE.
- Password: The password you login the IE.

Address:	122.224.207.229	8			
Port:	37777	8			
Account Info					
User ID:	admin	8			
Password:	•••••	8			



5) Click the icon to switch between the normal screen and then full screen. See Figure 2-5.





7) Select the corresponding channel name, system can open the specified channel and then play the video automatically. System default setup is to display the channel 1 to channel 4. Please



click click click click click to display the next four channels (the channel 5 to channel 8). You can click this button again to go back to previous four channels (channel 1 to channel 4.).

#### Important

System default setup is to display 8 channels after initialization. That is to say, there are two options: channel 1-4 and channel 5-8.

After the device connected to the Android, system can support 16-ch or 32-ch according to your device type.

# 3 DVR Setup

Please set the connected DVR encode information to make the device suitable for the mobile phone monitor.

You can go to the DVR Web or go to the DVR local end to complete the setup. In this user's manual, we introduce how to finish setup at the local end.

#### Note

In case the mobile phone monitor adversely affects the regularly monitor, the mobile phone just gets the extra stream (not the main stream) to realize the real-time monitor. So, before the operation, please make sure current DVR supports dual stream function.

### 3.1 Encode

Encode interface is shown as in Figure 3-1. You can refer to the following setup:

- Resolution: CIF/QCIF.
- Frame Rate: The value ranges from 5 to 10.
- Bit rate type: CBR
- Bit Rate: 64-256Kb/S

	ENCODE			
Channel	1	•		
Compression	H.264		Extra Stream1 ▼	
Resolution	CIF		CIF	
Frame Rate(FPS)	25		8 -	
Bit Rate Type	CBR		CBR 🔻	
Bit Rate(Kb/S)	640 🔻		192 -	
Reference Bit Rate	192-1024Kb/S		56-320Kb/S	
Audio/Video				
	OVERLAY			
	SNAPSHOT			
Copy Paste Default Save Cancel				

Figure 3-1

You can adjust the setup according to your mobile phone performance and network environment. You can lower the frame rate to guarantee fluent video if the network is not so good.

### 3.2 Account

For mobile phone account, please make sure it is reusable (support multiple users using the same account to login at the same time) and has PTZ control right. See Figure 3-2. Then, when other uses are monitor properly, you can use mobile phone to monitor and realize PTZ control operation.

Name ADMIN   Password Confirm   Password Confirm   Memo Group   Group admin   77 Authority   70 RS232   71 NETWORK   72 ALARM   73 DETECT   74 PAN/TILT/ZOOM   75 DISPLAY   76 DEFAULT			Add User			
Memo Group admin 77 Authority 70  RS232 71  NETWORK 72  ALARM 73  DETECT 74  PAN/TILT/ZOOM 75  DISPLAY 76  DEFAULT	Name	ADMIN	Reuseable			
Group admin  77 Authority 70  RS232 71  NETWORK 72  ALARM 73  DETECT 74  PAN/TILT/ZOOM 75  DISPLAY 76  DEFAULT	Password	•••••	Confirm			
77     Authority       70     RS232       71     NETWORK       72     ALARM       73     DETECT       74     PAN/TILT/ZOOM       75     DISPLAY       76     DEFAULT	Memo					
70       ✓ RS232         71       ✓ NETWORK         72       ✓ ALARM         73       ✓ DETECT         74       ✓ PAN/TILT/ZOOM         75       ✓ DISPLAY         76       ✓ DEFAULT	Group	admin 🔻				
	77       Authority         70       ✓ RS232         71       ✓ NETWORK         72       ✓ ALARM         73       ✓ DETECT         74       ✓ PAN/TILT/ZOOM         75       ✓ DISPLAY         76       ✓ DEFAULT         ►!       Page Up         *!       Page Up         *!       Page Down         *       Enable/Disable Authority					

Figure 3-2

Note

This user's manual is for reference only. Slight difference may be found in user interface. All the designs and software here are subject to change without prior written notice. Please visit our website for more information.