


TEVION® Quick Set-Up Guide

TWIN SCREEN PORTABLE DVD PLAYER

REMOTE CONTROL FUNCTIONS

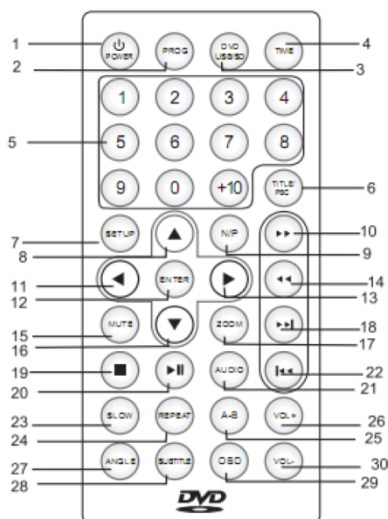


- | | |
|-----------------|-----------------|
| 1 Power | 16 Down arrow |
| 2 Program | 17 Zoom |
| 3 DVD/USB/SD | 18 Next |
| 4 Time | 19 Stop |
| 5 Numeric keys | 20 Play / pause |
| 6 Title / PBC | 21 Audio |
| 7 Setup | 22 Previous |
| 8 Up arrow | 23 Slow |
| 9 N/P | 24 Repeat |
| 10 Fast forward | 25 A-B repeat |
| 11 Left arrow | 26 Volume + |
| 12 Enter | 27 Angle |
| 13 Right arrow | 28 Subtitle |
| 14 Fast rewind | 29 OSD |
| 15 Mute | 30 Volume - |


DVD FUNCTIONS

Please Note The DVD Player Is Built Into The Master Unit


- 1 Infra-red
- 2 DVD/USB/SD
- 3 Setup
- 4 Ok
- 5 Direction Keys
- 6 Stop
- 7 Repeat
- 8 Power
- 9 Charge
- 10 LCD Display

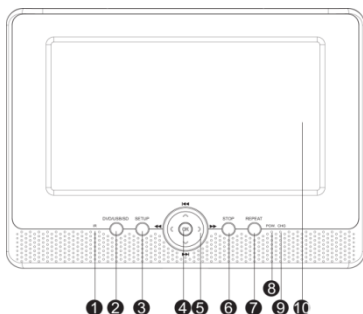

- 11 Charge / Power ON
- 12 Volume Control
- 13 DC In Jack
- 14 Earphone Jack
- 15 Coaxial
- 16 AV Out jack
- 17 USB Port
- 18 SD/MMC Port

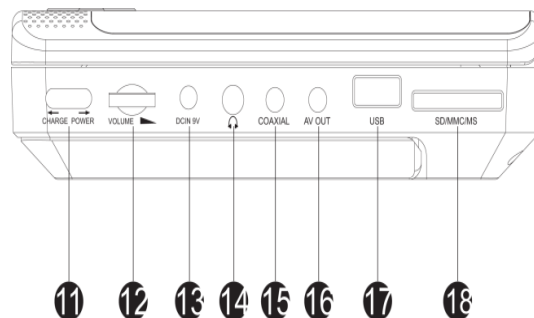

Using the supplied AV cable connect your portable DVD player to any TV unit

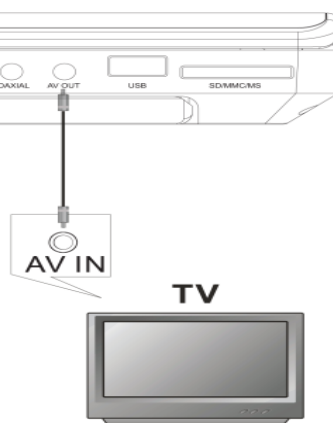



TEVION® Quick Set-Up Guide

TWIN SCREEN PORTABLE DVD PLAYER

ACCESSORIES



Remote Control



All In One Carry Case



Power Cable



2 Sets Earphones



Mains Power Adaptor



In Car Charger



2 x Headrest Bracket
with velcro straps



AV Cable



AUX Cable

DVD OPERATION

1. Before use, open the disc cover and remove the white protector card from inside the deck.
2. Remove all transparent protection film from the player, including the display screen.
3. Ensure the "Charge / Power" switch on the right-hand side of the player is set to charge.
4. Connect the mains power adaptor to the DC-in socket and charge fully for 6 hours.
5. Once the player is fully charged slide the "charge / power" switch to "power", open the disc cover and carefully insert a DVD (label side facing up) until it clicks into place. Close the disc cover and the DVD will load automatically.
6. Your DVD Menu screen will appear. Use the directional arrow keys and enter button for your required selection.
7. Please refer to your user manual for a list of compatible disc playback formats.

USB / SD Mode

1. The USB input and SD/MMC card slot can be used for movie, music and photo playback.
2. Insert USB device or SD/MMC card into the relevant slot at the side of the player.
3. If media is inserted in both USB and SD/MMC slot, then you can select the desired input source by pressing the MODE button on the remote control or the DVD/USB/SD button on the DVD player. Use the directional arrow keys to highlight your selection and press OK to confirm.
4. Please refer to the user manual for a list of compatible formats.

Maintenance & care

If used correctly and handled with care, this DVD player will serve you for many years. If however, you should experience any difficulties, please call our customer support team on the number below.

For full instructions, please refer to the user manual