

# User's Manual S9 HD PVR

**High Definition Digital Satellite Recorder**

Personal Video Recorder  
1 Common Interface

# SAFETY PRECAUTIONS

## CAUTION:



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to "dangerous voltage" and to prevent from a risk of electric shock.



**Warning:**  
To reduce the risk of electric shock, don't open the cabinet. Refer servicing to qualified personnel only.



The exclamation point within an equilateral triangle is intended to alert the user to important operating and maintenance (servicing).

**WARNING:** Do not use this STB where contact with or immersion in water is a possibility. Do not use near flower vase, washbowls, kitchen sinks, laundry tubs, swimming pools, etc.

**WARNING:** Do not put the candle or lamp stand on the cabinet; otherwise, there is the danger of fire.

**WARNING:** The unit should be connected to a power supply only of the type described in the operating instructions or as marked on the unit. If you are not sure of the type of power supply (for example, 120 or 230 V) to your home, consult your local dealer or local power company.

**WARNING:** This product install diodes. Do not open the cabinet or touch any parts in the inner mechanism. Consult your local dealer for technical service if the opening is required.

**Note:** To ensure proper use of this product, please read this User manual carefully and retain for further reference.

**Note:** This product install diodes. Do not open the cabinet to avoid the unit direct exposure to radiation.

**Unit Cleaning:** After the unit power is turned off, you can clean the cabinet, panel and remote control with a soft cloth lightly moistened with a mild detergent solution.

**Attachments:** Never add any attachments and/or equipment without the manufacturer consent; as such additions may result in the risk of fire, electric shock, or other personal injury.

**Locating:** Slots and openings in the cabinet are provided for ventilation to protect it from overheating. Do not block these openings or allow them to be blocked by placing the STB on a bed, sofa, or other similar surface, nor should it be placed over a radiator or heat register.

**Power-Cord Protection:** Place the power-supply cord out of the way, where it will not be walked on. Please take special attentions to cords at plugs, convenience receptacles, and the point where they exit from the unit.

**Object and Liquid Entry:** Never put objects of any kind into this STB through openings, as they may touch dangerous voltage points or short-out parts that could result in a fire or electric shock. Never spill any liquid on the STB.

**Note:** Moisture may be formed on the lens in the following conditions:

- when the unit is suddenly moved from a cold environment or an air-condition room to a warm place.
- immediately after a heater has been turned on.
- in a steamy or very humid room.

If the moisture forms inside the unit, it may not operate properly. To correct this problem, turn on the power and wait about two hours for the moisture to evaporate.

**Parts Replacement:** When the unit parts need to be replaced, user should make sure the service technician use the replacement parts specified by the manufacturer or having the same characteristics as the original part. Unauthorized replacement may put the unit in the risk of fire, electric shock or other hazards.

**Safety Check:** After all the maintenances and repairs are done, user is required to request the service technician to conduct the overall safety check to ensure the machine is in the proper condition.

## ENVIRONMENT PROTECTION



### Attention!

If you want to dispose this equipment, please do not use ordinary dust bin!

Used electrical and electronic equipment must be treated separately and in accordance with legislation that requires proper treatment, recovery and recycling of used electrical and electronic equipment.

If your used electrical or electronic equipment has batteries or accumulators, please dispose of these separately beforehand according to local requirements.

# CONTENTS

<b>1. REMOTE CONTROLLER .....</b>	<b>7</b>
<b>2. BASIC OPERATIONS.....</b>	<b>8</b>
2.1 TURN ON STB.....	8
2.2 POWER.....	8
2.3 CHANNEL UP/CHANNEL DOWN.....	8
2.4 VOLUME UP/VOLUME DOWN.....	8
2.5 NUMBER.....	8
2.6 MUTE.....	8
2.7 PAUSE.....	8
2.8 RECALL.....	8
2.9 FAVORITE.....	9
2.10 AUDIO.....	9
2.11 INFORMATION.....	9
2.12 EPG.....	9
2.13 TV/RADIO.....	10
2.14 CHANNEL LIST.....	10
2.15 SLEEP.....	11
2.16 PAGE UP/PAGE DOWN.....	11
2.17 MULTI PICTURES.....	11
2.18 TEXT.....	11
2.19 SUBTITLE.....	11
2.20 FIND.....	11
2.21 ZOOM.....	11
2.22 TV/STB.....	11
2.23 MENU.....	11
2.24 EXIT.....	11
<b>3.CHANNE.....</b>	<b>12</b>
3.1 TV CHANNEL LIST.....	12
3.1.1. Favorite.....	12
3.1.2. Lock.....	12
3.1.3. Skip.....	13
3.1.4. Move.....	13
3.1.5. Edit.....	13
3.2 RADIO CHANNEL LIST.....	14
3.3 DELETE ALL.....	14
<b>4.INSTALLATION.....</b>	<b>14</b>
4.1 ANTENNA CONNECTION.....	14
4.2 SATELLITE LIST.....	15
4.3 ANTENNA SETUP.....	15
4.4 SINGLE SATELLITE SEARCH.....	17
4.5 MULTI SATELLITE SEARCH.....	17
4.6 TP LIST.....	18
4.7 OTHER.....	19
<b>5. SYSTEM SETUP.....</b>	<b>19</b>
5.1 LANGUAGE.....	19
5.2 TV SYSTEM.....	20
5.3 LOCAL TIME SETTING.....	21
5.4 TIMER SETTING.....	21
5.5 PARENTAL LOCK.....	21
5.6 OSD SETTING.....	22
5.7 FAVORTIE.....	22
<b>6.TOOT.....</b>	<b>23</b>
6.1 INFORMATION.....	23
6.2 FACTORY SETTING.....	23
6.3 UPGRADE BY RS232.....	24
6.4 COMMON INTERFACE.....	24
6.5 UPGRADE BY USB.....	24
6.6REMOVE USB DEVICE SAFEY.....	24
<b>7. NETWORK LOCAL SETTING.....</b>	<b>25</b>
7.1 NETWORK LOCAL SETTING.....	25

---

<b>8. REC.....</b>	<b>25</b>
8.1 MUSIC&PICTURE.....	25
8.2 RECORD MANAGER.....	27
8.2.1 LOCK.....	27
8.2.2 DELETE.....	27
8.2.3 RENAME.....	27
8.3 HDD INFORMATION.....	27
8.4 HDD FORMAT.....	27
8.5 TIMESHIFT.....	27
8.6 JUMP.....	28



### **The Digital Video Broadcasting logo.**

This logo tells you that this receiver is compliant with the DVB standards.



### **The caution risk of electrical shock - do not open symbol**

This symbol tells you that you are not allowed to open the receiver. Only authorized (service) technicians are allowed to open the box.



### **The CE mark.**

This mark tells you that the receiver is following the provisions of Council Directive 89/336/EEC on the approximation of the laws of the Member States relating to the electromagnetic compatibility and the provisions of Council Directive 73/23/EEC and 93/68/EEC on the approximation of the laws of the Member States relating to low voltage and electrical safety.



### **The double insulation symbol.**

This symbol tells you that the receiver is electrically safe within the normal use of the receiver as stated in the safety chapter.



### **Environment protection first!**

- Your appliance contains valuable materials which can be recovered or recycled.
- Leave it at a local civic waste collection point.

## 1. Remote Controller



## 2. Basic Operations

### 2.1 Turn on STB

First, press the [Device's Main Power] to turn on the Unit.

When the STB is first used, there will play the first channel from the default Channel List. If the STB is not first used, STB will play the same channel as last time before turning off.

#### ? Frequently Asked Question

**Q: The power of my STB has been turned on and not in Standby mode, but the TV screen showed nothing:**

A: Make sure the TV set has been set to the correct video input (not the TV channels). For example, if you have connected the unit with the Video1 input of the TV set, the TV set has to be switched to Video1.

**Q: The power of my STB has been turn on and not in Standby mode, but the TV screen showed nothing except "one ball with No Signal image".**

A: That means the channel, which you select, is no signal. It could be several causes:

1 The channel which you select is not in your allocate satellite. The simply solution is to change Channel.

2 The signal of current TV channel is too weak. You can try to change channel to other strong signal channels. If the problems still exist, please consult your local dealer or other professionals for technical service.

3 You use the Dual LNB, and you need [Modify LNB Type](#)

### 2.2 Power

- 1 Press [Power] Key can enter the Standby state.
- 2 In Standby state, press [Power] Key again can call back the unit and go on playing the previous channel.
- 3 User can disconnect the device's main power to end the Standby state.

### 2.3 Channel Up/Channel Down

In full screen, press [CH+/CH-] to change channel.

### 2.4 Volume Up/Volume Down-

In full screen, press [VOL+/VOL-] to adjust volume.

### 2.5 Number

In full screen, use number key to choose channel and then press [OK] to switch to the channel.

### 2.6 Mute

- 1 Press [MUTE] key to mute the sound and the screen will show up mute OSD.
- 2 Press [MUTE] key again to restore the sound.

### 2.7 Pause

- 1 In playing mode, press [Pause] key, the picture will be paused, but the sound of the channel will still continue.
- 2 Press [PAUSE] key again, the screen's picture will skip over to the current playing picture, and the sound of the channel will corresponding playing.

### 2.8 Recall

Press [RECALL] key will directly switch to the previous channel that you played before current channel.

## 2.9 Favorite

1 In full screen, press [FAV] key, it will display a window of "Favorite Group" on the left of the Screen.



2 In the window of "Favorite", you can move highlight by pressing [Up/Down] key and press [OK] key to enter the group you chose.

3 In the window of "Fav group X", you can move highlight by pressing [Up/Down] key and press [OK] key to Switch to the channel. Pressing [PG+/PG-] keys can implement the "Page up/Page down" function.



4 You also can press [Volume Up/Volume Down] keys to select different "Favorite Group".

5 Press [Exit] key to exit the current window.

### ? Frequently Asked Question

**Q: Why the screen displays "No Favorite Channel", after pressing [Favorite] key?**

**A:** It because you haven't set any channels as "favorite channel". Please refer to Favorite.

## 2.10 Audio

1 In full screen, press [AUDIO] key can open the "Audio" window on the screen.



2 You can modify the audio track by press [Up/Down] key and modify the audio mode by press [left/right] key.

3 Mode: Left/Right/Stereo/Mono.


## 2.11 Information

In full screen, press [INFO] key can open information window, The parameters of the current channel will show on the window.




## 2.12 EPG


1 The STB has an Electronic Program Guide (EPG) to help you navigate channels through all the possible viewing options. The EPG supplies information such as channel listings, starting and ending times for all available channels. Press [EPG] key to display EPG screen.

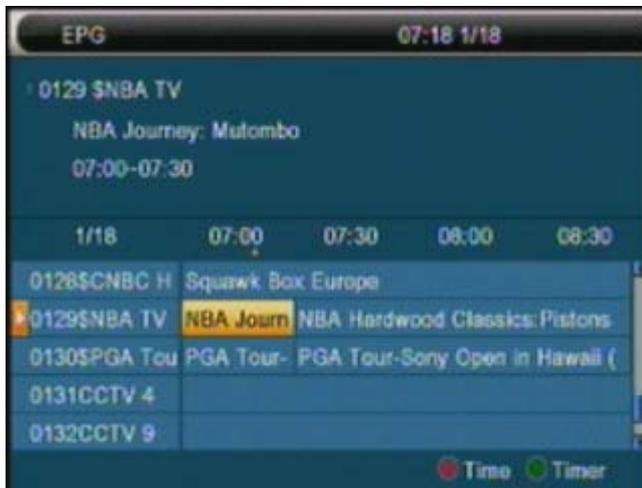

2 Press [OK] key in each item can see more detail information and press [Red] key to cancel

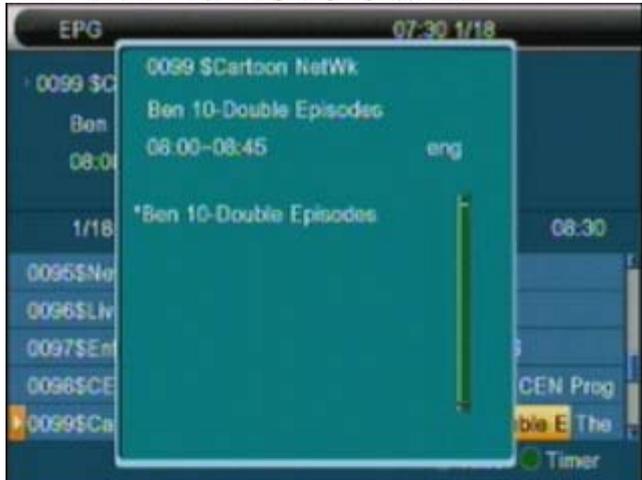

3 Press [Red] key in EPG menu can display "Time Bar" Menu. In "Time Bar" menu, you can press Left/Right) to [select "back/current time/last program or -0:30/next program or +0:30/-2:00/+2:00/last day/next day". Press [Up/Down] key to channel change.

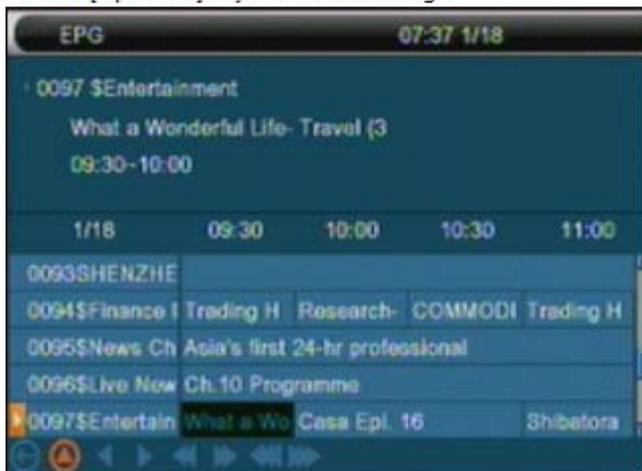

4 Press [Green] key in EPG menu can open timer menu. User can save a timer as he want.



5 In EPG menu, press [Exit] to close EPG screen.

## 2.13 TV/RADIO

In TV mode, pressing [TV/RADIO] key can switch to Radio mode. In Radio mode, press [TV/RADIO] key to switch to TV mode.

## 2.14 Channel List

1 In full screen, press [OK] key or [CH.LIST] can enter "Channel List".



- 2 Press [Left/Right] key to change satellite.
- 3 Press [Up/Down] key to move highlight and press [OK] key to play the highlighted channel.
- 4 Press [PG+/PG-] key to page up and page Down.
- 5 Press [Exit] key to exit the channel list.

## 2.15 Sleep

- 1 This function can set sleep timer. After you set a sleep timer, the system will enter into standby state automatically when the sleep time arrive.
- 2 Pressing [SLEEP] key, it will switch the mode Between on/off( Sleep in 10/30/60/90/120 Minutes.)

## 2.16 Page Up/Page Down

- 1 In Channel list, press [PG+/PG-] key can page up and down the channel list.
- 2 In full screen, press [Page+/Page-] key can switch satellite directly.

## 2.17 TEXT

- 1 Press [TEXT] key in full screen, you can open teletext page on the channel which has teletext information.
- 2 If the channel has no teletext information, it will show "No Teletext Data" on the screen.

## 2.18 Subtitle

- 1 Press [SUBTITLE] key in full screen, you can switch subtitle on or off.

## 2.19 Find



- 1 In full screen press [FIND] key can open the "Find" window like above. Press [Left/Right/Up/Down] key to move highlight and press [OK] key to input the selected symbol or letter into the dialogue. The search result display on the right screen. You can press [Red] key to delete the char, [Blue] key to confirm, [Green] key to cancel.
- 2 Pressing [Exit] key can close "Find" window.

## 2.20 Zoom

- 1 The [ZOOM] key allows you to magnify a certain area on the images.
- 2 Press [ZOOM] key again, the image will enlarge rotate as x2, x4, x6, x8, x12, x16.
- 3 In "x2 ~ x16" image, using [Up/ Down/ Left/Right] keys to move the image center area you want to see.
- 4 In zoom mode, press [Exit] to close "Zoom" window.

## 2.21 TV/STB

Press [TV/STB] key can switch between TV and STB mode.

## 2.22 Menu

Press [MENU] key can open the menu .exit the current Menu to last menu or close the window.

## 2.23 Video Format

Press [V.Format] key under Full Screen playback for 1<sup>st</sup> time, it will show the current system outputting video resolution, continuously press this key, system will switch its video resolution by sequence 576P -> 480P 576i -> 480i -> 720P\_50 -> 720P\_60 ->1080i\_25 -> 1080i\_30.



## 2.24 Exit

Press [Exit] key can exit from the current menu/window.

### 3. Channel

When you press [Menu] key to enter menu, there will display the picture like below:



- 1 Press [Up/Down] key to select menu pages among Edit Channel, Installation, System Setup, Tools, Network Local Setting and REC(Multimedia).
- 2 Press [OK] or [Right] key to enter the "Edit Channel". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
- 3 Press [Up/ Down] key to select menu items among TV Channel, Radio Channel and Delete All.
- 4 Press [Left] key or [Exit] key to go back to main Menu.

#### 3.1 TV Channel List

When you enter to "Channel List" menu, there will display the screen like below.



- 1 You can move highlight by press [Channel Up/Channel Down] key and press [OK] key to preview the current highlighted program in the right side preview window.
- 2 You can press [Page Up/Page Down] key to implement the Page Up/Page Down function.
- 3 You can use [Volume Up/Volume Down] key to switch "Program Group".

4 You can press [Menu] or [Exit] keys to go back to "Edit Channel" menu.

5 Press color key can implement the corresponding function in "Channel List".

#### 3.1.1 Favorite



- 1 Pressing [FAV] key, then pressing [OK] key can open the "Favorite" window like above
- 2 You can move highlight between 8 favorite groups by pressing [Up/ Down] key and press [OK] key to make a favorite mark in the left side of the selected Favorite group.
- 3 Pressing [OK] key on the marked Favorite group can cancel the exist favorite mark.
- 4 After marking, pressing [Exit] key can back to "TV Channel List", there will show a favorite mark beside the marked channel.

#### 3.1.2 Lock



- 1 Press [Red] key can enter lock mode.
- 2 Press [Up/Down] key to move the highlight and press [OK] key, it will display a dialogue to ask you to input password. The default password is "0000". If you input the correct password you can see a "lock mark" in the right side of the highlighted channel.
- 3 After save and exit menu, STB will request you to Input the password while you want to watch the locked channel.

### 3.1.3. Skip



- 1 Press [Green] key can enter skip mode.
- 2 Press [Up/Down] key to move the highlight and press [OK] to make a "skip mark" in the right side of the highlighted channel.
- 3 After save and exit menu, the channel will be skip while user change channel in the full screen.

### 3.1.4. Move



- 1 Press [Yellow] key, then press [Up/Down] key to move the highlight and press [OK] key to make a mark. There will show a "moving mark" in the right side of the selected channel like above
- 2 You can move the selected channel to the position that you want to place by press [Up/Down] key. And press [OK] key to confirm your decision.

### 3.1.5. Edit

- 1 Press [Blue] key will open "Edit" menu.
- 2 Press [Exit] can exit "Edit Channel" menu. If you do modification in "Edit Channel" menu, the system will show up a message box to inquire you whether saving or not when exit.

### 3.1.5.1 Sort



- 1 Press [Red] key can open the "Sort" window like above. There are four kinds of sorting ways. You can press [Channel Up/Channel Down] key to move highlight and press [OK] key to confirm your selection
- 2 The four kinds of sorting way are:
  - ❖ Name (A-Z): Sorting in Alphabetical Order, ignore "\$" symbol.
  - ❖ Name (Z-A): Sorting in Alphabetical Order, ignore "\$" symbol.
  - ❖ FTA: Sort channel through free and scramble sequence. Free channel will in the front of channel list and scramble channel will at the rear of channel list
  - ❖ Lock: Accumulated all locked channels and list in the last of TV Channel List.

### 3.1.5.2. Edit

In "Edit Channel" menu, press [Green], then press [Up/Down] key to move the highlight and press [OK] key to open the "Rename" window. It shows the window like below:



- 1 Press [Red] key can switch whether capital or not.
- 2 Press [Green] key can delete the char on the Cursor.
- 3 Press [Yellow] key can save the modification.
- 4 Press [Blue] key can cancel the operation.

### 3.1.5.3. Delete

Press [Blue] key, then press [Up/Down] key to move the highlight and press [OK] key to make a delete mark in the right side of the highlighted channel. After save and exit "Edit Channel" menu, the marked channel will be deleted.


## 3.2 Radio Channel List

Basically, the operation of "Radio Channel List" is same as "TV Channel List", but there is one point different: In "Radio Channel List" mode, there is no video information, so it will always display Radio's logo in the right side preview window.



## 3.3 Delete All

- 1 Press [Ok] key, it will show up a warning message box to inquire you whether delete all or not.

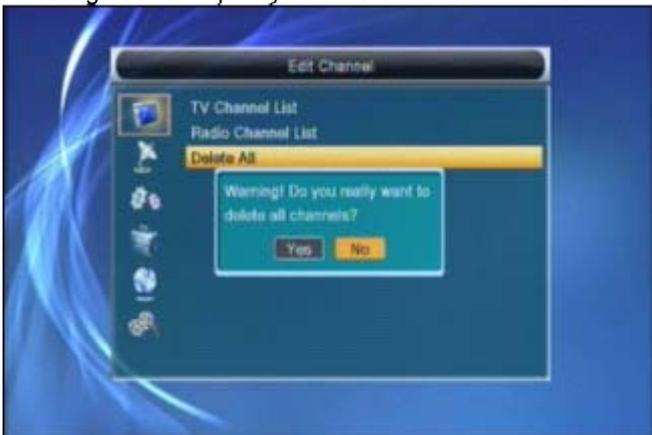

- 2 If you select "Yes", all channels will be deleted.
- 3 If you select "No" or press [Exit] key, you can exit the function directly without save.

## ? Frequently Asked Question

**Q: IF I delete all channels incautiously What should I do?**

A: there are two ways to restore:

- ★ To re-search all channels in "Installation" function.
- ★ Use "Factory Setting" function to restore all channels in "Tools" function.

## 4. Installation



- 1 Press [Up/Down] key to select menu pages among Edit Channel, Installation, System Setup, Tools, network local setting and REC(multimedia)
- 2 Press [OK] or [Right] key to enter the "Installation". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
- 3 Press [Up/ Down] key to select menu items.
- 4 Press [Left] key or [Exit] key to go back to main menu.

### 4.1 Antenna Connection


When you enter to "Antenna Connection" menu, there will display the screen like below:



Press [Left/Right] key to select LNB. Option: Fixed Antenna / Motor Antenna.

### 4.2 Satellite List

When you enter to "Satellite List" menu, there will display the screen like below:

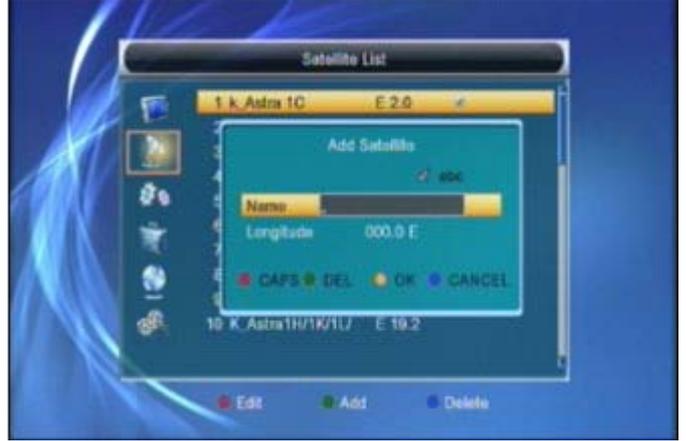

Press [Yellow] key, you will be asked "Are you sure to delete?". Select "Yes" to delete the satellite that highlight focus on. Select "No" to cancel the operation.



Press [Red] key, you can enter into satellite editing menu. You can edit Satellite name and satellite Longitude.




### 4.3 Antenna Setup Fixed Antenna

If you select "Fixed Antenna" in "Antenna Connection" menu, there will display the screen like below:



Press [Green] key to add new satellite.

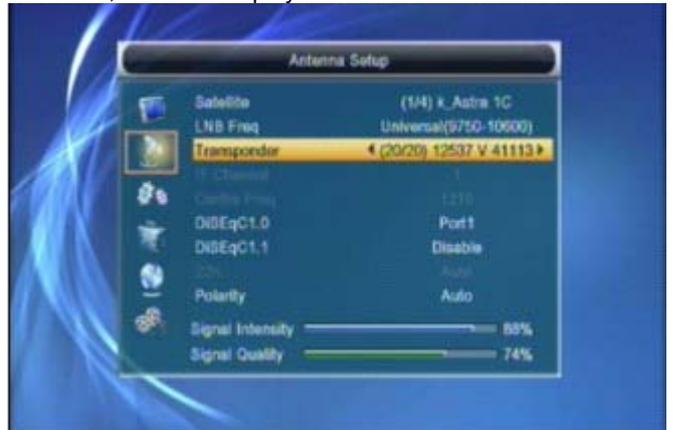

In Antenna Setup mode:

- 1 Satellite: In this item, press [Left/ Right] key can switch Satellites and press [OK] key can enter satellite list for you to select directly.
- 2 LNB Freq: In this item, press [Left/ Right] key can select the parameter. Option is 5150/ 5750/5950/9750/10000/ 10050/10450/10600/10700/10750/11250/11300/5150-5750/5750-5150/Universal (9750-10600)/Unicable (9750-10600)/Unicable10200.
- 3 DiSEqC1.0: You can use [Left/ Right] key to switch options. There are several options for your selection: Disable / LNB1 / LNB2 / LNB3 / LNB4
- 4 DiSEqC1.1: You can use [Volume Up/ Volume Down] key to switch options. There are several options for your selection: Disable / LNB1 / LNB2 / LNB3 / LNB4...LNB16
- 5 22K: You can use [Volume Up/ Volume Down] key to switch "ON / Off". When this item is switched to "ON", receiver will receive TV and radio input signal from 22K port. If the item is switched to "Off", the receiver will receive all signal from 0K port.

### ! Notice

When you choose LNB type "Universal", you can not modify 22K.

- 6 Toneburst: In "Toneburst" item, you can press [Left /right ] to switch "Off/On" functions.
- 7 Polarity: In "Polarity" item, [Left / Right ] key to switch "Auto / H / V" functions.

## Motor Antenna

If you select "Motor Antenna" in "Antenna Connection" menu, there will display the screen like below:




- 1 LNB Type: 5150/5750/5950/9750/10000/10050/10450/10600/ 10700/10750/11250/11300/5150-5750/5750-5150/ Universal(9750-10600)/Unicable(9750-10600)/ Unicable10200
- 2 Motor Type: DiSEqC1.2/USALS
- 3 Local Longitude/Local Latitude: If you select "USALS", "Local Longitude / Local Latitude" is available. Press [OK] and number key to input.
- 4 Delete All: This operation will delete all satellite

positions. It will display a dialogue "Are you sure...". If you select "Yes", it will clear all position. Select "No" to cancel the operation. This item is only valid in "DiSEqC1.2" Mode.


### 5 Motor Setting:

If you select "DiSEqC1.2", "Local Longitude / Local Latitude" is not available. It will show the screen like below:

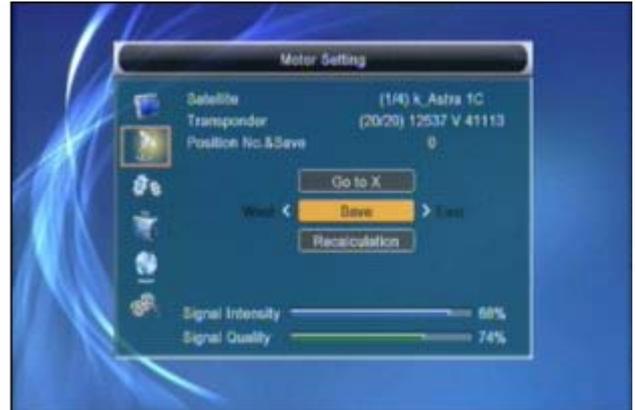

- ☆ Press [Left/Right] key or [OK] key to change satellite or transponder.
- ☆ Position No.&Save: You can press [Left/Right] key or number key to select or input Position NO.
- ☆ Go to X: Press [OK] key to open a list. You can go to X or go to reference.
- ☆ After select "Satellite" and "Position No.&Save", you can move the highlight to "West/Save/East" line and press [Left/Right] to move the dish and press [OK] to save the position.
- ☆ Move the highlight to "Recalculation" and press [OK] key to recalculate.

Set the satellite's longitude and local longitude / local latitude, USALS can move dish automatically. Move the highlight to "Motor Setting" and press [OK] key, it will show the screen like below:

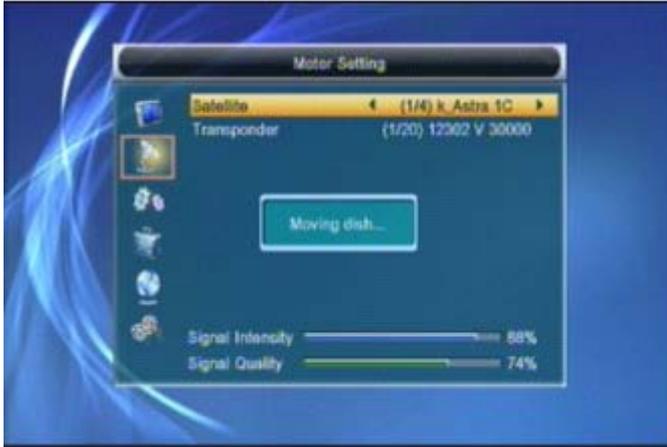

Switch the satellite can move the dish to the right place.

#### 6 Limit Setup:



1 When you set "limit setup" to "West Limit/ East Limit", you can move the highlight to "Limit Setup" line and move the dish to west or east by pressing [Left/Right] key manually.

2 When you are moving to the target place, press [OK] key to save the point.

## 4.4 Single Satellite Search

When you enter to "Single Search" menu, there will display the screen like below:



1 In "Satellite" item, press [Volume Up/ Volume Down] key to select satellite, which you to scan. Otherwise, press [OK] key can open the "satellite list" for you to select directly.

2 In "FTA Only" item, press [Volume Up/ Volume Down] key to select scans all channels or just scans free channels. If you select "Yes", it will scan free channels only.

3 In "Scan Channel" item, press [Volume Up/ Volume Down] key to select scans TV + Radio Channels, or just TV channels or just Radio channels.

4 In Network Search, press [Volume Up/ Volume Down] key to select whether network search or not.

### ! Notice

You can only do network search when you select "Preset Scan".

5 In "Scan Mode" item, you can select "Auto Scan" to blind scan or select "Preset Scan" to scan all preset TPs.

6 Moving the highlight to "Search" item and press [OK] key to start scanning. Next screen will display the process and show the current scanning channel.

7 Press [Exit] key to draw back from the scanning and meanwhile saving the current value.

## 4.5 Multi Satellite Search

When you enter to "Multi Search" menu, there will display the screen like below:



1 In "Satellite" item, press [Enter] key to see the selected satellite. The system will use DiSeqC1.0 / DiSeqC1.2 / USALS function to search satellite and scan channels. It will scan all the satellite displaying in the bottom box.

2 In "FTA Only" item, press [Volume Up/ Volume Down] key to select scans all channels or just scans free channels. If you select "Yes", it will scan free channels only.

3 In "Scan Channel" item, press [Volume Up/Volume Down] key to select scans TV + Radio Channels, or just TV channels or just Radio channels.

8 In "Network Search", press [Volume Up/ Volume Down] key to select whether network search or not.

4 In "Scan Mode" item, you can select "Auto Scan" to blind scan or select "Preset Scan" to scan all preset TPs.

5 Moving the highlight to "Search" item and press [OK] key to start scanning. Next screen will display the process and show the current scanning channel.

6 In the "Multi Search" menu, press [Exit] key to draw back from the scanning and meanwhile saving the current value.


## 4.6 TP List

When you enter to "TP List" menu, there will display the screen like below:




1 Press [Left/ Right] key, you can switch satellite.


2 Press [Red] key, open edit TP menu. User can edit TP info. Frequency: "3000~13450 MHz", Symbol Rate: "1000~45000Ks/s".

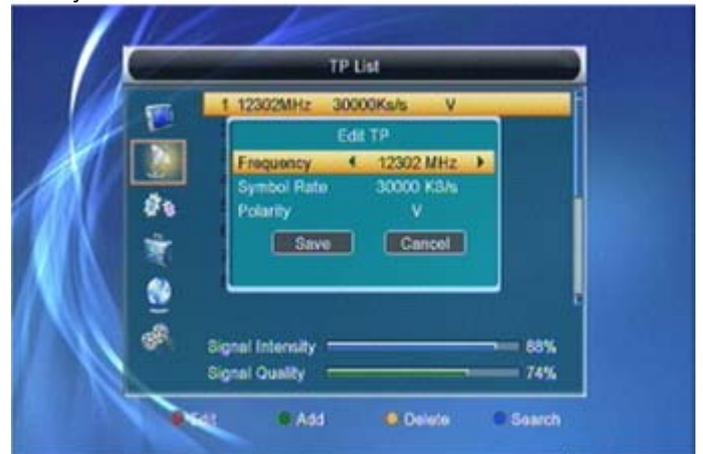


3 Press [Green] key, to add TP menu. User can add a new TP.

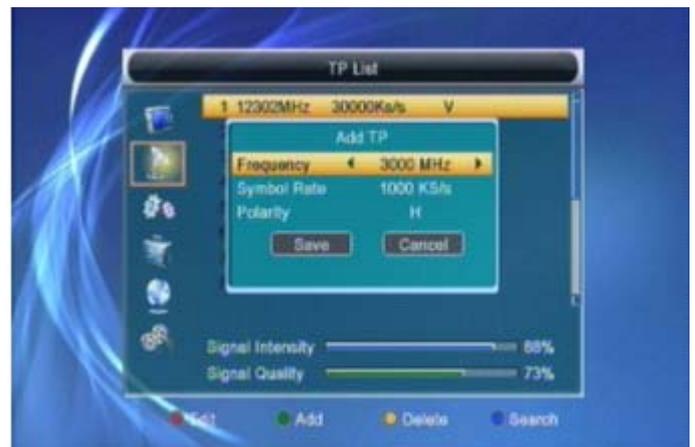

4 Press [Yellow] key will open dialog box asking you whether confirm to delete current TP. When select "Yes", you will delete the channel which highlight focus on. When select "No", it will cancel the operation.

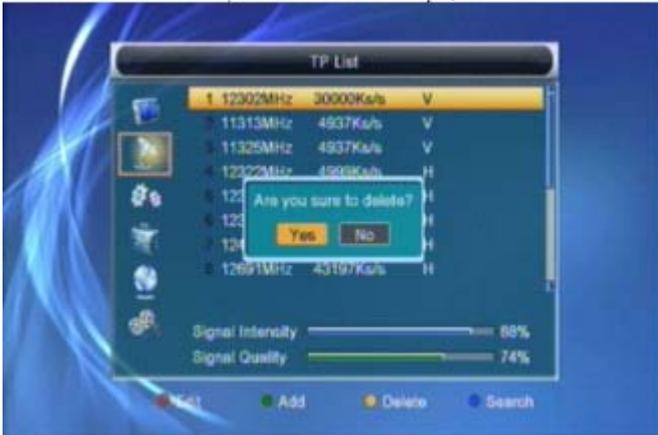

5 Press [Blue] key will display a dialogue box. You can select "FTA Only, Scan Channel, Network Search" items, then move highlight to "Yes" button and press [OK] to begin to search.

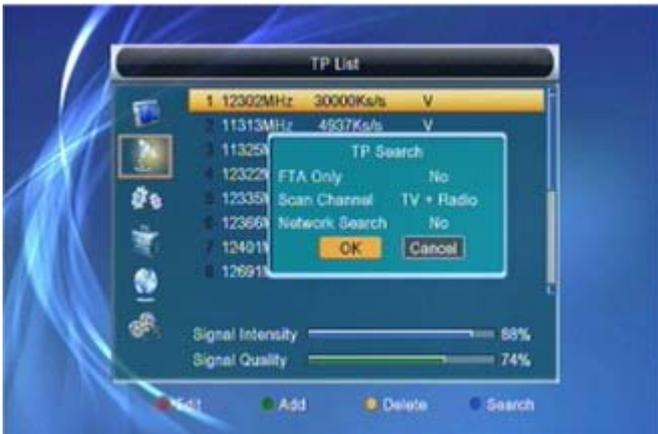

## 4.7 Other



1 In "LNB Power", there are two options, "On" and "Off", for your selection. If the setting is "On", the receiver will supply power to satellite antenna. If the setting is "Off", the receiver won't supply power to satellite antenna.

2 In "Channel Play type", you can set the channel play type. You can select the "playing channels" as "Free", "Scrambled" or "All".

For Example: If you select "Free", in full screen play, all scrambled channels will be skipped when you change channels by use [Channel up/Channel Down] key.

3 Press [Exit] to draw back from "Other" menu.

## 5. System Setup

When you enter to "System Setup" menu, you will see the screen like below:



1 Press [Up/Down] key to select menu pages among Edit Channel, Installation, System Setup, Tools ,Ethernet and Multimedia.

2 Press [OK] or [Right] key to enter the "System Setup". If Menu Lock is "On", it will display an dialogue for user to key in password. The default Password is "0000".

3 Press [Up,Down] key to select menu items among TV Channel, Radio Channel and Delete All.

4 Press [Left] key or [Exit] key to go back to main menu.

### 5.1 Language

When you enter to "Language" menu, you will see the screen like below:



- 1 Language: press [Left/Right] key to select menu languages, the selections of languages include: English, French, German, Russian, Arabic, Portuguese, Turkish, Spanish, Polish and Italian.
- 2 First Audio: Some channels have more than one audio language for choosing; by this function you can set the first audio for this channel. If the playing channel has the same audio as the "First Audio" you set, system will play this audio language as default. If the channel hasn't the suited audio language, then the system will compare automatically with second audio language. The selections of audio languages include: English, French, German, Russian, Arabic, Portuguese, Turkish, Spanish, Polish and Italian.
- 3 Second Audio: If the channel has no correspond audio with "First Audio" but have corresponded audio with "Second Audio", system will play the second audio language as default. If no audio language corresponds with the "Second Audio", then the default language of current channel will be played automatically. The selections of audio languages include: English, French, German, Russian, Arabic, Portuguese, Turkish, Spanish, Polish and Italian.
- 4 Teletext: You can set teletext language. If the streams have this language you can see the teletext in language you set.
- 5 Press [Exit] key to draw back from "Language" menu.

## 5.2 TV System

When you enter into "TV System" menu, you will see the screen like below:



- 1 Video Resolution is for switching the system outputting video resolution. Move highlight on it and press left or right key, it will switch video resolution circularly by the sequence By Source <-> By Native <-> 480i <-> 480P <-> 576i <-> 576P <-> 720P\_50 <-> 720P-60 <-> 1080i\_25 <-> 1080i\_30. This effect is equal to press V.Format Key under Full Screen and their last setting saving will be efficient for each others. By Source means system will set the video output resolution according to the program it's playing, different resolution programs switching perhaps will makes TV screen flickering. By Native TV means system will be according to the HDMI TV's max supported resolution to set its resolution, if system is not connected to a HMDI TV, it will set resolution to be default.
- 2 Aspect Mode is for switching the screen aspect ratio mode. Now we provide below options: 4:3 PS / 4:3 LB / 16:9/Auto. You can press [Left/Right] key to select each mode circularly. 16:9 will provide user pillar box mode it means user use 16:9 TV to display but need to see a 4:3 full display picture. System will force press wide screen picture to be narrow and there're black band on left and right site. Auto means system won't do any aspect ration translation, 16:9 picture source will be good display on a 16:9 TV but will be too narrow on a 4:3 TV, and 4:3 picture source will be too wide in a 16:9 TV but will be good display in a 4:3 TV.
- 3 RF system and RF channel are for user to set the TV RF modulator output signal VHF/UHF channel and TV system mode. If your TV is too old to supports CVBS/YPbPr/HDMI, you can use TV RF cable to connect STB's TV RF output port to TV Antenna input port.
- 4 HDMI Video Out is for setting the HDMI video output mode. It has option: RGB-Normal, RGB-Expand, YCbCr4:4:4 and YCbYr4:2:2. You can press [Left/Right] Key to select each mode circularly.

5 Digital Audio Out is for setting the both SPDIF and HDMI's digital audio output mode, it has options LPCM Out, BS Out and Auto, You can press [Left/Right] Key to select each mode circularity. LPCM Out means system will decode no matter AC3 or PCM audio track data to be LPCM, digital audio decoder or HDMI TV will get LPCM digital audio data. BS Out means system won't do AC3 decode just output AC3 RAW data to SPDIF and HDMI. Auto means system will detect which the connected HDMI TV can decode and then output that data. If HDMI TV can decode AC3, system just output RAW data, if HDMI TV can decode LPCM only, system will just decode AC3 or LPCM to be LPCM and then output.

6 Press [Exit] key to draw back from "TV System" menu.

### 5.3 Local Time Setting



- 1 GMT Usage: This item is use for open the usage of GMT. You can press [Left/right] keys to switch "On/Off".
- 2 The "GMT Offset" item is valid only when the setting of "GMT Usage" is "On". You can press [Left/right] keys to switch "GMT Offset" value, and the range is "-12:00 ~ +12:00", increase each half hour progressively.
- 3 Summer Time: This item only valid when the setting of "GMT Usage" is "On". When "Summer Time" is "On", it will add one hour to the time.
- 4 "Date" and "Time" items are valid only when the setting of "GMT Usage" is "Off". You can press [Left/right] keys to moving highlight and use number keys to input directly. If the current channel provides the correct time information, you will see the current time while you enter "Time" menu. If the channel doesn't provide time information, you have to input the date and time information manually.
- 5 Press [Exit] key to draw back from "Time" menu.

### 5.4 Timer Setting

Select "Timer Setting" item and press [OK] key to enter "Timer list" menu.



You can press [up/down] key to select a timer, then press [enter] key to open timer menu.



- 1 Current time information will display on the first column; if the current time is incorrect, please modify the time information in "Time" item.
- 2 Timer Mode: There are several modes for Timer to setting, include Off, Once, Daily
- 3 Wakeup Channel: press [OK] key to enter channel list and select channel that you want to setting.
- 4 Wakeup Date: use number keys to input your wakeup date.
- 5 On Time: use number keys to input your wakeup Once the time's up, no matter what the time. system is in standby mode or in playing mode, the system will automatically switch to the channel you want and start to play.
- 6 Duration: After you set a time for "Duration" item, once the time's up, the system will automatically switch to standby mode. If you want not work this function, set the duration is 00:00.
- 7 Move the highlight to "Save" button and press [OK] key to save timer. Select "Cancel" or press [Exit] key to cancel the operation.

### 5.5 Parental Lock

1 In "Parental Lock" line , press [OK] key, there will


pop an dialogue for you to input the password. Default password is "0000". When you input the correct password, you will see a screen like below:



- 2 Menu Lock determining that when users wish to enter "Edit Channel/Installation/Tools" menu, whether have to input Password or not. If the have to key in password, set "No" means unlock.
- 3 Channel Lock determining that when users wish to play the lock channels, whether have to input the password or not. If the setting is "Yes", play the channels with lock mark will show up a dialogue on the screen and ask for the password. If the setting of "Channel Lock" is "No", the Lock function will invalid.
- 4 New Password is used for revising password; you can input the new password in this item by using number keys directly. After you filled in 4 digital numbers, the highlight will auto skip to Confirm Password and ask you to input the new password again. If the password is correct, the screen will show up a message of "Saving Data, Please Wait...". After finish saving and draw back to "System Setup" menu, the revising is complete.
- 5 Press [Exit] key to draw back from the "Parental Lock" menu.

## 5.6 OSD Setting

When you input to "OSD Setting" menu, you will see a screen like below:

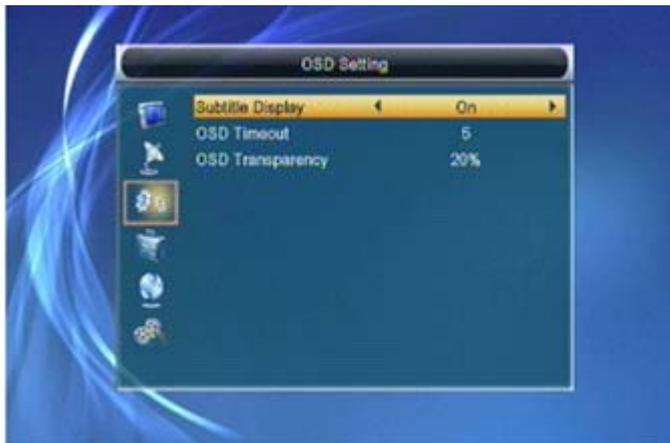

- 1 OSD Timeout: When you switch channels in full screen, there will show up some information about current channel on the lower of the screen. And regarding to the duration of these information show up on the screen, you can press [Volume Up/Volume Down] key to set the time. The range of the duration is "1 second ~ 10 seconds".
- 2 OSD Transparency: You can press [Volume Up/Volume Down] key to select the values. There are 5 levels of transparency, 10%, 20%, 30%, and 40% and "NO" (means no transparency function).
- 3 Press [Exit] key to draw back from the "OSD Setting" menu.

## 5.7 Favoritie

When you input to "Favorite" menu, you will see a screen like below:



When press [OK] key, you can rename the favorite group's name. It will display the dialogue like below:



- 1 Press [Red] key to switch whether capital or not.
- 2 Press [Green] key to delete the char on the or cursor.
- 3 Press [Yellow] key to save the modification.
- 4 Press [Blue] key to cancel the operation.

## 6. Tools

When you enter "Tools" menu, you will see a screen like below:



In "Tools" menu:

- 1 Press [Up/Down] key to select menu pages among Edit Channel, Installation, System Setup, Tools, Network Local Setting and REC(Multimedia).
- 2 Press [OK] or [Right] key to enter the "Tools". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
- 3 Press [Up/Down] key to select menu items.
- 4 Press [Left] key or [Exit] key to go back to main menu.

### 6.1 Information




- 1 When you enter to "Information" menu, you will see a screen like above. The screen displays the items as "MAC, MACHINE, NC, VERSION" information.
- 2 Press [Exit] key to draw back from "Tools" menu.

### 6.2 Factory Setting

When you press [OK] key in the "Factory Setting" item:

- 1 It will show a warning message to inquiry you "The operation will load default and erase all the channels that user added, continue?".
- 2 If you select "Yes" option, the all revised parameters of the receiver will reset to default value. Please carefully to using this function.
- 3 In step 1 and step 2, select "No" or press [Exit] key can draw back from this item and without saving.

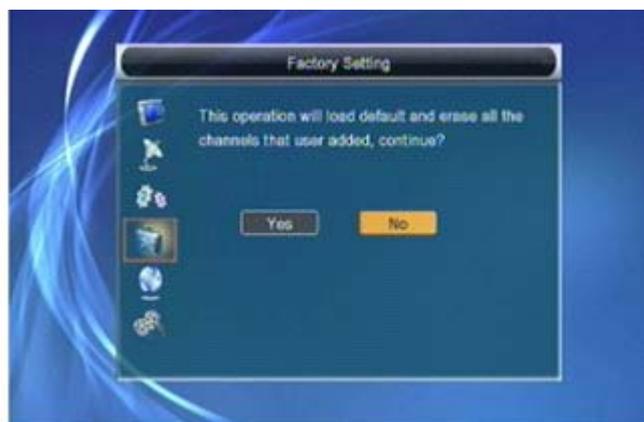

## 6.3 Upgrade By RS232




- 1 We offer the functions for users to connect one receiver (Master) to the other receivers (Slave) via serial interface.
- 2 Connect master receiver to slave receiver via serial interface. Enter "Upgrade By RS232" menu receiver and press [Left /Right ] keys to switch upgrade mode. Upgrade modes include: allcode / maincode /radioback / defaultdb / userdb
- 3 Turn on slave receiver and it needn't operate any setting.
- 4 Move highlight to "Start" on master receiver and press [OK] key to start upgrade.
- 5 Press [Exit] key to save the parameters and draw Back.

## 6.4 Common Interface

- 1 Press OK Key when highlight on "CommonInterface" will enter the CAM card information Menuselect like below:




- 2 Press [Up/Down] Key to select slot 1 Press OK key again to enter this card information menu like below:

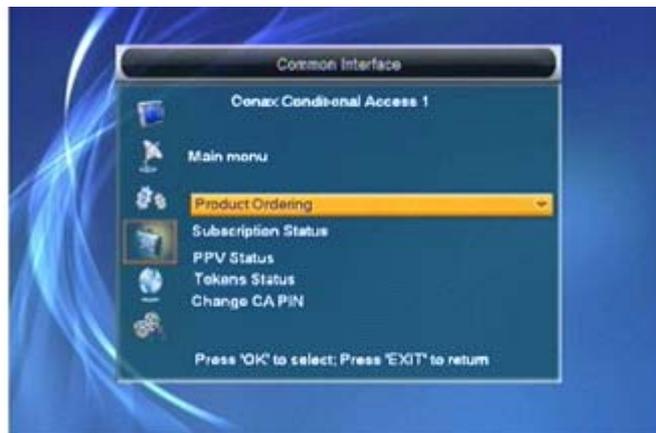

- 3 In the CAM card information menu, you can select each item by pressing [Up/Down] Key and press OK to enter. This information menu format and string is according to CI card itself. So, different card may be has deferent menu of it.
- 4 Enter Change CA PIN can change the pin code of the CA card in this CAM card.

## 6.5 Upgrade by USB

- Open Upgrade By USB menu according to Menu -> Tools-> Upgrade By USB.

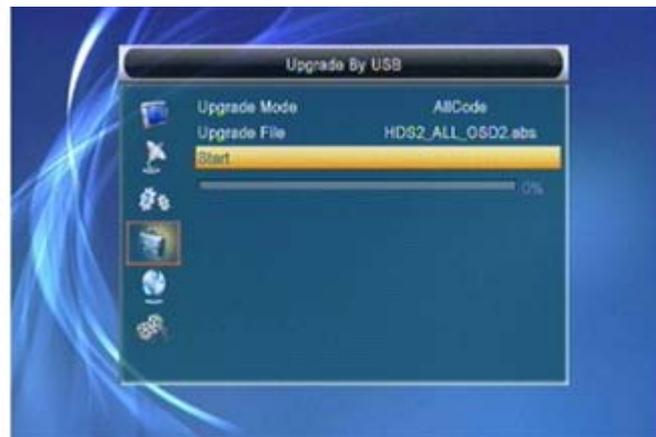

- Upgrade Mode has only 1 option: All Code, it means that you can only upgrade whole file to your STB's flash. Please rename your new fw file name to be the format "all\*.abs", \* means any others string is acceptable, but the initial 3 letters must be "all" and the extension name must be ".abs". Then Press OK key to start upgrade by USB.

## 6.6 Remove USB device safely

STB plugged USB HDD disk, when you need remove your USB, Open Remove USB device safely menu according to Menu -> Tools-> Remove USB device safely.



Press OK key and choose " yes" , then your USB is been Safe remove



## 7. Network Local Setting



1 Press OK Key enter " network local setting" if you are using a DHCP server in your LAN,

configure the DHCP server so it doesn't assign the IP address used by the STB, Otherwise an IP address collision is possible. Refer to the DHCP Server's Manual about how to configure a DHCP address pool.



## 8. REC

When you enter to "REC" menu, you will see the screen like below:



- 1 Press [Up/Down] key to select menu pages among Edit Channel, Installation, System Setup, Tools, Game, Network Local Setting and REC (Multimedia).
- 2 Press [OK] or [Right] key to enter the "REC". If Menu Lock is "On", it will display a dialogue for user to key in password. The default Password is "0000".
- 3 Press [Up/Down] key and [OK] key to select menu items.
- 4 Press [Left] key or [Exit] key to go back to main menu.

### 8.1 Music & Picture

- 1 Press OK Key enter " Music&Picture" menu, please see the blow picture:



You can preview the picture at the top right corner if the scroll bar is on the picture files (JPG, BMP), and show the logo when at MP3 file.  
 Move scroll bar when press up/down key, page up or down by page key.  
 Go into sub-directory when press ok key in the file directory, play the selected file when scroll bar is on the file, automatic return Music&Picture menu after play is over.

#### Color key operation:

##### Yellow Key:

Show one operation window: please select play list type" by yellow key, you can select Music or Image play by Left/Right Arrow key, open the selected Play list if press OK key. There will display "This type of play list does not exist" if there are no any file.

##### Blue Key:

Press one time Blue key will show    
 It is shuffle.

Press the key again will show ,  
 it is repeat one,

Press the key the third times will show    
 It is repeat all.

##### INFO Key

Press INFO key will show Setup Menu, please see the below setup menu:



#### Size (Screen) select:

Real: show the real size if the image size less than full screen size, but only partial image, the image is shown from Left Top corner, don't show for over part.

Full: Full screen display and show real size if the image is less than screen.

#### Menu Operation:

##### (1) Setup option

Press up/down key to move scroll bar, and switch option by Left/Right key, all option please see the below table:

Item	Option	Default
Size	Full/Real	Full
Time	0~10Sec.	2
Repeat	Off/On	Off

##### (2) Save/Exit

Move scroll bar to Save icon, press OK for file save, select Cancel and press OK, Cancel without save

##### FIND Key

press FIND Key will find sort files.

##### 0 Key

press 0 key will All the MP3 files in current directory are added into MP3 play list

##### 1 Key

Press 1 key will  
 press 1 key will All the Image files in current directory are added into Image play list

##### FAV Key

put the file selected by scroll bar to play list when press FAV Key, in the meanwhile show "Add to Play List", display disappear after about one seconds, the file will be added into MP3 play list if it is one MP3 file, to Image play file for one Image file.

## 8.2 Record manager




### 8.2.1 Lock

- 1 Press [Green] key to lock a program on HDD.
- 2 If you want to cancel the lock mark for a program, press [Green] key again. It will ask you to input password. Once you input the correct password, it will cancel the lock feature for the program.

### 8.2.2 Delete

- 1 Press [Blue] key to make a delete mark on the highlight program.
- 2 If you want to cancel the delete operation, press [Blue] key again to cancel the delete mark.
- 3 When exit the "Record Manager" menu, all the delete mark channel will be deleted directly.

### 8.2.3 Rename

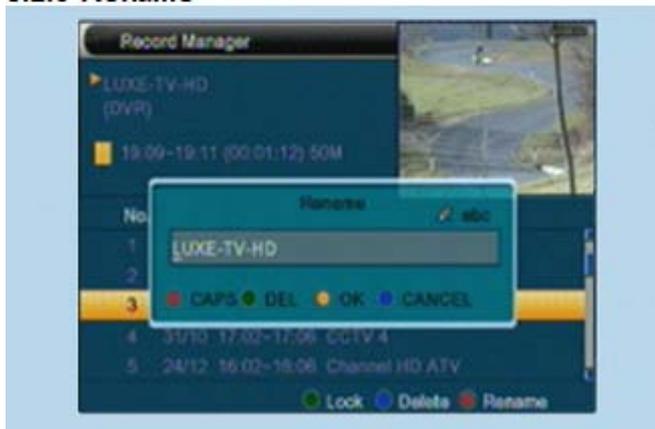

- 1 Press [Red] key to rename the highlight program. It will show the "Rename" window.
- 2 You can press [Red] key to switch capital and lowercase.
- 3 Press [Blue] key to delete the char on the cursor.
- 4 Press [Yellow] key to save the modification
- 5 Press [Blue] key to cancel the modification

## 8.3 HDD Information

- 1 Move the highlight to "HDD Information" and press [OK] key. It will display "HDD information" as below:



## 8.4 HDD Format

- 1 Move the highlight to "HDD Format" and press [OK] key. It will display "HDD Format" as below.
- 2 When you press [OK] key again, it will ask you whether you are sure to format the disk. Select "Yes" to format or select "No" to cancel.



## 8.5 DVR Congiguration

- 1 Move the highlight to "Timeshift" and press [OK] key. It will display "Timeshiift" as below.



- 2 Press [Left/Right] to switch timeshift "On/Off".
- 3 If set timeshift "On", it will timeshift the program when user watch TV.
- 4 Press [Info] key to see timeshift OSD as below:



- 5 You can press [Left/Right] to move the slide to left or right. But can not exceed the current time. Press [OK] key to play the point where the slide is.
- 6 You also can press [Pause] / [fast back] / [slow /back] can realize these function. Then it will enter the mode which is playing the recorded program on HDD. (like the picture below) Then you can do pause, fast forward, fast back, slow forward, slow back. [www.godvb.net](http://www.godvb.net)

**Notes:** Time Shifting will only be available when USB HDD is connected to system and read/write speed is high enough to do that.

- 7 Press [Stop] key first time to end the playing mode. Press [Stop] key second time to stop the recording

## 8.6 Jump

- 1 Move the highlight to "Jump" and press [OK] key. It will display "Jump" as below.



- 2 Press [Left/Right] to switch the jump time. The option is 30 second, 1 min, 5 min, 10 min, 30 min
- 3 When you play the record program, press the [PREV/NEXT] key can jump to previous and next program to see it.