## Rebuildable atomizer SvoeMesto Kayfun Lite - User manual





The material of the transparent body: Polycarbonate Diameter: 22 mm Connector Type: 510

Dimensions (not including connectors and mouthpiece) / weight / volume: 51,5 mm. / ~ 4.5 ml. Weight (not including mouthpiece) with transparent window/ with metal window: 71 g. / 81 g.

Atomizer SvoeMesto Kayfun Lite consists of the following Wrapping the coil



- 2. Evaporation chamber
- 3. Body
- 4. Top cap 5. Mouthpiece

## Atomizer base (1)

Atomizer base (1) is the most important and most complex part of the device



- Bottom part of the atomize the air intake
- O-ring, ensuring the tightness of the contact with the body (3)
- 1d Negative pole
- 1e Positive pole 1f Coil screws

- IT COII screws

  1g Air duct

  1h Grooves for supplying liquid from the tank to the evaporation chamber (2) and air outlet from the evaporation chamber. ber to the tank
- 11 Positive pole insulator (1f)
  13 Eliquid duct. Liquid flows through it into the tank when filling through the hole (1m)
  1k Center pin insulator (1h)
- 1k Center pin insulator (111)
  1l Screw for e-liquid dust hole

# Evaporation chamber (2)


Evaporation chamber (2) consists of the following compo-



2a - the body of the evaporation chamber 2b - the cap of the evaporation chamber

The body of the evaporation chamber (2a) is screwed to the atomizer base (1). The cap of the evaporation chamber (2b) is screwed onto the body of the evaporation chamber (2a). Evaporation chamber is made of two parts to simplify wick installation

# Atomizer body (3) Atomizer body (3) consists of the following elements

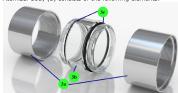

3a – Metal rings 3b – Transparent polycarbonate ring 3c - o-rings to ensure tight seal between rings (3a) and (3b)

Base kit comes with two versions of (3b): clear and metallic. Clear ring allows you to visually monitor the amount of liquid in the tank; metallic ring provides the

amount of liquid in the tails, frictions and highest reliability.

WARNING: transparent ring is a consumable item and the state of the is not covered by the manufacturer's warranty

Top cap (4) Can (4) consists of



4a - cap


4b - o-ring ensures tight connection to the body (3) 4c - o-ring, ensuring tight connection with the cap of the evaporation chamber (2)

Cover (4) is screwed onto the body (3) with the top of the evaporation chamber (2b) resting against o-ring (4c)

### Mouthpiece (5)



The coil is made of resistance wire wrapped around the wick - folded in several layers of silica rope. The ends of the wire are fixed under the cap screws (1f). The coil is located diagonally between the screws (1f) at 1.5 - 2 mm above the air duct (1g), so that incoming air is distributed evenly round the coil when the user inhales. Tails of the wick fit in the free space along the sides of the poles (1d) and (1e), so that they are above the grooves (1h), but don't get into them.

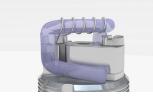

«Atomizer» is from the word «atomize» meaning «to break down into atoms». The atomizer contains a resistbreak down into atoms». The atomizer contains a resist-ance coil that is energized using an attached battery. When the coil is covered with e-liquid and the battery is engaged, the coil heats up quickly and boil the lower lay-er of e-liquid. This vaporization (or so-called «Explosive evaporation») forms a steam «cocoon» around the coil. This cocoon rises and expands in volume atomizing the upper layer of e-liquid on the coil. This, subsequently, produces a mixture of steam and disensed liquid natiproduces a mixture of steam and dispersed liquid particles which we perceive as a «smoke». Since there is no combustion used in this process, the result of atomization is not smoke but vapor, to be more accurate - fog.

The e-liquid is stored in the tank system which is located between the walls of the outer chassis and the evaporation chamber. The evaporator chamber (2) has special grooves (1h) that serve as ducts for e-liquid to flow into grouves (III) that serve as ducts for eniquin to now man the evaporation chamber which is mounted to the atom-izer base (I). The tank is sealed and air tight when the cap is closed, so liquid does not flood the evaporation chamber through these grooves - air pressure inside the tank prevents it

Drinking bowl for birds works on the same principle: Drinking bown for birds works on the same principle: liquid does not come out of turned upside down water-filled bottle if you deep bottle neck in a bowl of water. Water comes out of the bottle only when the level of liquid in the bowl drops below the level of the bottle neck - then some amount of water will pour out, fill the bowl up the bettle need the presence. bowl up the bottle - and then stop again

Another example: Take a straw, deep half of it vertically in the water, close the top opening of the straw with your finger and pull it out of the water. Low air pressure at the top of the straw will hold water in it, but as soon as you release your finger the sealing of the air bubble is broken, pressure equalizes and water discharges. Kayfun Lite works on the same principle.

When the user initiates the inhalation process, nega-When the user initiates the inhalation process, nega-tive pressure is formed inside the evaporation chamber which draws a small amount of e-liquid through the grooves (1h) into the evaporation chamber where it gets absorbed by the wick located directly above these grooves. Low pressure is produced in the tank due to the grooves. Low pressure is produced in the tank due to the transfer of e-liquid to the evaporation chamber. When the user has completed the inhalation process, the pres-sure in both the evaporation chamber and the tank are normalized due to the air being passed back into the tank through the ducts.

During the inhalation process, the evaporation chamber receives liquid from the tank through the grooves (1h) and after the inhalation the tank receives air from the evaporation chamber. This process can be visually observed as air bubbles rising from the grooves in the tank (provided the transparent ring is being used).

E-liquid that entered the evaporation chamber dur-E-liquid that entered the evaporation chamber dur-ing the inhalation is absorbed by the wick. The wick is saturated and distributes e-liquid over the coil. The coil heats up and «atomizes» liquid. At the next inhalation this cycle is repeated until there is no more liquid in the tank or the battery is depleted.

Wick/coil assembly is installed. Evaporation chamber (2) is screwed in atomizer base (1), then body (3), cover (4) and mouthpiece (5) are screwed onto each other. Disassembly happens in the reverse order.

### Fillina e-liauid

Kayfun Lite filling can be done in two ways.

Method #1 («classic»)

Unscrew the cap (4)
Pour e-liquid into the space between the body (3) and porizing chamber (2)- Screw the cap back or

Method #2 (through the e-liquid dust hole)
- Turn Kayfun Lite mouthpiece down

- Unscrew (1I)
  Insert the nose of the bottle in the hole (1m)

Insert the nose of the bottle in the nole (1m)
 Fill the tank by squeezing the bottle. The air will escape from the tank into evaporation chamber through the same grooves (1h).
 Take out the nose of the bottle from the valve, screw (1l), turn Kayfun Lite mouthpiece up.

When refilling using method #1, it is important to consider that the tank is no longer air tight. This will enable the e-liquid to flow into the evaporation chamber through the e-rigula to flow finto the evaporation chamber unbught the grooves (1h). When the cap is screwed back onto the de-vice, this can also form a small amount of pressure which forces a bit of the e-liquid into the evaporation chamber. Both effects can potentially add up to produce a small amount of flooding in the evaporation chamber. This technique can take a bit of practice and should be conducted in a timely manner.

When refilling using method #2, it is important not to overfill the tank. Over filling the tank can produce flooding in the evaporation chamber.

A small amount of air must remain in the tank to allow A strian arrival to a minusc terrain in the data to alraw the pressures of both the evaporation chamber and the tank to equalize during the inhalation process by way of the ducts. It is recommended to leave approximately 2-3 mm of space at the top of the tank or end of the window during the refill process.

Excess of e-liquid can be removed from the Kayfun Lite this way: turn Kayfun-min mouthpiece down; put a napkin under mouthpiece, blow Kayfun Lite through the air intake (1b) - the excess of e-liquid from evapora-tion chainber will flow out through the mouthpiece to the napkin.

## Before operating Kayfun Lite

After assembling the coil, evaporation chamber and collector-tank it is recommended to check atomizer resistance. Resistance should be measured between the screw (1g) and the body (1a). You should fix detected short circuits before you start using the atomizer on battery mod.

Never use shorted Kayfun Lite on unprotected battery mods - this can cause damage of the mod and even fire.

# laces where short circuit may occur, causes and

For starters, inspect Kayfun Lite for the presence of foreign metal objects that can cause a short circuit and remove them.

Place / reason: too long ends of the coil are shorting to the walls of the evaporation chamber or the opposite pole

**Remedy**: Cut ends of the wire, so they would not stick

out from under the screw heads

Place / reason: Coil lies too low on the air duct and touches the poles by middle coils.

Remedy: Lift the coil.

son: Coils touch each other

Remedy: straighten the coils so that neighboring coils do not touch each other

Place / reason: one of the insulators (1i) or (1k) is

damaged Solution: Replace the insulator If the meter, on the contrary, shows the «infinite resistance», check the coil for breaks.

# Servicing Kayfun Lite

Kayfun Lite servicing includes its regular refilling, cleaning/washing, replacing and dry burning the coil.

Refill Kayfun Lite as needed

Periodically disassemble and wash Kayfun Lite under running water. We recommend doing this every time before switching to e-liquid with different taste.

Periodically change the coil. With the lapse of time sludge deposits can accumulate on the coil wire, which has a negative impact on the taste. This sludge can be removed by \*Dpy Burning\*.

# Dry burning

- Remove the lid, drain the excess of e-liquid from the tank, remove the evaporation chamber
   Soak up remaining liquid from the coil and wick with
- a cloth
- Screw Kayfun Lite onto the battery as it is
- Press and hold the battery power button for 5-7 seconds to let the coil heat up, then release for 5-7 seconds Repeat this procedure till all e-liquid has evaporated from the wick and all deposits burned off the coil

Please note that in the process of dry burning wick gradually loses its ability to absorb liquid. So after 3-5 dry burns we still recommend to replace coil and a wick.

### General advices

Find comfortable nicotine level.

When you use Kayfun Lite for the first time, try to start from nicotine level twice less than you used to! For example, if you used 12 mg/ml liquid - start from 6 mg/ml on Kayfun Lite. Kayfun Lite has excellent nicotine delivery and vapor production capabilities, so it is easy to get nicotine overdose for want of habit. Choose optimal for you nicooverdose for wall of habit. Choose optimal for you into-tine level, but we do not recommend using e-liquid with level higher than 12 mg/ml with Kayfun Lite - it can be dangerous to your health.

### Find comfortable strength and duration of the draw

When using Kayfun Lite, draw should be different from When using Kaytun Lite, draw should be dimerent from what you got used to with conventional cartomizers and tanks. It has to be smoother and lighter. Remember that the stronger/tighter you make a puff, the more liquid comes into the evaporation chamber and the greater the chance of overflow. Find comfortable for your strength and duration that would allow all e-liquid entering the evaporation chamber to evaporate during the draw.

Find comfortable power level (voltage, resistance) Power is the ratio of the square of the voltage to the resistance. If you have a 2 ohm resistance coil, and the battery produces 3.7 volt - power is equal to 3.7 \* 3.7 / 2 = 6.85 watts. In practice, the "comfort zone" for most of – 6.85 watts. In practice, the "comfort zone" for most of vapers is somewhere between 8 and 12 watts. Less than 8 watts will result in low vapor production and nicotine consumption. More than 12 watts can result in the loss of flavor and burnt taste. If you are using a battery mod that has variable wattage feature, you can set desired power directly on the device. If you are using variable voltage battery mod, measure the resistance of your coil and calculate required voltage using following formula: Voltage square root of the power divided by the resistance. Of course you can also find comfortable voltage using old school trial-and-error method. If you are planning to use Kayfun Lite on mechanical mod or other fixed-voltage device, calculate the target coil resistance based on desired power and voltage of your device and then build device, calculate the target coil resistance based on de-sired power and voltage of your device and then build the coil with target resistance. For example, when using the battery mod stabilized at 3.7 volt, coil resistance of 1.6 ohms will give you 8.56 watts of power – it is in the «comfort zone». To quickly calculate the power / voltage / resistance, refer to the following table

to the following table

### Press - draw - release

Use the rule of «Press - draw - release». This means that you should press the power button before the draw and release it after the draw. This will give the coil time to heat up before draw and evaporate excess of e-liquid after it.

### Do not fill the tank to the top

When refilling, leave small amount of air in the tank so there is something to expand during the draw and eliquid could flow into evaporation chamber. When refilling through the Brue pugy, stop when e-liquid covers the transparent body part; when refilling through the top cap, leave 2-3 mm of air at the top of the tank.

## Keep it clean

emble and wash Kayfun Lite periodically, change / Dry burn the coil, check the integrity of the o-rings.

Treat Kayfun Lite with care, do not throw or drop it - it can cause damage and negative impact on the appearance

# Do not use for other purposes

Kayfun Lite is designed for vaping only, don't fill it with liquids not intended for vaping.

# Be careful with organic wicks

Be especially careful if you are using organic materials (such as cotton) for building your wick. These materials, in contrast to silica, are combustible and dry-burning can't be used with them. Make sure there is always enough liquid in the tank and that organic wick is soaked with e-liquid all the time.

# Using SS mesh wick

Oxidized stainless steel mesh wick may be used in Kayfun Lite, but this is not an intended operation mode for the device. Consistency of operation and overall functionality of the device in this case is not guaranteed, although it may very well work fine.

# Possible problems and their solutions

The problem: Short circuit / no contact

The problem: Short circuit / No contact What to do: see «Before operating Kayfun Lite»

The problem: Kayfun Lite sloshing, flooding, liquid flows out through the duct hole. First you need to check if the tank is airtight. If the tank is not sealed, e-liquid will pour out of it into evaporation chamber by the principle of communicating vessels, and then it will flow through the air duct. Check if evaporation chamber (3) is firmly screwed to the base; all carious are in place and intact: (10, 13c). auct. Check in evaporation chamber (3) is nimity screwed to the base; all o-rings are in place and intact: (1c), (3c), (4b), and especially - (4c). O-ring (4c) is the easiest one to lose during disassembly/assembly. Also make sure that the transparent window (3b) is not cracked in case you use it. Also make sure that the screw (1l) in place and highly companies. tightly screwed

If you have verified that the seal is not broken, but the problem still persists - let's try to find and eliminate the

There may be several more reasons for leaks:

The reason: Wick is too long and/or coil lies too low over

What happens: If the wick is too long and it takes all the what nappens: It the wick is too long and it clakes all the available space in the evaporation chamber, then, when swollen with e-liquid, it leans to the posts (1d) and (1e) at the level of the air duct or even higher. Liquid begins to flow from the wick to the poles and then into the duct. In this case the duct becomes kind of extension of the wick. The same happens when coil lies too low over the air duct - swollen with liquid wick can stick out between the coils and truch the notice. the coils and touch the poles.

the coils and touch the poles.

What to do: shorten the wick, position it correctly on the sides of the poles, lift coil higher over the air duct.

The reason: With each draw, evaporation chamber receives more e-liquid than can be evaporated; as a result

e-liquid floods the evaporation chamber and flows through

There may be several reasons for this:

Reason number 1: insufficient heating temperature, or rather lack of power (voltage) to the coil, when coil can't heat up to required temperature

What to do: Increase the power (voltage) on the battery mod or build a coil with less resistance. Probably batteries are depleted - charge/replace battery if it is the case

are uppreted "Clarige/replace battery in it is the case. Reason number 2: Too strong/long draw. Try to inhale slowly and smoothly. You need to get used to the lighter draw, especially if you are used to hard draws of conventional cartomizers and tanks. Find comfortable for your strength and duration of the draw that would at the same time allow all e-liquid entering the evaporation chamber to evaporate during the draw and Kayfun Lite would not per to evaporate during the draw and representations. Some of the convertion of the and will get the most from your Kayfun Lite

Minor leaks may also happen if the tank is filled completely, or it is filled more than halfway while Kayfun Lite is lying horizontally or with mouthpiece tilted down for some time nonzontally or with mouthpiece titted down for some time. In this case, one of the grooves (1h) could be at the top "in the air" and another one at the bottom dipped into e-liquid. In this case the air will escape from evaporation chamber through the top groove and e-liquid will flow from the tank to the evaporation chamber through the bottom groove. Naturally this process stops as soon as both grooves are cov ered with e-liquid. Make sure that both grooves are always covered with e-liquid, keep Kayfun Lite horizontally in such a way that the mouthpiece is always slightly higher than the evaporation chamber. Even better, keep it in the v near vertical) position if your battery mod allows if

Leaks may also happen when ambient temperature and/ or pressure changes abruptly, for example when you walk into a heated room from the cold or in an airplane during the arrivation for the control of th flow into the evaporation chamber. Pressure drop causes the process similar to what happens when you draw, just without heating the coil. To avoid leakage in such cases without heating the coil. To avoid leakage in such cases we recommend you to keep/transfer Kayfun Lite upside down i.e. mouthpiece down. In this case, grooves (1h) will be at the top in the valir bubble» and when the temperature or pressure changes, air will flow between evaporation chamber and tank instead of e-liquid.

The problem: Burnt taste. This problem is opposite to the leakage. Dry wick is the most common cause of burnt taste. **The reason**: Too high heating temperature, to be exact -

excessive power (voltage) is applied to the coil. This heats up the coil above desired temperatur

what to do: reduce the power (voltage) on the bat-tery mod or install higher resistance coil.

The reason: No liquid left in the tank.

What to do: Refill the tank

The reason: Tails of the wick are packed too tightly n the evaporation chamber

What happens: Too tightly packed wick may block grooves (1h) and obstruct e-liquid flow from the tank

What to do: Place wick properly

It must lie free over the grooves (1h) but should not be pressed against or stuck into them.

The reason: The grooves (1h) are blocked What happens: Pieces of wick are stuck in grooves

What to do: Remove pieces of wick from grooves

The reason: Holding Kayfun Lite upside down (mouthpiece part down) all the time, for example when lying down.

What happens: In this position liquid does not cover grooves (1h). As a result, liquid doesn't flow into evaporation chamber and does not saturate wick during the draw

What to do: Do not use Kayfun Lite in this position

The reason: Too long piece of the resistance wire is

What happens: The pieces of resistance wire is left between the screws and the wick.

What happens: The pieces of resistance wire that don't contacts the wick get easily overheated What to do: Adjust the coil position to eliminate

long resistance wire legs not contacting the wick. ason: Resistance wire is wrapped too loos

around the wick

What happens: Coils that don't contact the wick

get easily overheated What to do: Rebuild coil correctly: resistance wire should have contact with the wick along the length of the coil

What happens: Resistance wire pinches the wick and obstructs the flow of e-liquid along it, this can be the reason of burnt taste

What to do: Rebuild coil correctly: resistance wire

The problem: Burnt taste and flooding at the same time

The reason: Yes, this can also happen if during assembly you don't place tails of the wick along the grooves but leave them lifted.

This is usually done out of habit - wick tails are placed this way in some popular cartomizers

What hannens: In this case, when you draw, liquid flows into evaporation chamber, does not find wick tails to such into (they are raised up), eventually rises over the air duct level and overflows.

while coil remains dry causing burnt taste What to do: Install wick correctly

The problem: The draw is too tight

The reason: Very large coil and/or wick What happens: Air flow in evaporation chamber gets

What to do: Setup the coil and wick correctly

The reason: The blockage of the air duct (1g) What happens: Something obstructs the airflow through

What to do: Remove the obstruction

WARNING: Some flavorings that make up liquids electronic cigarettes have a devastating impact on the

# http://forum.svoemesto.ru/showthread.php?t=611 https://dl.dropboxusercontent.com/u/5440288/SM/KL UserManual/KL UserManual ENG.pdf

Таблицы расчета мощности (ватт) в зависимоти от напряжения и сопротивления. Цветом выделена «зона комфорта» 8-12 ватт Сопротивление (ом) 2,9 1,0 1,1 1,2 1,3 1,4 1,5 1,6 1,8 1,9 2,0 2,1 2,2 2,4 2,5 2,6 2,7 2,8 3,0 3,1 3,3 3,4 3,5 1,7 2,3 3,2 6,9 7.5 6,4 6,0 5,6 4,5 3,9 2,9 2,7 2,6 3,0 9,0 8,2 5,3 5,0 4,7 4,3 4,1 3,8 3,6 3,5 3,3 3,2 3,1 3,0 2,8 2,6 9,6 8.7 8,0 7,4 6,9 6,4 6,0 5,7 5,3 5,1 4,8 4,6 4,4 4,2 4,0 3,8 3,7 3,6 3,4 3,3 3,2 3,1 3,0 2,9 2,8 2,7 4,7 3.2 10.2 9.3 8.5 7.9 7.3 6,8 6.4 6,0 5.7 5.4 5,1 4.9 4.5 4.3 4.1 3.9 3.8 3.7 3.5 3.4 3,3 3.2 3,1 3,0 2,9 3,3 10,9 9,9 9,1 8,4 7,8 7,3 6,8 6,4 5,7 5,4 5,2 5,0 4,7 4,5 4,4 4,2 4,0 3,9 3,8 3,6 3,5 3,4 3,3 3,2 3,1 6.1 9,6 8.9 7.7 6,4 4,8 3,9 3,7 3,5 3,4 11,6 10.5 7,2 5,8 5,5 5,3 5,0 4,6 4,4 4,3 4,1 4,0 3,3 3,4 8.3 6,8 6,1 3,6 7,2 12,3 10,2 9,4 8,8 8,2 7,7 5,6 5,3 5,1 4,9 4,7 4,5 4,0 3,7 3,5 6,8 6,4 6,1 5,8 4,4 4,2 4,1 3,8 3,6 3,6 13,0 11,8 10,8 10,0 9,3 8,6 8,1 7,6 7,2 6,8 6,5 6,2 5,9 5,6 5,4 5,2 5,0 4,8 4,6 4,5 4,3 4,2 4,1 3,9 3,8 3,7 3,7 13,7 12,4 11,4 10.5 9.8 9.1 8,6 7.6 7,2 6,8 6,5 6,2 6,0 5,7 5,5 5,3 5,1 4,9 4,7 4,6 4,4 4,3 4,1 4,0 3,9 8,1 3,8 14.4 13.1 12.0 11.1 10.3 9,6 9.0 8.5 8.0 7.6 7.2 6,9 6.6 6.3 6.0 5,8 5.6 5.3 5.2 5,0 4,8 4,7 4.5 4,4 4.2 4,1 3,9 15,2 13,8 12,7 11,7 10.9 10,1 9.5 8.9 8.5 7.6 7,2 6,9 5,9 4,9 4,8 4,5 4,3 8,0 6,6 6,3 6,1 5,6 5,4 5,2 5,1 4,6 4,0 16,0 14,5 13,3 12,3 11,4 10,7 10,0 9,4 8,9 8,4 8,0 7,6 7,3 7,0 6,7 6,4 6,2 5,9 5,7 5,5 5,3 5,2 5,0 4,8 4,7 4,6 12,9 12,0 10,5 9,9 7,6 4,1 16,8 15,3 14,0 11,2 9,3 8,8 8,4 8,0 7,3 7,0 6,7 6,5 6,2 6,0 5,8 5,6 5,4 5,3 5,1 4,9 4,8 4,2 17,6 16,0 14,7 13,6 12,6 11,8 11,0 10,4 9,8 9,3 8,8 8,4 8,0 7,7 7,4 7,1 6,8 6,5 6,1 5,9 5,7 5,5 5,3 5,2 5,0 6,3 9.7 9.2 7,1 4,3 18,5 16,8 15,4 14.2 13,2 12,3 11,6 10.9 10.3 8.8 8.4 8.0 7.7 7,4 6,8 6,4 6,2 6.0 5,8 5,6 5,4 5,3 6.6 10,2 12,1 11,4 10,8 9,7 9,2 8,8 8,4 7,7 7,4 7,2 6,7 4,4 19.4 17,6 16,1 14,9 13,8 12,9 8.1 6,9 6,5 6,2 6,1 5,9 5,7 5,5 18,4 16,9 14,5 13,5 12,7 11,9 11,3 10,7 10,1 9,6 9,2 8,8 8,4 7,8 7,5 7,0 6,0 4,5 20,3 15,6 8,1 7,2 6,8 6,5 6,3 6,1 5,8 4,6 21,2 19,2 17,6 16,3 15,1 14,1 13,2 12,4 11,8 10,1 9,6 8,8 8.5 7,8 7,6 7,3 7,1 6,8 6,6 6,4 6,2 6,0 13,8 12,3 10,5 7,9 22.1 20.1 18.4 17.0 15.8 14.7 13.0 11.6 11.0 10.0 9.6 9.2 8.8 8.5 7.6 7.4 6.9 6.5 6.3 4.7 8.2 7.1 6.7 23,0 14,4 13,6 4,8 20,9 19,2 17,7 16,5 15,4 12,8 12,1 11.5 11.0 10.5 10.0 9.6 9.2 8,9 8.5 8.2 7.9 7.7 7,4 7,2 7,0 6,8 6,6 24,0 21,8 20,0 18,5 17,2 16,0 15,0 14,1 13,3 12,6 12,0 11,4 10,9 10,4 10,0 9,6 9,2 8,9 8,6 8,3 8,0 7,7 7,5 7,3 7,1 6,9 25,0 22,7 20,8 19.2 17.9 16,7 15,6 14,7 13,9 13,2 12,5 11,9 10,9 10,4 10.0 9.6 9.3 8.9 8.6 8,3 8.1 7.8 7,6 7,4 7,1 23,6 21,7 20,0 18,6 17,3 16,3 15,3 14,5 13,7 13,0 12,4 11,8 11,3 10,8 10,4 10,0 9,6 9,3 9,0 8,7 8,4 7,9 7,7 7,4 26,0 8,1 9,7 9,3 9,0 8,7 7,7 24,6 22,5 16,9 15,9 14,2 13,5 12,3 11,8 11.3 10.8 10.4 10.0 8.5 5,2 27,0 20,8 19,3 18,0 15,0 12,9 8.2 8.0 9,7 14,0 12,2 10,8 10,0 9,4 9,1 8,8 8,5 8,3 5,3 28,1 25,5 23,4 21,6 20,1 18,7 17,6 16,5 15,6 14,8 13,4 12,8 10,4 8,0 24,3 22,4 20,8 19,4 18,2 15,3 14,6 13,9 12,7 12,2 10,4 9,7 9,4 9,1 8,8 8,6 8,3 5,4 29,2 26,5 17,2 16,2 13,3 11,7 10,1 27,5 5,5 30,3 25,2 23,3 21,6 20,2 18,9 17,8 16,8 15,9 15,1 14,4 13,8 13,2 12,6 12,1 11,6 10,8 10,4 10.1 9,8 9,5 9,2 8,9 8,6 31.4 28,5 26.1 24.1 22.4 20,9 19,6 18.4 17.4 16.5 15.7 14,9 14.3 13.6 13.1 12,5 12,1 11.6 11.2 10.8 10.5 10.1 9.8 9.5 9.2 9.0 5,6 19,1 10,8 21,7 20,3 12,0 10,5 10,2 9,3 5,7 32,5 29,5 27,1 25,0 23,2 18,1 17,1 16,2 15,5 14,8 14,1 13,5 13,0 12,5 11,6 11.2 9,8 9,6 5,8 33,6 30,6 28,0 25,9 24,0 22,4 21,0 19,8 18,7 17,7 16,8 16,0 15,3 14,6 14,0 13,5 12,9 12,5 12,0 11,6 11,2 10,9 10,5 10,2 9,9 9,6 24,9 17,4 14,5 13,9 13,4 12,9 9,9 5.9 34,8 31,6 29,0 26,8 23,2 21,8 20,5 19,3 18,3 16,6 15,8 15,1 12,4 12,0 11,6 11.2 10.9 10.2 36,0 32,7 30,0 27,7 25,7 24,0 22,5 21,2 20,0 18,9 18,0 17,1 16,4 15,7 15,0 14,4 13,8 13,3 12,9 12,4 12,0 11,6