

CEETIDE™

User Manual

Version 1.27.02



www.ceehydrosystems.com

Copyright

This manual is copyright © 1992-2010 Bruttour International Pty. Ltd. All rights reserved.

This manual, or parts thereof, may not be reproduced or transmitted in any form or by any means, electronic, mechanical, photocopying, recording or otherwise, without prior written permission of Bruttour International Pty Ltd except on "an in-house" basis by Users of the CEE range of Hydrographic surveying equipment and software, for the express purpose of their own use.

The following known Trade Marks or Trade Names may appear in this manual and are used in an editorial context in the text with implied benefit to the Owners of those Trade Marks or Trade Names with no intention of any infringement of those Trade Marks or Trade Names: HYPACK, Ashtech, Siemens, THE PROBE, Probe LU, Probe LR, SITRANS, Milltronics, LEMO, SATELLINE, SATEL, Microsoft, HyperTerminal, Windows, and any variants, severally thereof.

Notice of Liability

The information in this book is distributed on an "as is basis" without Warranty. Every effort has been made to ensure accuracy in the accuracy of the information contained in this book but neither Bruttour International Pty Ltd, nor its Employees and Associates shall have any liability to any person or entity with respect to liability, loss, consequential loss, or damage caused directly, or indirectly, by the use of the information in this book.

CEEDUCER PRO™ and CEETIDE™ are registered TRADE MARKS of: Bruttour International Pty. Ltd.

FCC Information for the USA

This equipment may radiate radio frequency energy which could cause interference to radio and television reception.

The equipment has been tested and found to comply with the limits of a Class A computing device pursuant to part 15 of the FCC rules. The equipment is also believed to comply with the requirements of a Class B computing device but has not been tested thereto.

This equipment was tested for compliance under conditions that included the use of shielded cables and connectors between it and peripherals. It is important to use shielded cables to reduce the possibility of causing, or suffering from, the effects of radio interference.

For Users in the USA, the booklet published by the FCC and entitled "How to identify and resolve Radio-TV interference Problems" may be of help. Copies can be obtained from:

The US Government Printing Office
WASHINGTON DC 20402
Stock No. 004-000-00345-4

Contents

Quick reference guide	4
Introduction	5
System Description	5
System Options	5
System Operation	6
The CEETIDE™ Unit	7
Front Panel	7
Connections	9
Getting started	10
System installation	10
System Configuration	13
CEETIDE™ operational considerations	18
CEETIDE™ menu system options	21
CEETIDE™ Utility software	28
CEETIDE™ download formats	32
CEETIDE™ Real time output formats	33
Appendix A – hardware details	36
Physical Properties – CEETIDE™ control unit	36
Electrical Properties	36
UHF Modem	36
GPS Properties	36
Serial Output data	37
Appendix B – cable details	38
Appendix C – probe details	40
Milltronics THE PROBE Dimensions	44
Appendix D – remote command options	47
Appendix E – Download example via HyperTerminal	53
Index	55

Quick Reference Guide

To setup the CEETIDE™ acoustic tide gauge system you will need the CEETIDE™ control box and the probe with a suitable mount.

- Select a position for the probe that will have a clear projection to the water surface at all times with a minimum range of 50cm at the highest water level. The ground should not be exposed at low water, no vessels should be moored under the probe and there should be no structures or interference within the beam footprint (see Appendix B in user manual). The height of the probe face above datum should be measured and recorded for later use.
- Connect the external power source to the CEETIDE™ (the internal battery is designed for short term, backup use only)
- Connect the probe data cable to the CEETIDE™ control unit and turn the system on. The screen will remain blank however the LED's on the left side will light up indication the system is operating. Press the **DISPLAY** key to turn on the screen. The probe will take a short time to stabilise before supplying a distance reading.
- Unlock the keypad by simultaneously pressing the **ENTER** key and the **MENU** key and hold for 3 seconds. Press the **MENU** key again to display the setup options. Set the clock date and time as required. Press the **ENTER** key to confirm settings then press the **MENU** key to go to the next menu option.
- Select the Probe Height option and enter the measured height of the face of the probe above (or below) the datum (in metres) to be used to reference the water level. Press the **ENTER** key to set the height value then press **CLEAR** to go back to main tide profile view or press **MENU** to adjust another setting.
- If required change the logging interval and measure period to suit your requirements and location.

The CEETIDE™ will start recording water levels automatically once the first reading is received. Turn the screen off by pressing the **DISPLAY** button, alternatively the screen will automatically turn off after a short time. The CEETIDE™ tide gauge system does not require the screen to be on to collect data saving power consumption. Refer to the CEETIDE™ user manual for information on downloading recorded data and for real time output configuration.

Introduction

System Description

The CEETIDE™ tide gauge system offers easy installation and accurate recording of tide movement over short or long periods. Lightweight and portable, the CEETIDE™ is equally suitable for fixed or temporary installations.

The CEETIDE™ system consists of an electronic Control Unit (the CEETIDE™) connected to a distance sensing instrument (both the acoustic LU and radar LR options are referred to in this manual as the PROBE) installed above water. The PROBE measures the distance to the water surface. The measurement of the PROBE is collected in the Control Unit. The Control Unit records and processes the data, converts it to tide height relative to a given datum that is stored in internal memory. The CEETIDE™ provides a serial port for data output in a variety of formats (both in real time and download of stored data).

An external power supply is required for long term installation, although the unit is provided with an internal standby battery to allow operation for short periods of time where external power may become unavailable.

There are no moving parts or submerged installations. There is only one necessary cable connection from the PROBE to the CEETIDE™.

There are virtually no metal parts exposed on the probe to the outside world, thus corrosion is negligible.

System Options

The PROBE used can be either acoustic or a radar 4-20mA loop powered distance measurement sensor. Optionally, there is also the ability to run directly powered (non-loop powered) sensors via a 3 wire connection, however these devices use more power and require slightly different build option in the CEETIDE™. This option is only supported for people already in possession of a working Milltronics PROBE from an older CEETIDE™ system.

The CEETIDE™ unit can also have optional telemetry installed making a neat, efficient, broadcasting Tide gauge system for use in real time by survey vessels and dredgers, as well as remote display in Port Control offices and the like. Provision of telemetry also allows the remote monitoring of the CEETIDE™ status, battery condition, downloading of logged data, and change of recording interval. Telemetry is by use of UHF radio or 3G/CDMA phone services.

The two basic telemetry options available allow different kinds of service, depending on what is required of the CEETIDE™ system installation.

A UHF telemetry system is great for broadcasting local area real time corrections, or a short range connection from an office to a CEETIDE™ on a local site. In this case, a separate modem to match the one inside the CEETIDE™ is required to receive the data. There is no limit to the number of vessels/offices receiving the data transmission allowing for multiple vessels to have access to real time information. Data transmission (once setup) is free.

A 3G or CDMA telemetry system is great for remote tide gauge installations where real time correction data is not required, but periodic downloads from a (possibly very) remote location are. In this case, the CEETIDE™ internal modem logs onto a local telephone network and can be dialled up and accessed from a remote computer anywhere in the world using the standard telephone system and a standard dial up modem. Distance is greatly increased, but data transmission is not free.

Alternatively a CEETIDE™ with a 3G modem can be configured to send a tide value at a given interval to up to five mobile phone numbers as a SMS (Short Message Service). This is configured using the CEETIDE™ utility program (version 2.2.0.0 or later) via a direct connection to the CEETIDE™ control box.

NOTE: The SMS function disables the remote dial in function of the internal Next G modem.

Additionally, a GPS time sync option is available where an internal GPS system is built into the CEETIDE™ just for the purposes of keeping the CEETIDE™ clock automatically in synch with GPS system time, and removes the need for manually adjusting system time over long installations.

System Operation

The CEETIDE™ tide gauge system provides two independent modes of operation.

1. A logging system for recording and storing tides over an extended period of time.
2. A real time tide data source, for providing timely information on current water levels in an area.

In both cases, these modes of operation rely on measuring the distance from a probe down to a physical Water Level, determining this distance as accurately as possible, and then using the known distance of the probe to a specific Reference Datum in order to produce a measurement of physical Water Level to known Reference Datum.

For Real Time data the probe measures constantly and CEETIDE™ will send the last recorded level at predetermined intervals. For the logging system it is necessary to determine an acceptable Tide information interval. When the CEETIDE™ is set to run with Real Time data out the system will continue to log the water level at the predetermined intervals.

In order to calculate an accurate distance from probe face to water level the CEETIDE™ will collect a series of data points, filter the data points to remove outliers, and then calculate a distance based on the average of the filtered measured data. Filtering is done by a method of Standard Deviation testing.

For logging purposes, it is possible to select no filtering, removal of data points more than 2 Standard Deviations from the raw average or removal of data more than one Standard Deviation from the raw average. In the case of Logged data, the time of this average is given as the centre time of the Logging Period.

For real Time purposes, the raw data is filtered to remove data points over 2 Standard Deviations from the raw average. The average of the remaining data points is the sum of the remaining data points, divided by their number. In the case of Real Time data, the time of this data is given as time it is transmitted. Transmitted tide data is the same from the beginning of a logging period to the end of the logging period.

The CEETIDE™ Unit

Front Panel

The CEETIDE™ front panel interface is for making settings and controlling the CEETIDE™ manually as well as reviewing the logged data. This interface is made up of three main parts.

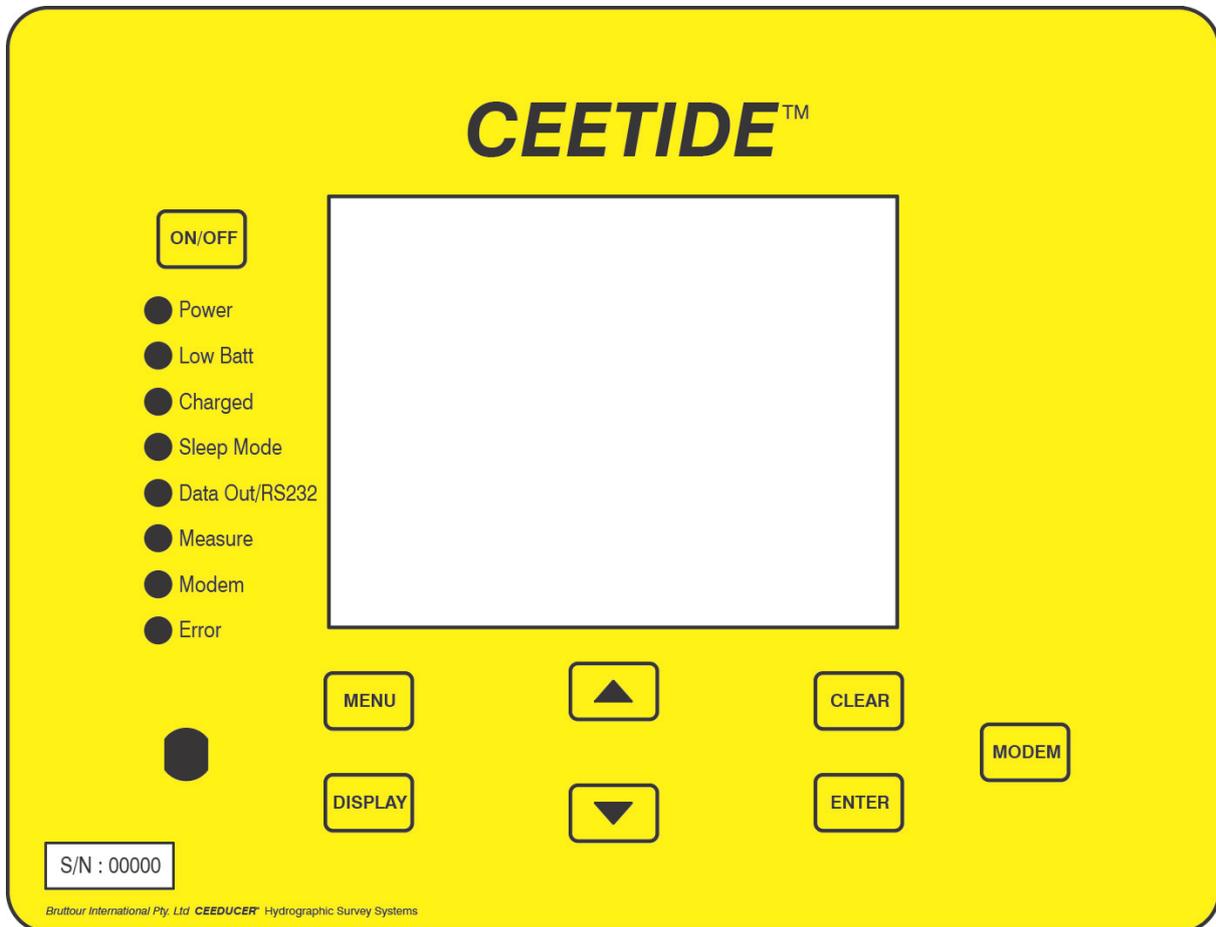


Figure 1: The CEETIDE™ control unit.

CEETIDE™ LEDs

The CEETIDE™ is equipped with 8 LEDs. These LEDs are used to communicate the immediate status of the CEETIDE™ in a simple fashion.

Power on	Indicates CEETIDE™ is running.
Low battery	Indicates internal battery is at a low state of charge.
Charged	Indicates internal battery is fully charged.
Sleep mode	Indicates CEETIDE™ probe is turned off to save power.
Data Out/RS232	Indicates serial data is being output.
Measure	Indicates Measurement is in progress.
Modem	Indicates internal Modem is powered ON.
Error	Indicates an 'error' condition.

CEETIDE™ Display

The CEETIDE™ is equipped with a 320x240 graphic LCD module, and this display can be used to see more of what is happening with the CEETIDE™, as well as to examine or edit parameter settings, and to examine log data history.

CEETIDE™ Buttons

The CEETIDE™ is equipped with 8 front panel buttons. These buttons are mostly used in conjunction with the display in order to examine or edit parameter settings, view log data history, and initiate log downloads.

ON/OFF	Turn the CEETIDE™ on and off.
MODEM	Turn the CEETIDE™ internal modem (if installed) on and off.
DISPLAY	Turn the CEETIDE™ display on or off.
MENU	Bring up the CEETIDE™ menu system for editing settings
▲ (UP)	Increment a value or move up the menu selection screen.
▼ (DOWN)	Decrement a value or move down the menu selection screen.
ENTER	Accept changes to a parameter
CLEAR	Discard changes to a parameter or exit from menu selection screen.

NOTE: That the CEETIDE™ implements a key control system – in normal operating mode the only button that will work normally is the **DISPLAY** button. The other buttons are not set to respond to being pushed. This is to help stop unauthorized and unwanted changing of parameters in a running tide gauge. To enable key access have the CEETIDE™ powered on and press the **DISPLAY** button to enable the display. Key access is enabled by holding down the **MENU** and the **ENTER** buttons together for 3 seconds. With key access enabled the screen will display a message **KEY ACCESS OK** at the top left area. See “Enabling CEETIDE™ key access” section for more details.

Connections



Figure 2: The connections on the right hand side of the CEETIDE™ control unit

On the right side of the CEETIDE™ unit are the sockets for the connections that can be made to the CEETIDE™ unit.

Looking at these sockets from the side, you can see from left to right there are the connectors for POWER (3 pin LEMO), PROBE (black CA connector), DATA (5 pin LEMO) and the optional TELEMETRY ANTENNA (TNC).

There can be a BNC connector for the GPS antenna connection if the GPS time sync option is installed.

Getting started

System installation

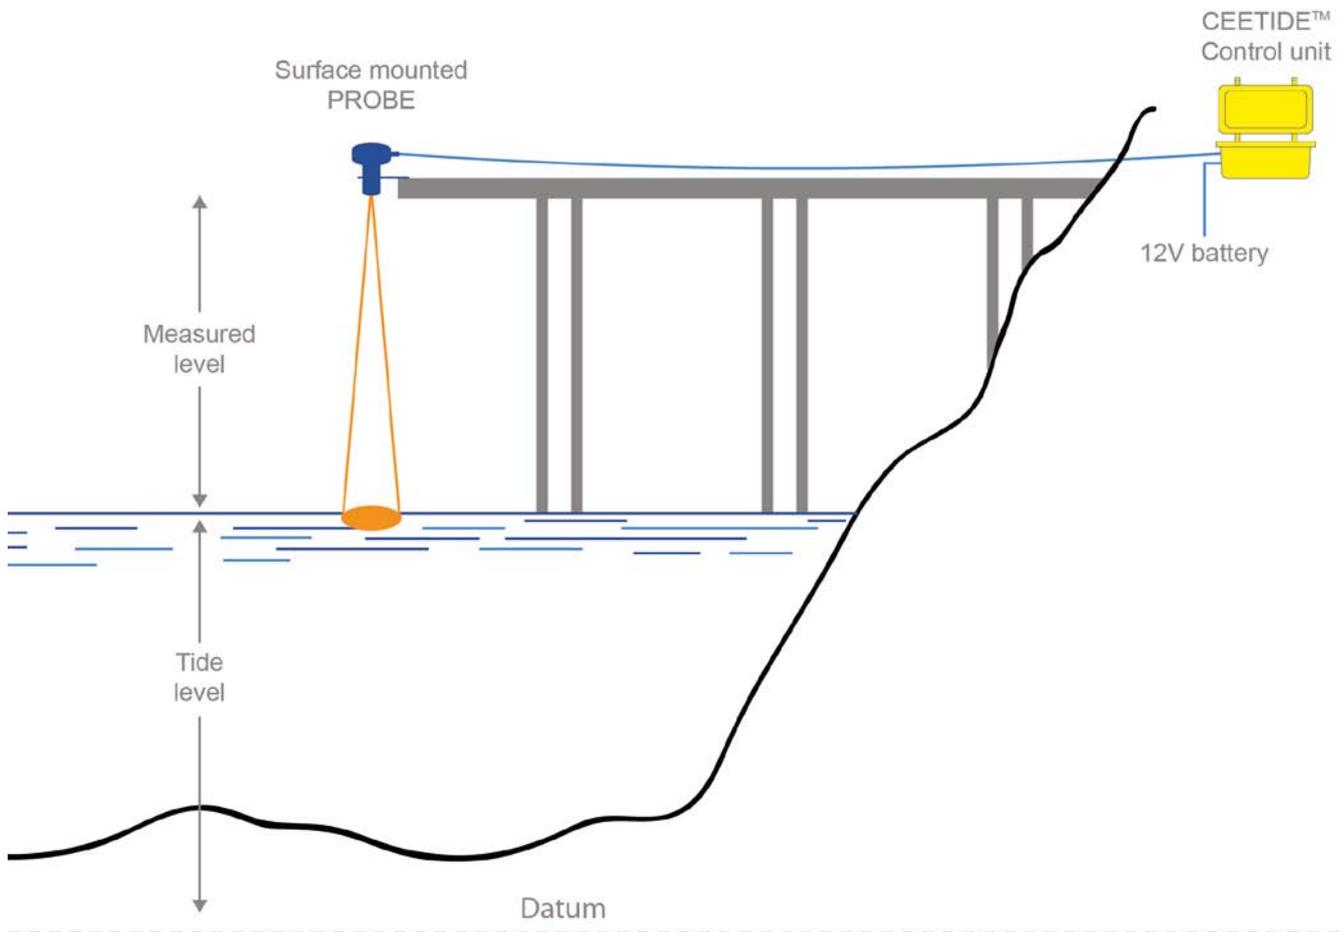


Figure 3: A basic CEETIDE™ system installation

Mounting the PROBE (Sensor)

The PROBE must be installed above the water, facing vertically down to the water surface.

It must be positioned so that there are no obstructions in the path to the water surface, and be fixed to a solid structure. Make due allowance for the 'spread' of the beam angle when measuring to the water (see [Appendix C – probe details](#) for the figures relating to the particular Probe being used in a particular installation). All PROBE types have a beam spread figure, that results in a given diameter measurement area at a given distance from the probe. Visualise a cone extending down from the probe, as shown in red in Figure 3. If anything sits above the water inside this cone, it will reflect false return signals that can cause confusion in the distance measurement that all CEETIDE™ information is based on. To ensure accurate tide readings avoid any chance of reflections from jetty pylons, walls or other surfaces.

Make sure that small boats do not tie up underneath the PROBE temporary obstructions.

The PROBE should be installed at least 50 cm above the highest Spring (King) tides and wave action. Also the PROBE location should be such that the water underneath the PROBE does not dry-out at low water.

Determining PROBE height

The relation between the chart datum and the PROBE reference zero must be known. Please look into [Appendix C – probe details](#) to determine the particular PROBE reference zero for your PROBE.

The probe zero height should be measured from a surface with known relationship to the tide datum in use (i.e. wharf or jetty benchmark). Alternatively the PROBE height can be levelled to datum zero or other known benchmark.

If no datum information is to hand a rough and practical setting can be made by reference to (any) available tide tables. The tide tables will give times and predicted heights of the tide. Using a tape measure, measure from the Probe face to the water level at a known time. Add this value to the predicted height of the tide for that time; this will give the height of the Probe above tide datum. When the predicted height of tide is known, make the CEETIDE™ read that height of Tide by adjusting the setting of the Probe height above datum in the CEETIDE™. Subsequently recheck several times at close, regular intervals to monitor the difference between known tide and recorded tide. Note that resultant tide reading can be positive or negative depending on the tide datum in use.

Installing the CEETIDE™ unit

The CEETIDE™ unit is rated to IP65 for water ingress, and is therefore quite environment proof. However some concessions must be made for its installation.

If the CEETIDE™ system is to run for an extended period of time (more than 24 hours) then it should have an external power supply to run from. This can be a large lead-acid battery (12V), a lead acid battery charger (12V rated around 1A and preferably 3 stage) or a DC power supply (nominal 12V)

In a very hot location, the CEETIDE™ unit should not be left to run in direct sunlight.

Installing a telemetry antenna

If a telemetry option is to be used then it is necessary to mount the telemetry antenna somewhere so that all receivers can access its data.

Generally the telemetry antenna is required to be as high as practically possible and setup so its radiation pattern covers the area where reception is needed.

There are many different antenna types possible to be used here, and an explanation of each type and best installation instructions are beyond the scope of this manual. Please contact your local agent or CEE HydroSystems™ for assistance with selecting an antenna to suit your particular CEETIDE™ system.

Installing a GPS antenna

If a GPS time sync option is to be used then it is necessary to have a place to mount the GPS antenna so that it can get a clear view of the sky and where an antenna cable can be run back to the CEETIDE™.

Placement of the antenna inside, underneath, or beside structures of metal is not advised. GPS signals are extremely low level, and in order to work, the antenna needs a good collection of GPS satellite signals that are free of multipath reflections.

Making connections

The PROBE connects to the CEETIDE™ with a heavy duty cable, wired into the PROBE at one end with screw terminals. The other end is plugged into the CEETIDE™ control unit with a large black plug with a screw down collar for making a firm attachment.

If Telemetry options are to be used, it is very important that the telemetry antennas are attached to the CEETIDE™ before power is applied to the modem

 **WARNING:** If power is applied to a modem without an external antenna attached this can result in damage to the output stage of the modem. This damage is not covered by warranty.

Data from the CEETIDE™ RS-232 serial port is supplied via the data output cable connected to the 5 pin LEMO connector. Line up the red dot on the plug with the red dot on the socket, and push the plug in as far as it will go. The plug will lock into place with a physical click. The LEMO plugs may be detached again by pulling firmly on the knurled barrel of the plug, which will slide back to disengage the locking mechanism. On the other end of this cable is a standard DB9 with pins in the universal DCE serial port arrangement that can be plugged into the standard D9 serial port on any PC or connected to most USB-Serial convertors. CEETIDE™ serial cables are also available with the D9 pins in a DTE arrangement. In the case where a supplied CEETIDE™ cable does not connect to the desired device, an appropriate NULL-MODEM can be purchased and used to convert DTE/DCE connectors.

External power is run to the CEETIDE™ via a cable terminated in a 3 pin LEMO plug. On the other end of this cable are tinned wire leads. RED is connected to the positive (+) terminal of the 12V power supply, and BLACK is connected to the negative (-) terminal of the 12V power supply.

System Configuration

Powering up the CEETIDE™

With all devices connected up correctly, it is time to power up the system.

If the CEETIDE™ unit is off it can be turned on by momentarily pressing the **ON/OFF** button (the green **POWER LED** on the front panel is not lit when turned off).

The CEETIDE™ unit can be turned off by holding down the **ON/OFF** button for 3 seconds, but **ONLY IF** the **DISPLAY** is on and **KEY ACCESS** is enabled (see below). These safeguard features are designed to make it harder for a system that once installed is less likely to be turned off accidentally or have the settings changed by an unauthorised operator.

Enabling the CEETIDE™ display

As a long-term data logging system, the CEETIDE™ is designed to run with as little current draw as possible. To help with this the display is turned off when not in use.

The default operating state of a CEETIDE™ is to have the screen off.

If the CEETIDE™ is running and you wish to view the screen, then it is simply a matter of pressing the **DISPLAY** button.

At any time an active screen can be turned off by pushing the **DISPLAY** button again. Alternatively, the CEETIDE™ is designed to time out and turn off the screen by itself after a period of time to ensure that the screen can never be left on accidentally.

With just the display enabled CEETIDE™ will time out and turn off the display after one minute.

Enabling CEETIDE™ key access

The CEETIDE™ system of enabling **KEY ACCESS** is designed to create a simple (but non-obvious) barrier to making changes to the setup of, or turning off the CEETIDE™.

With the CEETIDE™ powered **ON**, and the **DISPLAY** active, key access is enabled by holding down the **MENU** and the **ENTER** buttons together for 3 seconds.

With **KEY ACCESS** enabled, the screen will display a message **KEY ACCESS OK** at the top left area.

In addition to this, **KEY ACCESS** has an automatic timeout feature – it will count down from 10 minutes to zero. At the end of its count, **KEY ACCESS** will display “None” and the display will be turned off. When **KEY ACCESS** is enabled, the time remaining countdown is shown at the top right of the screen.

In **KEY ACCESS** mode, it is possible to enter the menu system, to power cycle the built in telemetry system, and to turn off the CEETIDE™ itself.

Turning Internal Telemetry on and off

The **MODEM** button is used to turn on the power for an internal MODEM (UHF or 3G/CDMA) if one is installed in the CEETIDE™ unit. KEY ACCESS MODE must be enabled to turn the modem on.

Modem power status can be seen by viewing the “Modem” LED. If it lit up orange, then power is present for the modem.

To turn on the modem simply press the **MODEM** button once. KEY ACCESS MODE must be enabled to turn the modem on.

To turn off the modem (when key access is enabled) simply hold the **MODEM** button for 3 seconds, and then release. (This is designed to provide protection against accidental switching off of the modem). KEY ACCESS MODE must be enabled to turn the modem off.

In earlier versions of CEETIDE™ firmware the modem power status will be returned to previous setup it was when the system power was turned off. For this reason, please remember to turn OFF the internal modem before turning off the CEETIDE™ unit, if you do not wish for the modem to switch on next time the CEETIDE™ is powered on. CEETIDE™ 1.25 and onwards will require the modem to be manually turned on each time the CEETIDE™ is powered up.

 **WARNING:** A UHF modem must not be powered on without an appropriate antenna connected to it. If the modem tries to transmit a message with no (or the wrong) antenna connected, this can cause damage to the output stage of the modem which is not covered by warranty.

NOTE: The modem will not turn off when CEETIDE™ is in sleep mode

NOTE: The modem functions will control an internal modem only. These functions will not control settings or supply power to an external modem

The CEETIDE™ default screen

Whenever the display is freshly enabled, the CEETIDE™ will begin by showing its default screen. This screen is designed to show as much relevant operating information as possible, so the operator can, at a glance, confirm correct operation and configuration of the CEETIDE™ system.

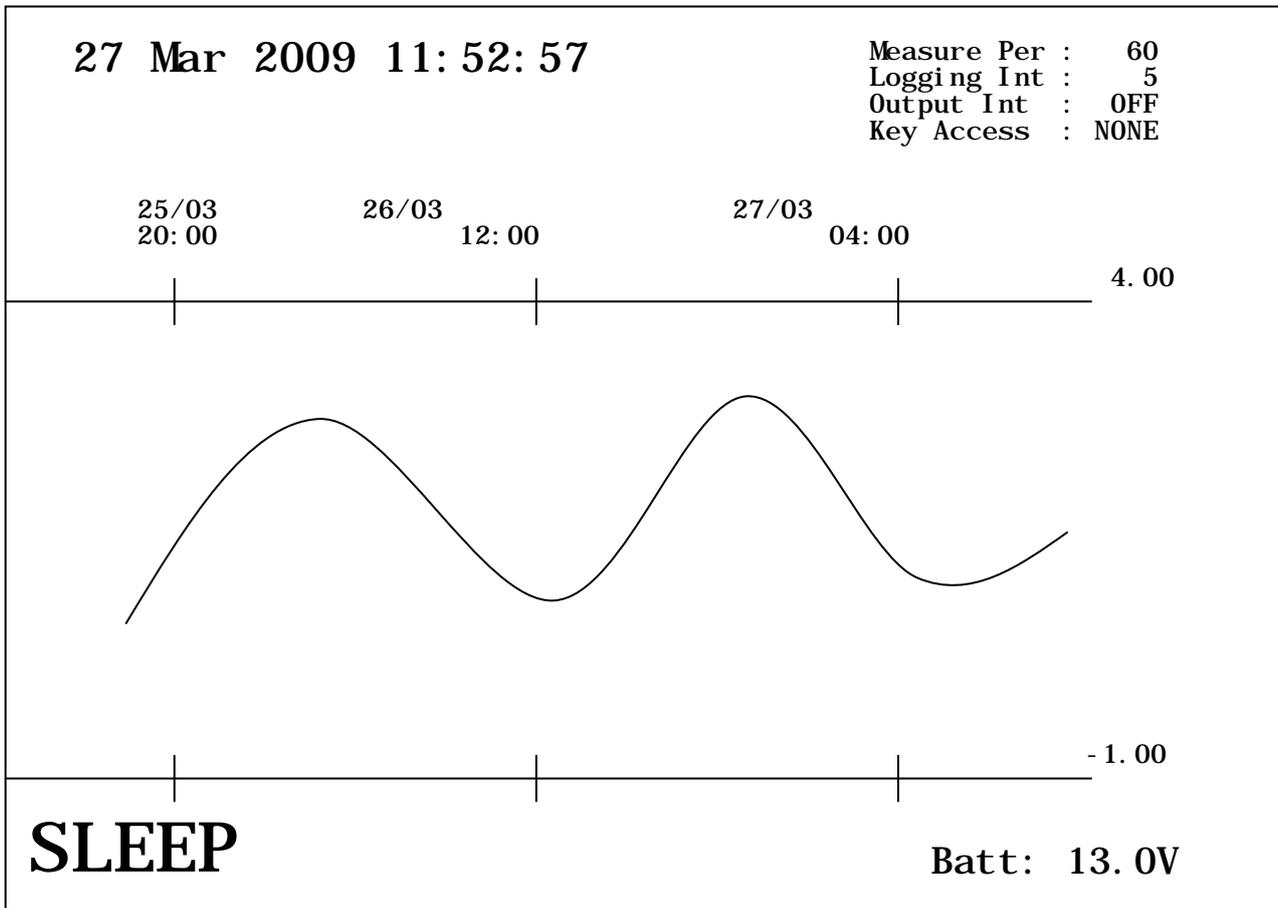


Figure 4: CEETIDE™ default screen.

The default display can be divided into a few main areas:

The top left area displays the current date and time (underneath this, KEY ACCESS status is also displayed)

The top right area shows the Measure period (in seconds) the Logging interval (in minutes) the Real Time output Interval (in seconds) and the remaining KEY ACCESS time in minutes.

The graph through the middle shows the most recent log records, as a tide profile. A basic visual inspection of the performance of the CEETIDE™ log file can be performed from this screen display. The profile range (how many days/hours that are displayed) can be set to the required range. The upper and lower graph tide limits can be set to display the tide range expected for the particular installation as well as possible. See [Graph Scale](#) for how to configure the graph settings.

The bottom left area of the display will show the status of the tide gauge – it will show **SLEEP** if the probe is turned off or it will show the current tide value if the probe is running. It will show **ERROR** if a probe is not detected (or just turned on and the CEETIDE™ is waiting for a valid measurement to come through).

The bottom right section will display the current battery voltage. If the PROBE is running at that time, this area also holds a circular display of the PROBE current (in mA) the distance measured by probe to water surface (in metres) and tide height relative to datum entered (in metres).

At the middle of the bottom area there is a message showing the current status of the LOG process. This can show "IDLE" – (the tide logging process is not measuring anything). It can show a numeric countdown - (a Measure period is underway and probe distance data is being collected) or it can show "LOG!" – (a Measure period has just been completed, and the log file is being updated)

Using the menu system

With the CEETIDE™ display on and key access enabled, press the **MENU** key. The CEETIDE™ **MENU** will appear.

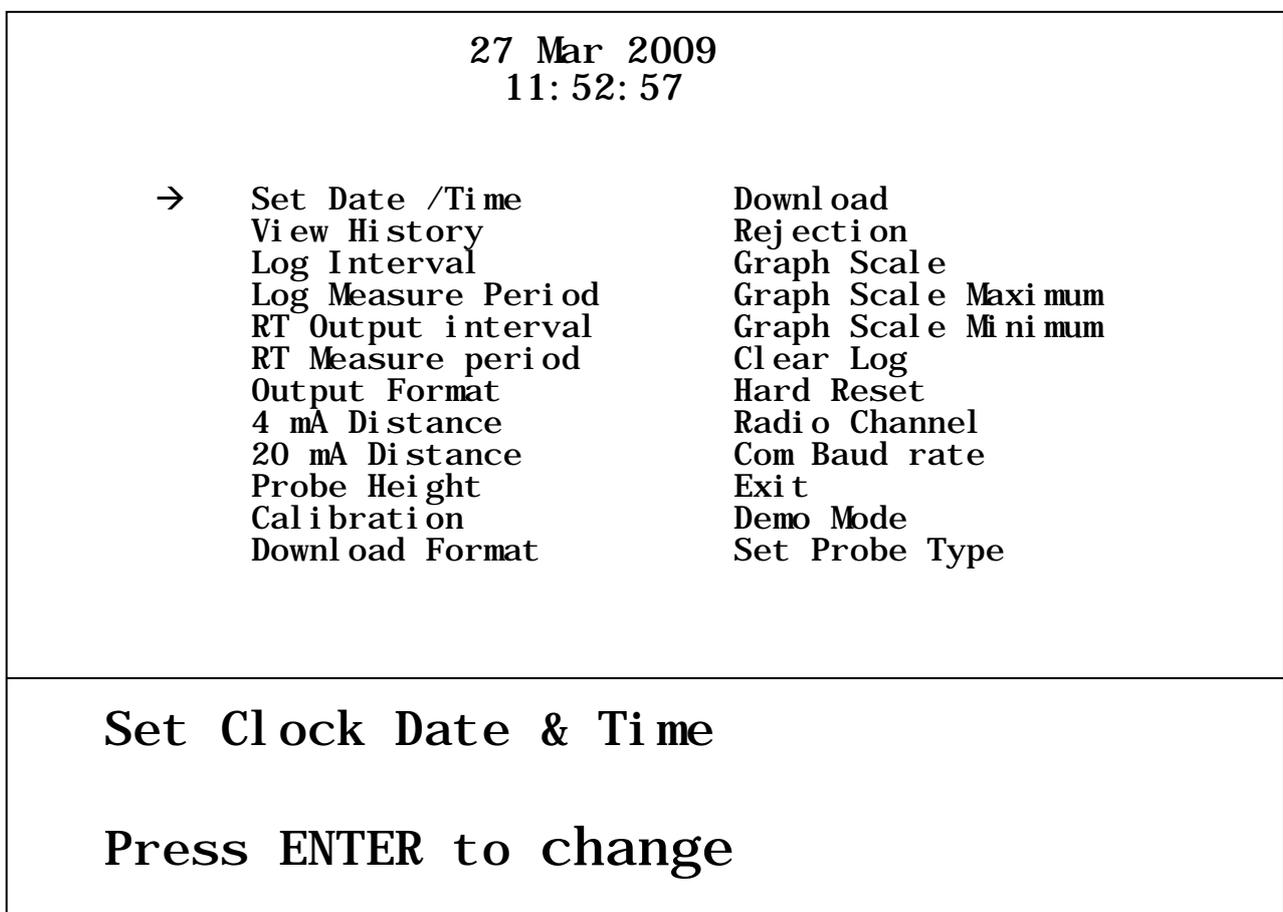


Figure 5: CEETIDE™ menu screen

Move through the **MENU** using the ▲ (UP) and ▼ (DOWN) keys to position the cursor to the setup item that you want, and then press **ENTER** to activate.

As you move the cursor from option to option, the bottom of the display shows a short description of the currently selected item, and where relevant will show possible values and gives the current value.

Press **ENTER** to adjust the setting of a selected item.

Use the ▲ (UP) and ▼ (DOWN) keys to change parameter(s) to new value(s) then press **ENTER** to accept the changes or press **CLEAR** to cancel the changes.

After successfully editing a setting, there are two options - To edit another item setting, press **MENU** to allow use of the ▲ (UP) and ▼ (DOWN) keys and select the next required item as before. Otherwise press **CLEAR** to leave the menu system and return to main operating screen.

Critical settings

To start the 4mA and 20mA distance settings on the CEETIDE™ must match the configuration of the PROBE. Also, the Calibration setting should be left at the default value of 500 unless you are absolutely sure that the probe scale does need calibration and have experimentally determined the calibration setting required to make your CEETIDE™ system work correctly. Please contact CEE HydroSystems™ or the authorized local representative if you require the factory settings of your CEETIDE™ and acoustic probe.

If these PROBE interface settings are not exactly correct, then any measurements (and hence tide records) cannot be relevant or usable.

The time and date setting is very important and should match the time being used in the local area. When tide data from the CEETIDE™ is merged with other data the time in the log file will allow correct values to be used. On installation always check your CEETIDE™ internal system clock and confirm it is correct.

Similarly, the probe height above datum is very important. This number is the interface between your raw probe distance measurement and the actual tide height value needed for surveying, dredging and/or water level monitoring purposes. Without this information entered correctly to reflect the physical installation, the tide values logged and transmitted will not be correct. It may be possible to shift height data in post processing however it's a lot easier and leaves less opportunity for error to have set correctly.

Important settings

After the fundamental interface options, the most important things to set in your new CEETIDE™ installation are dependent on what you wish the installation to achieve.

Firstly, it is important to consider the Log Interval required – What is the end use of your logged data? How often are records needed to be made? See [Log Interval](#) for information on how to set this.

Once a Log Interval has been selected, an appropriate Measurement Period and SD rejection option need to be chosen. See [Log Measure Period](#) and [Rejection](#) chapters for making these settings.

If real time data is required, then the minimum rate of Real Time data needs to be decided on, and configured (see [RT Output Interval](#)). In addition, if internal telemetry needs to be setup, then the channel frequency should be configured (see [Radio Channel](#)) where possible. If the CEETIDE™ needs to be setup for use with an external telemetry system the serial port baud rate should also be considered (see [Communications Baud](#))

CEETIDE™ operational considerations

PROBE height vs. Tidal range

The range of the PROBE is important when positioning the PROBE height. The Siemens LU probe is set to read a 12m tide range as a default. If your tidal range is only 3 metres for instance, CEE HydroSystems™ can make the readings more sensitive by re-setting the 4mA and 20mA limits to say 0.5-5 metres, so that the smaller range of Probe to water distance is transferred by the full range of signal mA.

NOTE: The 4mA and 20mA height values need to be set in both the PROBE and in the CEETIDE™ Control Unit.

NOTE: Instructions for reconfiguring the different probes are in Appendix B. The Siemens probe requires a hand controller to program the settings for use. This controller is not part of the standard equipment kit of the CEETIDE™ system. Contact CEE HydroSystems™ if you require a hand controller for the Siemens Probe.

 **WARNING:** a sub-optimal range setting in the PROBE and the CEETIDE™ is infinitely preferable to an incorrect range setting between the PROBE and the CEETIDE™ – The first may not be as good as it possibly could be, but the second is absolutely incorrect. Please do not adjust these distance ranges unless you are absolutely sure of what you are doing and have the time to test the system after adjustment to make sure that measured probe distance matches actual probe distance over multiple points in your expected range of the CEETIDE™ system.

Calculate battery power consumption

For a short term installation, it is necessary to provide a CEETIDE™ with the energy needed to run at the power requirements it has, for the time it needs to run.

Remember that to use a battery, the capacity of the battery must be equal to or greater than the number of hours required to run, multiplied by the average current required.

It is possible to estimate the average current requirement by examining the configuration and settings used in the installation.

Please look into CEETIDE™ running power requirements, in Appendix A – hardware details, for information on the current draw required for different modes of operation of the CEETIDE™ – By getting the current draw requirements for various parts of the CEETIDE™ system and calculating the time that these parts of the system are powered, an average current draw can be calculated.

This example is for a CEETIDE™ system with no modem and a Probe LU:

Log interval: 5 minutes (= 300 seconds)

Measure period: 60 seconds

Guard Period: 45 seconds (same for all measure periods)

RT output interval: 0 (off)

Display: Off

Modem: Not available

In this case the probe is on for 60 seconds plus a guard period of 45 seconds every 5 minutes. Out of the 300 second (5 minutes) log interval we have a weighting of 0.32 applied to probe ON current of 150mA $((60+45)/300 \times 150\text{mA})$ plus a weighting of 0.65 applied to the system idle current of 100mA $((300-(60+45))/300) \times 100\text{mA}$. This gives us an average current of $52.5\text{mA} + 65\text{mA} = 117\text{mA}$. Therefore, to run this system for 7 days (168 hours) would require a minimum size of $168 \times 0.117 = 19.656 \text{ Ah}$ for the battery energy capacity.

NOTE: The quoted battery output is calculated based on ideal conditions. It is best to overestimate the power requirement to save running out of battery power towards the end of an installation period.

NOTE: When the Probe type in the CEETIDE™ is set to the LR (radar) probe option the probe does not go to sleep mode.

Regularly clearing Log Data in a circular buffer memory system

In normal operation you do not need to clear Log Memory as the CEETIDE™ automatically continues to log by overwriting the oldest data when the memory reaches 100% capacity.

However if the data retrieval procedure relies on downloading ALL data at regular intervals then doing a Clear Log after a successful download (and backup to multiple locations!) of tide data will make the downloading ALL process faster next time by reducing file size to be downloaded and save duplicating log data in multiple files over multiple downloads.

If the tide gauge is moved to a new location you should perform a Clear Log during the initial install.

UHF telemetry system configuration

There are two internal UHF modem options offered in the CEETIDE™. All internal modems are powered by the CEETIDE™ system power and should be considered when calculating the power required to run the system.

The ISM 2.4GHz option uses a send and receive module that are frequency hopping units. The operating frequency range cannot be adjusted and cannot be connected to third party radio receivers.

The Satel UHF modem option allows for the internal UHF modem channel (frequency used for transmit and receive) to be selected. This allows the operating frequency of the telemetry system may be adjusted up and down inside the allowed frequency range. The Satel UHF option will broadcast on a fixed frequency allowing any receiver also operating on the same frequency to receive the data message.

Be aware that other UHF users may disrupt your communications system, and be on the lookout for things such as intermittent service or garbage data coming through your receivers occasionally. In the case of the Satel modem adjusting your modem channel settings may allow you to avoid interference (The frequency on BOTH the transmit end and the receive end of the link must be matching).

It is possible to configure the CEETIDE™ to output real time data at a rate much greater than the system will log internally. You can consider this option for real time tide corrections for survey or dredge work at the cost of higher average system power consumption.

GPS time correction option

There are no user settings for GPS time correction option (If installed)

The system turns on the GPS receiver at power up, waits up to 5 minutes for a position, and then takes the UTC time from the GPS to correct the internal system clock time within a range of 5 minutes. Every 1 day, 3 minutes and 28 seconds (done deliberately to move sync time slowly) the CEETIDE™ will power on its GPS receiver and repeat the time correction process if a GPS position is available.

NOTE: if the time reference is adjusted, the existing Measure Period (and the associated time Log) will be cancelled.

CEETIDE™ menu system options

Memory capacity used

The current memory capacity used is displayed as a percentage (%) when the user exits from the MENU screen to return to the normal graphic display.

Firmware version

The firmware version installed on your CEETIDE™ control unit is displayed when the user exits from the MENU screen to return to the normal graphic display. The modem type installed is also displayed here. The label is blank if there is no modem installed.

Set Date / Time

This menu item is used to set the internal date and time.

When active, the date and time are broken into separate integer fields. Use the ▲ (UP) and ▼ (DOWN) keys to adjust the current part of the date or time. Pressing **ENTER** after each selection to move to the next section of the date and time, or **CLEAR** to move to the previous selection. Once seconds are set, press **ENTER** to accept the changes.

NOTE: if the system time is adjusted, any Measure Period running at this time (and associated Log Record) will be cancelled, and a new Measure Period will be scheduled for the next possible Log Record.

View History

This menu item allows the display of logged data for a selected period as chosen by the Operator.

In order to View History, the date and time are broken into separate integer fields. Use the ▲ (UP) and ▼ (DOWN) keys to adjust the date or time. Pressing **ENTER** after each selection to move to the next section of the date and time, or **CLEAR** to move to the previous selection. Once seconds are set, press **ENTER** to accept. On pressing **ENTER** to accept this display date and time, the View History screen is shown.

There are two data viewing modes.

The first viewing mode is a graphical format similar to the default display screen. By pressing **ENTER** in this display the function of the ▲ (UP) and ▼ (DOWN) keys changes. Each function option is shown at the bottom of the screen. In the first option the ▲ (UP) and ▼ (DOWN) keys can be used to ZOOM the data on display. This sets the size of the view period. In the second option the ▲ (UP) and ▼ (DOWN) keys can be used to move the view period through available data. In the third option the ▲ (UP) and ▼ (DOWN) keys can be used to select between Graphical and List viewing format.

NOTE: If it is desired to look through history in Graphical display mode, then prior to selecting View History, the Graph Minimum and Graph Maximum values should be set to display the full range of tides expected, as the graph minimum and maximum cannot be changed in View History mode.

The second viewing mode is a list viewing format where it is possible to browse all individual logged data records as text. By pressing **ENTER** in this display, the function of the up and down buttons changes. In the first function option the ▲ (UP) and ▼ (DOWN) keys can be used to scroll through the data list 5 tide records at a time. In the second function option the ▲ (UP) and ▼ (DOWN) keys can be used to scroll through the data list 10 tide records at a time. In the third function option the ▲ (UP) and ▼ (DOWN) keys can be used to select between Graphical and List viewing format.

log Interval

This menu item sets the logging interval in MINUTES (1, 2, 5, 6, 10, 15, 20 or 30)

The CEETIDE™ will store a maximum of 65,535 readings. Refer to the table below showing the capacity vs. days of logging, if an absolute amount of continuous logged tides stored in memory is a requirement. Once memory reaches 100% capacity the circular buffer system deletes the oldest log to save the new one and the CEETIDE™ will continue to measure and record water levels.

Interval	24hr	7 days	30 days	45 days	90 days	120 days	180 days	1 year	Max. days
1 minute	1440	10080	43200	64800					45
2 minute	720	5040	21600	32400	64800				91
5 minute	288	2016	8640	12960	25920	34560	51840		227
6 minute	240	1680	7200	10800	21600	28800	43200		273
10 minute	144	1008	4320	6480	12960	17280	25920	52560	455
15 minute	96	672	2880	4320	8640	11520	17280	35040	682
20 minute	72	504	2160	3240	6480	8640	12960	26280	910
30 Minute	48	336	1440	2160	4320	5760	8640	17520	1365

Figure 6: Table showing number of levels recorded per period based on log interval set.

NOTE: If the Log Interval is adjusted, any Measure Period in progress (and associated Log Record) will be cancelled and a new Measure Period will be scheduled for the next possible Log Record.

NOTE: The log interval cannot be set to a shorter time than the log measure period

Log Measure Period

This menu item sets the period in SECONDS (60, 120, 180, and 240) over which the measurements are taken, Standard Deviation filtered and averaged for logging. The Log Measure period cannot be longer than the Log Interval.

NOTE: if the Log measure Period is adjusted, any Measure Period running at this time (and associated Log Record) will be cancelled, and a new Measure Period will be scheduled for the next possible Log Record.

NOTE: The log interval cannot be set to a shorter time than the log measure period

Real Time Output Interval

This menu item sets the Real Time (RT) Output Interval. This is the rate in SECONDS (OFF, 5, 10, 15, 30, and 60) at which tide data messages are sent to the serial port (and modem, if fitted).

Note, that as RT Output Interval can be set to faster than the RT measure period, the last real time “measure” period value is transmitted repeatedly until the value is updated. For example, given an RT Measure Period of 1 minute, and an RT Out Interval of 5 seconds, there will be 12 readings with the same value.

NOTE: When real time output is selected the SLEEP mode is not used.

Real Time Measure Period

This sets the period in SECONDS (30, 60, and 90) over which measurements are taken and averaged for Real Time tide output.

Output Format

This sets the Real Time data output format.

The 9 choices are summarised as follows:

1. ASCII 1
2. SHORT
3. ASCII:2
4. LONG
5. RevTyp1
6. RevLONG
7. SHORT 3
8. LONG 3
9. Denison

See page 32 for details and examples of Real Time output formats.

4 mA Distance

Set the distance reading in metres that relates to a PROBE signal of 4mA. This must be the same as the 4mA distance on the PROBE.

20 mA Distance

Set the distance reading in metres that relates to a signal of 20mA. This must be the same as the 20mA distance on the PROBE.

Probe Height

Set the height of the PROBE relative to the datum level (tide gauge zero) in metres measured to the zero reference of the PROBE. Refer to Appendix B to find the zero point of the probe type being used.

Calibration

This is a parameter where the relative scale of the probe measurement distance can be fine-tuned.

If everything is ideal, then the measured distance reads correct for a factor of 500.

Changing this factor UP makes the measured range longer, changing down makes the measured range shorter. Once the correct value is set, make a note of it, and do not change this again. Note that the factor of 500 is not a distance. Internally, the value is translated in a percentage correction, up or down, applied to the mA -reading received from the PROBE.

⚠ WARNING: While this setting is provided to the Operator, and described here, we have not seen any instances where a PROBE and CEETIDE™ unit required special calibration. This is provided as a possible “problem solver” for the possibility of a future unknown calibration issue. If a physically measured PROBE distance is different to what is shown in the CEETIDE™, please double check ALL other things (probe zero measure point, 4mA distance setting, 20mA distance setting) before considering adjusting this. Do not adjust this setting without specific instruction from CEE HydoSystems™ Technical Support staff.

NOTE: Calibration, if ever required, should be done in a test setup with the PROBE pointing at a solid surface (wall etc) at about the mid-distance. Compare the measured distance as shown on the PROBE, to the measured distance shown on the CEETIDE™ unit, as well as an actual measurement from probe face to the solid surface, and fine-tune using the calibration value. Once the system is calibrated, do not change this setup.

Download Format

Three download formats are available:

ASCII:1

ASCII:2

ASCII:3

All formats carry the same basic information of time, date and water level relative to datum, but have different features for different purposes. Please select the output format that best matches how you wish to deal with the downloaded data. See page 32 for details of Download Output Formats.

Download

To start a download of logged data from the CEETIDE™, you need to specify how far back in time to go (hours before NOW). Ensure the download format is set as required for your application.

Choices are:	0	No Download
	2, 6,12,24,48	last 2, 6, 12, 24, 48 hours etc.
	ALL	(downloads all points in memory)

The download will start when you press **ENTER**.

NOTE: The download request period is hours before NOW (as shown on system clock) and not the last hours logged by the CEETIDE™. In the case where a CEETIDE™ has been removed from its installation and taken back to an office to download (and has therefore been switched off for a period of time) Requesting log data relating to a time period where the CEETIDE™ was off and in transit will result in an empty data set.

Rejection

Here you can set the level of data rejection for logged data, this is so that spurious or outlier readings are rejected, and not used when the average is calculated for each logging period.

There are three options:

- 0 no rejection (all readings are accepted as valid)
- 1 reject any reading outside 1 x Std. deviation of the group
- 2 reject any reading outside 2 x Std. deviation of the group.

1 x Standard deviation accepts readings within a 67% confidence region. Given a set of measured data with no special case strange readings, 1/3 of the readings are likely to be rejected.

2 x Standard deviations accepts readings within a 95% confidence region, so given a set of measured data with no special case strange readings, 1/20 of the readings are likely to be rejected.

It is often necessary to have data rejection in the observations, so that the average value (which is logged) is relatively un-contaminated by readings that are clearly outside the norm.

Use 0 (no rejection) only for the very short logging periods, where a few bad readings can be trapped when the data is processed.

NOTE: Each logging period is treated as a new group, so that the Standard deviation calculation is not carried over indefinitely. If something goes wrong with the observations, this will only affect a single log point.

Graph Scale

This sets the x-axis (time) of the graph display.

Set this to cover the period of interest. The graph scale does not alter anything other than the display of the amount of previous tide records on the LCD.

Graph Maximum

This sets the top line y-axis in height above datum (maximum tide on graph).

The maximum tide display on the LCD graph does not affect anything but the display. If tide readings are above the maximum, they will not be plotted on screen, but are still logged and output.

Graph Minimum

This sets the bottom line y-axis in height above datum (minimum Tide shown on graph).

The minimum tide display on the LCD graph does not affect anything but the display. If tide readings are below the minimum, they will not be plotted on screen, but are still logged and output.

Clear Log

This is used to clear the memory of all logged data.

When in edit mode use the ▲ (UP) and ▼ (DOWN) keys to set the value to 1 then press **ENTER** and all Logged Data will be erased. (Set to 0, this menu item exits without clearing logged data)

 **WARNING:** make sure that you have downloaded and backed up any important data that you need before clearing the memory.

Hard Reset

This is used to do a hard reset. When in edit mode use the ▲ (UP) and ▼ (DOWN) keys to set the value to 1 then press **ENTER** and the entire system, including Log data records will be reset. (Set to 0, this menu item exits without change)

A hard reset is only an emergency escape; a last resort if all else fails, if the unit does not appear to be working properly. The time has stopped for example, or the CEETIDE™ does not accept any inputs, and a normal Power Cycle does not fix the problem. In normal use you should never need to do a Hard Reset.

NOTE: That if a Hard Reset is executed then the CEETIDE™ Unit must be Power Cycled to resume normal operation.

 **WARNING:** make sure that you have downloaded and backed up any important data that you need before performing a hard reset. A hard reset erases all Log Data. In addition to this, a Hard reset will reset all entered setups and values. Most values are set to defaults, but you will need to go through all the setups to make sure that all is setup correctly, including Probe height above datum, Time and Date.

Radio Channel

This function is not available on all UHF modem options. Ensure that you have a Satel modem installed as displayed in the About screen when exiting from the Menu screen.

If a Satel internal radio modem is fitted then you can use this function to change radio channels. Nominal channel range is -40 to 40. Channel zero corresponds to the centre frequency of the supplied modem. Use the ▲ (UP) and ▼ (DOWN) keys to scroll through the selection and then press **ENTER** to accept the new radio channel. The tide gauge will search for the radio modem. If it finds the Satel modem then the processor will go through an initialization of the radio/ modem. This may take several minutes, with the progress displayed on the screen.

If the Satel radio setup is successful, then the correct channel frequency and radio ID will be verified.

NOTE: Make sure that the (internal) radio is switched ON (Modem LED lit) before attempting to do a radio setup.

NOTE: The channel changing function is disabled on the UHF modem identified as the 2.4GHz modem in the about screen. Only the Satel radio modems change perform channel changes.

 **WARNING:** Make sure that you an antenna connected the modem before turning the modem on. Running the modem without an antenna connected will damage the modem. This damage is not covered under the warranty offered with the CEETIDE™

Communications Baud

This function is used to set the output data serial port baud rate (2400, 4800, 9600, 19200, 38400, or 57600)

Use the ▲ (UP) and ▼ (DOWN) keys to scroll through the selection, then press **ENTER** to accept the new baud rate setting.

Other related serial port settings are preset. The CEETIDE™ system runs 8 data bits, no parity, and 1 stop bit.

NOTE: Default baud rate of the CEETIDE™ firmware version 1.24 or earlier is 9600 bps, the baud rate required when using an internal CDMA, Next G or Satel UHF Modem is 19,200bps.

NOTE: Default baud rate of the CEETIDE™ with firmware 1.25 or later is 19,200 bps

Exit

This exits the setup menu and returns to the normal graphic display. When exiting the Menu window the firmware version and memory capacity currently used is displayed before the main tide profile window is displayed.

Demo Mode

This clears the log, and then generates demonstration data for the preceding 24 hours in the shape of a sine wave.

 **WARNING:** Ensure all logged data is downloaded and saved (in several locations if possible) prior to starting DEMO mode. All logged data is erased from memory when the demo mode is run.

Set Probe Type

This setting is used to instruct the CEETIDE™ which probe option is connected. General refers to the standard LU acoustic probe. LR refers to a radar probe. In this case sleep mode is disabled and the probe runs constantly to avoid potential errors during the settling period a radar probe uses during start up.

CEETIDE™ Utility software

The CEETIDE™ Utility software is supplied on the utility disk at time of purchase. The latest version is available for download at www.ceehydrosystems.com. When CEETIDE™ Utility software is installed onto your PC a shortcut icon to launch the program will be placed on the desktop.

Once the utility program has been installed the CEETIDE™ settings can adjusted from a computer by direct serial data cable connection or via radio telemetry connected to the CEETIDE™ system (internal or external). The tide data logged in the control box can be downloaded and real time data transmission can be started or stopped. Information on using CEETIDE™ Utility software is explained below. A terminal program can also be used to adjust the settings of a CEETIDE™ and for starting a real time data feed and/or download. For information on sending remote commands through a terminal program see the instructions in Appendix C.

NOTE: Data cannot be deleted from memory via a remote connection. Data can only be deleted via the main front panel.

NOTE: The CEETIDE™ must be turned on to receive remote commands (in sleep mode or active measure mode).

NOTE: The CEETIDE™ utility software must connect through a serial port on a PC.

Connecting to CEETIDE™ Utility program

When CEETIDE™ Utility software is started you will be asked which serial communications port (comm. port) to connect to and at what baud rate. Select the appropriate communications port and baud rate for your installation (default baud rate is 9600 bps. To communicate through the Satel Radio system the baud rate is 19,200 bps).

With the correct connection settings made CEETIDE™ Utility software will open and display the current configuration settings of the control unit as shown below in figure 7.

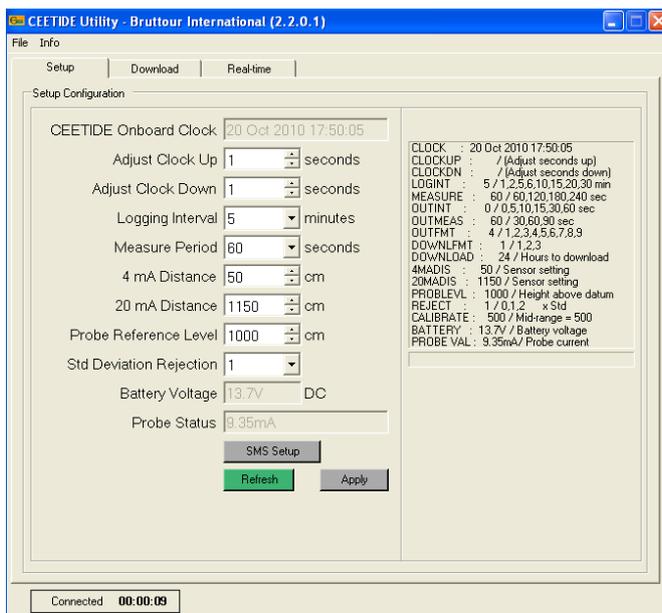


Figure 7 – current configuration of CEETIDE™

System Setup

The CEETIDE™ Utility software can be used to query the CEETIDE™ current configurations. The settings can be adjusted by using drop down menu to select predefined options (log interval or measure period), the ▲ (UP) and ▼ (DOWN) keys displayed next to the relevant field or by manual entry in the text box. Any field that will be adjusted will display a red box next the appropriate field. Once settings have been made click on **APPLY**. The red boxes will change to green when the change has been made successfully and the displayed information on the right hand side will be updated with the new settings. Clicking on **REFRESH** will update the display to check for any system changes such as updating the time field or probe status without any changes to the setup being made.

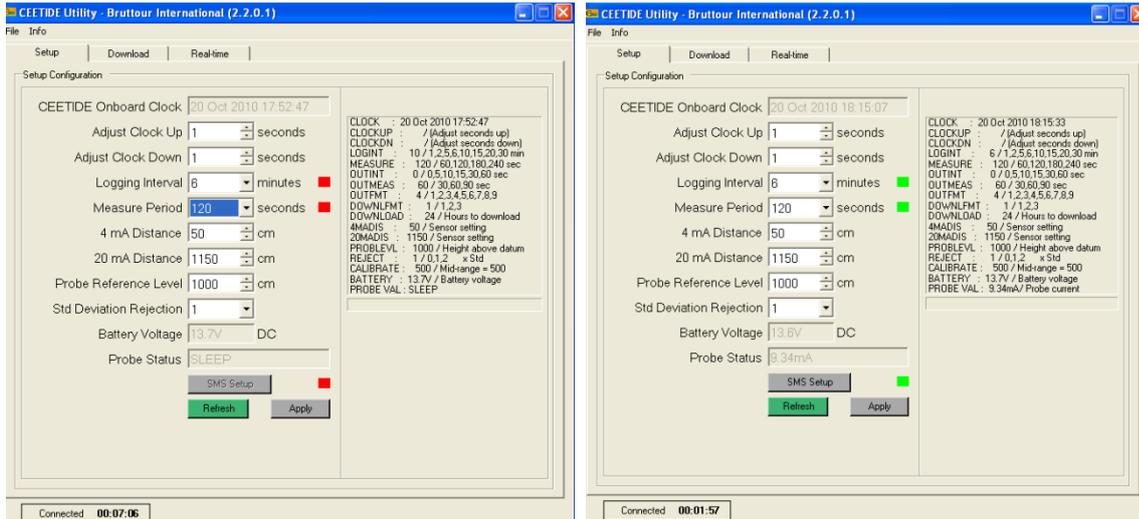


Figure 8 Red shows fields to be changed, green confirms changes have been made

SMS Configuration

If the CEETIDE™ has been enabled for SMS real time tide data you can configure the settings by clicking on the SMS Setup button.

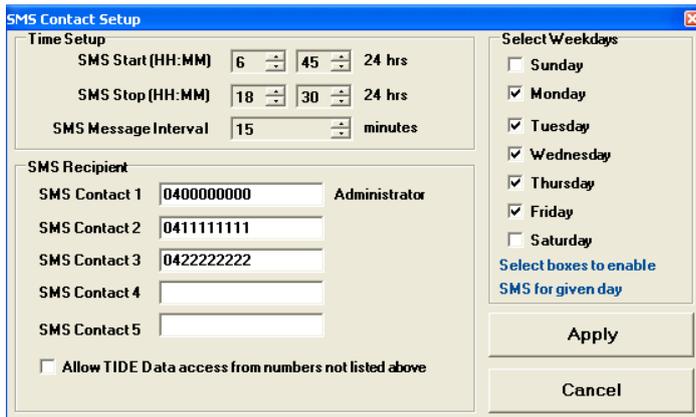


Figure 9

Set the require start and end time of the data transmission as well as the tide message interval in the Time Setup box. Select the days the data is scheduled to be sent by enabling the check boxes on the right hand side of the screen.

Setup the phone numbers that are to receive the tide data at the prescribed intervals. The administrator number has extra controls described in the SMS Commands section in the next section. At the bottom of the SMS Recipient setup window is the option to allow external numbers to receive tide data when the text message TIDE is sent to the CEETIDE™. If the box is unchecked as shown above only the numbers entered in the recipient list will be allowed to access the data.

Once the SMS configuration is correct click on Apply to close the SMS setup window and display the utility window with a red box displayed next the SMS Setup button. Click on the **CANCEL** button of the SMS setup window to discard changes and go back to the Utility window with no changes to be made. You must click Apply in the Utility program to confirm the SMS Setup changes in the CEETIDE™ control box.

NOTE: The SMS interval does not alter the Log Interval of the CEETIDE™. The most recent tide value logged will be the Tide value sent as the SMS.

SMS Commands

Mobile numbers that are listed in the SMS Recipient list can request a tide value at any time that the CEETIDE™ is running irrelevant of the. If the check box allowing other numbers access to tide data is ticked during SMS setup any mobile phone can receive the latest tide at any time irrelevant of the SMS message interval setup.

The mobile number entered as the administrator is able to start, stop or cancel the Tide output SMS function. The commands can only be sent from the administrators phone number.

All commands must be sent in capital letters

Message	Available to	Result
TIDE	All listed numbers plus external numbers only if enabled in SMS Setup	Last recorded tide any time the CEETIDE™ is running
STRT	Administrator	Start SMS function for the calendar day only that the message was sent at the SMS interval set in the CEETIDE™
STOP	Administrator	End SMS function enabled by sending the STRT command
HALT	Administrator	Cancel all days enabled for regular SMS transmission. Days must be re-enable in the SMS setup function of the CEETIDE™ Utility program to resume regular transmission

Downloading stored data

To download logged data using CEETIDE™ Utility click on the **DOWNLOAD** tab, select the data you wish to download (select recent data by hours or all data), select the format (option 1,2 or 3 – each option is shown in Appendix A). The data will be downloaded to the default directory that CEETIDE™ Utility software has been installed to (C:\ProgramFiles\Bruttour\CEETIDE™Utility\data\logged), alternatively you can select the directory location for the download by clicking the browse icon. Once you are satisfied with the data to be downloaded, format and destination click **DOWNLOAD**, you will be asked to confirm download and download will commence after 30 seconds. Once download has finished it is automatically saved to the chosen location as a text file (.txt) and you are able to view the downloaded file, create a new download or exit the program.

NOTE: Downloading does not remove data from CEETIDE™ memory. Data can be downloaded as often as you like without loss of data.

NOTE: Selecting a specific number of hours to download relates to the time of the system clock. For example; if the unit has been removed from its location and turned off for week while in transit selecting to download the last 24 hours will not give any data as the last logged water level was 7 days earlier.

CEETIDE™ download formats

The three DOWNLOAD formats available as described below:

Type 1 – ASCII output 1

This is the same as the normal ASCII output (type 1).

```
DD-MM-YY      HH:MM:SS  Tide Height
                (metres)
; START OF LOGGED DATA
07 11 07 11 54 07 8.46
07 11 07 11 55 07 8.46
07 11 07 11 56 07 8.46
07 11 07 11 57 07 8.46
; END OF LOGGED DATA
```

Type 2 – ASCII output 2

This is the same as the previous ASCII format, except that '-' characters are used as separators in date, and ':' in time. Tide is in metres with 2 decimal places.

```
DD-MM-YY      HH:MM:SS  Tide Height
                (metres)
; START OF LOGGED DATA
07-11-07 11:54:07 8.46
07-11-07 11:55:07 8.46
07-11-07 11:56:07 8.46
07-11-07 11:57:07 8.46
07-11-07 11:58:07 8.46
07-11-07 11:59:07 8.46
; END OF LOGGED DATA
```

Type 3 – ASCII output 3

Type 3 download is the same as type 2 but with Tide data output to 3 decimal places, i.e. to millimetres. Please refer to Type 7 Real Time output format description for field descriptions.

```
DD-MM-YY      HH:MM:SS  Tide Height
                (metres)
; START OF LOGGED DATA
07-11-07 11:54:07 8.455
07-11-07 11:55:07 8.455
07-11-07 11:56:07 8.455
07-11-07 11:57:07 8.457
07-11-07 11:58:07 8.458
07-11-07 11:59:07 8.458
; END OF LOGGED DATA
```

When you process the tide data in spreadsheet such as Microsoft EXCEL, the spreadsheet will easily accept the date and time format with the '-' and ':' in the date and time columns without any further definitions.

Real Time Data Output

CEETIDE™ Utility software allows you to enable real time data to be sent from the CEETIDE™. Select the Real Time Data tab, select the format required (see output formats in the next section) and the output rate the data will be sent at. Changing the output rate to zero will turn off the real time data function.

Real time data can be logged by the CEETIDE™ Utility program. Real Time data will be logged to the default directory that CEETIDE™ Utility software has been installed to (C:\ProgramFiles\Bruttour\CEETIDE™Utility\data\logged), alternatively you can select the directory location for the download by clicking the browse icon.

CEETIDE™ Real time output formats

Type 1 – (ASCII 1)

The format is standard ASCII and is terminated by CR/LF characters. The height in metres is the water surface relative to the datum entered in the setup procedure.

(record length: 26 char's including CR/LF)

dd mm yy	hr mm ss	Ti de hei ght (metres)	<CR><LF>
17 06 09	13 06 35	7.85	
17 06 09	13 12 35	7.90	
17 06 09	13 18 35	7.99	
17 06 09	13 24 35	8.03	

Type 2 – (short)

This type is the same as type 2, but without any date information and with ':' characters as separators in the time part. The height in metres is the water surface relative to the datum entered in the setup procedure. This is the tide format accepted by the CEEDUCER PRO™ Hydrographic Survey System and the CEESTAR™ Dual Frequency Echosounder for real time tide correction of depth data.

(record length: 17 chars including CR/LF)

Hr: mm: ss	Ti de hei ght (metres)	<CR><LF>
13: 20: 00	8.90	
13: 30: 00	8.78	
13: 40: 00	8.70	
13: 50: 00	8.50	
14: 00: 00	8.29	

Type 3 – (ASCII: 2)

This type is the same as type 1, but it includes '-' characters as separators in the date part, and ':' characters as separators in the time part. It also includes a checksum, generated from all the characters preceding the asterisk. The height in metres is the water surface relative to the datum entered in the setup procedure

(record length: 30 char's including CR/LF)

dd- mm- yr	hr: mm: ss	Ti de hei ght (metres)	*checksum	<CR><LF>
17- 06- 09	13: 20: 35	8.90	*30	
17- 06- 09	13: 20: 40	8.90	*32	
17- 06- 09	13: 20: 45	8.90	*37	
17- 06- 09	13: 20: 50	8.90	*33	

Type 4 – (LONG)

This is similar to type 3, but includes further information: the distance from the PROBE, the PROBE mA reading, and battery voltage. The height in metres is the water surface relative to the datum entered in the setup procedure

(record length: 51 char's including CR/LF)

dd- mm- yr	hr: mm: ss	Ti de hei ght (metres)	PROBE di stance (metres)	mA	Battery level Volts	*checksum<CR><LF>
17- 06- 09	13: 21: 03	8. 90	1. 10	5. 06	12. 4	*0E
17- 06- 09	13: 21: 05	8. 90	1. 10	5. 06	12. 4	*08
17- 06- 09	13: 21: 10	8. 90	1. 10	5. 06	12. 4	*0C
17- 06- 09	13: 21: 15	8. 90	1. 10	5. 06	12. 4	*09

Type 5 – (RevType1)

This output displays the water level in the first field as required by some software systems. The height in metres is the water surface relative to the datum entered in the setup procedure. This is the tide format accepted by HYPACK Hydrographic software for real time tide correction of depth data.

(record length: 30 char's including CR/LF)

Ti de hei ght (metres)	dd- mm- yr	hh: mm: ss	*checksum<CR><LF>
8. 90	17- 06- 09	13: 21: 30	*34
8. 90	17- 06- 09	13: 21: 30	*31
8. 90	17- 06- 09	13: 21: 30	*33
8. 90	17- 06- 09	13: 21: 30	*36

Type 6 – (RevLong)

This output is a more detailed output of format 5. The height in metres is the water surface relative to the datum entered in the setup procedure. This format is also accepted by HYPACK Hydrographic software for real time correction of depth data

(record length: 51 char's including CR/LF)

Ti de hei ght (metres)	dd- mm- yr	hr: mm: ss	PROBE di stance (metres)	mA	Battery level Volts	*checksum<CR><LF>
8. 90	17- 06- 09	13: 22: 07	1. 10	5. 06	12. 4	*09
8. 90	17- 06- 09	13: 22: 10	1. 10	5. 06	12. 4	*0F
8. 90	17- 06- 09	13: 22: 15	1. 10	5. 06	12. 4	*0A
8. 90	17- 06- 09	13: 22: 20	1. 10	5. 06	12. 4	*0C

Type 7 – (SHORT 3)

Same as type 3(ASCII:2) but with tide output to 3 decimal places. The height in metres is the water surface relative to the datum entered in the setup procedure

(record length: 30 char's including CR/LF)

dd- mm- yr	hr: mm: ss	Ti de hei ght (metres)	*checksum <CR><LF>
17- 06- 09	13: 22: 51	8. 901	*21
17- 06- 09	13: 22: 55	8. 901	*25
17- 06- 09	13: 23: 00	8. 901	*24
17- 06- 09	13: 23: 05	8. 901	*21

Type 8 – (LONG 3)

Same as type 4 but with tide output to 3 decimal places. The height in metres is the water surface relative to the datum entered in the setup procedure

(record length: 51 char's including CR/LF)

dd- mm- yr	hr: mm: ss	Ti de hei ght (metres)	PROBE di stance (metres)	mA	Battery level Vol ts	*checksum<CR><LF>
17- 06- 09	13: 23: 36	8. 900	1. 100	5. 066	12. 5	* 1D
17- 06- 09	13: 23: 40	8. 900	1. 100	5. 066	12. 5	* 1C
17- 06- 09	13: 23: 45	8. 900	1. 100	5. 066	12. 5	* 19
17- 06- 09	13: 23: 50	8. 900	1. 100	5. 066	12. 5	* 1D

Type 9 – (Denison)

The message is started with a special ASCII leading character – control char “Start Of Text” <STX> (ASCII character 002) then the date, in MM-DD-YY format, the time in 24 hour format, a designator followed by a colon, and then the Tide height in millimetres, then a 1 and a 0. The height in millimetres is the water surface relative to the datum entered in the setup procedure

(record length: 34 char's including CR/LF)

<STX>	mm- dd- yr	hr: mm: ss	1:	Ti de hei ght (mm)	1 0<CR><LF>
	06- 17- 09	13: 24: 25	1:	8900	1 0
	06- 17- 09	13: 24: 30	1:	8900	1 0
	06- 17- 09	13: 24: 35	1:	8900	1 0
	06- 17- 09	13: 24: 40	1:	8900	1 0

NOTE: that depending on the character set being used to display this data, because the <STX> character is relatively rarely used, this will display differently in different systems. As well as the character shown here, it is common to see <STX> displayed as a little “smiley face”

Appendix A – hardware details

Physical Properties – CEETIDE™ control unit

Dimensions (lid closed):	345mm(w) x 300mm(d) x 150mm(h)
Weight:	6.6 kg
Temperature range:	0-50 degrees Celsius.

Electrical Properties

CEETIDE™ running power requirements

Input Voltage:	11V – 13V
Internal battery:	2V/7Ah SLA (suitable for back up, short term use only)
Input Current @ 12V:	100mA (BASE POWER REQUIREMENT) +100mA (DISPLAY ON) +50mA (4-20mA loop powered Siemens LU and LR probe ON) (note: 80mA start-up draw over the first 10s) +270mA (Milltronics The Probe ON) +30mA (ISM 2.4GHz modem ON + TRANSMIT) +125mA (Satel UHF modem ON) +450mA (Satel UHF modem ON + TRANSMIT)

NOTE: These current draw figures are for energy budget power calculations only. Input current assumes absolutely NO charge current is going into the internal lead-acid battery inside the CEETIDE™ unit. Recharging of the internal battery is not included in power requirements above.

NOTE: The CEETIDE™ does not go to sleep mode when running a radar (LR) probe. The probe is always measuring.

CEETIDE™ battery charger requirements

Nominal voltage:	12V
Max Input Current:	1.5A
Charger Type:	3 stage Lead Acid.

Absolute maximum ratings

Input voltage:	13.7V (maximum open circuit lead-acid battery voltage)
----------------	--

UHF Modem

2.4GHz modem option

Operating Frequency:	2.4GHz
----------------------	--------

Satel UHF modem option

Frequency Range:	2MHz
Channel width:	25kHz
Transmit power:	1W

GPS Properties

Frequency band:	L1
Satellite reception channels:	12

Serial Output data

Baud rate: 2400-57600
 Data Bits: 8
 Parity: None
 Stop Bits: 1

Probe Connector – Loop powered Probe

The Probe connection port on a CEETIDE™ is designed to mate with a Hirschmann CA6LS – 934-126-100 plug.

Signal Name	CA pin #
Loop current supply	1
Loop current output	2
N.C.	3,4,5,6,F

Probe Connector – 24V powered Probe

The Probe connection port on a CEETIDE™ is designed to mate with a Hirschmann CA6LS – 934-126-100 plug.

Signal Name	CA pin #
Probe 24V	1
Probe current output	2
Probe GND	F
N.C.	3,4,5,6

Power Connector

The Power connector port on CEETIDE™ is designed to mate with a 3-way LEMO 1B series male plug (LEMO P/N: FGG1B303CLAD)

Signal Name	LEMO Pin#
12V	1
GND	2,3

Serial Data Connector

The Serial connector port on CEETIDE™ is designed to mate with a 5-way LEMO 1B series male plug (LEMO P/N: FGG1B305CLAD52)

Signal Name	LEMO pin #
GND	5
CEETIDE™ Data output	4
CEETIDE™ Data Input	3
NC	2,1

Modem Antenna Connector

The modem antenna cable connects to CEETIDE™ with a standard TNC connector.

GPS Antenna Connector

The GPS Antenna cable connects to CEETIDE™ with a standard BNC connector

Appendix B – cable details

CEETIDE™ PROBE Cable (Loop Power)

For Siemens LU and LR probe types use 20m of 2 core Canare L-2T2S cable, with Hirschmann CA6LS – 934-126-100 plug. The other end of the cable is bare stripped and tinned wire (~1cm) for connection to the PROBE screw terminals.

Signal Name	CA6LS pin #	Probe terminal	wire
Loop current Supply	1	“+”	WHITE
Loop current return	2	“-”	BLUE

CEETIDE™ PROBE Cable (24V power)

For Milltronics “The Probe” use 20m of standard 3 conductor Australian mains flex, with Hirschmann CA6LS – 934-126-100 plug. The other end of the cable is bare stripped and tinned wire (~1cm) for connection to the PROBE screw terminals.

Signal Name	CA6LS pin #	Probe Terminal	wire
24V Supply	1	“24V+” (3)	BROWN
Probe Current output	2	“mA+” (1)	BLUE
GND	F	“-” (2)	GREEN/YELLOW

CEETIDE™ POWER Cable

Use 2.5m of 2 core Canare L-2T2S cable, with LEMO P/N: FGG1B303CLAD on one end, and the other end terminated with tinned Red and Black 1.5A rated leads.

Signal Name	LEMO pin #	wire
Vsupply (12VDC)	1	RED
GND	2,3	BLACK

CEETIDE™ Serial Data Cable (DCE)

To connect a CEETIDE™ to a computer with a standard D9 DTE interface, the cable should be terminated with a D9 female, with pins in DCE arrangement. Use 2.5m of 2 core Canare L-2T2S cable, with LEMO P/N: FGG1B305CLAD52 on one end, and a D9 female on the other.

Signal Name	LEMO pin #	D9 FEMALE Pin #
GND	5	5
CEETIDE™ serial out	4	2
CEETIDE™ serial in	3	3

CEETIDE™ DATA Cable (DTE)

Most third party modems with a standard D9 connector for RS232 data will have the connector configured as a DCE interface. In this case, the cable to go from CEETIDE™ to the modem should be terminated with a D9 male, with pins in the DTE arrangement.

Use 2.5m of 2 core Canare L-2T2S cable, with LEMO P/N: FGG1B305CLAD52 on one end, and a D9 male on the other.

Signal Name	LEMO pin #	D9 MALE Pin #
GND	5	5
CEETIDE™ serial out	4	3
CEETIDE™ serial in	3	2

CEETIDE™ TELEMETRY ANTENNA Cable

Use 10m of 50-ohm coaxial cable (RG-58) terminated at one end with a male TNC connector and at the other end with a male N-Type connector.

CEETIDE™ GPS ANTENNA Cable

Use 5m of 50-ohm coaxial cable (RG-58) terminated at one end with a male BNC connector and at the other end with a male TNC connector.

Appendix C – probe details

Sitrans Probe LU Dimensions

Details

The Sitrans Probe LU is a 4-20mA loop powered acoustic liquid level sensor.

The version of the LU sold with a CEETIDE™ is supplied by default configured for 0.5 (4mA) to 12.0m (20mA). The Probe reference point is the face (lowest point) of the acoustic probe.

Please specify on your order if you would like the probe to be supplied configured with a different operational range (if probe is to only be used in an area of small variation of water level)

The reference point is the face of the transducer (lowest point). Beam angle = 10° @-3dB boundary.

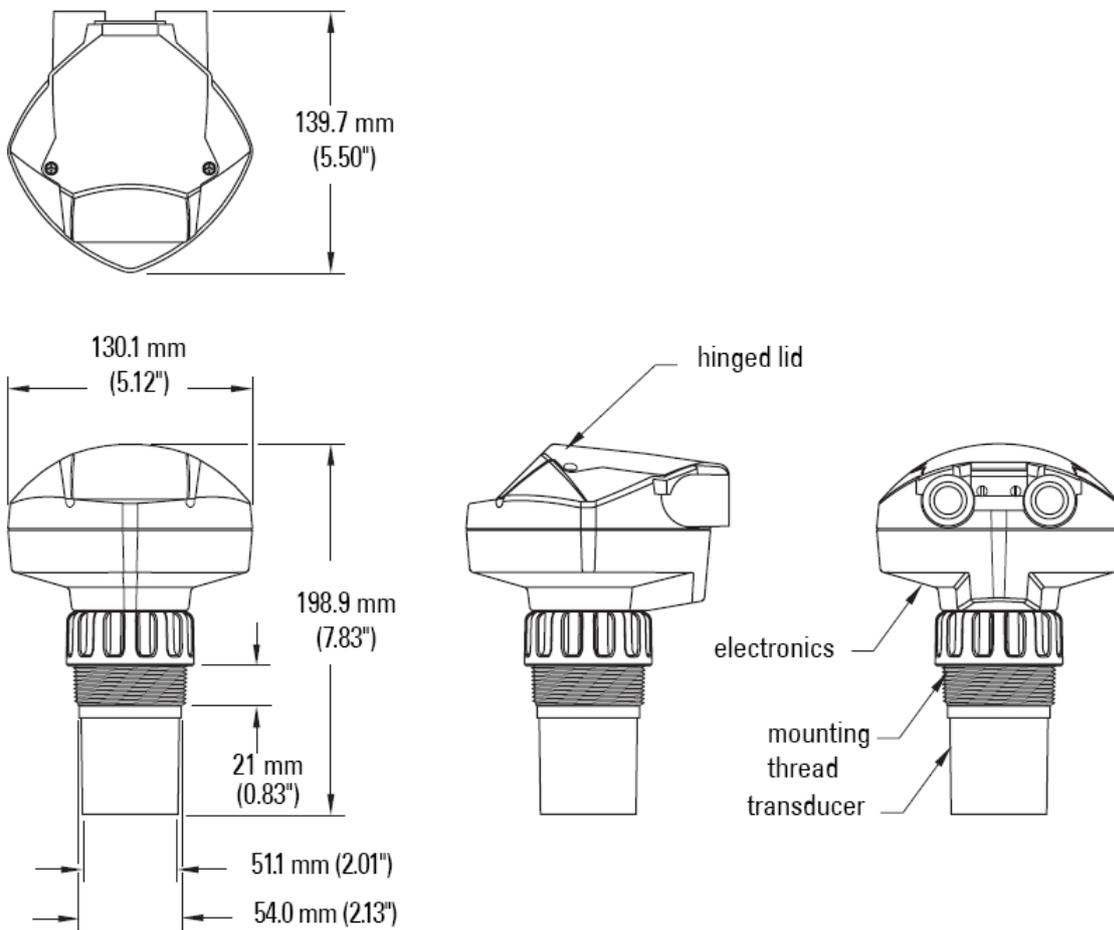


Figure 10: Sitrans Probe LU

Configuration

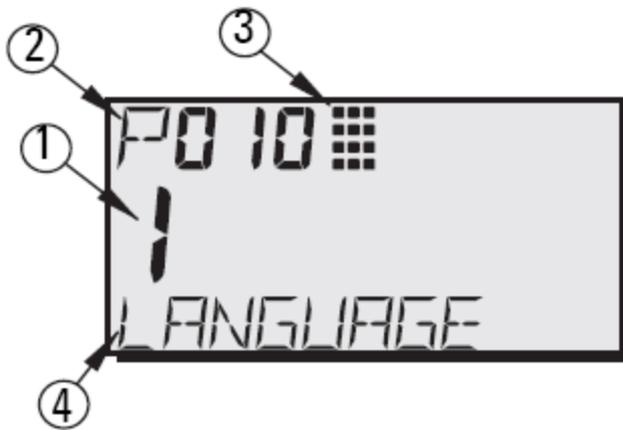


Figure 11 LU and LR probe display screen

Display layout

1. Parameter value entered
2. Parameter
3. Programming icon. In programming mode when displayed
4. Parameter explanation

To configure a Sitrans Probe LU, the operator will require a hand programmer. The hand programmer is not supplied as part of the standard CEETIDE™ kit; please contact CEE HydroSystems™ or your local agent if you require a hand programmer. It is also a requirement for the CEETIDE™ to power the probe. Connect the CEETIDE™ control unit to the Probe, turn on the CEETIDE™, enable the display, and enable Key Access. This will provide 10 minutes of probe power in order to make adjustments.

1. The probe requires settings for “Empty Level” (i.e. the maximum distance – which is the 20mA distance) and for the “Span” (i.e. the range that can be measured – which is the 20mA distance minus the 4mA distance). This converts the mA distance to metres (if configured to display metres) i.e., given default CEETIDE™ 4mA distance of 0.5m, and 20mA distance of 12.0m, the PROBE “Empty Level” is set to 12.0m, and the probe “Span” is set to (12m – 0.5m) = 11.5m.
2. Point the programmer at the Probe, and press the program button (this button has an icon that is a matrix of 3x4 squares). The LCD screen of the Probe will then display this programming icon.
3. Next press the display button (which has an icon that is an arrow in a clockwise circle) to get into programming mode.
4. Use the up and down buttons to increase or decrease the parameter number, or press display button, followed by the parameter number on the keypad, and then enter (a circle with a star in it, with an arrow that goes down then left) to go to a parameter directly.
Values for parameters are set by keying them in on the keypad and then pressing enter. A parameter can also be set to its default value by pressing the clear (capital C) button and then the enter button. Clear/enter is the key sequence used to trigger a master reset, when on the master reset parameter, too.

Settings for a probe LU should be set in the following order:
 P999 (master reset) – initialise probe back to default settings
 P010 (language) set to 1 – English
 P001 (mode of operation) set to 3 – DISTANCE measurement
 P002 (material) set to 1 – water
 P003 (response time) set to 1 – slowest
 P005 (units) set to metres
 P006 (“empty level” – max distance) set to 9.5m
 P007 (“span” – measurement range: empty level – span = min distance) set to 9m
 P201 (mA output function) set to 2 – space between top of span, and actual water height.
 Setting the master mode (P001) to 3 sets display and mA output to mode 3, and then setting P201 to 2 leaves display in mode 3, and sets mA output to mode 2.)

NOTE: Adjusting P001 will also reset the value of P201. Always ensure that P201 is set correctly after adjusting P001.

Sitrans Probe LR Dimensions

Details

The Sitrans Probe LR is a 4-20mA loop powered radar liquid level sensor. It operates using radar signals rather than acoustic signals. The long polypropylene it requires a radar waveguide to operate, it has a physically different appearance. The probe reference point is at the bottom of the metal locking collar.

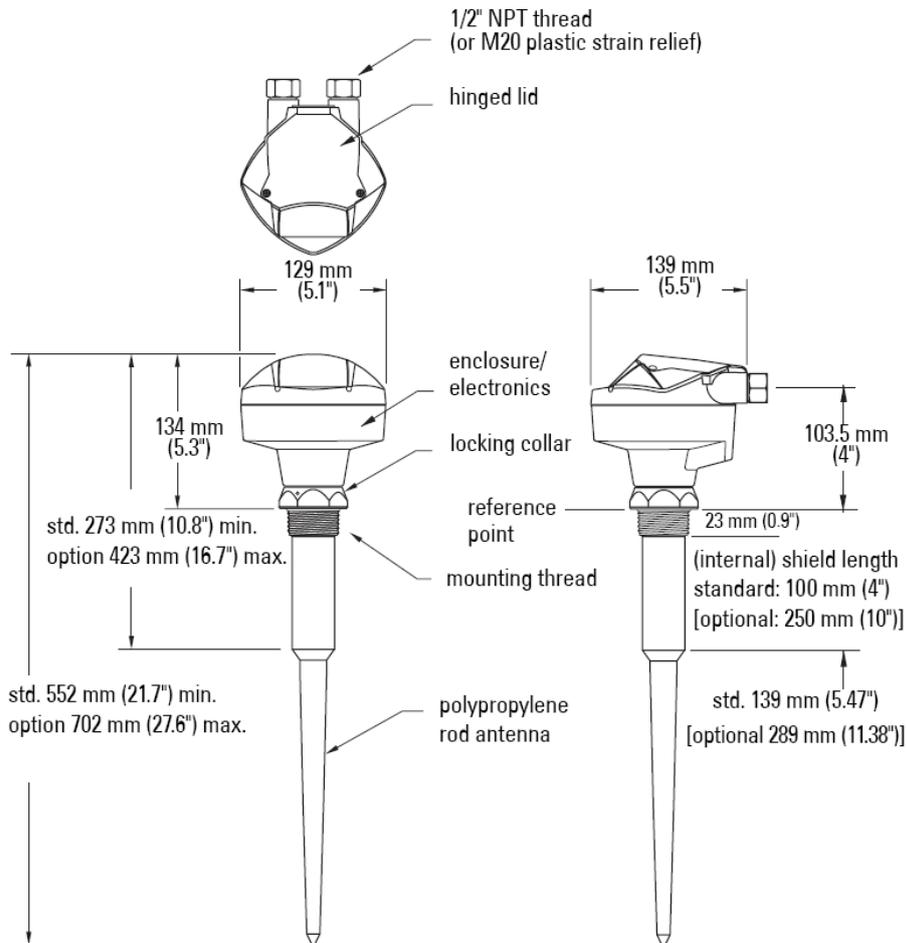


Figure 12: Sitrans Probe LR

Configuration of LR Radar Probe

To configure a Sitrans Probe LR, the operator will require a hand programmer. The hand programmer is not supplied as part of the standard CEETIDE™ kit; please contact CEE HydroSystems™ your local agent if you require a hand programmer. It is also a requirement for the Probe to be powered on (i.e. CEETIDE™ running the probe) connect the CEETIDE™ control unit to the Probe, turn on the CEETIDE™, enable the display, and enable Key Access. This will provide 10 minutes of probe power in order to make adjustments.

The setup is procedure is described below:

1. The LR probe does not use a 4mA distance and a 20mA distance like the CEETIDE™ does. To convert your required 4mA distance and 20mA distance into the numbers your probe needs is simple. The probe requires settings for “Empty Level” (i.e. the maximum distance – which is the 20mA distance) and for the “Span” (i.e. the range that can be measured – which is the 20mA distance minus the 4mA distance)
i.e., given default CEETIDE™ 4mA distance of 0.5m, and 20mA distance of 9.5m, the PROBE “Empty Level” is set to 9.5m, and the probe “Span” is set to $(9.5\text{m} - 0.5\text{m}) = 9\text{m}$.
2. Point the programmer at the Probe, and press the program button (this button has an icon that is a matrix of 3x4 squares). The LCD screen of the Probe will then display this programming icon.
3. Next press the display button (which has an icon that is an arrow in a clockwise circle) to get into programming mode.
4. Use the up and down buttons to increase or decrease the parameter number, or press display button, followed by the parameter number on the keypad, and then enter (a circle with a star in it, with an arrow that goes down then left) to go to a parameter directly.
Values for parameters are generally set by keying them in on the keypad, and then pressing enter. However a parameter can also be set to its default value by pressing the clear (capital C) button and then the enter button. Clear/enter is the key sequence used to trigger a master reset, when on the master reset parameter, too.

Settings for a probe LR should be set in this order:

P999 (master reset) - initialise probe back to default settings)

P010 (language) set to 1 - English

P001 (mode of operation) set to 3 - DISTANCE measurement

P003 (response time) set to 1 - slowest

P004 (antenna type) set to 240 – rod antenna

P005 (units) set to metres

P006 (“empty level” - max distance) set to 9.5m

P007 (“span” - measurement range: empty level – span = min distance) set to 9m

P201 (ma output function) set to 2 –space between top of span, and actual water height.

NOTE: Adjusting P001 will also reset the value of P201. Always ensure that P201 is set correctly after adjusting P001.

Milltronics THE PROBE Dimensions

Details

The Milltronics The Probe is a direct 24V powered acoustic liquid level sensor. That provides a 4-20mA output signal.

The version of The Probe sold with a CEETIDE™ has a maximum range of 0.5-10m, but is supplied by default configured for 0.5-9.5m (please specify during order if you would like this supplied configured with a different range).

The reference point is the face of the transducer (lowest point). Beam angle = 10 degrees at -3dB boundary.

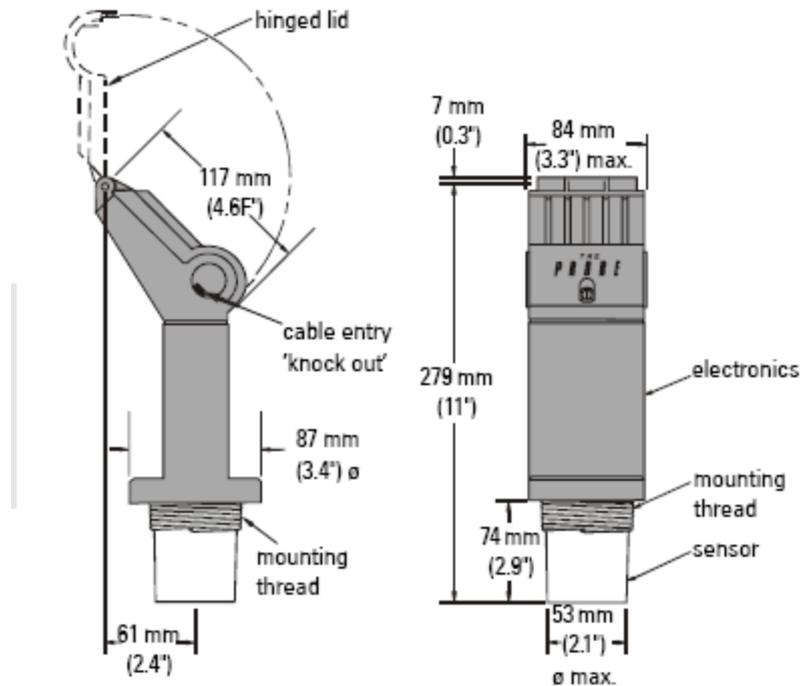


Figure 13: Milltronics THE PROBE

Configuration

Milltronics THE PROBE has a 2 button interface with a 3 character LCD, so does not require a remote control unit to operate. To access the control panel of the probe, a single screw at the top of the unit must be loosened, and then a hinged lid can be lifted up to reveal the programming interface.

There are only two buttons available. In this case, to edit a parameter, both buttons must be pressed together a number of times to select the parameter to edit, and then the “20” button will increment the selected parameter, while the “4” button will decrement the parameter. There is no edit cancel or parameter select cancel button – While selecting a parameter, each subsequent press of the buttons together will select the next one. After editing a parameter, the probe must be left alone to time out (around 30 seconds) it will then save the new parameter value into non-volatile memory, and go back to the default display mode.

Press buttons (together)	Mode	Shows	Default	Units
4 + 20	c 4	4 mA distance	0.50	metres
(press again)				
4 + 20	c 20	20 mA distance	9.50	metres
(press again)				
4 + 20	bL	blanking dist	0.50	metres
(press again)				
4 + 20	SP	response Speed	2 (see note)	(1 to 4) 1=slow, 2=normal 3=fast, 4=very slow
(press again)				
4 + 20	AL	Alarm	0.0	(not used)
(press again)				
4 + 20	FLS	Fail Safe option	3	(not used)
(press again)				
4 + 20	UN	Units	1	(1=metre)

Probe mounting bracket

All PROBES sold by CEE HydroSystems™ are supplied with a steel mounting bracket.

This mounting bracket provides a way to secure the probe by its collar mount system, and can be bolted either to the side or to the underside of a structure, allowing the Probe a direct and unimpeded line of sight down to the water level to be measured.



Figure 14: Probe mounting bracket

Calculating Probe Beam footprint

Given a probe angle of Y degrees, and a given distance D from the probe, then the surface hit by the beam from the probe (the footprint) is a circle, with radius given by the equation $R = D \tan(Y/2)$. The Diameter is found by doubling the radius.

$$\text{Diameter} = 2 \times \text{distance} \times \tan(Y/2)$$

This calculation can be done on any basic scientific calculator, the Microsoft Windows Calculator utility (in scientific mode), or even inside Microsoft Excel.

NOTE: Ensure calculator is not in radians mode when evaluating the TAN() expression.

Example footprint radius at given distances for a probe with a 10° beam angle:

Distance (m)	footprint radius (m)	footprint diameter (m)
1.0	0.087	0.175
2.0	0.175	0.350
3.0	0.262	0.525
4.0	0.350	0.700
5.0	0.437	0.875
6.0	0.525	1.050
7.0	0.612	1.225
8.0	0.700	1.400
9.0	0.787	1.575
10.0	0.875	1.750

Appendix D – remote command options

All CEETIDE™ remote commands have a similar format to them. The protocol used is logical, very easy, and virtually self-prompting. The commands are very similar to the MENU used from the front panel, and the same parameters are used.

A prefix of two characters **&*** (ASCII CHR 38 and CHR 42) is sent before all commands. This is required to stop accidental access to CEETIDE™ settings.

The command should finish with the <CR> and <LF> characters. (These are normally sent from the terminal program when you press the **ENTER** key).

To request a report of the value of a parameter, simply send the related command by itself. To change the value of a parameter, follow the command with a forward slash character “/” and the new value.

Responses to remote commands follow a similar structure. With either a parameter query or a set command, the CEETIDE™ unit will respond with the parameter name, the setting prior to the command being sent, and a list of possible values. Then if a parameter has been changed, a new line will follow specifying the new value that the parameter has been set to. In the case where a parameter has been requested to be set to an invalid value, the CEETIDE™ will respond with “no change” to highlight this.

All commands listed below are provided with of an example of their use. In this case, Operator input is shown in bold, alongside CEETIDE™ response lines.

&* SETUP

The command **&* SETUP** is a special case, because it returns all the current parameter values, together with the options and allowable parameters, as well as operating parameters like battery voltage and PROBE status at the time the command is sent.

The **SETUP** command provides an easy reference list to the other commands as they are displayed in the same form as they are entered as a command

For example:

```

&*SETUP
CLOCK      : 17 Jun 2009 14: 21: 09
CLOCKUP   : / (Adjust seconds up)
CLOCKDN   : / (Adjust seconds down)
LOGINT    : 5 / 1, 2, 5, 6, 10, 15, 20, 30 mi n
MEASURE   : 60 / 60, 120, 180, 240 sec
OUTINT    : 0 / 0, 5, 10, 15, 30, 60 sec
OUTMEAS   : 60 / 30, 60, 90 sec
OUTFMT    : 9 / 1, 2, 3, 4, 5, 6, 7, 8, 9
DOWNLFMT  : 1 / 1, 2, 3
DOWNLOAD  : 48 / Hours to download
4MADIS    : 50 / Sensor setting
20MADIS   : 950 / Sensor setting
PROBLEVL  : 1000 / Height above datum
REJECT    : 1 / 0, 1, 2 x Std
CALIBRATE : 500 / Mi d-range = 500
BATTERY   : 12. 6V / Battery voltage
PROBE VAL : SLEEP
  
```

&* CLOCKUP

or

&* CLOCKDN

These commands set a time offset in seconds (0-30) for the Real Time clock in the CEETIDE™.

They change the clock up or down by a number of seconds, see example:

```
&*CLOCKUP/2
CLOCK      : 17 Jun 2009 14: 21: 27
CLOCKUP    :      / (Adjust seconds up)
CLOCKDN    :      / (Adjust seconds down)
CLOCK      : 17 Jun 2009 14: 21: 29
```

```
&*CLOCKDN/2
CLOCK      : 17 Jun 2009 14: 21: 35
CLOCKUP    :      / (Adjust seconds up)
CLOCKDN    :      / (Adjust seconds down)
CLOCK      : 17 Jun 2009 14: 21: 33
```

The new time reading is sent in the command response, so it is easy to check that the clock adjustment is correct, but allow for approximately 1 second delay in the data transmission.

NOTE: if the system time is adjusted, any existing Measure Period (and associated Log Record) will be cancelled, and a new Measure Period will be scheduled for the next possible Log Record.

&* LOGINT

This command sets the log interval in minutes to one of the following options; 1,2,5,6,10,15,20 or 30 minutes, see example:

```
&*LOGINT/1
LOGINT     :      5 / 1, 2, 5, 6, 10, 15, 20, 30 mi n
LOGINT     :      1
```

NOTE: if the Log Interval is adjusted, any existing Measure Period (and associated Log Record) will be cancelled, and a new Measure Period will be scheduled for the next possible Log Record.

&* MEASURE

This command sets the Logging Measure Period in seconds (60,120,180,240) – note that if no real time output is enabled, then this Measure Period determines the on time of the probe every Log Interval, see example:

```
&*MEASURE/60
MEASURE    :      120 / 60, 120, 180, 240 sec
MEASURE    :      60
```

NOTE: if the measure Period is adjusted, any existing Measure Period (and associated Log Record) will be cancelled, and a new Measure Period will be scheduled for the next possible Log Record.

&* OUTINT

This command sets the Real Time Output Interval in seconds (0,5,10,15,30,60), see example:

&*OUTINT/30

```
OUTINT : 0 / 0, 5, 10, 15, 30, 60 sec
OUTINT : 30
```

&* OUTMEAS

This command sets the Real Time averaging algorithm's measure period. In Seconds (30,60,90), see example:

&*OUTMEAS/60

```
OUTMEAS : 30 / 30, 60, 90 sec
OUTMEAS : 60
```

NOTE: if the Real Time measure period is adjusted, then the existing real Time Measure Period will be cancelled, and a new one started.

&* OUTFMT

This command sets the Real Time Output Format option (1,2,3,4,5,6,7,8,9), see example below:

Output format options:

1. ASCII 1
2. SHORT
3. ASCII:2
4. LONG
5. RevType1
6. RevLONG
7. SHORT 3
8. LONG 3
9. Denison

&*OUTFMT/1

```
OUTFMT : 9 / 1, 2, 3, 4, 5, 6, 7, 8, 9
OUTFMT : 1
```

selects the current output format to type 1

&* DOWNLFMT

This command sets the Log Data Download Format (1,2,3), see example:

&*DOWNLFMT /1

```
DOWNLFMT : 2 / 1, 2, 3
DOWNLFMT : 1
```

selects the download format to type 1

&* DOWNLOAD

This command begins a download process for a number of HOURS before NOW of Log Data (0-32,500,ALL)

Download time selection 0 = No download
 1 to 32500 = download period in hours
 ALL = All data

The DOWNLOAD command requires a confirmation stage, in order to double check that the user wants to download the age of data requested. The download starts 30 seconds after the confirmation, to allow the operator to open or specify a file to capture the data.

In Windows HyperTerminal, use the capture text option and enter the file name and location in which you will store the download data. On completion of the download 'STOP' the capture text. If when viewing the download file there are any extra lines these can be removed in the viewing editor – typically WordPad.

NOTE: The download request period is hours before NOW (as shown on system clock) and not the last hours logged by the CEETIDE™. In the case where a CEETIDE™ has been removed from its installation and taken back to the office to download (and has therefore been switched off for a period of time) requesting log data relating to a time period where the CEETIDE™ was off and in transit will of course result in an empty data set.

Example:

```
&*DOWNLOAD/ALL
DOWNLOAD : 48 / Hours to download
              0=CANCEL, ALL
send command &*CONFIRM
DOWNLOAD :ALL waiting for CONFIRM

&*CONFIRM
CONFIRMED. .
DOWNLOAD :start in 30 seconds
```

&* 4MADIS

This command sets the distance (in CENTIMETRES) that relates to a signal of 4mA from the PROBE, see example:

```
&*4MADIS/65
4MADIS : 50 / Sensor setting
4MADIS : 65
```

sets the 4mA distance from 50 to 65 centimetres.

NOTE: The 4mA and 20mA setting MUST be set to match the configuration of the PROBE. If the 4mA and/or 20mA values do not match the recorded levels will not be correct. The factory setting of the probe is included on the packing documents at time of delivery. Default factory setting for 4mA distance is 50cm. Contact CEE HydroSystems™ if you require confirmation of your probe settings.

&* 20MADIS

This command sets the distance (in CENTIMETRES) that relates to a signal of 20mA from the PROBE, see example:

&*20MADIS/950

```
20MADIS : 999 / Sensor setting
20MADIS : 950
```

sets the 20 mA distance from 999 to 950 centimetres.

NOTE: The 4mA and 20mA setting **MUST** be set to match the configuration of the PROBE. If the 4mA and/or 20mA values do not match the recorded levels will not be correct. The factory setting of the probe is included on the packing documents at time of delivery. Default factory setting for 4mA distance is 950cm. Contact CEE HydroSystems™ if you require confirmation of your probe settings.

&* PROBLEVL

This command sets the height (in CENTIMETRES) of the probe zero above or below the Reference Datum. The range available is -9999.9 to 9999.9 centimetres.

example:

&*PROBLEVL/500

```
PROBLEVL : 1000 / Height above datum
PROBLEVL : 500
```

sets the PROBE level from 1000 to 500 centimetres above the tide zero datum.

&* REJECT

This command sets the Standard Deviation rejection filter (0, 1, 2)

0	= No data rejection
1	= reject > 1 x Std. dev
2	= reject > 2 x Std. dev

example:

&*REJECT/1

```
REJECT : 0 / 0, 1, 2 x Std
REJECT : 1
```

sets the rejection filtering from OFF, to 1 x Std. deviation.

&* CALIBRATE

This command sets the PROBE calibration factor (400-600) 500 is mid range.

WARNING: While this setting is provided to the Operator, and described here, we have not seen any instances where a PROBE and CEETIDE™ unit required special calibration. This is provided as a possible “problem solver” for the possibility of a future unknown calibration issue. If a physically measured PROBE distance is different to what is shown in the CEETIDE™, please double check ALL other things (probe zero measure point, 4mA distance setting, 20mA distance setting) before considering adjusting this. Do not adjust this setting without specific instruction from CEE HydroSystems™ Technical Support staff.

NOTE: Calibration, if ever required, should be done in a test setup with the PROBE pointing at a solid surface (wall etc) at about the mid-distance. Compare the measured distance as shown on the PROBE, to the measured distance shown on the CEETIDE™ unit, as well as an actual measurement from probe face to the solid surface, and fine-tune using the calibration value. Once the system is calibrated, do not change this setup.

Example

&*CALIBRATE /480

```
CALIBRATE :      500 / Mid-range = 500
CALIBRATE :      480 /
```

sets the calibration factor to 480, so that the measured distances will be shortened.

&* CLEARLOG

This command starts the process to remove all logged data from the internal memory. It accepts the arguments (1,0)

1 = YES, 0 = NO

The CEETIDE™ will require confirmation of this command. It will reply with a confirmation request, and on receipt of the confirmation, it will clear all Log Memory, see example:

&*CLEARLOG/1

```
CLEARLOG : 0 = no / 1 = yes
send command &*CONFIRM
CLEARLOG : waiting for CONFIRM
```

&*CONFIRM

```
CONFIRMED. .
ERASING ALL LOG DATA
LOG DATA CLEARED
```

Appendix E – Download example via HyperTerminal

Any terminal program can be used to access the CEETIDE™ system and change configurations or download Log Data. An example of how to access the CEETIDE™ via HyperTerminal is shown here, as HyperTerminal is a widely known and available terminal program. However any other terminal program should be able to do the same thing, and the principles shown here apply to all of them.

1. First, Launch HyperTerminal.
2. The first HyperTerminal window asks you to enter a **NAME** for a new connection profile – people typically use AAA, but it's possible to name it something memorable, and then **SAVE** that connection profile so that the profile can be loaded in future, and setup parameters don't have to be re-entered.

If you don't have an existing profile Click **OK**

If you do have an existing profile, click **CANCEL**, and skip to step 5.

3. If connecting direct by cable or radio Modem, ignore the telephone number field and select the "Connect using" field to show the Communications port to be used. Typically, "COM1" and then Click **OK**.

NOTE: to use a dialup service to connect to a 3G /CDMA telemetry equipped CEETIDE™, you need to select the computer's modem instead of a com port, and then enter the phone number of the CEETIDE™ modem.

4. The Properties setup window for the com port selected will then appear.

Set the BPS to match that set in the CEETIDE™ (or in use at the local radio Modem)

Leave Data bits, Parity and Stop Bits as **8, None, 1** (these are default settings)

set "Flow Control" to **None**.

click **Apply**, click **OK**

5. You will now be on the HyperTerminal main terminal window, which will be connected to the Com Port you selected, at the settings you selected, or will not be connected if you simply pressed **CANCEL** at step 2.

- i. To set-up 'echo' of characters typed locally follow the sequence:

Select the "**File>Properties**" menu option.

This will pop up the properties window for your current connection profile.

Click on the "**Settings**" tab, and then the "**ASCII Set-Up**" button.

In the ASCII sending window tick both "line feed" and the "echo locally" check boxes.

Click **OK** and again click **OK** to return to the main HyperTerminal window.

- ii. To load and save connection profiles here, simply select the "**FILE>OPEN**", "**FILE>SAVE**", and "**FILE>SAVE AS**" menu items as required.

When you type a character on the computer keyboard it should appear on the computer screen.

Type **&* SETUP** followed by the enter key on the computer. The CEETIDE™ should respond with the current set-ups in use.

Once communication with the CEETIDE™ is established all variable settings can be changed.

6. With connection configured, it's time to communicate with the CEETIDE™

Before downloading logged data from the CEETIDE™ it is necessary to open a file on the computer to receive the incoming data.

To open a file for reception of Data on the active HyperTerminal screen follow the sequence:

Select the menu item **TRANSFER>CAPTURE TEXT**

The Capture Text dialog window will come up, where the file name for capturing the serial port data is selected. Click **Browse..** and choose the location and name of file. Click **START**. All screen information from here-on will be recorded in the named file.

7. First check that the download format currently set in the CEETIDE™ is what you require. Choices are 1,2 or 3. Typing the command "**&*DOWNLFMT**" will show you what format is currently selected. You can change the format to any of(1,2,3) with a command "**&*DOWNLFMT/1**"
8. Type in the command **&* DOWNLOAD /ALL** - This command instructs the CEETIDE™ to send all logged Data. Other periods for Data download can be specified by using the /nn command suffix where nn = hours.

On receipt of the command the CEETIDE™ responds by asking for confirmation of the command.

Reply by sending "**&* CONFIRM**"

The CEETIDE™ responds by advising that Data download will commence in 30 seconds. This delay is to allow the Operator to set-up a receiving file if not already prepared.

On expiry of the 30 sec delay Data transfer begins with the data being sent in packets until all is transferred. Data is displayed on the computer screen as it is being received. Pauses in reception are normal and are intended to avoid overloading any data buffers in the telemetry link.

The first line of the logged data transfer is: ; **START OF LOGGED DATA**

The last line of the logged data transfer is ; **END OF LOGGED DATA**

On completion of download you will see the last line.

9. On the main HyperTerminal Window select **TRANSFER>CAPTURE TEXT>STOP**. The receiving file is now closed.
10. Disconnect HyperTerminal from the computer com port by selecting the **Call>Disconnect** menu item. HyperTerminal can now be shut down.
11. Use Windows WORDPAD or similar text editor to view the downloaded file. Delete any 'extra' text such as the download commands present in the file. The Tide data can be edited or field order changed by use of Windows Excel or similar Spread sheet.

Index

&

&* 20MADIS.....	51
&* 4MADIS.....	50
&* CALIBRATE.....	52
&* CLEARLOG.....	52
&* CLOCKDN.....	48
&* CLOCKUP.....	48
&* DOWNLFMT.....	49
&* DOWNLOAD.....	50
&* LOGINT.....	48
&* MEASURE.....	48
&* OUTFMT.....	49
&* OUTINT.....	49
&* OUTMEAS.....	49
&* PROBLEVL.....	51
&* REJECT.....	51
&* SETUP.....	47

2

20 mA Distance.....	23
---------------------	----

4

4 mA Distance.....	23
--------------------	----

B

baud rate.....	27
----------------	----

C

Calculate battery power consumption.....	19
Calculating Probe Beam footprint.....	46
Calibration.....	24
CEETIDE™ download formats.....	32
CEETIDE™ Buttons.....	8
CEETIDE™ Display.....	8
CEETIDE™ LEDs.....	7
charger requirements.....	36
Clear Log.....	26
clearing Log Data.....	20
Communications Baud.....	27
Configuration of LR Radar Probe.....	43
configure a Sitrans Probe LU.....	41
Connecting to CEETIDE™ Utility program.....	28
Connections.....	9
Copyright.....	2
Critical settings.....	17

D

DATA Cable (DTE).....	39
Demo Mode.....	27
Download.....	24
Download example via HyperTerminal.....	53
Download Format.....	24

Downloading stored data.....	31
------------------------------	----

E

Electrical Properties.....	36
Enabling CEETIDE™ key access.....	13
Enabling the CEETIDE™ display Display.....	13
Exit.....	27

F

FCC Information for the USA.....	2
Firmware version.....	21
Front Panel.....	7

G

Getting started.....	10
GPS ANTENNA Cable.....	39
GPS Antenna Connector.....	37
GPS Properties.....	36
GPS time correction.....	20
Graph Maximum.....	25
Graph Minimum.....	25
Graph Scale.....	25

H

Hard Reset.....	26
-----------------	----

I

Important settings.....	17
Installing a GPS antenna.....	11
Installing a telemetry antenna.....	11
Installing the CEETIDE™ unit.....	11
Introduction.....	5

K

key access.....	13
-----------------	----

L

Log Interval.....	22
Log Measure Period.....	22

M

Making connections.....	12
Memory capacity used.....	21
menu system.....	16
Menu system options.....	21
Milltronics THE PROBE Dimensions.....	44
Modem Antenna Connector.....	37
Mounting the PROBE (Sensor).....	10

N

Notice of Liability.....	2
--------------------------	---

O

operational considerations..... 18
 Output Format.....23

P

Physical Properties – CEETIDE™ control unit 36
 POWER Cable.....38
 Power Connector.....37
 power requirements.....36
 Powering up the CEETIDE™ 13
 PROBE Cable (24V power)38
 PROBE Cable (Loop Power).....38
 Probe Connector.....37
 Probe Height.....23
 PROBE height 11
 PROBE height vs. Tidal range..... 18
 Probe LU Dimensions.....40
 Probe mounting bracket46
 Probe Type27

Q

Quick Reference Guide 4

R

Radio Channel.....26
 Real Time Data Output.....32
 Real Time Measure Period.....23
 Real time output formats33
 Real Time Output Interval.....23
 Rejection.....25
 remote command options47

S

Serial Data Cable (DCE)38
 Serial Data Connector37
 Serial Output data.....37
 Set Date / Time.....21
 Sitrans Probe LR Dimensions42
 SMS Commands.....30

System Configuration..... 13
 System Description 5
 System installation 10
 System Operation 6
 System Options..... 5
 System Setup..... 29

T

TELEMETRY ANTENNA Cable..... 39
 The CEETIDE™ default screen 15
 Turning Internal Telemetry on and off..... 14
 Type 1
 Download 32
 Real Time 33
 Type 2
 Download 32
 Real Time 33
 Type 3
 Download 32
 Real Time 33
 Type 4
 Real Time 34
 Type 5
 Real Time 34
 Type 6
 Real Time 34
 Type 7
 Real Time 34
 Type 8
 Real Time 35
 Type 9
 Real Time 35

U

UHF Modem..... 36
 UHF telemetry system configuration..... 20
 Utility software..... 28

V

View History 21

CEE Hydro Systems
Unit 1, 12 Cecil Rd,
Hornsby NSW 2077
Sydney Australia

t: +61 (0) 2 9987 1581

f: +61 (0) 2 9987 1584

e: sales@ceehydrosystems.com

www.ceehydrosystems.com



www.ceehydrosystems.com