USER MANUAL






PORTABLE AM/FM RADIO

SY-1644

WELCOME

Thank you for purchasing the Sytech SY-1644 Portable AM/FM Radio. In order to fully benefit from this product, please read the following instructions carefully and store them in a safe place for future reference. We are sure this product will satisfy your needs. Welcome to Sytech!

CONTROLS DESCRIPTION

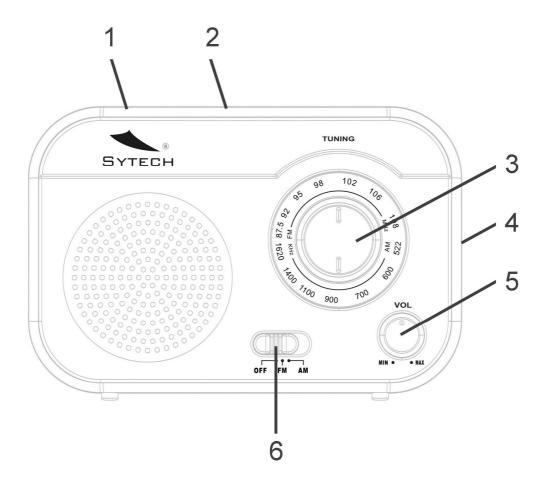

- 1. Telescopic Antenna
- 2. Carrying Handle
- 3. Radio Station tuning Button
- 4. Headphone Jack
- 5. Volume Control
- 6. Radio Band Selector
- 7. Battery Compartment Cover (back cabinet)
- 8. AC power source connection (back cabinet)

PRECAUTIONS:

1. For AC operation, make sure the voltage is compatible. Always use the provided AC power cord; never use other AC power cord.

For DC operation, simply insert three "UM-2 / C" batteries for unit operation.

- 2. Always disconnect the AC power cord from the AC power source when it is not in use or when DC power is operating.
- 3. Do not leave the batteries in the compartment for a long time. Remove the batteries to avoid leakage and damage. If the unit is not going to be used over a long period of time, remove the batteries and store the unit in a safe place.
- 4. Do not expose the unit to extreme temperature nor high humidity to ensure normal functioning for a long lifetime.
- 5. If you find the unit is not working properly, please contact Sytech Service Center. Under any circumstances do not attempt to repair the unit by yourself as this may result in the risk of electro locution and will void the warranty.

OPERATING INSTRUCTIONS

Battery Supply

Open the battery compartment and insert as indicated in the compartment three Batteries, type R14, UM2 or C cells.

The battery supply is switched off when the set is connected to the mains. To change over to battery supply, pull out the plug from the MAINS socket.

Mains Supply

Connect the mains switch to the outlet on your wall. The mains supply is switched on. To disconnect the set from the mains completely, carefully remove the mains plug from the wall socket.

Radio

- 1. Select the wave band using the RADIO BAND SELECTOR.
- 2. Adjust the sound with the VOLUME control button.
- 3. You may connect stereo headphones to the radio through the LINE IN function. The radio will be played through the headphones and the speakers will be muted.
- 4. Use the TUNING knob to tune into a desired station.

To improve reception

- For FM, pull out the telescopic aerial. To improve FM Reception incline and turn the aerial, reduce its length if the FM-signal is too strong (this occurs when the unit is placed very close to a transmitter).
- For AM reception, the set is provided with a built-in antenna, so there is no need to use the telescopic aerial in this case. Place the unit in different positions in order to achieve the best AM reception.

SPECIFICATIONS

Portable AM/FM radio AC and battery operated 3" powerful speaker Telescopic FM antenna Carrying handle Earphone output

Speaker power output: 0,8W. RMS Power source: AC: 230V-50Hz.

DC: 3 x batteries type "C" – UM2

DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L. Address: Pol.Ind.La Raya. C/ Guadalquivir, 2. Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967 Fax: 91 8864285 NIF: B83254763

Manufacturing country: China Description: Portable AM/FM Radio

Sytech® SY-1644 complies with the following directives:

EMC Standard: Directive 2004/108/CE

LVD Standard: Directive 2006/95/CE

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

