

Network Mode: User Manual



CONTELEC



2. Devices

- Pool Timer CT150
- Lighting Interface
- Communication Interface


3. Connections

- USB Cable
- RS485 Cable
- AC Power Adaptor

4. Network Connections


Devices

Pool Timer: CT150

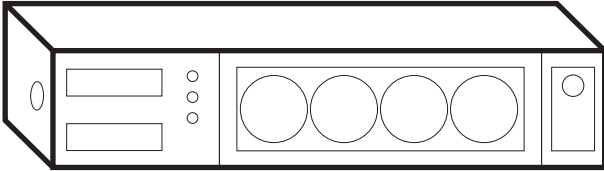


16 ball timer. Each pool/billiard should have one pool timer. This pool timer can work in stand alone or in network mode. If working in network mode, you must connect it to the network using the plug in the bottom of the pool timer.

 Lighting Interface

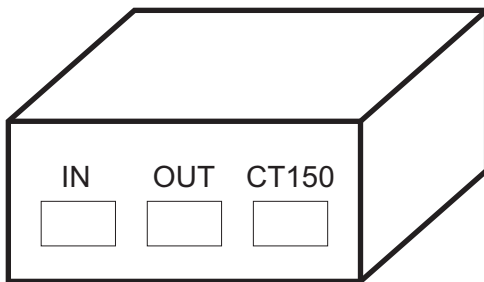

Controlling the pool/billiard lights is possible if working in network mode. Each lighting interface can control one pool/billiard light. The connections are very easy to do (cable in, cable out and cable for pool timer) and are shown on "Network Connections" page.

Communication Interface

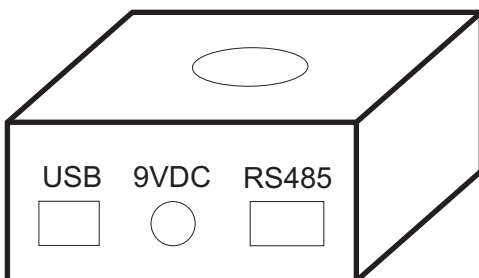

To connect any device or the whole system to the computer, you need the "Communication Interface", which transfers the RS485 data to the computer through USB and allows you to use our software which is ready to download in www.contelec.pt.

Connections


← USB Cable →

This cable is used to connect the Communication Interface to the computer.



← RS485 Cable →

To connect any device to another one, you need to use this cable. For example to connect one pool timer to the lighting interface.

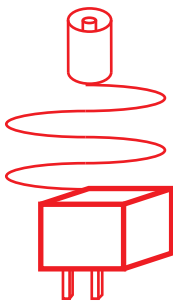

This AC power adapter connects to the communication interface and should be connected if you are using the lighting interfaces.



Network Connections

