

iContact[®]

IC-W100



Great for outdoors & sports!

USER GUIDE

Thank you for purchasing an iContact™ waterproof case for iPhone 4 and 4S.

Following these instructions will help you maximize the use of your case so you can enjoy your iPhone 4 in all weather conditions and in places where it may be exposed to water or dirt.

This case is IPX7 certified to protect from immersion in water for 30 minutes at a depth of 1 meter, while still allowing you to use the phone and other functions through the touch screen*.


Be sure to read this guide, the Warning Insert, and your iPhone's manual before using the case.

* iPhone is a Trademark of Apple, Inc. and not affiliated with iContact™. This product is not designed for extended periods of underwater use or for use at great depth. Exercise caution when using this product and use at your own risk. Under no circumstances is iContact liable for any damages resulting from the use of this product and will not replace, repair or reimburse for damaged devices.

1 UNPACK

Remove the case from its packaging and check over all items.

FRONT SHELL

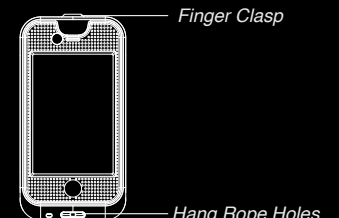


Finger Clasp

Hang Rope Holes

Hang Rope not included

 REAR SHELL

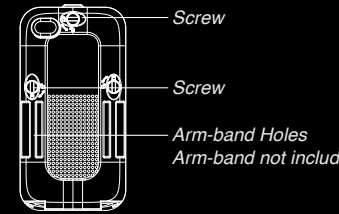

Screw

Screw

Arm-band Holes

Arm-band not included

2 INSPECT

To prevent water damage to your phone, first follow steps 3.4 - 3.6 without actually placing your phone in the case.

Press firmly around the case to make sure there no gaps between the lid and the base. (Refer to diagram for step 3.4.)


If water enters the case, check the O-ring, take apart the case and repeat the test.

3 PROPER USE

3.1 PREPARE YOUR IPHONE
Clean your phone to ensure there are no harmful materials that could affect the use of the case.

3.2 INSERT YOUR IPHONE

Place your iPhone into the front half of the case with its screen lined up with the protective film on the case. Put the lower part of the phone into the case first, then the upper part.

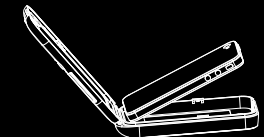

3.3 CONFIRM PLACEMENT

Confirm the iPhone fits properly in the case and is in the right position by pressing on it lightly to make sure it touches the soft material on the case.

3.4 CLOSE THE CASE

Press the lid and base of the case together until there is no gap between these two parts. Inspect the case to ensure a proper seal.

VERY IMPORTANT



There should be no gap when the case is closed. Press firmly around the case to ensure a tight seal.

3.5 SEAL THE CASE

Carefully rotate the three screws 1/4 turn to the correct LOCK position. Be careful not to overturn the screws.



3.6 CHECK THE SEAL

Re-inspect the case to ensure a proper seal is made. **If any part is misaligned, take apart the case and start over.**

4 STORAGE

Store the case in a cool, well-ventilated area, leaving it open to prevent the material from deteriorating.

When leaving the case unused for an extended period, place it in a clean plastic bag to ensure it remains clean and in good condition.

Do not store in direct sunlight or where the case will be exposed to sudden changes in temperature or high levels of humidity.

5 SPECIFICATIONS

WATERPROOF RATING
IPX7 - Protects against water ingress when immersed for 30 minutes at a depth of 1 meter.

OPERATING TEMPERATURE
0 - 40° Celcius
32 - 104° Farenheit

WEIGHT
Approximately 70g when empty

Under no circumstances is iContact liable for any damages resulting from the use of this product and will not replace, repair or reimburse for damaged devices.

6 WARNINGS

- Inspect the case prior to each use to ensure it is in proper working order and there are no leaks.
- Do not disassemble. Disassembling can cause malfunction and damage to the case and your phone.
- Never hang the case from the neck of an infant or child and always keep the case out of reach of children. This product may contain small parts that are choking hazards for children.
- Keep out of direct sunlight and do not expose to temperatures over 40° Celcius / 104° Farenheit.
- Should the case be damaged or break as a result of a fall or accident discontinue further use.
- Replace the O-ring immediately if it is damaged, cracked, warped, or has lost elasticity.
- The waterproof case is not designed to protect the iPhone from blows or vibration. Do not drop the case, strike it against hard objects, throw it into the water, jump into the water while holding the case, or leave it in an area subject to extreme vibration or impact.
- Do not use chemical detergents, rust inhibitors, thinner, alcohol or other volatile chemicals when cleaning the case. Wash in fresh water only.

- Do not open the case where it will be exposed to high winds, spray, dust, sand or impact.
- Before closing the case, remove any foreign object from any part of the case that is in contact with the O-ring.
- Should water enter the case, remove your iPhone immediately.
- When travelling from high to low altitudes, open the case periodically to equalize the pressure. If the case is kept sealed, changes in air pressure may prevent it from opening or cause damage to the case and your iPhone, leakage, malfunction or injury.
- Do not clean with a high-pressure jet.

This product is not designed for extended periods of underwater use or for use at great depth. Exercise caution when using this product and use at your own risk. We shall not be held liable for any damages resulting from the use of this product.

HOW TO VIDEO

Videos on our website demonstrate the best way to ensure your case is sealed to minimize the risk of water damage. Before using your case visit: www.iContactProducts.com/IC-W100 or scan the code below with your iPhone's barcode/QR code reader.

