




PMP50 Professional Piezo Dynamic Megaphone

USER MANUAL


PMP50 - Professional Piezo Dynamic Megaphone

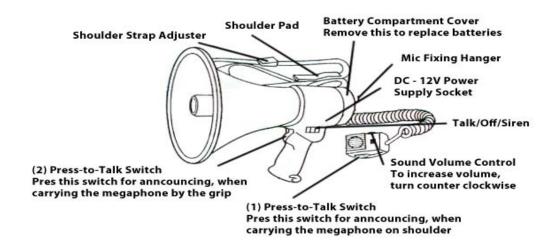

Megaphone for handheld or shoulder-slung use (straps supplied). Detachable anti-howl microphone with on-off switch and volume control. Metal and ABS construction.

Operating Instructions:

 - 1. When carrying the microphone on the shoulder press the (1) press-to-talk power on-off switch on the left side of the microphone.
- 2. When holding the megaphone at the grip fix the microphone hanger inlet in the microphone fixing hander, then press the (2) press-to-talk power on-off switch back with your index finger.
- 3. Position the speaker opening mouth towards the object, and speak through the microphone mouthpiece. Bring the microphone mouthpiece close to your lips and speak normally.
- 4. Turn the sound volume control, on the right hand side of the microphone and adjust the sound level to the desired optimum level without causing howling.










Replacing Batteries:

   - 1. Loosen the locking screw of the battery compartment cover on the back of the body. The battery compartment cover comes off.
- 2. Insert 8 x type C (UM-2) batteries in the battery case observing correct polarity
- 3. Insert the battery case with batteries into the battery compartment of the megaphone observing correct polarity.







Notes:

- Make sure the batteries are inserted correctly observing correct polarity.
- Remove the batteries when the megaphone is not in use for a long period of time.
- Drained batteries do not give sufficient sound volume. Replace the batteries at regular intervals.

Technical Specifications

Range 1200 Yards Power 50 Watts Weight 2.86 Lbs.

Dimensions 9" diameter x 13 34 length

PYLE MISCELLANEOUS PARTS MISC ACCESSORIES