

Instructions:

AURA-32 Centerpiece

Thank you for selecting **AURA 32 Centerpiece Light Effect**.

Before installation and for your safety and better use of this product, please read this user's manual carefully and follow the instructions to protect yourself and others .

AURA 32 Centerpiece Light Effect adopts advanced design technology, using high grade optical lenses, a powerful, long tested and reliable **HMI 575** lamp to generate high precision and very bright light output.

16 pieces of various dichroic filters color beams and 16 pieces of white beams can create a multitude of color configurations / patterns including a mirror ball style effect to satisfy any appetite for excitement in any club for years to come.

The controller supplied with the unit has 8 built-in programs to chose from, controlling the **32** beams. Also the controller incorporates Black Out, Audio, Auto functions, Speed and Pause etc.

SPECIFICATIONS:

Voltage:	220V / 60hz
Controller	120v /60hz
Power:	850W
Lamp:	HMI 575, OSRAM / IMPORT
Resistance:	>2M
Control:	Signal Dedicated Controller
Color:	16 Colors +16 White Colors
Size:	44" wide x 26" high
Weight:	160 lbs. (unboxed)

SAFETY / INSTALLATION INSTRUCTION:

- Manufacturer will not accept any liability for damages or bodily harm resulting from improper installation or unauthorized modifications to the device.
- Every person involved with installation, operation and maintenance of this device, must be qualified, familiar with the instrument functions and follow the instruction manual . Most of damages occur by improper installation and operation there after.
- Before installation , please open and inspect the equipment for any possible damages caused during transportation.
- This product is for **indoor** use **ONLY** .
- Please install the device in a well-ventilated area.
- Please check that the fan and fan safety grill are not blocked .
- Install the fixture with proper hanging devises . For safety , always use Safety cables .
- Handle the power cord and all electrical connections to the mains with caution .
- Make sure that you have the correct operating voltage as stated on the unit .
- During installation and before connecting the device to the mains , make sure the main power is turned **OFF**.
- Make sure that the device is properly grounded to avoid electric shock.
- **DO NOT** connect this device to a **Dimmer Pack**.
- **DO NOT** switch the devise **ON/OFF** is short intervals as this will reduce lamp life and also will cause damage to the lamp igniter.
- During initial start up, some smoke or smell may arise .

(This is normal process with new devices and does not mean that the device is defective.)

FOR YOUR SAFETY - before replacing the lamp, wear safety glasses and gloves (as the lamp might explode) .

- Make sure that the main power is **OFF** and the lamp is cold (as the operating temperature of the lamp could be over 200C)
- Open the lamp housing .
- **DO NOT** touch the lamp with bare hands.
- Replace the lamp.
- Cover the lamp housing .
- Restart the device .

DO NOT look directly into the lamp to avoid eye injury
Please use **10A/250V** fuse

OPERATION INSTRUCTION:

Please use the following steps to start the unit up:

- 1 - Install the **AURA 32** in the desire and safe location.
- 2 - Plug the control cable supplied with the controller into the light fixture (the cable is aprox. 30ft in length).
- 3 - Turn the power on.
- 4 - The lamp will come on first . After approximately **20 seconds** the electronics will power on and the fixture will go thru an entire RESET mode. Once this is completed, unit is ready to operate

CONTROLLER OPERATION:

- 1 - Push the **RESET** button to reset the device .
You can use **RESET** Function to reset the unit without turning the power **OFF** to the whole device.
- 2 - Push **START** key
- 3 - Push the **PROGRAM** key and choose one of the pre-programs from **1** thru **8**
- 4 - Move **SPEED** Fader up or down to change the effect speed.
- 5 - Move **TIME** Fader up or down to change the program speed.

AUDIO:

- 1 - Push **AUDIO** button . In this mode the **Audio Mic** will sound activate the unit to change programs and randomly pick movement.
- 2 - Push again to cancel .

PAUSE:

- 1 - Push **PAUSE** button, if you want the program to be stopped / paused temporarily on a particular scene .
- 2 - The letter **H** (Hold) will be display in the program window.
- 3 - Push again to cancel.

MLSC, Inc.

METEOR LIGHT and SOUND CO. Inc.

8000 MADISON PIKE, MADISON ALA. 35758. (256) 461-8000: FAX: (256) 461-7708

www.meteor-global.com

www.meteor-usa.com

e-mail: sales@meteor-usa.com