IMGOH CCD user manual

Version V1.5

TONENT

SAFETY PRECAUTIONS	
STANDARD EQUIPMENT	
Accessories Sold Separately	
Camera Interface	
Camera Software Installation	
DC201 Input Voltage Range	
Service Temperature and Humidity of Camera	
How to avoid CCD sensor moisture in high humidity environments	
Notes about Long term use camera and Remote Observatory	
About controlling for BLOOMING	
Clean the surface of CCD chip and the glass window	
Setting GAIN and EXP	
IMG0H mechanical dimensions	
Simple usage	
MaxIm DL Image Measure	
IMG0H CCD Image Calibration	
Guiding by using IMG0H (for astronomic photography)	
Parameter	

Welcome to take the QHYCCD product.

Before using the camera please read this manual carefully.

IMG0H is designed for industrial test, biographical test, laboratory image and so on, it is high sensitive. The sample depth is 14 bit(monochrome) / 42 bit(color version), the light range of one pixel is 0-16383.

IMG0H's CCD is the SONY Exview 1/4 inch frame. It is progressive, the QE is 68%. Exview technology improves the shape of microlens on the CCD, to increase the sensitivity under the near infrared band (700-1000nm). IMG0H builds in the TEC, to decrease the hot noise. It also possess the low speed read out mode, this mode increase the SNR of the image, so IMG0H is also suit for using in dark environment.

IMG0H possesses the high-speed USB2.0 port to transfer the data between CCD camera and computer. It can export the 14bit no compressive RAW images.

IMG0H's capture FPS is very high, the expose time of single frame is very short, so it could capture a lot of frames in a short time. IMG0H is suit for planet or moon photography.

IMG0H possesses the guide port, the protocol is ST-4, using a RJ11 6pin guide cable to connect it with equatorial mount.

SAFETY PRECAUTIONS

- 1. The CCD chip and cooling system are more fragile than a small or medium sized CCD. Take extra care when transporting and storing the device. Any significant impacts may damage your equipment.
- 2. Keep clear with the radiator.
- 3. Connection Sequence:
 - (1) Connect USB cable from camera to PC
 - (2) Connect 9-pin cable from camera to DC201
 - (3) Connect 12V power to DC201.
- 4. Internal diameter of connection to DC201 is 2.1mm. The inner of the plug is positive, the outer of the plug is cathode. If the polarity is wrong, the DC201 may be damaged.
- 5. Note the computer and the AC/DC adapter is earth grounding well. The computer's grounding and the AC/DC adapter's must be the same. Otherwise, if the computer or the AC/DC adapter get creepage, the USB port will be easily damaged. If the grounding couldn't be assured, the computer's shell and the cathode of the AC/DC adapter's must be connect with a wire.

IMG0H CCD camera

USB cable



IMG0H DC201 DC adapter



9pin power supply cable



Accessories Sold Separately

Accessories Sold Separately is sold by zones. 100-240V AC to 12V DC Adapter



Full Air proof box with electric heating silicon gel

Camera Interface



Camera Software Installation

- 1. Run the driver install program.
- 2. Connect the IMG0H with the computer. Do not connect the 9pin cable now.
- 3. System will find new device. Wait till installation finished(In XP select "No"->"Next Step"->"Install automaticly.
- 4. Use 9pin power cable connect DC201 and IMG0H. Please note the side with EMC ring should connect to DC201.
- 5. Connect DC201 with 12V input. The LED of DC201(+15,-15.+5) should be on.
- 6. Run the EZPlantary program, choose "camera-scan camera", now the IMG0H will be on, click one resolution, the realtime image will show.
- 7. There are 4 LEDs in the camera, if the guiding port is in use, they will be on, otherwise they are off.

DC201 Input Voltage Range

The DC201 requires a regulated 12V input. The normal input range is 11V-13V. If you exceed 13V common when you are using an external battery, the higher voltage will reduce the life of the TEC and Fan. If you exceed 13V, please limit the maximum power of your Cooling Settings. The power of the IMG0H is 10W if the TEC is on, so the power supply should be 12V and exceeds 2A.

Service Temperature and Humidity of Camera

Service Temperature of this camera is from -20C/-4F to +30C/86F. Relative Humidity amount is from 0% to 90%.

How to avoid CCD sensor moisture in high humidity environments

In certain environments, when the temperature of the camera drop below the dew-point, dew or ice may form on the camera. This is simply a law of nature. However, ice and/or dew which form on the surface of CCD chip or optic window will impact your images. If dew or ice forms on the surface of CCD, the water can flow onto the electric board, which leads to short circuit or data corruption. It is critical that you avoid dew or ice formation during operation on the CCD chip. However, the TEC's power of IMG0H is low, the dew hardly appear. If the dew appear on the glass window, you must stop IMG0H working immediately. If the dew appear on CCD chip, it means the camera is not airproof. You should open the camera in a dry environment, wait for the chip dry, and seal the camera. Note: the camera must be opened in a dry environment, if the air contain water, it maybe appears dew again.

Notes about Long term use camera and Remote Observatory

If you have to keep the camera working for a long time or the camera is working in a remote observatory, please note the safe notice, and we recommend that you consult your area dealer for more details.

Note: Don't supply power to the CCD for several days or even weeks if possible. Use a power controller to control 12V input or AC input.

About controlling for BLOOMING

IMG0H CCD chip have the -110dB anti-overflow foundation. Generally, the overflow is blocked. But it is possible to overflow for shooting very bright target. So if it is controllable, it must avoid photo the very bright target.

Clean the surface of CCD chip and the glass window

If dust coats the surface of the CCD-it will impact the your images and possible create "dust donuts" and other artifacts. If there is only a small amount of dust, we suggest just using flat fields calibration to remove them. How to clean the glass window?

- 1. Get off the len
- 2. Use the air-blowing to clean the glass window. If the dust is tightness, use the cleaner for DSLR to clean. Note: do not use the lens paper, because the filter covers coating, the lens paper will easily damage it.

How to clean the CCD chip?

- 1. Open the camera in a dry enviroment
- 2. Use the air-blowing to clean the glass window. If the dust is tightness, use the cleaner for DSLR to clean.
- 3. Seal the camera in a dry environment. Note: It must be seal in a dry environment, because if the air contain water, the camera maybe get dew when using.

Setting GAIN and EXP

User can setting QHYCCD's gain and expose time.

GAIN is the gain of the ADC's amplifier, the range is 0-67. EXP is the expose time for one frame. Good setting will get good dynamic range.

IMGOH mechanical dimensions









Simple usage

Although many softwares support IMG0H, EZPlantary is the suggestion. You can use EZPlantary to examine the IMG0H.

- 1. EZPlantary
 - (1) Connect the IMG0H and the computer.
 - (2) Run EZPlantary.exe
 - (3) Select Camera-Scan Camera, if the IMG0H is shown, select IMG0H directly, and select a suitable resolution. The resolution is lower, the FPS is higher. User should choose a suitable one by real fact.
 - (4) After setting, the realtime image will show.
 - (5) Adjust the GAIN and the EXP, the image will be realtime.
 - (6) If using the color version of IMG0H, adjust the Color Balance. Generally, the camera couldn't show the right color of the original object's color. So it's necessary to adjust the Color Balance. We can adjust the R, G, B channels separately, calibrate the right color. The range of adjusting is 0-63. If you adjust one channel, the color of the channel will be increased.
 - a) Adjust the White Balance by manual: The method is the most precision and universal. Before adjusting, you should put a white paper in the head of the lens, the paper should fill full in the image. Watch the Histogram in the software, you could see the RGB channels are not superposition. Adjust the Color Balance, when the RGB channels get superposition, the white balance is perfect.

Color Balance 🔹
 15
 29
= 51
Global WB Spot WB
Focus Aid 🏾 🍣
Histogram 🏾 🔅

- b) Global White Balance: Click the Global WB button, it will auto adjust the white balance.
- c) Spot White Balance: In some condition, global white balance could not calibrate correctly. For example, the red color is in a large part of the image, when you use global white balance, it will adjust the red color to gray, thus the white balance is wrong. In order to avoid it, the software supply the Spot White Balance. Click the Spot WB button, the button will turn blue, and the mouse will change to a little hand. Move the mouse to the image, click the white (or gray) part for original object, the software will compute the white balance.
- (7) Adjust the lens in focus.
- (8) Capture the non-compressed video: Click File-Video Record Options, set the record options. Note: The FIT format is used in RAW (Mono) mode. After setting, click REC button to record video.

Record Options
Record Format
● AVI ● BMP ● TIFF ● FIT
-Select Working Folder
D:\软件安装程序\EZPx64V31beta
⊙ Use Current folder OUse another folder
File Sub Folder Options
O Auto Creat Subfolder for each Clip
 All clip in Current folder
Auto Filename Options
⊙ Use H-M-S-MS Format
OUse Suffix+ClipNumber+RecordNumber
CAP
-Total Record Frames
100 200 500 1000 Unlimit
ОК

(9) Capture the single image: Click File-Snap Options, set the snap options. Note: The FIT format is used in RAW (Mono) mode. After setting, click Snap button to capture the single image.

Snap Options
Record Format
● BMP ○ JPG ○ TIFF ○ FIT
Select Working Folder
D:\软件安装程序\EZPx64V31beta
Our current folder ○ Use another folder
Auto Filename Options
⊙ Use H-M-S-MS Format
OUse Suffix+SnapNumber
САР
ОК

(10) Other options:

a) Favorite-Show TimeStamp: Show TimeStamp on the image.



b) Favorite-Show OSD: Show OSD on the image.



c) Favorite-High Priority Disk Write: This item will increase the priority on writing files into disk. The function is improved for the computer which has less video memory. It could decrease the display FPS

to make sure the writing file speed.

- d) Camera Setup-Color/Mono: Different camera uses different Bayer Pattern. We should choose the right Bayer Pattern to get the right color. Note: The RAW (Mono) mode uses no Bayer Pattern, the image is monochrome.
- e) Camera Setup-14bit Image: Choose this item will capture the 14bit image. Note: With this item, the image is monochrome, the format is FIT, and the read speed is low speed.
- f) Camera Setup-High Speed Readout: Choose this item will use the high speed read out. It will cost more system resources, and increase the noises.
- g) Camera Setup-SDRAM bypass: Choose this item will not use the SDRAM. If use the SDRAM, capturing will more continuous, and the FPS will be higher, but the noise will increase at the same time, the image will appear the stripe, especially in the dark environment.
- h) Camera Setup-Camera Fine Tone: Open the Fine Tone windows, adjust the CCD Timing and the ADC Timing to improve the SNR. The first two adjustment of ADC Timing is the most useful. When adjusting, cover the CCD camera, set the gain to a high number, adjust the CCD Timing and the ADC Timing to improve the SNR.

😼 Fin	eT	ш	le									×
	imin	g-										_
Ţ												
											_	
<u> </u>		1	1	1	1	1	1	1	1	1	1	
Y												
ADC T	imin	g										
											_	
Y.				,	,	,	,	,	,	,	ļ	
<u>₹</u> .		•	1	1	1	•	•	•	•	•	-	
	•	1	•	1	•	•	•	•	•	•		
	• •	•	•	•	•	•	•	•	•	•	-	
	· ·	•	1	1			-	1	- 		•	
	· ·	•	•	•			•	•		•		

- i) Screen Zoom: Adjust the zoom ratio.
- j) Language: Select the language.
- k) Help: Show help and about message.
- 2. MaxIm DL ASCOM Connection
 - (1) Download the newest ASCOM software in <u>http://ascom-standards.org/</u>.
 - (2) Install the ASCOM platform software.
 - (3) Install the IMG0H driver and the ASCOM plug-in for IMG0H.
 - (4) Run MaxIm DL, click the camera control button (1), in Setup window, click Setup Camera-Camera

Model-ASCOM-Advanced-IMG1S/2S StarSenseSci-Properties, in the properties window, set the gain and the offset and so on. Click OK to back the Camera Control window, click the Connect button.

- (5) In the Camera Control window, choose the Expose window.
- (6) Choose Find Star, set the expose time in the Second textbox.

- (7) Click the Option-No Calibration.
- (8) Set the bin mode. For IMG0H, the X=1 and Y=1.
- (9) Click Start button to start capture.
- (10) After capture, the image will show. Adjust the Screen Stretch simply to get a suitable image.
- (11) After capture, the image is the RAW format, it is monochrome. In MaxIm DL, choose Color-Convert Color, set the OFFSET X=0, Y=0, choose Generic RGB in Select Camera. Watch the result in the preview window. If the color is not right, change the OFFSET and the type of camera.
- 3. AstroART ASCOM Connection
 - (1) Download the newest ASCOM software in <u>http://ascom-standards.org/</u>
 - (2) Install the ASCOM platform software.
 - (3) Install the IMG0H driver and the ASCOM plug-in for IMG0H.
 - (4) After install AART3.0, install AART4.0 update. Copy the piccdgui.dll into the AART directory, the piccdgui.dll could be downloaded from the AART website.
 - (5) Run AstroART, Choose Plug-in-CCD Camera. In the Setup window, choose Imaging/GuideCamera as ASCOM, click SETUP button, choose IMG1S/2S StarSenseSci. Click the Properties button, set the GAIN and the OFFSET.
 - (6) If IMG0H connects successfully, AART will show the temperature window, set the Target number.
 - (7) Set bin mode in the Setting window of CCD control window.
 - (8) Set the expose time in the CCD control window. Click START to capture.
 - (9) In the 1*1 bin mode, in order to get the colorful image, you should choose color-CCD Color Synthesis. Select RGB image and suitable X Y OFFSET to get it.

MaxIm DL Image Measure

The FIT images could be measured in MaxIm DL.

Run MaxIm DL, choose View-Screen Stretch, or click button, to show Screen Stretch window. Adjust the little

triangles, the image's luminance will be changed. Note: The Screen Stretch tool only changes the image's screen luminance, the original image's luminance could not be changed.



Choose View-Information Window, or click , to open the Information window. The mouse across the image will change to a 3-concentric circles. In the Information window, choose the Mode Aperture first, now you can see some information.

Informa	tion		? 🛛
Cursor	(X= 377,Y=	226), Rad= 1	0, Rad2= 22
Pixel Maximum Minimum Modian	3121.000 5073.000 2717.000 2641.000	Magnitude Intensity SNR	0.000 0.000
Average Std Dev	3628.640 586.664	Bgd Avg Bgd Dev	3842.458 679.792
Centroid FWHM	(X= 377.000,	.Y= 226.000) Flatness	l
Mode Ap	erture 💌 I	Display in Arcsec	<u>C</u> alibrate >>

- 1. Cursor: Aperture mode shows statistics on the area under the circular cursor as the mouse is moved around the image. The current Cursor position and inner and outer radii are shown at the top. The Pixel value directly under the cursor is also shown.
- 2. The following measurements are made only within the aperture (inner circle): the Maximum, Minimum, Median, Average, and standard deviation (Std Dev).
 - (1) Pixel: Show the pixel luminance in the center.
 - (2) Maximum: Show the brightest pixel's luminance.
 - (3) Minimum: Show the darkest pixel's luminance.
 - (4) Median: Show the median of the pixel's luminance in the inner circle.
 - (5) Average: Show the average of the pixel's luminance in the inner circle.
 - (6) Std Dev: Show the standard deviation of the pixel's luminance in the inner circle.
- 3. The following measurements are made inside the aperture after first subtracting the average value in the annulus (between the middle and outer circles).
 - (1) Magnitude: As calibrated using the Calibrate button. (For astronomy).
 - (2) Intensity: Sum of all pixels within aperture less background.
 - (3) SNR: SNR is calculated as the ratio of intensity to the standard deviation of the background times the square root of the number of pixels.
- 4. The following measurements are made using only the background annulus (between the middle and outer circles)
 - (1) Bgd Avg: Show the average of the background luminance.
 - (2) Bgd Dev: Show the deviation of the background luminance.

If you want to see more information, please watch the MaxIm DL user manual.

IMGOH CCD Image Calibration

Image calibration means to calibrate the CCD with a BIAS field, a DARK field and a FLAT field. You can completely remove thermal noise of the CCD through proper calibration. Additionally, you can obtain better image highlights. You can remove dark spots which are caused by dust on the surface of the CCD. Image calibration is a critical step for serious astronomical photography.

In order to obtain accurate calibration information, you need to use the IMG0H temperature controller. CCD should be set in fixed temperature state. And temperature should remain the same when shooting.

The Calibration Principle of CCD Image:

Calibrated image=[(L-B)-(D-B)]/(F-B)=(L-D)/(F-B)

There, L is the actual shooting image, D represents the Dark Frame images, B represents BIAS image and F means the FLAT image.

1. Capture BIAS Image

BIAS image means exposure time of images is Zero. You need avoiding any light to enter into CCD Sensor when you shoot image. So you have to cover the lens cap of camera.

Set Exposure Time to 0, and then use the low speed to shoot many (10 -50 sheets) BIAS image. Save and overlap them .Use the function of average overlapping, do not match with position to get one BIAS Master image. Save this image.



Partial Cropped BIAS Image (B)

2. Capture DARK Image

DARK Image means the image which of the exposure time is the same as the time it took officially. You have to avoid any light enter into CCD sensor. Therefore you have to cover the lens lid.

The exposure time should be set the same with shooting time .and then use the low speed

and mode 1 * 1 to shoot about (10 -50 sheets) BIAS image. Save and overlay these images to form a Dark Master image. Save the image.



Partial Cropped DARK Image (D)



DARK image which be calibrated by BIAS Field (D-B)

3. Capture FLAT Image

FLAT image can be used to rectify the problem of the center light but the edge dark which caused by the vignette of optical system. It also can be corrected the problem due to some small dust on the CCD sensor glass surface.

Flat-field calibration method is this: you need uniform luminous lightbox. The lightbox will be placed in front of the telescope. You would set the appropriate exposure time, then continuous shoot 10-50 frame flat-field images. Save and overlay these images to form a FLAT Master image, save the image.

To obtain an accurate flat-field calibration, Please note the following matters:

You have to take immediately flat-field images before the shooting or after finishing shooting. Like do this in order to avoid dismantling the device, dust on CCD surface and vibration of CCD cause the change of location. The scope of exposure is better for 30% of the maximum dynamic range , which means you have gotten 20000-30000 pixel of flat-field image.

Images of BIAS Master, DARK Master and FLAT Master will be calibration data as image post-processing of the captured images.

Guiding by using IMGOH (for astronomic photography)

IMG0H contains a guiding spot, it can be used as a guiding CCD with ASCOM. IMG0H uses 1*1 bin and normal download speed default.

- 1. Guiding by using IMG0H in MaxIm DL
- (1) Download the newest ASCOM software in http://ascom-standards.org/.
- (2) Install the ASCOM platform software.
- (3) Install the IMG0H driver and the ASCOM plug-in for IMG0H.
- (4) Connect IMG0H and computer with the guide cable.
- (5) Run MaxIm DL, click the camera control button (1), generally, it uses Camera2 to guide. In the camera2's

Setup window, click Setup Camera-Camera Model-ASCOM-Advanced-IMG0H/L/X StarSenseSci -Properties, in the properties window, set the gain and the offset and so on. Click OK to back the Camera

Control window, click the Connect button.

- (6) In the Camera Control window, choose the Guide option group.
- (7) Set expose time in Seconds textbox. The unit is second.
- (8) Click Settings, open the Guider Settings window, choose Settings-Exposure Settings-Reset, reset the image area to the largest. Click OK.
- (9) Choose Expose option group, click Start button to take an image.
- (10) Adjust the Screen Stretch tool to adjust the luminance.
- (11) Click the Setting button again, open the Guider Setting window, select an area in the image, the area is the guide area you will use.
- (12) Choose Expose option group, click the Start button to take an image. The image is the selected area.
- (13) Find a star in the image, select it by dragging.
- (14) Click Calibrate button, to calibrate the equatorial mount.
- (15) After calibration, choose Options-No Calibration.
- (16) Choose Track option group, click Start button to start guiding. When guiding, the 4 LEDs on the back of IMG0H will on, they are the 4 guiding directions.
- (17) You can watch the guiding curves by clicking the graph button.
- 2. Guiding by using IMG0H in PHD
- (1) Download the newest ASCOM software in http://ascom-standards.org/.
- (2) Install the ASCOM platform software.
- (3) Install the IMG0H driver and the ASCOM plug-in for IMG0H.
- (4) Connect IMG0H and computer with the guide cable.
- (5) Run PHD, choose Connect to Camera ()-ASCOM v5 camera, click OK to watch ASCOM Camera Chooser window, choose IMG0H/L/X StarSenseSci, then click Properties button, set GAIN and so on. Click

OK to come back.

- (6) Choose Mount-On Camera, then click Connect to telescope (
- (7) Click button, start exposing. At the right of the button, you can change the expose time with the Pull-

Down Menu, and adjust the screen luminance with the Screen Gamma slider.

- (8) Find a star in the realtime video, click it, PHD will choose the star by a green square frame.
- (9) Click to start guiding. When guiding, the 4 LEDs on the back of IMG0H will on, they are the 4 guiding directions.
- (10) You can watch the guiding curves by choosing Tools-Enable Graph.

Parameter

IMG0H CCD Camera Parameter

CCD sensor	SONY Super EXVIEW HAD CCD ICX618
CCD size	1/4inch
Effective Image Area	4.46mm*3.80mm
Effective pixel	659*494
Pixel size	5.6µm*5.6µm
CCD readout Type	Progressive Scan
Full Well	35Ke-
Peak QE	68%
Anti Blooming Gate	Yes, -110dB
Capture Download Speed	640*480 53FPS @ 8bit
	640*480 30FPS @ 14bit
	500*300 78FPS @ 8bit
Readout speed	24Mpixel/s (high speed) 12Mpixel/s (low speed)
Readout Noise	Typical 8e-
ADC	14bit
ADC (color version)	42bit (14bit*R,G,B)
Cooling	single stage TEC
Maximum Delta T	30 degree below ambient
Power	10W
Input voltage	DC12V (Input to DC201 adapter)
	Safe Range (11V-13.5V)
Interface	Industrial C-mount
	NIKON & CANON lens adapter optional
Weight (Camera body only, without DC201 and cables)	267g
Camera size	See mechanical dimensions
Trigger (optional)	Trigger input port 1
	Expose signal output port 1
	Guide signal output port 1

Spectral Sensitivity Characteristics (excludes lens characteristics and light source characteristics)



17