



Illustrated Parts List

Model Series

12S900

TYPE NUMBERS
0100 through 2732.

TABLE OF CONTENTS

Air Cleaner	8
Alternator	11
Blower Housing	5
Camshaft	2
Carburetor	9
Carburetor Overhaul Kit	9
Controls	10
Covers/Guards	5
Crankshaft	2
Cylinder	2
Cylinder Head	3
Electric Starter	11
Exhaust System	7
Flywheel	5
Fuel Supply	6
Gasket Set - Engine	4
Gasket Set - Valve	3
Governor Spring	10
Ignition	11
Lubrication	6
Operator's Manual	2
Piston/Rings/Connecting Rod	2
Rewind Starter	5
Sump	4
Thermostat	10
Valves	3
Warning Label	2

Not for reproduction



PRINTED IN U.S.A.

COPYRIGHT by BRIGGS & STRATTON CORPORATION
All rights reserved. No part of this material may be reproduced or transmitted, in any form or by any means, electronic or mechanical, including photocopying, recording or by any information storage and retrieval system, without permission in writing from Briggs & Stratton Corporation.

 
 

 
 
 
 
1319 WARNING LABEL

REQUIRED when replacing parts with warning labels affixed.


1036 EMISSIONS LABEL

1058 OPERATOR'S MANUAL

1330 REPAIR MANUAL

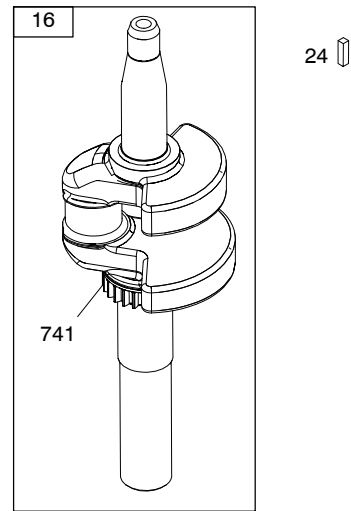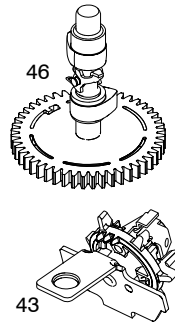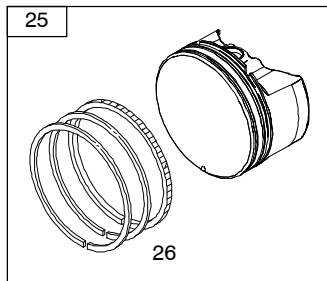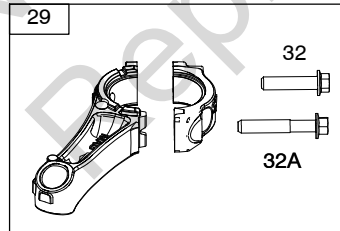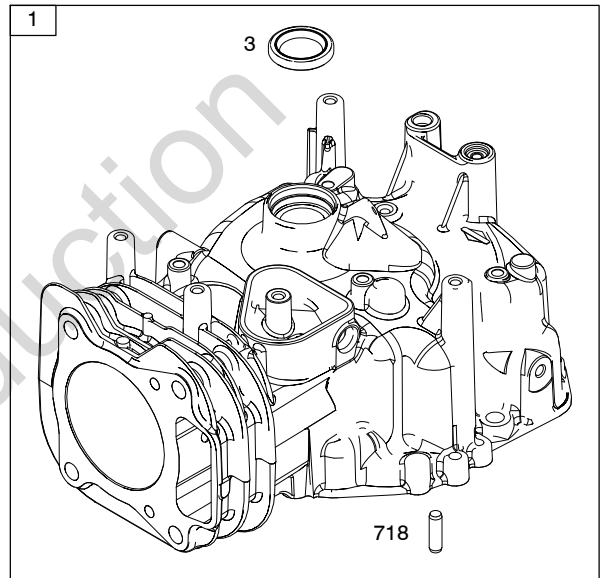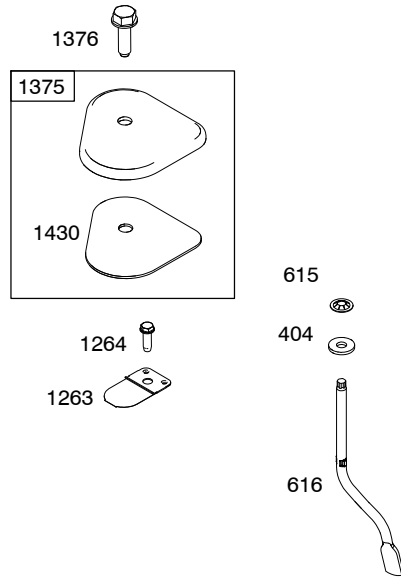


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

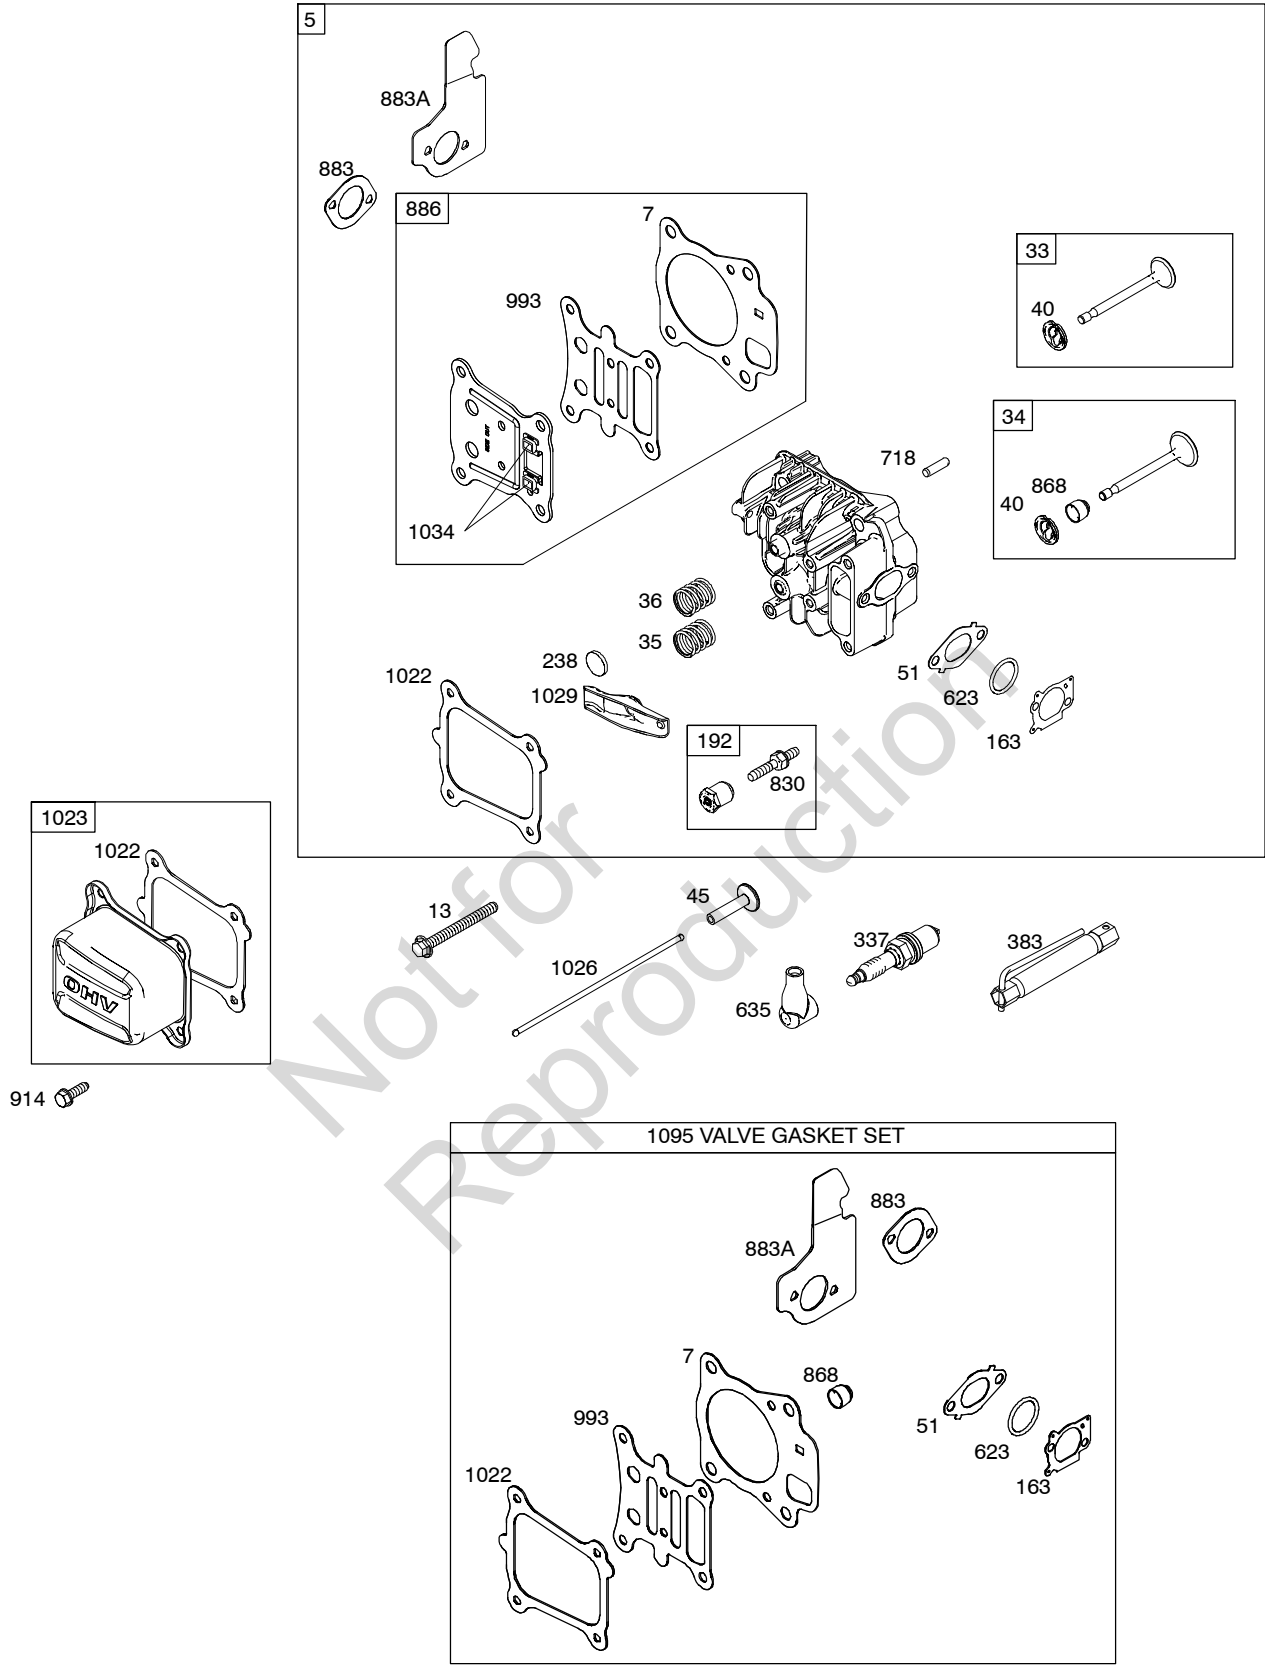 






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

12S900

 
718 

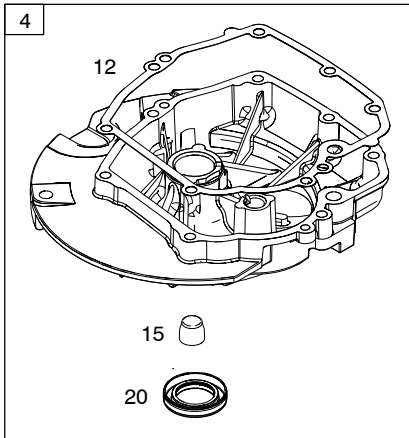






718 

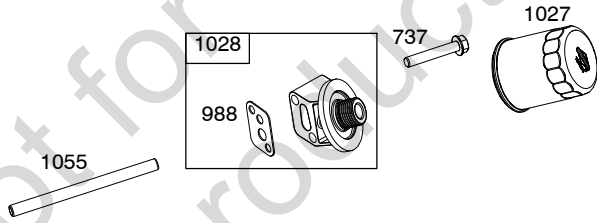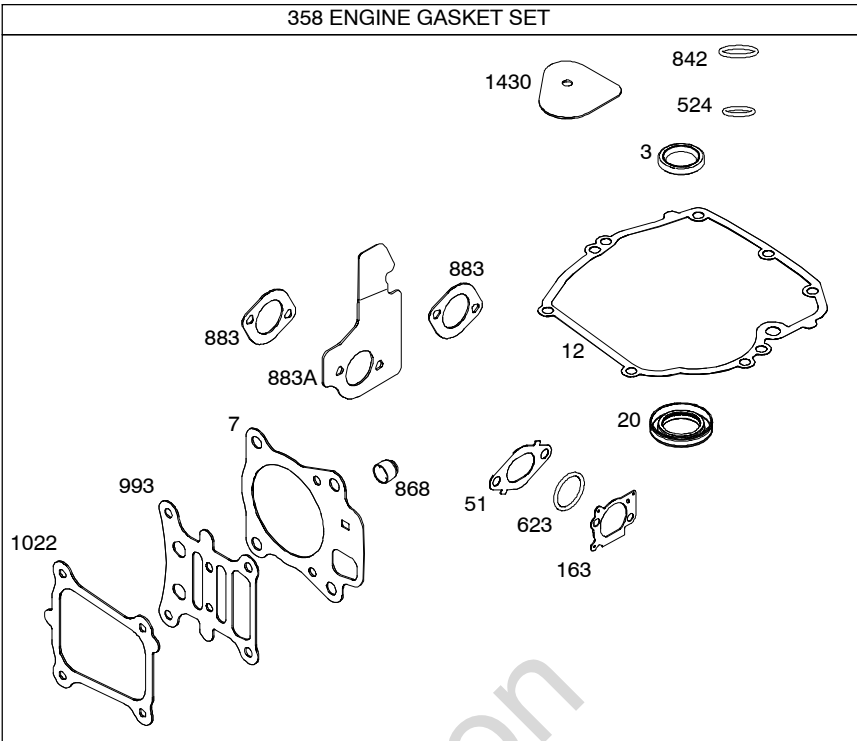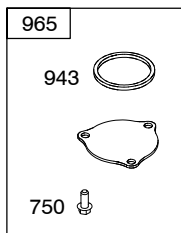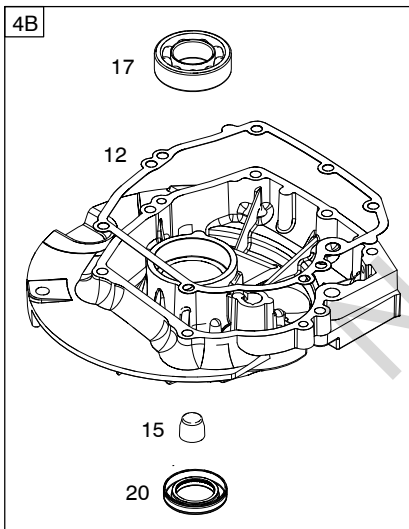     


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

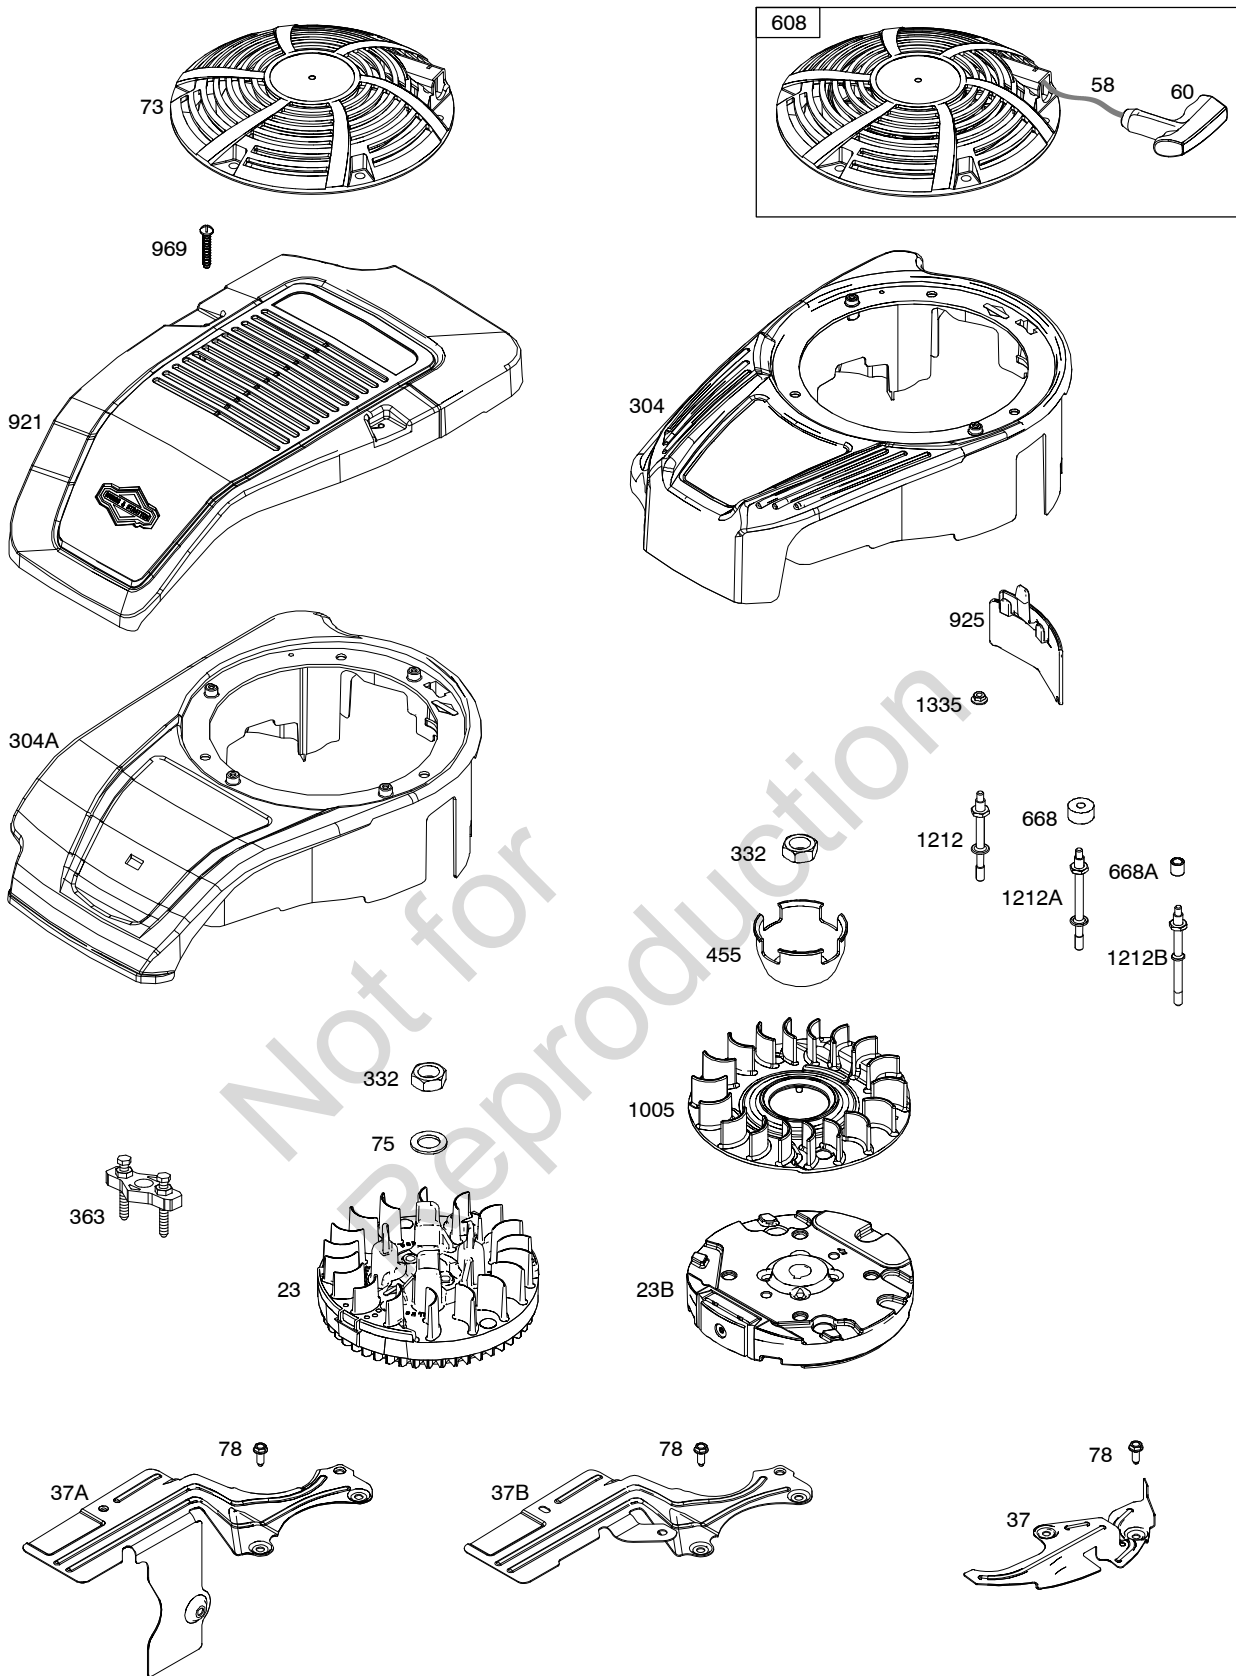 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

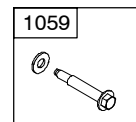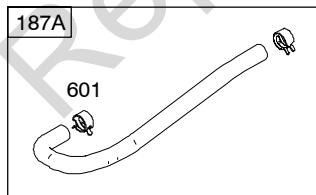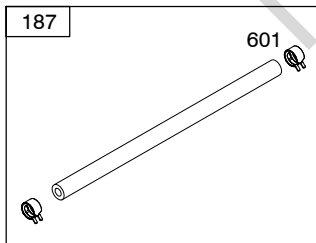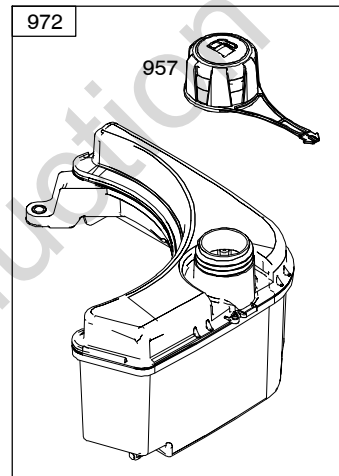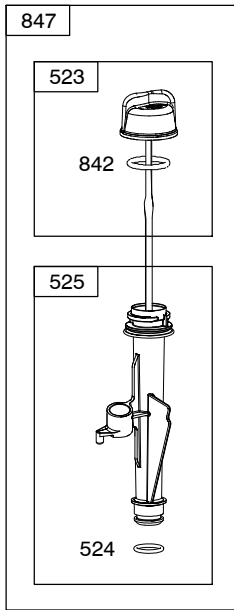     


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

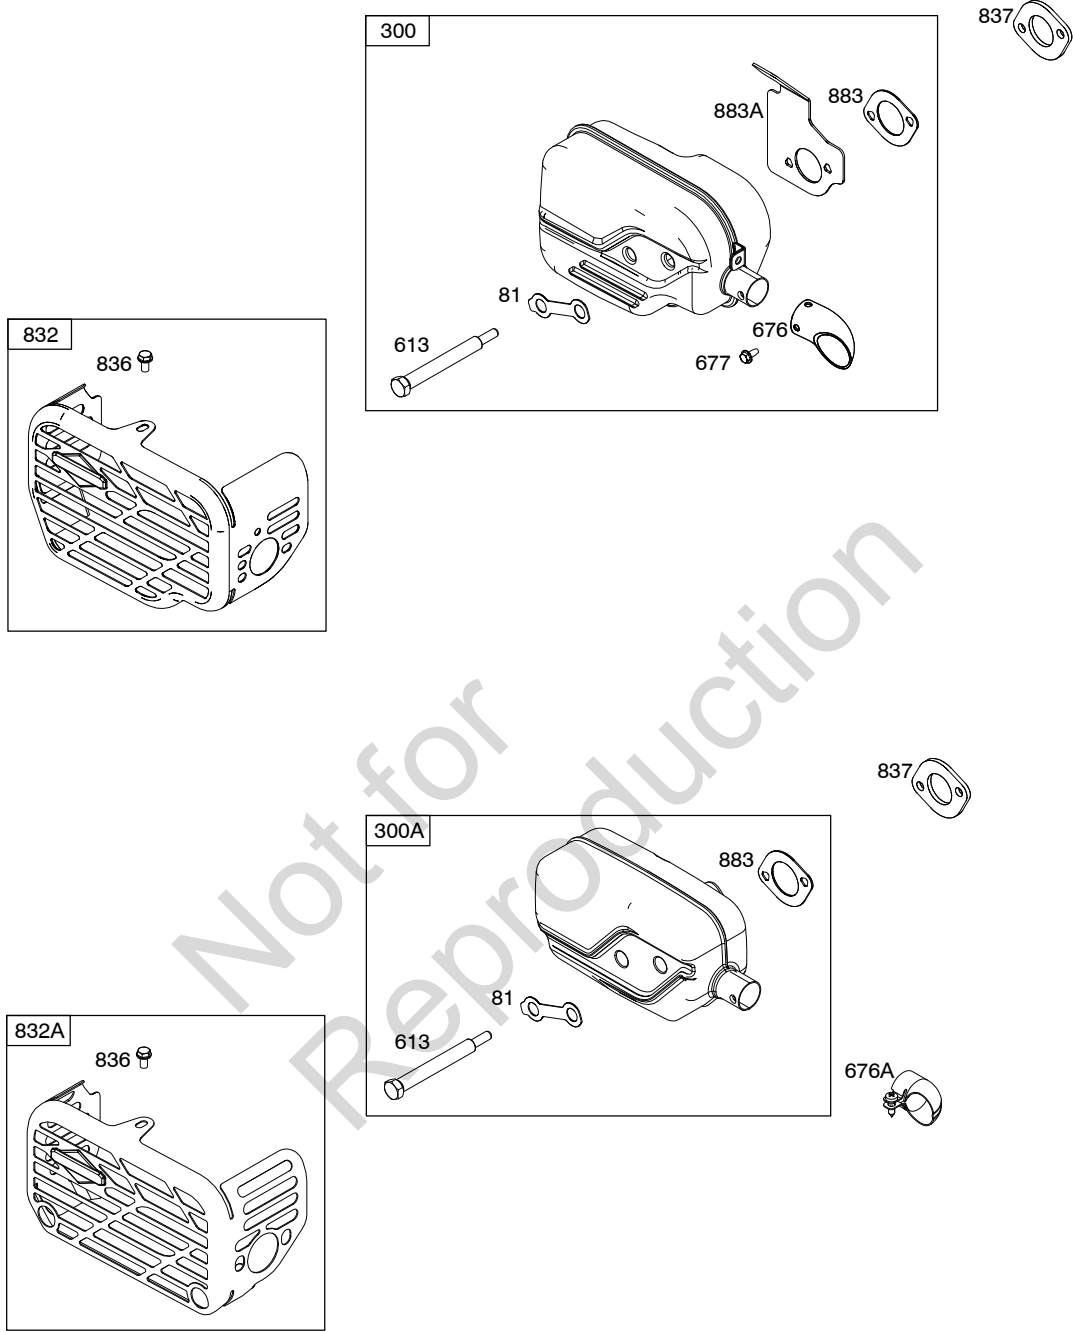 






Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

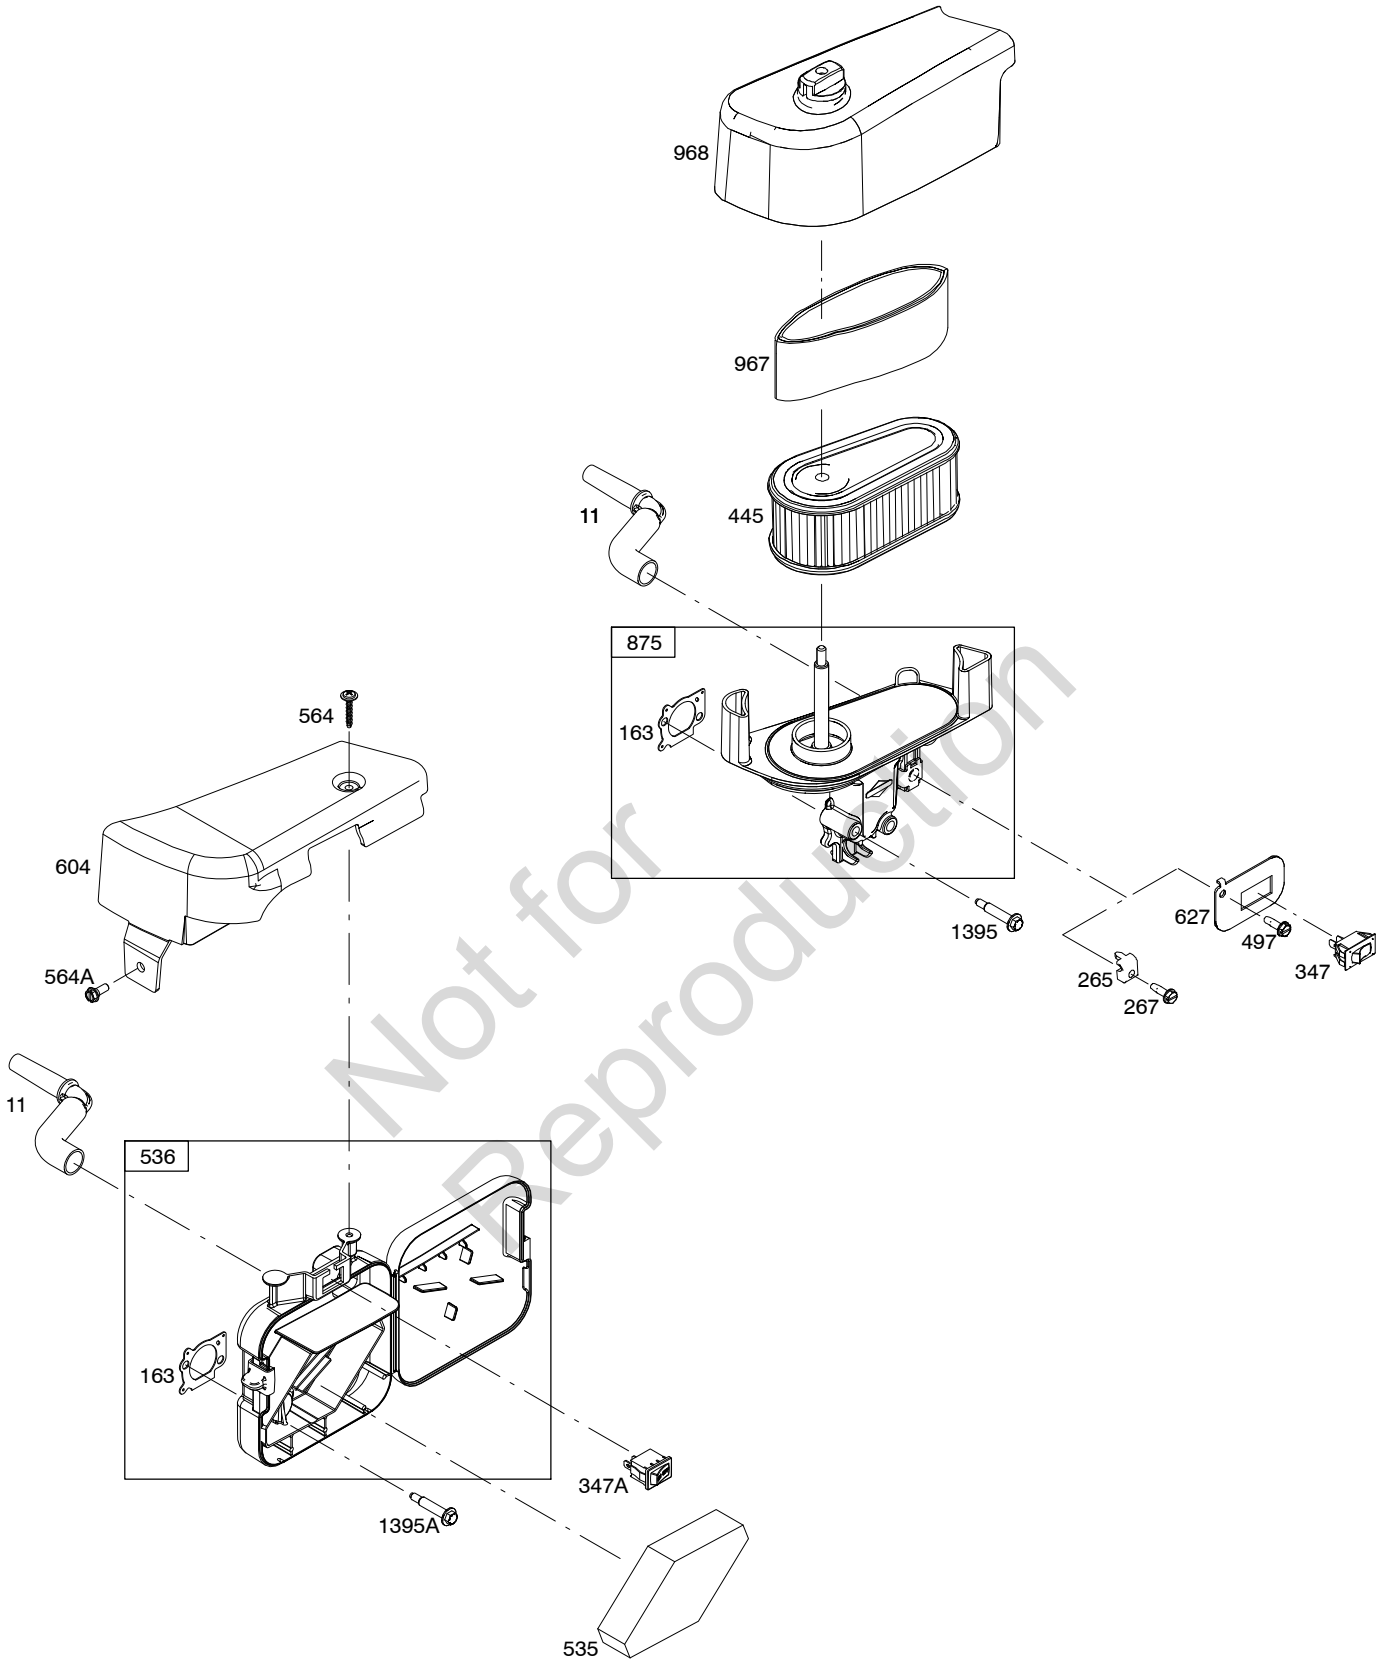 


Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

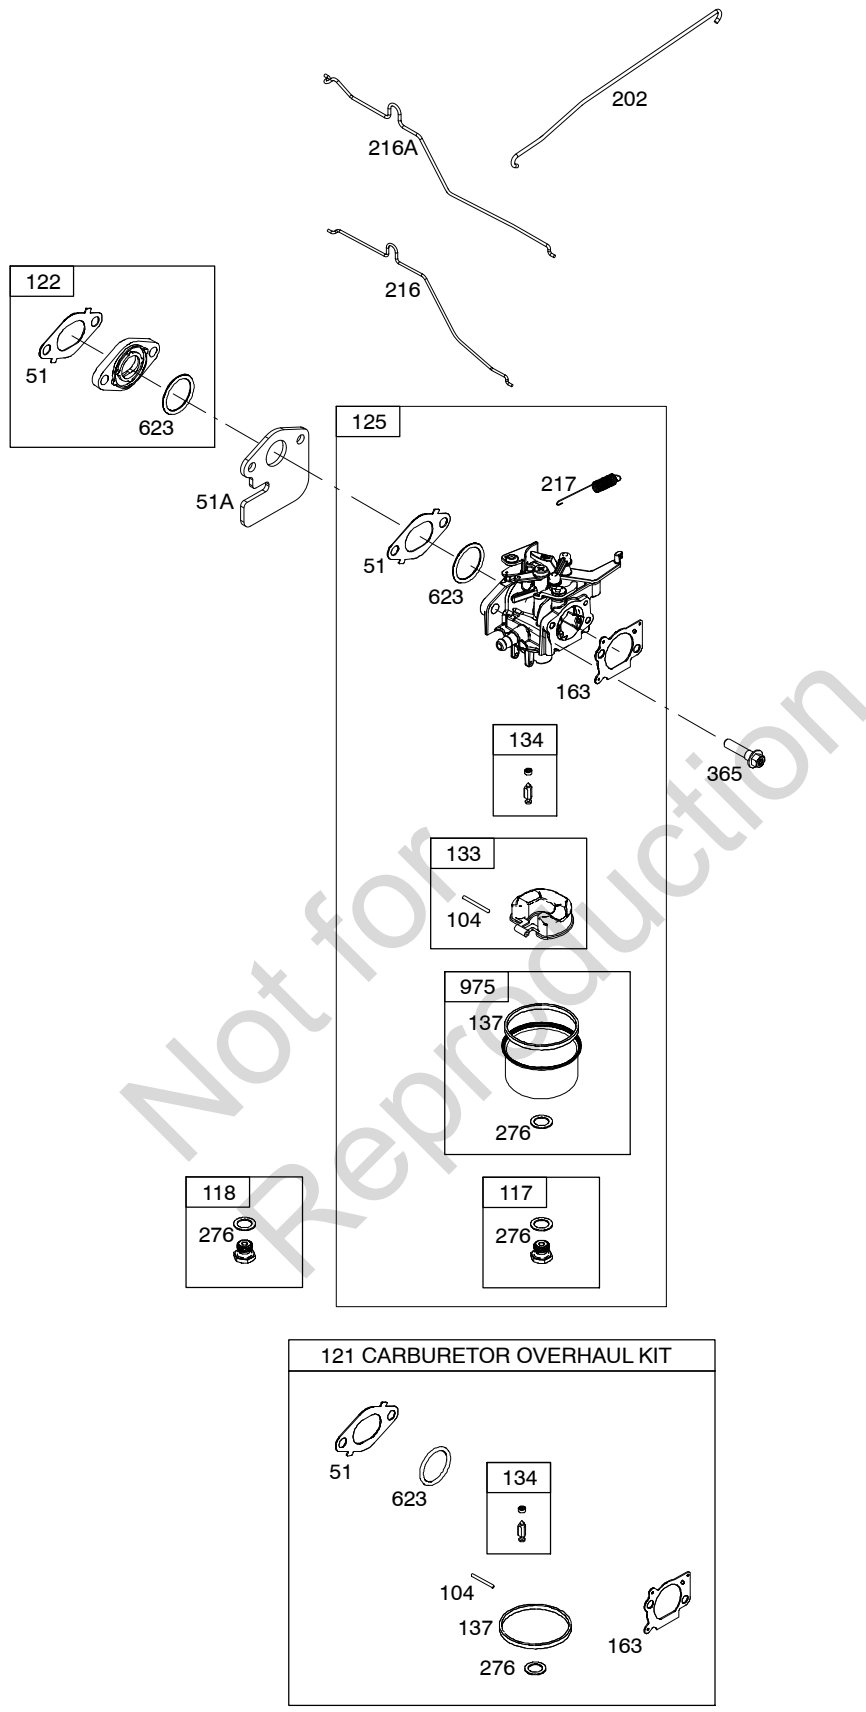 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

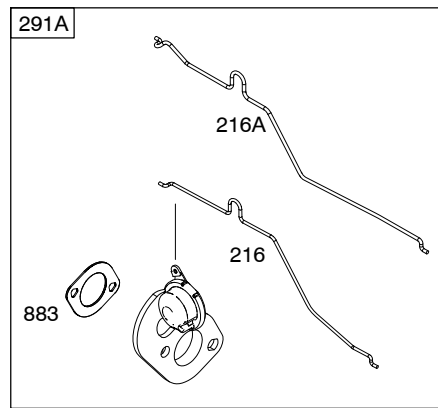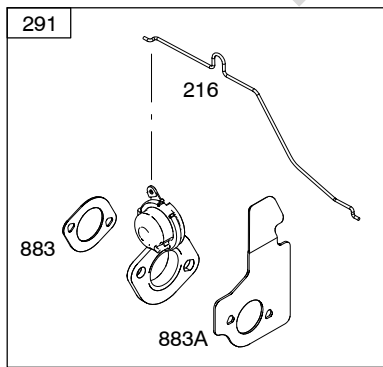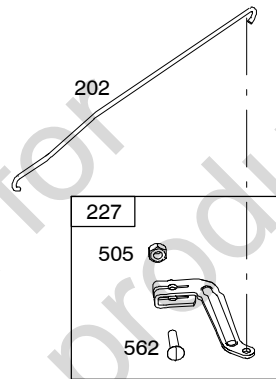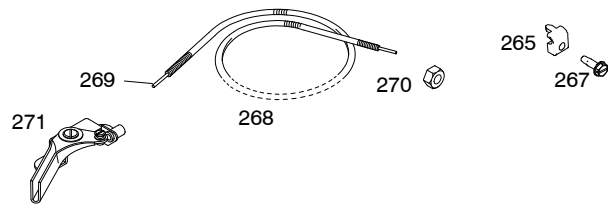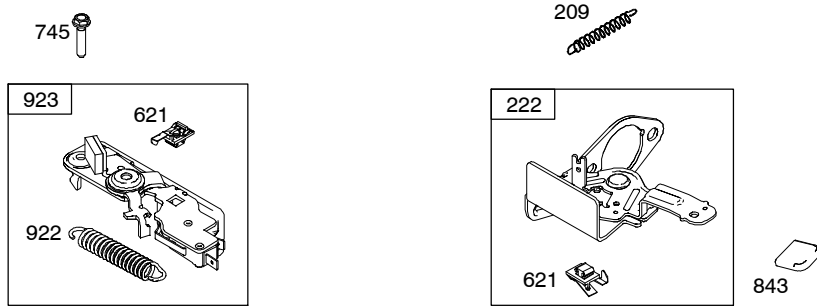     

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

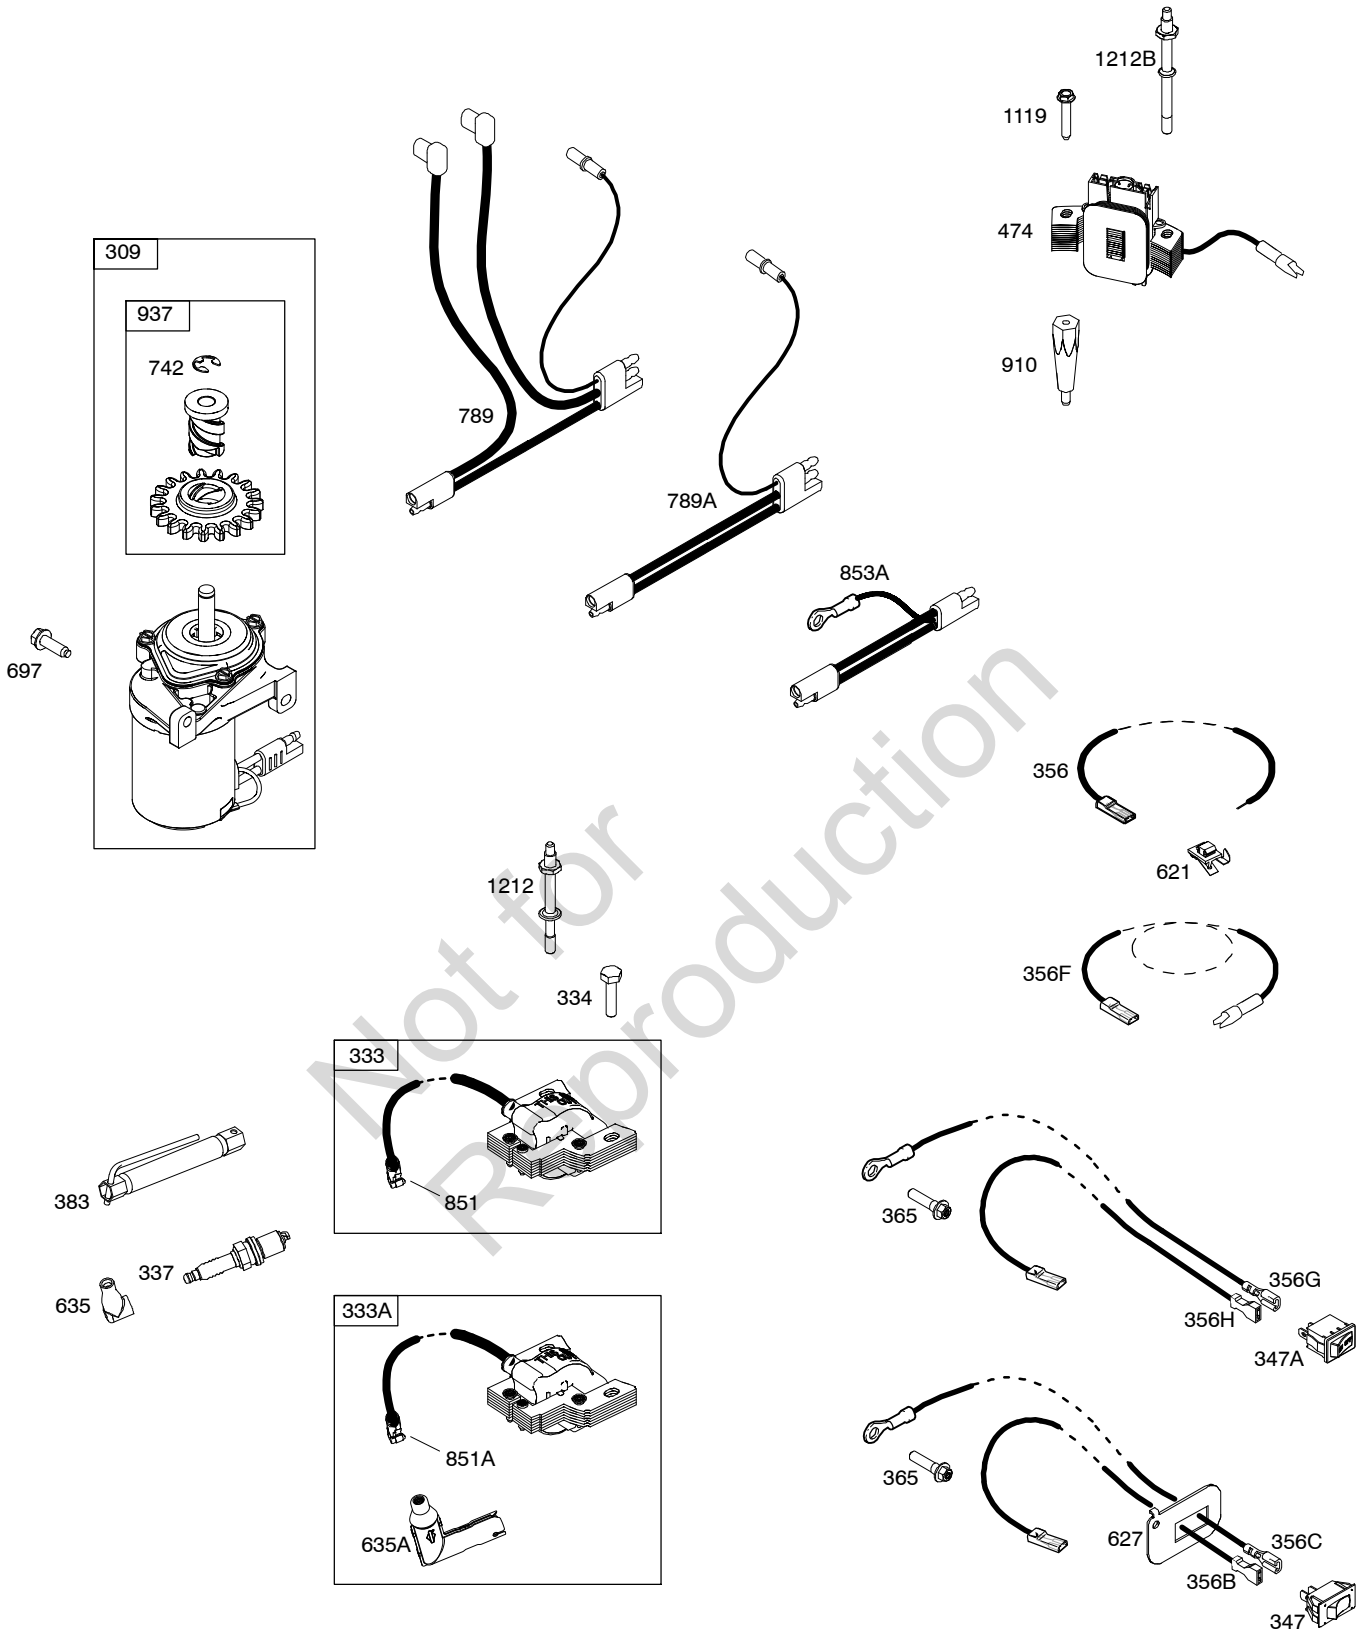 

Illustrations cover a range of engines. Parts shown without text may not be used on your specific engine.

12S900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
1	798947	Cylinder Assembly	16	796467	Crankshaft	23	796619	Flywheel
3	299819S	Seal-Oil (Magneto Side)			Used on Type No(s). 0123, 0139, 0142, 0143, 0145, 0148, 1411, 1463, 1473, 2139, 2411, 2463.			(Aluminum) Used on Type No(s). 0100, 0124, 0126, 0127, 0129, 0132, 0134, 0135, 0136, 0137, 0140, 0141, 0144, 0146, 0149, 0150, 0152, 0153, 0154, 0156, 0161, 0162, 0707, 0732, 1257, 1368, 1369, 1563, 1564, 1567, 2127, 2129, 2141, 2144, 2145, 2150, 2732.
4	493279	Sump-Engine			----- Note -----			----- Note -----
		498983 Sump-Engine Used on Type No(s). 0121, 0122, 0123, 0151.			796468 Crankshaft Used on Type No(s). 0124, 0126, 0127, 0129, 0132, 0134, 0136, 0137, 0140, 0141, 0144, 0146, 0149, 0152, 0153, 0154, 0156, 0161, 0162, 1257, 1368, 1369, 1563, 1564, 1567, 2127, 2129, 2141, 2144, 2145.			797386 Flywheel (Zinc) Used on Type No(s). 0130, 1411, 1463, 1473, 2411, 2463.
4B	692509	Sump-Engine Used on Type No(s). 0132, 0134, 0136, 0137, 0144, 0146, 0149, 0152, 0153, 0154, 0156, 0161, 0162, 2144, 2145.			796469 Crankshaft Used on Type No(s). 0100, 0121, 0122, 0128, 0150, 0160, 0707, 0732, 2128, 2150, 2732.	23B	796623	Flywheel (Cast Iron) Used on Type No(s). 0121, 0122, 0123, 0128, 0139, 0142, 0143, 0145, 0148, 0151, 0155, 0158, 0159, 0160, 0163, 2128, 2139.
5	796471	Head-Cylinder			796924 Crankshaft Used on Type No(s). 0151.			----- Note -----
7	796475	Gasket-Cylinder Head			797107 Crankshaft Used on Type No(s). 0130.			797303 Piston Assembly (.020" Oversize)
11	796478	Tube-Breather			797909 Crankshaft Used on Type No(s). 0135.	24	222698S	Key-Flywheel
12	692232	Gasket-Crankcase			799337 Crankshaft Used on Type No(s). 0155, 0158, 0159, 0163.	25	797302	Piston Assembly (Standard)
13	793451	Screw (Cylinder Head)						----- Note -----
15	691680	Plug-Oil Drain (Square Socket)	17	692517	Bearing-Ball			
			20	399781S	Seal-Oil (PTO Side)			
			22	691092	Screw (Crankcase Cover/Sump)			

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
26	797304	Ring Set (Standard) (Used After Code Date 09041900). ----- Note ----- 796641 Ring Set (Standard) (Used Before Code Date 09042000). 797305 Ring Set (.020" Oversize) (Used After Code Date 09041900). 796642 Ring Set (.020" Oversize) (Used Before Code Date 09042000).	37A	796534	Guard-Flywheel Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0128, 0129, 0135, 0137, 0139, 0140, 0141, 0142, 0143, 0145, 0148, 0150, 0151, 1368. ----- Note ----- 796535 Guard- Flywheel Used on Type No(s). 0127, 0130, 0132, 0134, 0136, 0144, 0146, 0149, 0707, 0732, 1257, 1369, 1411, 1463, 1473.	40	692194	Retainer-Valve
27	691588	Lock-Piston Pin	37B	799155	Guard-Flywheel Used on Type No(s). 0152, 0154, 0155, 0158, 0159, 0160, 0163, 1563, 1567, 2128, 2129, 2139, 2150. ----- Note ----- 799242 Guard- Flywheel Used on Type No(s). 0153, 0156, 0161, 0162, 1564, 2127, 2141, 2144, 2145, 2411, 2463, 2732. 799242 Guard- Flywheel (Required for use with replacement Starter Motor Ref# 309 799241) Used on Type No(s). 0127, 0130, 0132, 0134, 0136, 0144, 0146, 0149, 0707, 0732, 1257, 1369, 1411, 1463, 1473.	43	796650	Slinger-Governor/Oil ----- Note ----- 796525 Slinger- Governor/Oil Used on Type No(s). 0132, 0134, 0136, 0137, 0144, 0146, 0149, 0152, 0153, 0154, 0156, 0161, 0162, 2144, 2145.
28	298909	Pin-Piston				45	690977	Tappet-Valve
29	796470	Rod-Connecting				46	694039	Camshaft ----- Note ----- 694040 Camshaft Used on Type No(s). 0132, 0134, 0136, 0137, 0144, 0146, 0149, 0152, 0153, 0154, 0156, 0161, 0162, 2144, 2145.
32	691664	Screw (Connecting Rod)				51	796596	Gasket-Intake
32A	695759	Screw (Connecting Rod)				51A	590398	Gasket-Intake
33	499642	Valve-Exhaust				58	697316	Rope-Starter (Cut to Required Length)
34	795443	Valve-Intake				60	281434S	Grip-Starter Rope
35	691304	Spring-Valve (Intake)				73	798337	Screen-Rotating Used on Type No(s). 0141, 2141.
36	691304	Spring-Valve (Exhaust)				75	691736	Washer (Flywheel)
37	796536	Guard-Flywheel Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0150, 0151, 0152, 0153, 0154, 0155, 0156, 0158, 0159, 0160, 0161, 0162, 0163, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463, 2732.				78	793480	Screw (Flywheel Guard)

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.

12S900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
81	691740	Lock-Muffler Screw	118	494870	Jet-Main (High Altitude)	122	796595	Spacer-Carburetor
104	797622	Pin-Float Hinge			Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0150, 0151, 0152, 0153, 0154, 0156, 0161, 0162, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463, 2732.	125	796608	Carburetor Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0152, 0153, 0154, 0156, 0161, 0162, 0150, 0151, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463, 2732.
117	697355	Jet-Main (Standard) Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0139, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0150, 0151, 0152, 0153, 0154, 0156, 0161, 0162, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463, 2732.			----- Note ----- 799604 Jet-Main (High Altitude) Used on Type No(s). 0155, 0158, 0159, 0160, 0163.			----- Note ----- 797736 Carburetor Used on Type No(s). 0139, 2139. 799027 Carburetor Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
		----- Note ----- 799178 Jet-Main (Standard) Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	121	796612	Kit-Carburetor Overhaul ----- Note ----- 799235 Kit-Carburetor Overhaul Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	133	398187	Float-Carburetor ----- Note ----- 797626 Float-Carburetor Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
						134	398188	Kit-Needle/Seat ----- Note ----- 799177 Kit-Needle/Seat Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
						137	796610	Gasket-Float Bowl ----- Note ----- 797625 Gasket-Float Bowl Used on Type No(s). 0155, 0158, 0159, 0160, 0163.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10054-14 Assemblies include all parts shown in frames. 06/01/2011

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
163	691894	Gasket-Air Cleaner	216	796485	Link-Choke	265	690798	Clamp-Casing
187	791766	Line-Fuel (Cut To Required Length)			Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0150, 0151, 0152, 0153, 0154, 0156, 0161, 0162, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2127, 2128, 2129, 2141, 2144, 2145, 2150, 2411, 2463, 2732.			----- Note ----- 691024 Clamp-Casing Used on Type No(s). 0130.
187A	796491	Line-Fuel (Formed Hose)				267	691044	Screw (Casing Clamp)
192	796631	Adjuster-Rocker Arm				268	691025	Casing-Control Wire (Cut To Required Length)
202	796657	Link-Mechanical Governor				269	691026	Wire-Control (Cut To Required Length)
209	793604	Spring-Governor Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0150, 0151, 0155, 0158, 0159, 0163, 2150.				270	691027	Nut (Control Wire Casing)
		----- Note ----- 796483 Spring-Governor Used on Type No(s). 0124, 0130, 0135, 0136, 0146, 0161.	216A	798944	Link-Choke Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	271	691028	Lever-Control
		796484 Spring-Governor Used on Type No(s). 0100, 0128, 0132, 0134, 0141, 0144, 0149, 0156, 0162, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473, 1563, 1564, 1567, 2128, 2141, 2144, 2145, 2411, 2463, 2732.	217	798900	Spring-Choke Return ----- Note ----- 799179 Spring-Choke Return Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	276	271716	Washer-Sealing ----- Note ----- 797632 Washer-Sealing Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
		796926 Spring-Governor Used on Type No(s). 0126, 0127, 0129, 0137, 0139, 0140, 0152, 0153, 0154, 0160, 2127, 2129, 2139.	222	796482	Bracket-Control (Manual Friction, Remote, & Fixed Speed Control)	291	796486	Thermostat Used on Type No(s). 0100, 0121, 0122, 0123, 0124, 0126, 0127, 0128, 0129, 0130, 0132, 0134, 0135, 0136, 0137, 0140, 0141, 0142, 0143, 0144, 0145, 0146, 0148, 0149, 0150, 0151, 0707, 0732, 1257, 1368, 1369, 1411, 1463, 1473.
			227	796487	Lever-Governor Control			
			238	691300	Cap-Valve			
			240	298090S	Filter-Fuel Used on Type No(s). 0130, 1567.			

12S900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
291A	798938	Thermostat Used on Type No(s). 0152, 0153, 0154, 0155, 0156, 0158, 0159, 0160, 0161, 0162, 0163, 1563, 1564, 1567, 2127, 2128, 2129, 2141, 2144, 2145, 2150, 2411, 2463, 2732.	304	796692	Housing-Blower (Rewind Start) ----- Note ----- 796693 Housing- Blower (Electric Start) Used on Type No(s). 0127, 0132, 0134, 0136, 0144, 0146, 0149, 0707, 0732, 1257, 1369.	304A	798333	Housing- Blower (Electric Start) ----- Note ----- 799249 Housing- Blower (Electric Start) Used on Type No(s). 2141, 2411, 2463. 799249 Housing- Blower (Electric Start) (Required for use with replacement Starter Motor Ref# 309 799241) Used on Type No(s). 0141, 1411, 1463, 1473.
300	796495	Muffler-Exhaust		797384	Housing- Blower (Electric Start) Used on Type No(s). 0130.	309	799241	Motor-Starter Used on Type No(s). 0153, 0156, 0161, 0162, 1564, 2127, 2141, 2144, 2145, 2411, 2463, 2732. ----- Note ----- 799241 Motor-Starter (Requires Blower Housing Ref# 304 798945 and Flywheel Guard Ref# 37B 799242) Used on Type No(s). 0127, 0132, 0134, 0136, 0144, 0146, 0149, 0707, 0732, 1257, 1369.
300A	798940	Muffler-Exhaust Used on Type No(s). 0152, 0153, 0154, 0155, 0156, 0158, 0159, 0160, 0161, 0162, 0163, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463, 2732.		798945	Housing- Blower (Electric Start) Used on Type No(s). 0153, 0156, 0161, 0162, 1564, 2127, 2144, 2145, 2732.			799241 Motor-Starter (Requires Blower Housing Ref# 304 798946 and Flywheel Guard Ref# 37B 799242) Used on Type No(s). 0130. 799241 Motor-Starter (Requires Blower Housing Ref# 304A 799249 and Flywheel Guard Ref# 37B 799242) Used on Type No(s). 0141, 1411, 1463, 1473.
				798946	Housing- Blower (Required for use with replacement Starter Motor Ref# 309 799241) (Electric Start) Used on Type No(s). 0130.	332	690662	Nut (Flywheel)

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
333	796499	Armature-Magneto ----- Note ----- 796500 Armature-Magneto Used on Type No(s). 0121, 0122, 0123, 0128, 0130, 0139, 0142, 0143, 0145, 0148, 0151, 0155, 0158, 0159, 0160, 0163, 1411, 1463, 1473, 2128, 2139, 2463.	356	692390	Wire-Stop Used on Type No(s). 0100, 0124, 0126, 0127, 0128, 0129, 0132, 0134, 0135, 0136, 0137, 0139, 0140, 0141, 0144, 0146, 0149, 0150, 0152, 0153, 0154, 0156, 0161, 0162, 0707, 0732, 1257, 1368, 1369, 1563, 1564, 1567, 2127, 2128, 2129, 2139, 2141, 2144, 2145, 2150, 2732.	445	795066	Filter-Air Cleaner Cartridge
333A	799645	Armature-Magneto Used on Type No(s). 1563, 1564, 1567.	356A	797743	Wire-Stop Used on Type No(s). 0130.	455	796615	Cup-Flywheel
334	793454	Screw (Magneto Armature)	356B	692602	Wire-Stop Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0151.	474	794103	Alternator Used on Type No(s). 0127, 0130, 0141, 0153, 1411, 1463, 1473, 2127, 2141, 2411, 2463.
337	692051	Plug-Spark Used on Type No(s). 0100, 0121, 0122, 0123, 0126, 0127, 0129, 0132, 0139, 0141, 0142, 0143, 0144, 0145, 0150, 0151, 0152, 0153, 0153, 0155, 0158, 0159, 0707, 0732, 1257, 1411, 1563, 1564, 1567, 2127, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2732.	356C	695630	Wire-Stop Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0151.	497	691044	Screw (Stopswitch Bracket) Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0151.
		----- Note ----- 692720 Plug-Spark Used on Type No(s). 0124, 0128, 0130, 0134, 0135, 0136, 0137, 0140, 0146, 0148, 0149, 0154, 0156, 0160, 0161, 0162, 0163, 1368, 1369, 1463, 1473, 2128, 2463.	356F	798332	Wire-Stop Used on Type No(s). 0130, 1411, 1463, 1473, 2411, 2463.	505	793515	Nut (Governor Control Lever)
347	795333	Switch-Rocker Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0151.	356G	798942	Wire-Stop Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	523	796503	Dipstick
347A	798939	Switch-Rocker Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	356H	798943	Wire-Stop Used on Type No(s). 0155, 0158, 0159, 0160, 0163.	524	692296	Seal-Dipstick Tube
			358	799495	Gasket Set-Engine	525	796502	Tube-Dipstick
			363	19069	Puller-Flywheel	535	797301	Filter-Air Cleaner Foam Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
			365	793458	Screw (Carburetor)	536	799025	Cleaner-Air Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
			383	19576S	Wrench-Spark Plug	562	793514	Bolt (Governor-Control Lever)
			404	690272	Washer (Governor Crank)	564	690351	Screw (Control Cover) Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
						564A	799026	Screw (Control Cover) Used on Type No(s). 0155, 0158, 0159, 0160, 0163.
						601	791850	Clamp-Hose
						604	799024	Cover-Control Used on Type No(s). 0155, 0158, 0159, 0160, 0163.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10054-17 Assemblies include all parts shown in frames. 06/01/2011

12S900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
608	796497	Starter-Rewind	789A	696546	Harness-Wiring	922	692135	Spring-Brake
613	796496	Screw (Muffler)			Used on Type No(s). 0130, 1411, 1473, 2411.	923	796635	Brake
615	796674	Retainer-Governor Shaft	830	796472	Stud-Rocker Arm	925	796531	Cover-Linkage
616	798327	Crank-Governor	832	796494	Guard-Muffler	937	799427	Spline-Starter
621	692310	Switch-Stop	832A	798951	Guard-Muffler			Used on Type No(s). 0127, 0130, 0132, 0134, 0136, 0141, 0144, 0146, 0149, 0707, 0732, 1257, 1369, 1411, 1463, 1473.
623	793628	Seal-O Ring (Carburetor Spacer)			Used on Type No(s). 0152, 0153, 0154, 0155, 0156, 0158, 0159, 0161, 0162, 0163, 1563, 1564, 2127, 2129, 2139, 2141, 2144, 2145, 2150, 2411, 2463.			----- Note ----- 799420 Spline-Starter
627	796702	Bracket-Stopswitch Used on Type No(s). 0121, 0122, 0123, 0142, 0143, 0145, 0148, 0151.						Used on Type No(s). 0153, 0156, 0161, 0162, 1564, 2127, 2141, 2144, 2145, 2411, 2463, 2732.
635	66538S	Boot-Spark Plug	836	793500	Screw (Muffler Guard)	943	692514	Seal-O Ring (Oil Pump Cover)
635A	799646	Boot-Spark Plug Used on Type No(s). 1563, 1564, 1567.	837	797735	Spacer-Muffler Used on Type No(s). 0139, 2139.	957	796577	Cap-Fuel Tank (EVAP)
668	797373	Spacer Used on Type No(s). 0130.	842	691031	Seal-O Ring (Dipstick Tube)	965	692507	Cover-Oil Pump
668A	797383	Spacer Used on Type No(s). 0130.	843	691884	Sleeve-Lever	967	796254	Filter-Pre Cleaner
670	793485	Spacer-Fuel Tank	847	796501	Dipstick/Tube Assembly	968	796493	Cover-Air Cleaner
676	692010	Deflector-Muffler	851	493880S	Terminal-Spark Plug	969	690700	Screw (Blower Housing Cover)
676A	799187	Deflector-Muffler Used on Type No(s). 0160, 2128, 2150.	851A	692424	Terminal-Spark Plug			Used on Type No(s). 0141, 2141.
677	690661	Screw (Muffler Deflector)	853A	695897	Adapter-Wire	972	796489	Tank-Fuel (EVAP)
697	691127	Screw (Drive Cap)	868	795440	Seal-Valve			----- Note ----- 798336 Tank-Fuel (EVAP) (With Gage) Used on Type No(s). 0141, 2141.
718	690959	Pin-Locating	875	796492	Base-Air Cleaner			
737	692511	Screw (Oil Filter Adapter)	883	793497	Gasket-Exhaust			
741	795755	Gear-Timing ----- Note ----- 797521 Gear-Timing Used on Type No(s). 0155, 0158, 0159, 0163.	883A	796677	Gasket-Exhaust			
742	93941	Retainer-E Ring	886	799492	Gasket Kit-Cylinder Head Plate			
745	698557	Screw (Brake)	910	796498	Stud (Alternator)			
750	691147	Screw (Oil Pump Cover)	914	794451	Screw (Rocker Arm Cover)			
789	792685	Harness-Wiring Used on Type No(s). 0127, 0132, 0134, 0136, 0141, 0144, 0146, 0149, 0153, 0156, 0161, 0162, 0707, 0732, 1257, 1369, 1564, 2127, 2141, 2144, 2145, 2732.	921	798356	Cover-Blower Housing Used on Type No(s). 0141, 2141.	975	796611	Bowl-Float ----- Note ----- 797631 Bowl-Float Used on Type No(s). 0155, 0158, 0159, 0160, 0163.

Illustrations cover a range of engines. Parts shown without corresponding text may not be used on your specific engine.
10054-18 Assemblies include all parts shown in frames. 06/01/2011

12S900

REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION	REF. NO.	PART NO.	DESCRIPTION
988	692515	Gasket-Oil Adapter	1055	796524	Tube-Oil Pump	1319	794467	Label-Warning
993	796473	Gasket-Cylinder Head Plate	1058	279946	Manual-Operator's	1330	279000	Manual-Repair
1005	796614	Fan-Flywheel	1059	793471	Kit-Screw/Washer	1335	793481	Nut
1022	796480	Gasket-Rocker Cover	1095	799496	Gasket Set-Valve			(Blower Housing)
1023	796479	Cover-Rocker Arm	1119	794100	Screw	1375	796476	Cover-Breather/Reed
1024	692508	Pump-Oil			(Alternator)	1376	794451	Screw
1026	796481	Rod-Push	1212	796537	Stud			(Breather/Reed Cover)
1027	795990	Filter-Oil			(Blower Housing)	1395	690349	Screw
		----- Note -----	1212A	793479	Stud			(Air Cleaner Base to
		798319 Filter-Oil			(Blower Housing)	1395A	798294	Screw
		Used on Type No(s).	1212B	797002	Stud			(Air Cleaner Base to
		0156, 0161, 0162,			(Used With Alternator			Carburetor)
		2144, 2145.			Only)			Used on Type No(s).
1028	796522	Adapter-Oil Filter	1263	697124	Reed-Breather			0155, 0158, 0159,
1029	691230	Arm-Rocker	1264	793453	Screw			0160, 0163.
1034	691343	Guide-Push Rod			(Breather Reed)	1430	796477	Gasket-Breather/Reed
1036		Label-Emissions						
		(Available From A						
		Briggs & Statton						
		Authorized Dealer)						

Not for
Reproduction

Not for
Reproduction

