

# ETC<sup>®</sup> Supplement

## Eos Family v2.0.1 Supplement to Operations Manual



The following information is new for version 2.0.1. This document is supplemental to information in the Eos Titanium, Eos, and Gio v2.0 Operations Manual, Ion v2.0 Operations Manual, and Element v2.0 User Manual, and should be used in conjunction with it.

### Display Changes

Changes in this section impact the System Basics chapter and the Facepanel Shortcuts appendix.

#### Latching Data and Time

##### [Data] Key

Pressing and holding **[Data]** allows you to view the values behind any referenced or marked data. **[Data]** exposes the next lower reference level. So if you view a palette reference and press **[Data]**, the absolute data will be displayed instead. If you are viewing a preset, absolute or palette data will be displayed, depending on what is contained in the preset.

On Eos Ti, Eos, Gio, and Ion, you can lock this mode by pressing **[Shift] + [Data]**. When in display reference values mode, "Data Latched" will display in the upper left of the live display and the **[Data]** key will be lit in green on Eos Ti and Gio. To exit this mode, press **[Shift] + [Data]** again.

##### [Time] Key

 
Pressing and holding the **[Time]** (the one by **[Data]** on Eos Ti, Eos, and Gio) allows you to view discrete timing data behind any channel parameter. **[Time]** exposes channel or parameter specific timing for any channels in the current cue. The first value is the delay time. If "--" is displayed, there is no delay. The value to the right of the / is the transition time.

On Eos Ti, Eos, and Gio, you can lock this mode by pressing **[Shift] + [Time]**. When in display time mode, "Timing Latched" will display in the upper left of the live display and the **[Time]** key will be lit in green on Eos Ti and Gio. To exit this mode, press **[Shift] + [Time]** again.

On Ion, you can lock this mode by pressing **[Shift] + [Time] [Time]**. To exit this mode, press **[Shift] + [Time]**.

#### Category Time in PSD

When the **{PSD Time Countdown}** setup option (**Setup > Desk > Displays**) is enabled, each category time will individually turn gold when that timing has completed.



### Manual Control Changes

Changes in this section impact the Basic Manual Control or the Advanced Manual Control chapter.

#### Rem Dim /

Rem Dim levels can either be an absolute value, such as Full or 50%, or a proportional value, which would set the levels to a percentage value of their current levels. To use a proportional value, press **[/]** before entering the percentage value.

##### *For Example:*

Assume that channels 1 through 10 are selected and set to an intensity level of 60. Select channel 1 and dim the remaining channels.



Corporate Headquarters ■ 3031 Pleasant View Road, P.O. Box 620979, Middleton, Wisconsin 53562-0979 USA ■ Tel +608 831 4116 ■ Fax +608 836 1736  
London, UK ■ Unit 26-28, Victoria Industrial Estate, Victoria Road, London W3 6UU, UK ■ Tel +44 (0)20 8896 1000 ■ Fax +44 (0)20 8896 2000  
Rome, IT ■ Via Pieve Torina, 48, 00156 Rome, Italy ■ Tel +39 (06) 32 111 683 ■ Fax +44 (0) 20 8752 8486  
Holzkirchen, DE ■ Ohmstrasse 3, 83607 Holzkirchen, Germany ■ Tel +49 (80 24) 47 00-0 ■ Fax +49 (80 24) 47 00-3 00  
Hong Kong ■ Rm 1801, 18/F, Tower 1 Phase 1, Enterprise Square, 9 Sheung Yuet Road, Kowloon Bay, Kowloon, Hong Kong ■ Tel +852 2799 1220 ■ Fax +852 2799 9325  
Service: (Americas) [service@etcconnect.com](mailto:service@etcconnect.com) ■ (UK) [service@etcurope.com](mailto:service@etcurope.com) ■ (DE) [techserv-hoki@etcconnect.com](mailto:techserv-hoki@etcconnect.com) ■ (Asia) [service@etcasia.com](mailto:service@etcasia.com)  
Web: [www.etcconnect.com](http://www.etcconnect.com) ■ QSF 4.1.9.1 ■ Copyright © 2013 ETC. All Rights Reserved. ■ Product information and specifications subject to change.  
©4250M1211-2.0.1 ■ Rev A ■ Released 2013-06 ■ ETC intends this document to be provided in its entirety.

- **[1] [Rem Dim] [/] [5][0] [Enter]**

Channels 2 through 10 will be dimmed to 30.

### Highlight Rem Dim

To temporarily override the **{Highlight Rem Dim}** option in Setup, you can use either of the following syntax examples:

- **[channel list] [Highlight] [Rem Dim] [#] [Enter]**
- **[channel list] [Highlight] [Rem Dim] [/] [#] [Enter]**

### **[-] [Select Manual] / [-] [Select Active]**

**[-] [Select Manual]** or **[-] [Select Active]** can be used to modify channel selections. Using **[-] [Select Manual]** will select all of the channels in the list except those that have manual data. Using **[-] [Select Active]** will select all of the channels in the list except those that are active.

- **[1] [Thru] [2] [0] [-] [Select Manual] [Enter]** - selects channels 1 through 20 except any channels that currently have manual data.

**[1] [Thru] [2] [0] [-] [Select Active] [Enter]** - selects channels 1 through 20 except any channels that are currently active.

### **[Undo] [Undo] [Enter]**

Pressing **[Undo] [Undo]** will scroll to the most recent undo-able command in the command history display. To undo the command, press **[Enter]**.

### Capture Latch

Previously Capture Latch would be enabled for all users when it was enabled by one user. Now Capture Latch works on a user by user basis. For more information on using Capture Latch, see the Using **[Capture]** section of the Advanced Manual Control chapter.

## Recording and Playback Changes

Changes in this section impact the Cue Playback, Storing and Using Submasters, or Using Partitioned Control chapters.

### Loading a Cue with Temporary Time

A cue can be loaded with a temporary time.

- **[Cue] [3] [Time] [6] [Load]** - loads cue 3 with the manual time of 6.



#### **Note:**

*For multipart cues, the temporary time will be applied to the entire cue, not just the part on the command line.*

*For cues with discrete timing, its parameters will use the temporary time instead of the assigned discrete timing.*

### Submasters


The number of submasters has increased to 999. The number of fader pages available is still 30, which means that there is still a limit of 300 submasters being used with physical faders at a time.

### Partitions on Cue Lists

A partition may be assigned to a cue list. If a partition has already been applied to a cue list, any channels not in the cue list's partition will not be included in cues when they stored or replayed.

Any data for a cue list that already existed before a partition is applied, will be maintained, including data for channels not included in the partition. If data existed before the partition was assigned, in

blind, channels that are not in the partition will display without a channel graphic, any levels will be in gray, and a small superscript N will display with it.

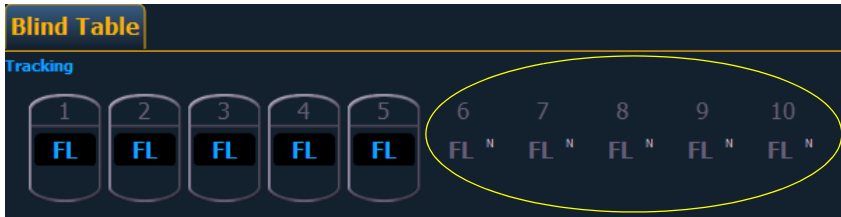

Channels that were initially saved in the cue list but are not in the currently assigned partition

Assigned partitions will display in the external links column in the cue list index.

To assign a partition to a cue list:

- **[Cue] [n] [/] {Partition} [n] [Enter]**

To remove a partition from a cue list:

- **[Cue] [n] [/] {Partition} [Enter]**

## Working with a Single Cue List Changes

Changes in this section applies to the Working with a Single Cue List chapter.

### Auto-block Cleanup


Cues that have auto-blocks will display a underscored b in the PSD. **{Autoblock Clean}** is used to remove all auto-blocks from a single cue, cue range or entire cue list. **{Autoblock Clean}** is a softkey that will be posted when a cue list and/or cue number are on the command line in the Cue List Index, Live, and Blind. A range of cues or a cue list can be specified with this command.

**For Example:**

- **[Cue] [1] [/] {Autoblock Clean} [Enter]** - clears all auto-blocks from cue list 1. Only blocks displayed with the white underscore are removed. If the **[Block]** key was previously used, this command will not unblock it.
- **[Cue][1] [/] [1][0] [Thru] [1][0][0] {Autoblock Clean} [Enter]** - clears the auto-blocks just from cues 10 through 100 of cue list 1.

### Default Update Modes

The default Update modes have changed. Eos defaults to Make Absolute for the **{Update Mode}**, with **{Break Nested}** and **{Update Last Ref}** enabled.

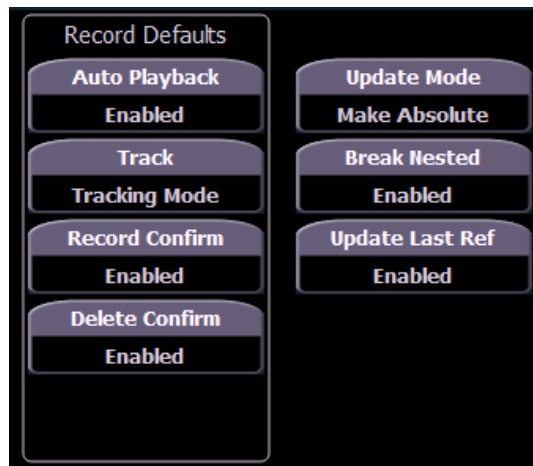

Default Update Setup Options

### Timing Disable

This change affects the Setup and Cue Playback chapters.


You can assign a separate time value for **[Timing Disable]** in **Setup> Desk> Manual Control> Default Times> Timing Disable**. When a fader has been set to timing disable mode, cues will use the time set in Setup. The default time is 0.

#### **[Shift] + [Go] and [Shift] + [Back]**

**[Shift] + [Go]** and **[Shift] + [Back]** can be used to cut to the next cue in the same way as **[Timing Disable] + [Go]** and **[Timing Disable] + [Back]**.

### Show File

An indicator has been added to show when a show file has been modified but not saved. An asterisk (\*) will display beside the show file name.

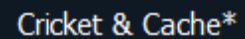

### Mirror Mode

This change affects the Mirror Mode section of the Multi-console and Synchronized Backup chapter.

A device that is currently in mirror mode can select which user number it is mirroring by using the alphanumeric keyboard shortcut **M + #** (# being the user number). **M + ESCAPE** can be used to leave mirror mode.



#### **Note:**

*If a device is not currently in mirror mode, pressing M on an alphanumeric keyboard will post Mark to the command line.*

### Collapsing PSD Columns

This change affects the Playback Status Display section of the System Basics chapter.

To collapse a column in the Playback Status Display, press **[Escape]** while clicking on the column you want to collapse. Press **[Shift] + [Select]** to bring back all of the collapsed columns.

### Magic Sheets on Direct Selects

Magic Sheets can now be accessed from the direct selects. Clicking on a magic sheet direct select will open the Magic Sheet tab and display the selected magic sheet. Pressing a different magic sheet direct select will change the displayed sheet.

### Using Park Changes

Changes in this section impact the Using Park chapter.

#### Recall From Park

You can use **[Recall From] [Park]** to set a channel or parameter to the same level as the current park value.

#### **For Example:**

Let's assume that channels 1 through 5 are parked at 55. To recall that level to channels in live or blind, use the following syntax:

- **[1] [Thru] [1][5] [Recall From] [Park] [Enter]**

Channels 1 through 5 will be set to 55 and channels 6 through 15 will be unaffected.



#### **Note:**

*This does not release the Park buffer.*

### [Thru][Thru] in Park

When parking a range of addresses in Park, using **[Thru]** will only park the intensities. If you want to park all of the addresses and parameters within the selected range, you will need to use **[Thru] [Thru]**.

### Patch Changes

Changes in this section impact the Patch chapter.

#### {Swap} in Patch

Additional options have been added to **{Swap}** in Patch.

- **{Swap}** - swaps only the patched address
- **{Swap} {Plus Show}** - swaps all show and patch data
- **{Swap} {Only Show}** - swaps only the show data and not patch data
- **{Swap} {Plus Patch}** - swaps addresses and patch data but not show data

#### Fixture Editor Parameters

The fixture editor parameters list is now displayed in alphabetical order.

### [Thru] [Thru]

This change applies to the Multipart Cues chapter.

**[Thru] [Thru]** can be used in blind to create multiple cue parts in a range. For example, **[Cue] [1] [Part] [1] [Thru] [Thru] [4] [Enter]** will create parts 1 through 4. If you were to use just **[Thru]** instead of **[Thru] [Thru]** in that example you would create parts 1 and 4.

### Subgroups

This change applies to the Using Groups chapter.

You can create subsets of channels within a group by using **[Shift] + [/]**. **[Shift] + [/]** will create parentheses. These subsets of channels or subgroups are treated as a single channel in the following ways:

- When applying absolute or relative effects from live, the subgroups are treated as a single channel by the effect.
- When setting a range of step's channels on a step based effect, the subgroup will not be spread out amongst multiple steps.
- When the group is selected and next/last is pressed, each subgroup is traversed.
- When a group has subgroups, **{Reverse}**, **{Reorder}**, and **{Random}** in the group editor will affect the subgroups instead of the channels in each subgroup. **{Reorder}** will order the groups based on the first channel in each group.

Subgroups can be created either in the group list or live.

Group List Display		Subgroups
Group	Label	Channels
1		(1>2) (3) (4) (5) (6>7)

To create a subgroup in live:

- **[Shift] + [/] [1] [Thru] [4] [Shift] + [/] [Record] [Group] [2] [Enter]**

To create a subgroup in the group list index:

- **[Group] [2] [Enter] [Shift] + [/] [1] [Thru] [4] [Shift] + [/] [Enter]**



**Note:** *Fan is not currently supported with Subgroups.*

### Managing Show Files Changes

Changes in this section impact the Managing Show Files chapter.

#### Importing Custom Gobo Images

Custom gobo images can be imported by going to **Browser> Import> Gobo Images** and selecting an image file or folder. If a folder is selected, all image files within the folder will be imported. All standard image files are supported with the exception of .svg files.

Imported gobo images can be deleted by going into **Browser> Import> Gobo Images> Imported Gobos**, selecting the image, and pressing **[Delete] [Enter]**.

#### Imported Media and Partial Show Open/Merge

A new tile, **{Media}** has been added to the Partial Show Opening and Merge displays. Media is imported gobo and magic sheet images.



**Note:** *Media will be included by default when you select Patch, Fixtures, or Magic Sheets.*

### Virtual Media Server

Changes in this section impact the Virtual Media Server chapter.

#### Number of Pixel Maps


The number of pixel maps per show file is now 40. Previously it was limited to 10 maps.

#### {Flash}

The **{Flash}** softkey is available in the Pixel Map Editor display. **{Flash}** works the same as it does in Live. See the section on Flash in the Basic Manual Control chapter for more information.

#### Patch by Channel

An option for setting the starting channel has been added to the Edit display for mapping channel-based pixels.

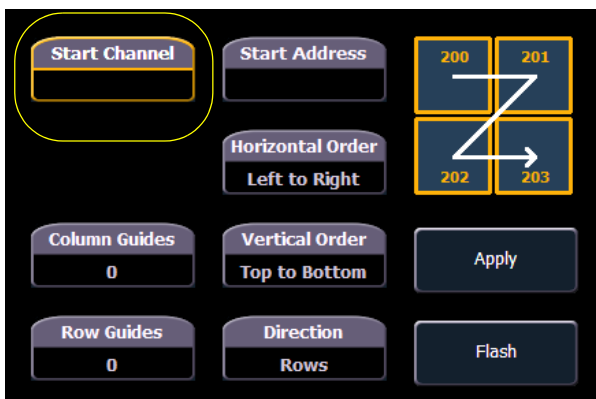

- When either **{Starting Channel}** or **{Starting Address}** is selected, both fields will be cleared.
- Address-based pixels can not overlap with channel-based pixels. This includes the entire DMX fixture footprint.
- If using **{Starting Channel}**, any overlapping channel-based pixels will be removed and any overlapping address-based fixtures will be unpatched.
- If using **{Starting Address}**, any overlapping address-based pixels will be removed and any overlapping channel-based fixtures will be unpatched.
- When the **[Data]** key is latched, the address for channel-based pixels will display.
- When **[Format]** is pressed, the address will toggle between port/offset and address number.

### Park and Address Check


You can use Park and Address Check for Virtual Media Server outputs.

### Color Picker

A second color picker has been added for virtual effect layers. The second color picker will be labeled as End Color and will control RGB2.

### Copying Color

You can copy or swap a color between the two color pickers using the buttons located between the two color pickers.

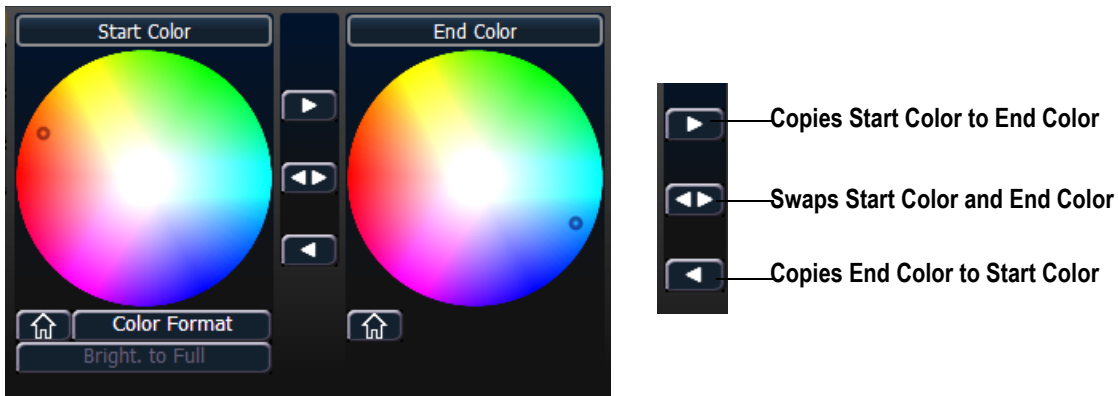

### FDX Dimmer Feedback

#### ECU Settings

Changes in this section impact the ECU appendix.

#### FDX Feedback

Clicking in the enable box will allow Eos to receive FDX dimmer feedback over the network.

#### Broadcast Type

- Directed Broadcast - Broadcast packets are directed to a subnet based on the IP address and subnet mask of the sender.
- Limited Broadcast - The limited broadcast address is 255.255.255.255. It is limited because routers will never forward datagrams with that destination address. This means that datagrams with the limited broadcast address are confined to the particular network segment on which they originate.

#### About System

Changes in this section impact the About chapter.

Clicking on a FDX rack in the **{About System}** list will open the About Rack display, which shows the following information about the rack:

- Rack number
- Rack Type
- Phase A,B,C Voltages
- Frequency
- System Number
- IP Address
- Software Version

#### Device List

For information about FDX Dimmer feedback, see the Device List section in the Patch chapter.