

We congratulate you on the purchase of your »sydney« mobile phones and we hope that it will render you many years of reliable service. You have chosen a modern and reliable system. Kindly read the user manual carefully in order to start using the device properly and to familiarise yourself with all the possibilities of the system.


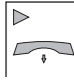


 
 
 
 
 
 
 
 
 
 


 


Standard delivery scope

Kindly check if all following parts are included:

- Mobile phone »sydney«
- Charging cable
- Desktop charger
- 1x rechargeable battery Li-Ion 3.7V/ 750 mAh
- Short guide
- User manual
- Warranty card

Should any parts be missing, kindly contact your specialist dealer or the manufacturer directly.

1 Control elements

Key	Function
	- Answering calls - Dial a number - Show call list - In the menu: go left
	- Switch telephone on or off - Cancel current operation - End or reject call - In the menu: browse to right
 	- Stand-by:  -> Write message - Stand-by:  -> Inbox - Navigate in the menus
 	Menu keys „soft keys“
	Direct-access keys
	Keep pressed for connection to answering machine/voicemail
	Enter numbers and names or create message (SMS).
	- Keypad lock (Press button) - For messages (SMS): special characters (, . ? ; : ! " ' @ _ ~ & + - () < > { } [] % = / # * \$ § ...)
	- For messages (SMS): spaces
	- For messages (SMS): switch between upper and lower case and digits
	Headset jack (headset not included)
	Volume control  &  - control playback volume
	Activate emergency call switch (SOS)



emergency call switch



Safety Instructions

Switch of mobile phones in **hospitals** or rather near medical devices. A minimum distance of 20 cm should be observed between pacemakers and switched on telephones.



Never drive a **vehicle** while holding the mobile phone in your hand at the same time. Observe the respective national laws and traffic regulations.



The mobile phone has to be switched off in **aircrafts**.



In the vicinity of **petrol stations** and other locations with explosive goods the mobile phone has to be switched off.

SAR-value: The maximal value set by the EU is 2.0 W/kg. This model has max. <1.05 W/kg.

Short guide

Mobile phone »sydney«



2 Insert SIM-card



Image 1

Image 2

Image 1: Push the cover of the battery compartment of the phone downwards pressing lightly. Lift the battery compartment lid completely off the phone. If a battery pack is inserted, remove it.

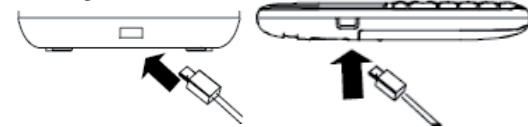
Image 2: Push the SIM card with the gold contacts facing downwards into the SIM card holder. The SIM card has to be below the metal profile.

3 Insert battery pack

Image 3: Insert battery pack, push the battery cover into the guide



4 Charge batteries



Charge via desktop charger:

Insert the plug of the charging cable into the jack at the back of the desktop charger.

Place the phone for charging into the charging station.

Charging via the mini USB charging jack:

Insert the plug of the charging cable into the mini USB charging jack.

While charging: Battery display running

Battery full: Battery display stops

Charge the battery for at least 4 hours prior to effecting the first call!

10 SMS messages

SMS (Short Message Service) are written short messages with max. 160 characters. Charges occur only when sending, however not when receiving SMS.

- Write SMS: Go to menu with → Messages: → New SMS: . The text is input via the numeric keys. Each key has several characters assigned to that appear through repeated pressing. (e.g. 2x , 2x , 3x , 3x , 3x for „Hello“).

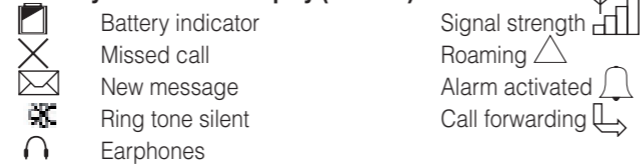
1: . , ! ? ' " @ : 1	5: j k l 5 £ *	9: w x y z 9 y p
2: a b c 2 ä æ å á	6: m n o 6 ö ø ó	0: space; 0
3: d e f 3 é è ê	7: p q r s 7 ß \$	special characters: , . ? ; !
4: g h i 4 ï î ï	8: t u v 8 ü ú ú	" ` @ _ ~ & + - () < > { } [] ...

Pressing the key you can switch between the input modes:

- ABC only UPPER case - abc only lower case - 123 -> digits

- **Send SMS:** 2x select Send and enter number or choose from contacts , browse to Names and with (select) send your message.
- **Receive SMS:** A short signal tone and a message on the display informs you that a new SMS was received. With you can read the message immediately or view the list of already received messages via the menu in **Messages** → **Received SMS**.

5 The symbols on the display (monitor)



6 The first steps

Press button for 3 sec. to switch on the mobile phone.

For switching off also press for 3 seconds.

Some SIM cards ask you to enter your PIN code (personal identification number). Follow all instructions on display.

- Deactivate SIM lock:

In settings menu → Security settings → PIN query → Off

Entering the menu:

- Press key
- Browse through menu items: with and
- Confirm: with key

Incoming call:

- Accept: Press key
- Reject: Press key

End call:

- Press key

Dial:

Enter the telephone number (incl. area code with 0) using the numeric keys - start the call with .

11 Further functions and settings

- Silently: press - button for 3 seconds.
- Sound Settings: User Profiles → Define → Sound Settings → you can change the ringtones.
- Network Selection: to menu with → go to settings Network selection → Automatically or manually.
- PIN code request: to the menu with → go to settings Security Settings SIM Lock: On / Off.
- Calculator: Ins Menü mit Zusätzlich Rechner.
- Alarm Clock: to the menu with additional alarm edit

12 FAQ:

- Display shows „Insert SIM card!“: Check the insertion direction of the SIM card. (Gold contact facing downward)
- A call could not be effected: Check again if the telephone number and the area code were correct. (Area code entered?)
- The display of the mobile phone is blank/black: Phone is in energy saving mode: press any key. Or: phone is switched off. Press key for 3 seconds to switch on the phone.
- The mobile phone does not react: Remove battery, insert again an switch on device. If there is still no reaction, kindly contact your specialist dealer.
- The charging process does not start: This might take some minutes. If there is no reaction after more than 10 minutes, kindly contact the service centre

Automatic redial:

By pressing the key in the menu item Call lists. Now select the desired number from all calls and start with the call.

Searching of telephone book entries:

- open the phonebook:
 - With and button you can browse through the entries. Or:
 - You can use name search: enter the first letter of the entry to search for via the numeric keys (maybe using continue to browse)
- Once the desired phonebook entry is displayed start the call us .

Hands-free:

While calling you can switch on or off the hands-free mode using the key.

7 Speed dial keys

A stored number can be dialled at the push of a button. The keys 2 to 9 can be used to store frequently dialled contacts as follows:

Go to menu with open the phonebook 2x , open the menu Speed dialling 6x , , Set number , confirm it. Select the speed dial keys (2 to 9) -button (add), Select contacts and -confirm it.

Attention: The name has to be already stored in the phonebook, storing a new entry directly to a speed dial key is not possible. The 1 key is reserved for the number of the answering machine (voicemail).

Disposal of used electric and electronic units (applicable in the countries of the European Union and other European countries with a separate collection system).

The symbol on the product or the packaging indicates that this product is not to be handled as ordinary household waste but has to be returned to a collecting point for the recycling of electric and electronic units.

You protect the environment and health of your fellow men by the correct disposal of this products. Environment and health are endangered by a faulty disposal. Material recycling helps to reduce the consumption of raw material. You will receive further information on the recycling of this product from your local community, your communal disposal company or your local dealer.

Rechargeable batteries

The rechargeable batteries that come with the device can be recycled. Please dispose of these rechargeable batteries in receptacles designed for that purpose or return them to a retail outlet. Dispo-se only of those batteries that have been completely discharged to ensure environmental protection.

Dialling using speed dial keys:

Keys to can be used to store frequently dialled contacts. By pressing the respective key for at least 2 seconds the call is initiated.

8 Phonebook

Store names and numbers (always with international dialling code e.g. +49 for Germany). Go to menu with open the phonebook , menu-topics: add new contact, Set M1/M2/M3, copy, copy all, One by one, delete all, speed dial (On/Off), Phonebook settings.

9 Emergency call function

Go to menu with settings 3x , OK SOS 2x confirm .

You can choose the mode of the emergency call in the "Mode Settings" of the SOS menu. Each number you want to define as an emergency call number must be already stored in the phone book. A message will be sent if an emergency call is started.

- Send an emergency call with the SMS function
You can save up to five SOS numbers. A SOS SMS can be set in the „Edit SOS SMS“ menu.

Attention: If you would like to store emergency numbers like ambulance, police, fire brigade etc. as emergency numbers, you will have to check with the respective institution first. We do not assume any responsibility for eventual occurring charges should you call by mistake.

Technical Data

Standard:	GSM 900, 1800, 1900 MHz Triband
Battery:	Model: SKL BL-5C 3.7V, 750 mAh
Dimensions:	50.5 x 134 x 17 mm
Stand-by time:	Up to 170h
Weight:	101 g incl. battery
Max. call time:	Up to 120 min
Display:	5.08 cm (2") colour, resolution 176 x 220
SMS:	Standard SMS
Permissible ambient temperature:	-10°C to 40°C
Permissible relative humidity:	30% to 75%



This telephone satisfies the following EU directives:

- 1999/5/EG R&TTE directive
- 2002/95/EG RoHS directive
- 2002/96/EG WEEE directive
- 2004/108/EG EMC directive
- 2006/95/EG Low voltage directive

Compliance with the directives listed above is confirmed by the CE seal on the telephone. CE compliance declarations are available on the Internet at www.humanteknik.com.

Technical specifications subject to change without notice.