

ZTE D286

User Guide

LEGAL INFORMATION

Copyright © 2013 ZTE CORPORATION.
All rights reserved.

No part of this publication may be excerpted, reproduced, translated or utilized in any form or by any means, electronic or mechanical, including photocopying and microfilm, without the prior written permission of ZTE Corporation.

 
The manual is published by ZTE Corporation. We reserve the right to make modifications on print errors or update specifications without prior notice.

Version No. : R1.0
Edition Time : 2013.09
Manual No. : 07958450

ZTE CORPORATION
NO. 55, Hi-tech Road South, ShenZhen, P.R.China
Postcode: 518057
URL: <http://www.ztedevice.com>

Tel: (86) 755 26779999
E-mail: mobile@zte.com.cn

Phone Overview

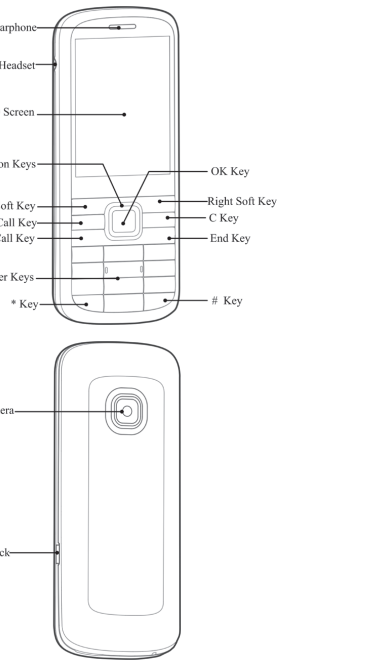


Key Functions

Key	Function Description
GSM Call Key	<ul style="list-style-type: none">Make or answer a call.Press the GSM Call Key in standby mode to enter Recent Call list.
End Key	<ul style="list-style-type: none">End an active call or reject a call.Long press to Power on/Power off.Exit from any interface to standby mode.
Left Soft Key	<ul style="list-style-type: none">Switch to the options at lower left of the LCD.Access to Facebook.
Right Soft Key	<ul style="list-style-type: none">Access the Contacts screen in standby mode.Switch to the options at lower right of the LCD.
CDMA Call Key	<ul style="list-style-type: none">Make or answer a call.Press the CDMA Call Key in standby mode to enter Recent Call list.
C Key	<ul style="list-style-type: none">Delete the characters in the browser.
Navigation Keys	<ul style="list-style-type: none">Move the cursor up, down, left and right.In standby mode, Used as hot keys to enter the designated functions.In Contact list, press the Left Key or Right Key to switch groups.Press the Left Key/Right Key or Up Key/Down Key to adjust volume in conversation.Used as direction key in games.


Open the Back Cover

 Remove the back cover as shown below.

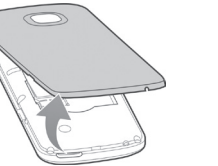


Inserting the SIM/UM Card

 
Insert the SIM/UM card as shown below.

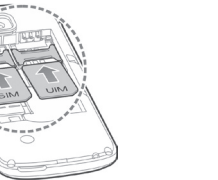

Inserting the microSD Card

 
Hold your microSD card with the metal contacts facing down and slide it in.

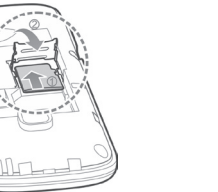

NOTE:
The microSD logo  is a trademark of the SD-3C, LLC.


Installing the Battery

 Install the battery as shown below.

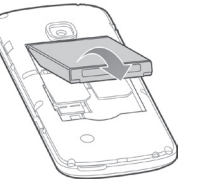


Close the Back Cover

 Press the cover gently back into place until you hear a click.

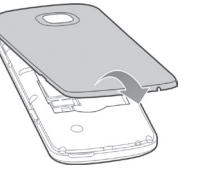

Charging Your Phone

 1. Insert the lead from the charger to the socket, and connect the charger to a standard wall AC socket.

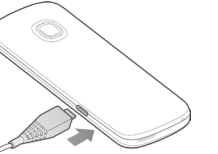

2. After the completion of charging, disconnect the charger from the phone and AC socket.

Switching On/Off

1. Hold the **End Key** to switch on/off your phone.
2. When you turn on your phone, the phone will automatically search for available networks.

Keypad Lock

If you activate **Auto Keypad Lock**, the keypad will be locked automatically according to your settings.
Hold the *** Key** to lock the keypad in standby mode.
If you want to unlock the keypad, please press the **Left Soft Key** first, and then the *** Key**.
NOTE: If the call is coming when the keypad is locked, you can press the call key to answer.
When the keypad is locked, calls may be possible to the official emergency number programmed into your device.

Phone & Security Code

Phone and menu code could prevent your phone from illegal use. The default phone code is 0000. Please change it to your own as soon as possible.
NOTE:
Please remember the code; otherwise some service expense may happen.

PIN and PUK

PIN Code

PIN code could prevent your SIM/UM card from illegal use. When PIN lock is on, you should enter the PIN code when powering on the handset again. The network provider offers you PIN code (four to eight digits). You should change PIN code as soon as possible for security.

PUK Code

Consecutive inputting wrong PIN code for three times can cause locking of SIM/UM card. To unlock, you need PUK code.
NOTE:
PIN code and PUK code may be offered together with the SIM/UM card. If not, please contact your network service provider. Please change default PIN code to your own as soon as possible.

Text

Your phone offers text input modes: Abc, ABC, abc, 123, T9En, T9EN, T9en, T9Hin and Hindi.

Operation	Method
Change input mode	Press the # Key to select another text mode, press the * Key to enter the symbols and smileys.
Input Letters	In the abc/Abc/ABC mode, press corresponding letter key till the letter appears.
Input Digits	In the 123 mode, press digit key once.
Input Space	Press the 0 key , except for the 123 mode.
Erase Character	Press the Right Soft Key .
Move cursor	Press the Navigation keys .

Basic Function

Herein after are basic functions of the phone.

Messages

- New Message:** Send a new message to other mobile phones' number. The message could be send to multi-receivers. See "Text" for more instructions of writing text and character. Select **Option** to do more operation.
- Inbox /Outbox/ Drafts:** Read messages in Inbox /Outbox/Drafts.
- Voice Mail:** Read voice mail message.
- Templates:** Some common used messages preformatted in phone. You can edit or send them.
- Recipient Group:** You can send the message by groups.

- **Delete Messages:** You can choose to delete the messages.
- **Message Settings:** Change the general settings.
- **Memory Info:** Check the storage status of the phone, Outbox/Drafts, or SIM/UIM card.

Contacts

- **Add New:** Add a new contact to your phone or SIM/ UIM card.
- **Search:** View all contacts in all list, press the **Left Key** or **Right Key** to view different groups. In all list, you can search for a contact by entering the key words, press the **OK Key** to view the details. Select **Option** to do more operations.
- **Groups:** View/edit groups.
- **Speed Dial:** View speed dial list and you can set speed dial. In stand-by mode, hold the number key to dial the corresponding call.
- **Copy:** Copy the contacts from phone to SIM/ UIM card or from SIM/ UIM card to phone.
- **Move:** Move the contacts from phone to SIM/ UIM card or from SIM/ UIM card to phone.
- **Delete:** Delete the contacts on the phone, or SIM/ UIM card.
- **Memory Info:** View Number of entries saved and maximum number of entries capacity in phone and SIM/ UIM card.

Call History

- **Daied/Received/Missed:** View dialed/received/missed calls. Select **Option**, you can do more options, such as view, save and delete the contact information
- **In Call Memo:** View the call memo.
- **Call Duration:** Check the call duration.
- **Delete Call Logs:** View the delete history, to delete the calls.

Settings

- **Display Settings:** Change the settings of wallpaper/clock/time/set time/date/LCD backlight/LCD brightness.
- **Phone Settings:** Set the network selection/language/key guard/ airplane mode, and view the version/SAR information, GSM network select of the phone.
- **Security:** Change or use the settings about the phone code and PIN code, reset factory settings.
- **Call Setting:** Set the call settings.

Profile

Select or edit the profile: Vibrate only/Silent /General/Outdoor/Headset.

Camera

You can take photos and record videos. Photos and videos are stored to the phone's memory card. You can copy them to your computer or access them in the Gallery.

Special Functions

Herein after are special functions of the phone.

Multimedia

- **Voice Clips:** Select **Record New** to record new voice. Check **Voice Clips** to view the voice that you have captured.
- **Music Player:** Select **Music Box** to play audio files stored on your phone. Check **Music Player Settings** to set repeat and volume settings.
- **File Manager:** Check to view the SD-Card and capacity.
- **Games:** Select to play games.
- **Video Player:** View the video.

FM Radio

Compatible earphone or component is necessary for the radio usage.

You can listen to radio by the handset.

1. Insert the earphone compatible with your handset.
2. Select **FM Radio**, the radio will be started.
3. Select **Left Soft Key [Options] >Auto Scanning** to search channels automatically.

Or select **Left Soft Key [Options] > Edit Channels** to input the frequency to save channel manually.

NOTE: Please select suitable volume while listening.

Continuous high volume may be harmful to your ear.

Other Facility

- **Tools**
 - ▶ **Scheduler:** View calendar and schedule events.
 - ▶ **Note:** Create note as memos.
 - ▶ **Stopwatch:** Stopwatch timing.
 - ▶ **Calculator:** Execute basic math calculation.
 - ▶ **Unit Converter:** Use to convert unit.
 - ▶ **Bluetooth:** You can turn the Bluetooth on, search to pair devices. The Bluetooth devices must be paired before the communication is performed. You can also edit **My device info**.
 - ▶ **Mass Storage:** Check to connect the USB and view the mass storage.
- **Alarm:** Add alarm to reminding you.
- **Browser**
 - ▶ **Java application:** Select to choose an app to play.
 - ▶ **Facebook/Twitter:** Use app to communicate.
 - ▶ **MTS Info:** Choose to use the MTS Utilities. Use Browser to view web pages and search for information.

Warning and Maintenance

- Keep the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Please use original accessories or accessories that are authorized by the manufacturer.
- Please keep the phone dry and store in shady and cool place.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from seeping into your phone.
- Do not drop or harshly treat the phone. Rough handling can break internal circuit boards.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to dismantle the mobile phone and battery by yourself.
- Power off your phone before you clean the phone. Please use clean fabric that is anti-static to clean your phone.
- As your mobile phone can produce electromagnetic field, do not use the phone near electrical appliances.
- Do not charge the mobile phone without battery.
- Beware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories.
- The user is cautioned that changes or modifications not expressly approved by the manufacturer could void the user's authority to operate the equipment.

Specific Absorption Rate (SAR)

Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by inter-

national guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health. The guidelines use a unit of measurement known as Specific Absorption Rate, or SAR. The SAR limit for mobile devices is 1.6 W/kg and the highest SAR value for this device when tested was 0.948 W/kg. As mobile devices offer a range of functions, they can be used in other positions, such as on the body. As SAR is measured utilizing the device's highest transmitting power, the actual SAR of this device while operating is typically below that indicated above. This is due to automatic changes to the power level of the device to ensure it only uses the minimum power required to communicate with the network.

Safety Information

General Care

- If you want to clean your phone, please use clean fabric that is a bit wet or anti-static. Do not use harsh chemical cleaning solvents or strong detergents to clean it. Turn off your phone before you clean it.
- As your mobile phone can produce electromagnetic field, do not place it near magnetic items such as computer disks.
- Using the phone near electrical appliances such as TV, telephone, radio and personal computer can cause interference, which affects the function of the phone.
- Do not expose your mobile phone to direct sunlight or store it in hot areas. High temperatures can shorten the life of electronic devices.
- Prevent liquid from leaking into your phone.
- Do not drop, knock or harshly treat your phone. Rough handling can break internal circuit boards.

- Do not charge the mobile phone without battery.
- Do not short-circuit the battery, as this can cause excessive heat and fire.
- Do not store battery in hot areas or dispose of it in a fire to avoid explosion.
- Store the phone out of the reach of little children. The phone may cause injury if used as a toy.
- Be aware of the usage limitation when using a mobile phone at places such as oil warehouses or chemical factories, where there are explosive gases or explosive products being processed, because even if your phone is in standby mode, it still transmits radio frequency (RF) energy. Therefore, power off your phone if required.
- Do not touch the antenna while calling. Otherwise it will affect the quality of calling and waste battery energy. The damaged antenna will cause slight burn while touching your skin.
- Do not put other things on the terminal to avoid overlaying radiator.
- Keep the antenna free from obstructions and position the antenna straight up. This will ensure best call quality.

General Guidelines

- If your mobile phone is lost or stolen, please report to your service provider or agencies of banning the use of your lost phone, which will protect you from economic losses resulted from unauthorized use. You need to provide the phone's ESN/MEID number labeled. You can see ESN/MEID number after removing the battery. Please keep ESN/MEID number for future use.
- To protect your mobile phone from illegal use, please take the security measures as follows:
 - ▶ Set PIN code of the SIM/UIM card.
 - ▶ Take it with you as you can.

Road Safety

Pay attention to traffic safety. Do not use your mobile phone while driving. Park before making or answering a call.

Hospital Safety

- Some electronic devices are susceptible to electromagnetic interference sent by phone if inadequately shielded. Please use phone at least 20 cm or as far away as you can from TV set, radio and other automated office equipment so as to avoid electromagnetic interference.
- Operating of mobile phone may interfere with medical devices like hearing aid and pacemaker. Please always keep the mobile phone more than 20 centimeters away from such medical devices when the phone is powered on. Do not carry the mobile phone in the breast pocket. Power the mobile phone off if necessary. Consult a physician or the manufacturer of the medical device before using the phone.

Emergency Service

On occasion of emergent calling, keep your phone in status of power on and in area of service. On the condition of standby, press the key to enter emergency phone number, and then press **Call Key** to make a phone call.

Third Party Equipment

- Please use original accessories or accessories that are authorized by the manufacturer. Using any unauthorized accessories may affect your mobile phone's performance, and violate related national regulations about telecom terminals, or even endanger your body.
- Do not connect the phone with other unauthorized peripheral equipments.
- Do not attempt to disassemble the mobile phone and battery by yourself. Non-expert handling of the devices may damage them.

Vehicles Equipped with an Airbag

- Before making or answering a call, you should pay attention to the local laws about using wireless mobile phones and take them into account in practical use.
- Safety airbag, brake, speed control system and oil eject system shouldn't be affected by wireless transmitting. If you do meet problems above, please contact your automobile provider.
- Please power off your mobile phone when refueling your automobile, and so do the place where duplex wireless equipments are banned. Don't put your phone together with flammable or explosive items, as inner spark may cause fire.

Aircraft Safety

- Follow the restrictions in aircraft. Wireless devices can cause interference in aircraft.
- Please power off your mobile phone before taking on till landing. In order to protect airplane's communication system from interference, it is never allowed to use mobile phone when it is in flight. Using mobile phone before the plane taking off should get aircrew's permission according to safety regulations.

Warranty Terms

The warranty does not apply to defects or errors in the product caused by:

- Reasonable abrasion.
- Misuse including mishandling, physical damage, improper installation, unauthorized disassembly of the product.
- Water or any other liquid damage.
- Any unauthorized repair or modification.

- Power failures, surges, lightning damage, fire, flood or other events outside ZTE's reasonable control.
- Usage of the product with any unauthorized third party products such as generic chargers.
- Any other cause beyond the range of normal usage for products.

End User shall have no right to reject, return, or receive a refund for any product from ZTE under the above-mentioned situations.

This warranty is end user's sole remedy and ZTE's sole liability for defective or nonconforming items, and is in lieu of all other warranties, expressed, implied or statutory, including but not limited to the implied warranties of merchantability and fitness for a particular purpose, unless otherwise required under the mandatory provisions of the law.

Limitation of Liability

ZTE shall not be liable for any loss of profits or indirect, special, incidental or consequential damages resulting from or arising out of or in connection with using this product, whether or not ZTE had been advised, knew or should have known the possibility of such damages. Refer to the enclosed warranty card for full warranty and service information.