 




Assembly Instructions and User's Manual 40in METALLIC FIRE BOWL

FSMVPT6004

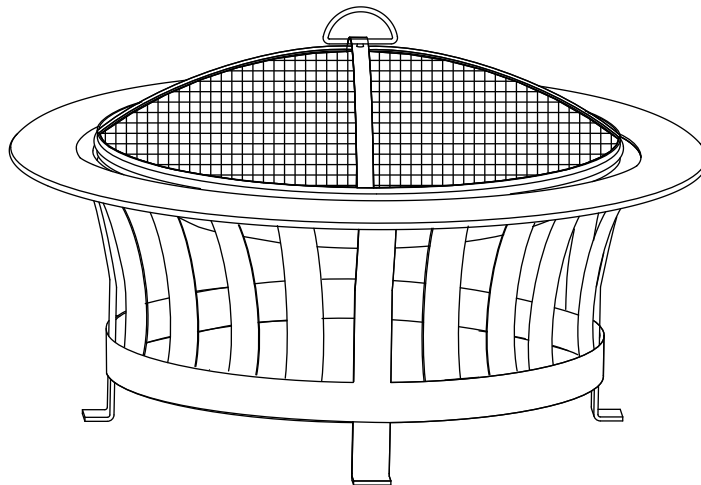

Please keep this instruction manual for future reference



Warning:

**READ INSTRUCTION MANUAL BEFORE ATTEMPTING TO ASSEMBLE OR
OPERATE THIS PRODUCT.**

Adult assembly required

Keep the screws and parts out of reach of children.

For customer service, please call 1-888-922-2336 or E-mail:

customer.service@academy.com

**Business hours: Monday through Friday 7:00am to 10:00pm; Sunday 9:00am to
8:00pm. Central standard Time.**

(Made in China)

Table Of Contents

Table of Contents	1
Warnings	1
Hardware and Part List.	3
Assembly.....	5
Care and Maintenance.....	7
Warranty.....	8

Warnings



WARNING

For Outdoor Use Only. Wear gloves during assembly.



WARNING

1. Improper installation, adjustment, alteration or maintenance may result in property damage or injury.
2. Read the installation, operation and maintenance instructions thoroughly before installing or servicing this equipment.
3. Failure to follow these instructions could result in fire or explosion, which could cause property damage, personal injury or death.

WARNING

 
FOR YOUR SAFETY

1. Do NOT use this fire pit without reading this entire document and all warning, cautions and instructions.
2. This item is for outdoor use only, and shall NOT be used in a building, garage or any other enclosed area.
3. Do NOT use this fire pit for indoor heating. TOXIC carbon monoxide fumes can accumulate and cause asphyxiation or death.
4. This fire pit is NOT for commercial use.
5. This fire pit is NOT to be operated by children.
6. This fire pit is NOT to be used in or on boats or recreational vehicles.
7. Always use in accordance with all applicable local, state and national codes. Contact your local fire department for details on outdoor burning.
7. When using this fire pit, exercise the same precautions you would with any open fire.
9. The use of alcohol, prescription or non-prescription drugs may impair the consumer's ability to properly assemble or safely operate this fire pit.
10. This fire pit is for use with dry, seasoned hardwood. It will burn hotter, more completely and create less smoke.


 

 
 

 
 

Warnings

11. Do NOT burn charcoal briquette, lump charcoal, manufactured logs, driftwood, trash, leaves, papers, cardboard, plywood, painted or stained or pressure treated wood. Avoid using softwoods such as pine or cedar that can throw sparks.
12. Do NOT alter this fire pit in any manner.
13. Do NOT use this fire pit until COMPLETELY assembled and all parts are securely fastened and tightened.
14. Do NOT store or use gasoline or other flammable vapors or liquids in the vicinity of this or any other appliance.
15. Do NOT store or use an LP gas cylinder within 10 feet (3.05m) of this fire pit while it is in operation.
16. Do NOT use this fire pit near automobiles, trucks, vans or recreational vehicles.
17. Do NOT use in an explosive atmosphere. Keep outdoor area clean and free from combustible materials, gasoline and other flammable liquids.
18. Do NOT use this fire pit under an overhead or near any unprotected combustible constructions. Avoid using near or under overhanging trees and shrubs.
19. Always use this fire pit on a hard level non-combustible surface such as concrete, rock or stone. An asphalt or blacktop surface may not be acceptable for this purpose. Do NOT use on wooden decks.
20. Always empty this fire pit before each use.
21. Do NOT wear flammable or loose clothing when operating this fire pit.
22. Do NOT use in windy conditions.
23. Do NOT use this fire pit unless spark guard is securely in place.
24. Do NOT use gasoline, kerosene, diesel fuel, lighter fluid to relight fires.
25. Keep all electrical cords away from a hot fire pit.
26. All surfaces of this fire pit are hot when in operation. To avoid burns, do NOT touch fire pit until it has completely cooled unless you are wearing protective gear (Potholders, gloves, BBQ mittens, hot pads etc.) Never touch ashes or coals to see if they are hot.
27. Do NOT leave a lit fire pit unattended, especially around children and pets.
28. Do NOT attempt to move or store this fire pit until ashes and coals are completely extinguished.
29. Do NOT remove ashes or coals until they are completely extinguished.
30. Use heat-resistant gloves or hot pads when contacting handles.
31. Use long sturdy fire pit tools when adding or moving logs.
32. Do NOT place wood directly into bottom of the fire pit. Place wood only on the log grate.
33. Do NOT overload the fire pit. Do not add additional firewood until the fire burns down. NOTICE: If any portion of the bowl lid or spark guard of this fire pit are glowing red. It is overloaded.
34. Do NOT lean over this fire pit when lighting or when in use.
35. Do NOT place a hot spark guard or hot fire pit tools onto combustible surface such as grass, wooden deck or furniture.
36. Avoid breathing smoke from the fire and avoid getting it into your eyes.
37. This fire pit should be thoroughly inspected and cleaned on a regular basis.
38. After a period of storage and/or non-use, check for signs of damage and creosote build-up. Do NOT operate until necessary repairs and / or clean up are executed.
39. Death, serious injury or damage to property may occur if the above is not followed exactly.

 

 

 

HARDWARE AND PARTS

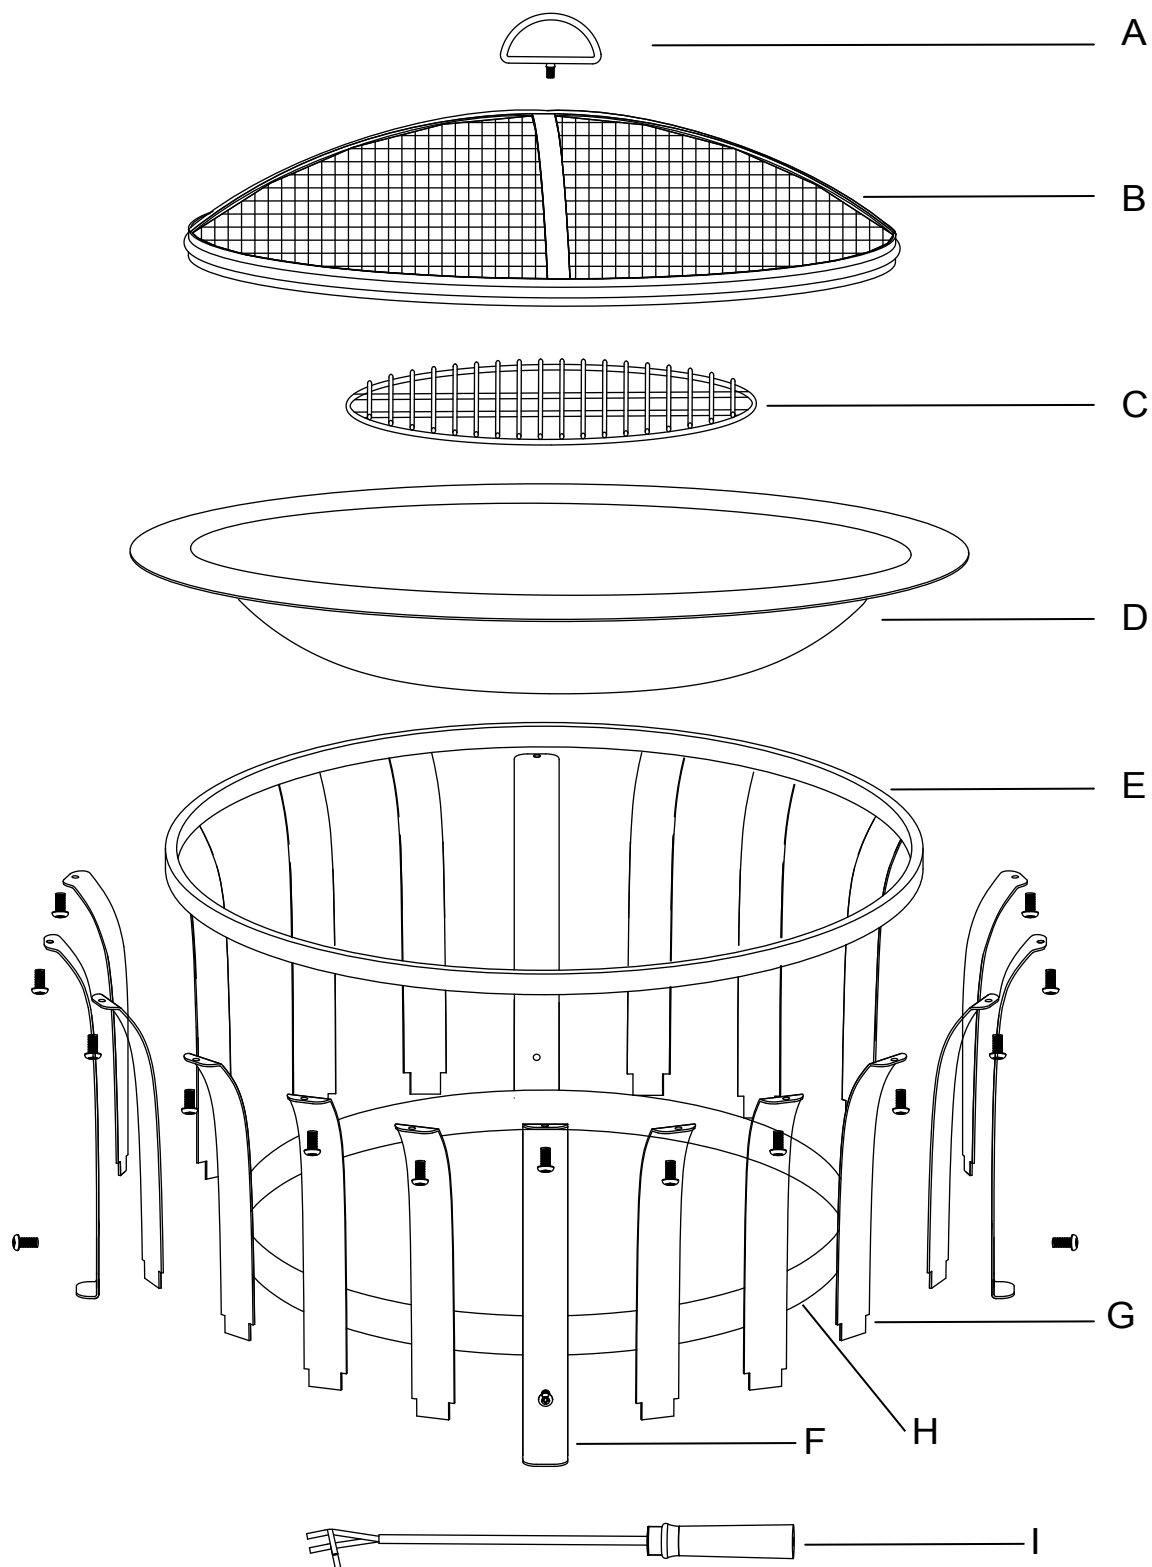


 
Parts List

A	Lift Handle		1
B	Mesh Screen		1
C	Charcoal/ Log Grate		1
D	Fire Bowl		1
E	Top Ring		1
F	Stand		4
G	Frame		16
H	Bottom Ring		1
I	Poker		1

Hardware

AA	M6 x 14mm Bolt			4
BB	M6 x 8mm Bolt			20
CC	M6 Nut			5

Tools Required (Not included)


1	Adjustable open end wrench	
2	Philips screwdriver	

Note: Make sure to check for parts before assembly if Not contact customer service.

Assembly Instructions


Step 1:

 Connect the lift handle (A) to the mesh screen (B), using one M6 nut (CC).

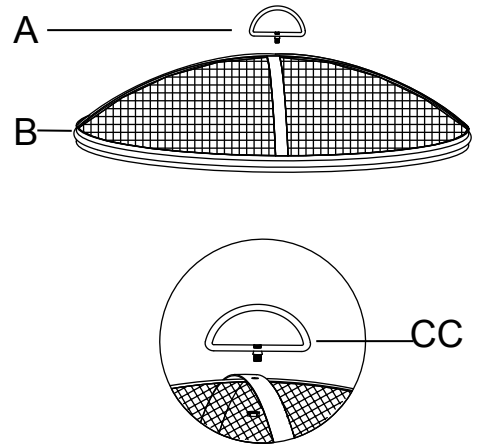

Step 2:

 
Connect the stand (F) to the top ring (E) using M6 x 8mm bolts (BB), as seen in FIG 1. Connect the stand (F) to the bottom ring (H) using M6x14mm bolts (AA) and M6 nut (CC), as seen in FIG 2.

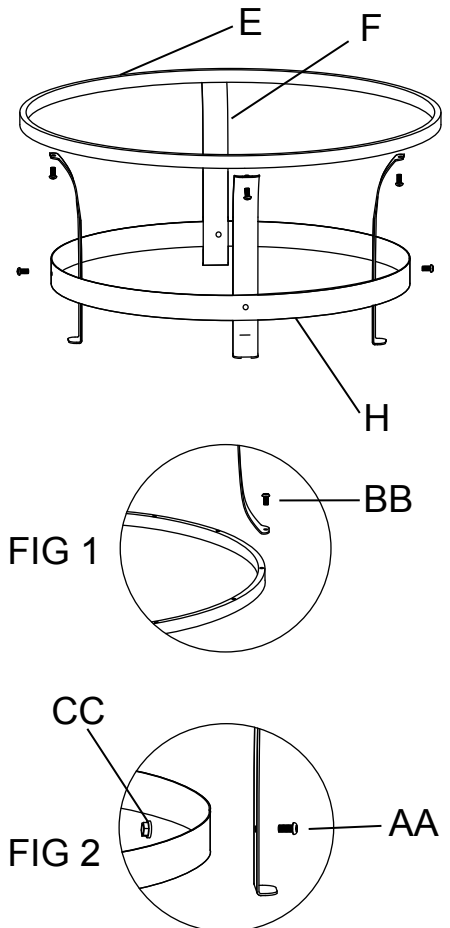

Assembly Instructions


Step 3:

 Insert the frame (G) to the base ring (H), as seen in FIG 3. Connect the other end of the frame to the top ring (E) using M6 x 8mm bolts (BB). Repeat this step for the rest of the frames.

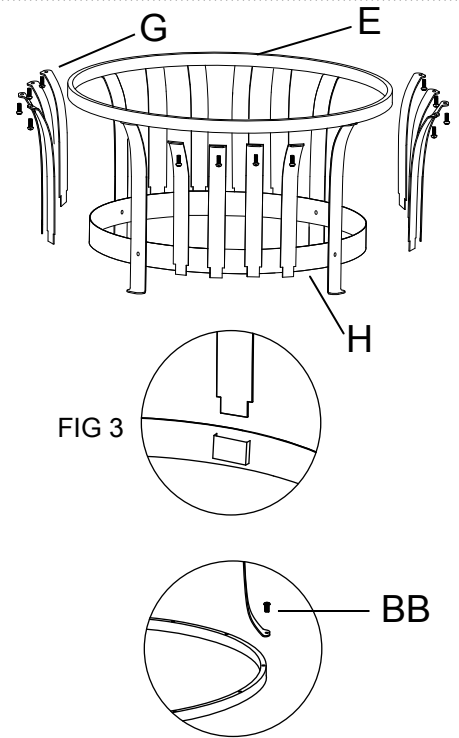

Step 4:

 Place the fire bowl (D), log grate (C) and mesh screen (B) into the assembly base. Place the poker (I) near the fire pit. Ensure all parts are secure. The fire bowl is ready for use.

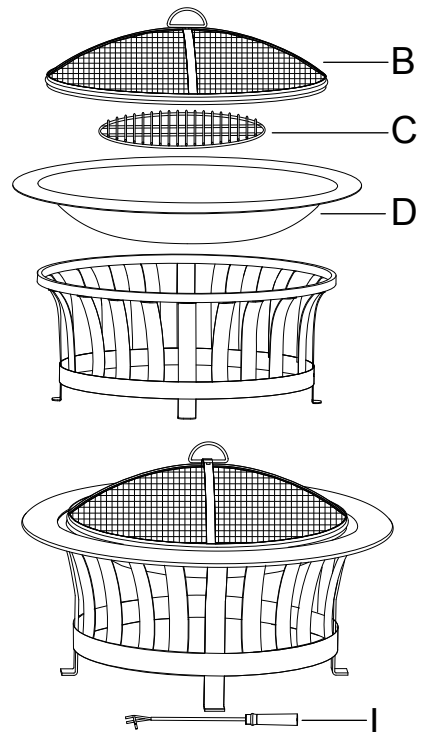

Care and Maintenance

Lighting

1. Make sure there is only a small amount of ash in the bottom of the bowl.
2. Place a layer of dry kindling or a natural fire-starter onto the center of the grate.
3. Place above that a layer of dry seasoned hardwood that is cut to lengths no more than 3/4 the length of the bowl diameter.
4. Use a match to light kindling or fire-starter.
5. Using the hook that is provided and heat resistant gloves, replace spark guard once the kindling or fire-starter is lit.

Tending the Fire

You may need to shift and/or add logs for an ideal experience.

Do NOT place a hot spark guard or hot fire pit tool onto combustible surfaces such as grass, wooden deck or furniture.

1. Using the hook that is provided and heat resistant gloves, carefully remove spark guard.
2. While using a long handled fire pit tool, shift coals and logs to allow additional airflow.
3. Do NOT add gasoline, kerosene, diesel fuel, lighter fluid or alcohol to relight or enhance an existing fire.
4. Wait until glowing coals have developed before adding any additional wood. If additional wood is required, place wood on top coals, be careful not to shift ashes.

Extinguishing

1. Allow fire to burn itself out.
2. Do NOT use water to extinguish as this is dangerous and can cause damage to this outdoor fire pit.

Inspecting

This fire pit should be inspected on a regular basis to ensure product safety and longer product life. Do NOT attempt to inspect this fire pit until the fire is COMPLETELY out.

1. Check handles to make sure they are secure.
2. Check components for any signs of damage or rust.
3. If damage to any component is detected, do NOT operate until repairs are executed.

Cleaning

This fire pit should be cleaned on a regular basis to promote safer experiences and longer product life.

Note: After repeated use, a slight discoloration of the finish may occur.

Do NOT attempt to clean this fire pit until the fire is COMPLETELY out and cool to the touch.

Do NOT use oven cleaner or abrasive cleaners as they will damage this product.

Do NOT clean any part of this fire pit in a self cleaning oven as it may damage the finish.

1. Wipe exterior surfaces with a mild dishwashing detergent or baking soda.
2. For stubborn surfaces use a citrus based degreaser and a nylon scrubbing brush.
3. Rinse and clean with water.
4. Remove built-up creosote from components with a chimney cleaning product.

Storage

Do NOT move or store this fire pit until the fire is COMPLETELY out and cool to the touch.

1. Once the fire is out, coals are cold and fire pit is cool to the touch, remove ashes and properly dispose.
2. Store the fire pit in a dry location to maximize product life.
3. Store assembled in a location away from children and pets.

Warranty

This product is covered by a one year (1) warranty against manufacturer's defects.
Manufacturer's warranty does not cover: Acts of nature, fire, freezing, abusive use, normal fading, stains, rust, or freight and handling.

Need help?
Call our number at:
(888) 922-2336
customerservice@academy.com