


THE Z-505 PROGRAMMABLE THERMOSTAT

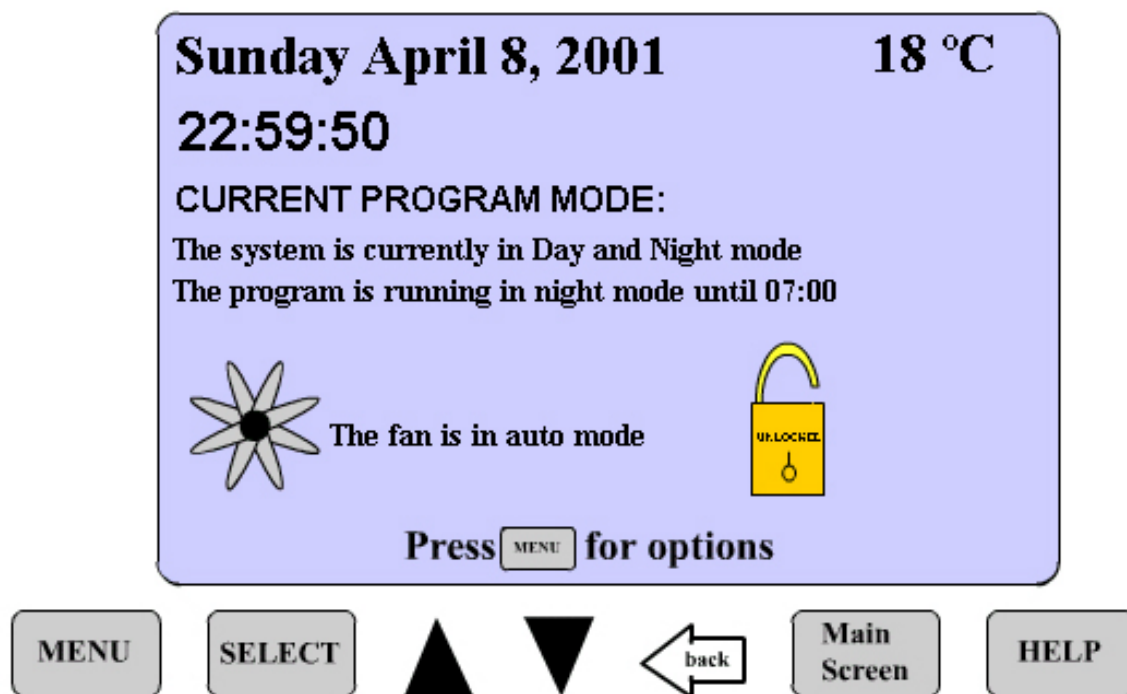

USER'S MANUAL

TempMaster Inc.

TABLE OF CONTENTS

OVERVIEW OF FEATURES.....	2
INSTALLATION.....	2
THE INTERFACE	3
THE MAIN SCREEN.....	3
THE MAIN MENU	4
PROGRAMMING THE THERMOSTAT	5
DAY AND NIGHT MODE.....	5
MORNING, DAY, EVENING AND NIGHT MODE	6
THE FAN.....	7
OVERRIDES.....	8
TEMPORARY OVERRIDE.....	8
INDEFINITE OVERRIDE	9
CANCELLING AN OVERRIDE	9
FILTER CLEANING	10
SETTING THE CLEANING INTERVAL.....	10
RESETTING THE FILTER CLEANING FEATURE	11
SYSTEM LOCK	11
LOCKING THE SYSTEM.....	11
UNLOCKING THE SYSTEM	12
CHANGING THE PASSWORD.....	13
CHANGING THE TIME	13
CHANGING THE DATE.....	14
CHANGING TO CELSIUS OR FAHREINHEIT	16
DISPLAYING TIME IN STANDARD OR MILITARY FORMAT	16
CUSTOMIZING THE MAIN SCREEN.....	16
APPENDIX.....	17
INSTALLATION	17
WARRANTY	17

OVERVIEW OF FEATURES

Thank you for purchasing the Z-505 programmable thermostat! No more walking up to the old thermostat all the time to adjust the temperature! You will be able to program a weekly temperature schedule as well as benefit from a bunch of additional features. But the best part is that you won't have to stare at the unit, scratching your head, trying to figure out how it works. Our interface has been designed with you, the end-user, in mind. A lot of emphasis was placed on this aspect, and in fact much user testing was done to help us make the system as easy to use as possible. You will not be disappointed!

Programming the thermostat can be done in one of two ways. First, the 'Day and Night' mode allows you to split your days into two segments. You first select a temperature for the day and one for the night. Then, you decide at what time the 'day' and 'night' periods are to start for each day of the week by filling in a simple table. So if you're like most people and get up a little later on the weekends, the day temperature could be set to come into effect later on Saturdays and Sundays. Alternatively, the 'Morning, Day, Evening and Night' mode allows you to split the day into four time segments. There are four temperature settings to be selected, and again you decide when these periods start for each individual day of the week by filling in the timetable.

Other features include manual and automatic modes for the fan. The 'system lock' feature allows you to lock the thermostat: in this state, modifications to the various system settings are not permitted. The 'filter cleaning reminder system' reminds you when the furnace filters are due to be changed or cleaned: in order to use this feature, the interval at which this is to be done must be set. The 'override' feature allows the weekly program to be overridden to any temperature. The override can be indefinite, or temporary, in which case the duration (in hours) is requested.

The main screen contains information relating to the current state of the system. If you find some of this information unhelpful or annoying, the look of this screen can be customized by accessing the 'display options'. Finally, temperature can be displayed in Celsius or Fahrenheit, and time shown in standard format (AM/PM) or in military style (20:00).

INSTALLATION

It is highly recommended that the unit be installed by a professional electrician. Instructions and specifications are supplied in the appendix. However, if you choose to install it yourself, please be very careful, electricity isn't something you want to mess around with.

THE INTERFACE

The concept of menus has finally arrived to programmable thermostats. Use of the system is thus made a lot easier. There are only seven buttons. Instructions on the bottom of each screen indicate how they are to be used to accomplish various tasks. For example, in figure one below, the main screen is shown. The instruction on the bottom states that the 'menu' button must be pressed to access the different options the system has to offer.

Pressing the 'menu' button at any time brings up the main menu, which gives you access to all the different functions and features of the thermostat. Pressing 'main screen' at any time brings the main screen up. The 'select', 'up' and 'down' buttons are used to navigate through the different menus, and to input information, such as times and temperatures. When 'back' is pressed, the previous screen comes up. Finally, if at any given moment you feel you need some quick assistance, pressing the 'help' button brings up some useful tips.



Figure 1: The main screen

THE MAIN SCREEN

Please refer to figure 1 above. All information relating to the state of the system is available simply by taking a quick look at the main screen. The current temperature as well as the current time and date are shown at the top. The middle of the screen is reserved for information about your weekly temperature program. The current state of the fan is shown on the bottom left, and the yellow padlock on the right indicates whether or not the system is locked. The look of the main screen can be customized, for example you may not want to have the current date shown. Please refer to the 'display options' section for more information on this.

THE MAIN MENU

Pressing the 'menu' button brings up the screen shown below in figure 2. All of the thermostat's functions and features are accessed through this menu. By default, the first option (Review/Modify Program) is selected. As the instruction on the bottom of the screen dictates, to choose another option the 'up' and 'down' keys are to be used, and finally the 'select' button is to be pressed to confirm your choice.



Figure 2: The main menu

PROGRAMMING THE THERMOSTAT

Programming the thermostat can be done in one of two ways. First, the 'Day and Night' mode allows you to split your days into two segments. You first select a temperature for the day and one for the night. Then, you decide at what time the 'day' and 'night' periods are to start for each day of the week by filling in a simple table. Alternatively, the 'Morning, Day, Evening and Night' mode allows you to split the day into four time segments. There are four temperature settings to be selected, and again you decide when these periods start for each individual day of the week by filling in the timetable.

DAY AND NIGHT MODE

From the main screen press the 'menu' button, and select the first option, entitled 'Review/Modify Program'. You will be presented with the screen on the top left of figure 3. The current program mode is shown at the top: the thermostat ships with the 'Day and Night' mode selected by default. Next, the temperatures for the day and night are shown. To change these, since the 'change temperatures' option is already selected, simply press 'select'. You will then be presented with the screen shown on the bottom left. The temperature for the day is currently selected, use the up and down buttons to adjust it. To move on to the night temperature, press select and again use the up and down keys to adjust it. Then, finally, press select. A confirmation screen will confirm the adjustments, and give you the possibility of changing the temperatures again by pressing the back button. To accept the changes, press the menu button.

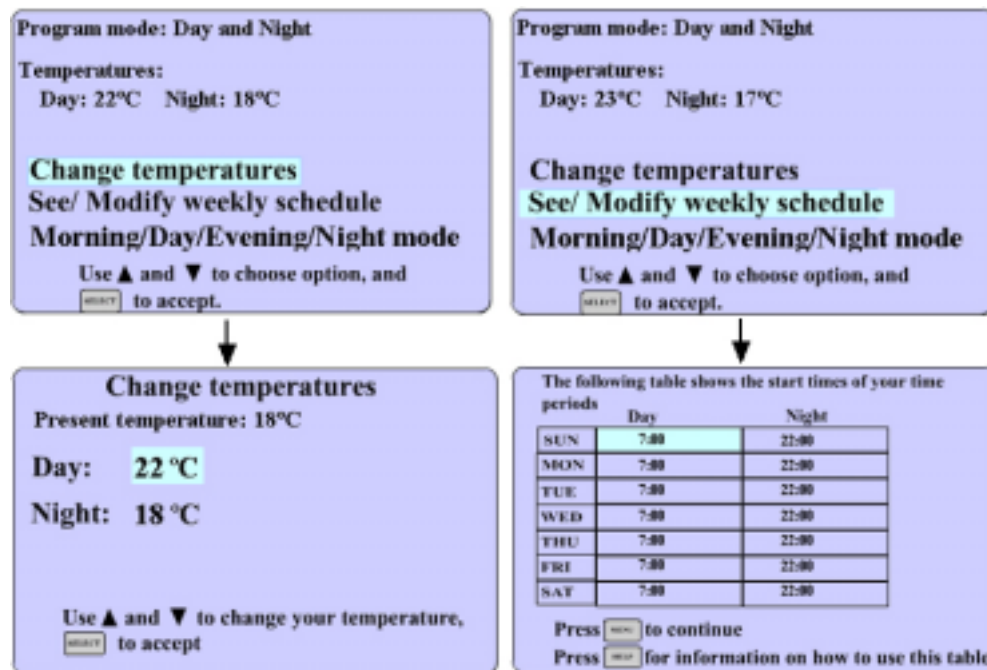


Figure 3: Programming the thermostat (Day and Night mode)

To set the times at which the day and night temperatures are to come into effect for each day of the week, re-select the 'Review/Modify Program' option from the main menu, which you should currently be in. Then, as shown in the top right screen of figure 3, select 'See/Modify Weekly Schedule' by pressing the down button and then select. You will then be presented with the screen on the bottom right (figure 3). Some default times are already entered in the table. For example, say you want to have the day temperature start at 8:30AM on Thursdays. Press the down key until the 'Thursday/Day' box is highlighted, then press select. The hours will now be shown in a red box. Press the up key once to select 8, then press select. The minutes will now be shown in the red box. Press the up key until 30 is reached, and finally press select. Repeat the process to set other times. Your weekly schedule is now saved! Simply press 'menu' to return to the main menu, or 'main screen' to return to the main screen.

MORNING, DAY, EVENING AND NIGHT MODE

The thermostat ships with the day and night mode set by default. To switch to the Morning, Day, Evening and Night mode, first select 'Review/Modify Program' option from the main menu. Then, as shown in the top left screen of figure 4, press the down key twice to highlight 'Morning/Day/Evening/Night mode' and press select. You will now be presented with the screen shown on the bottom left.

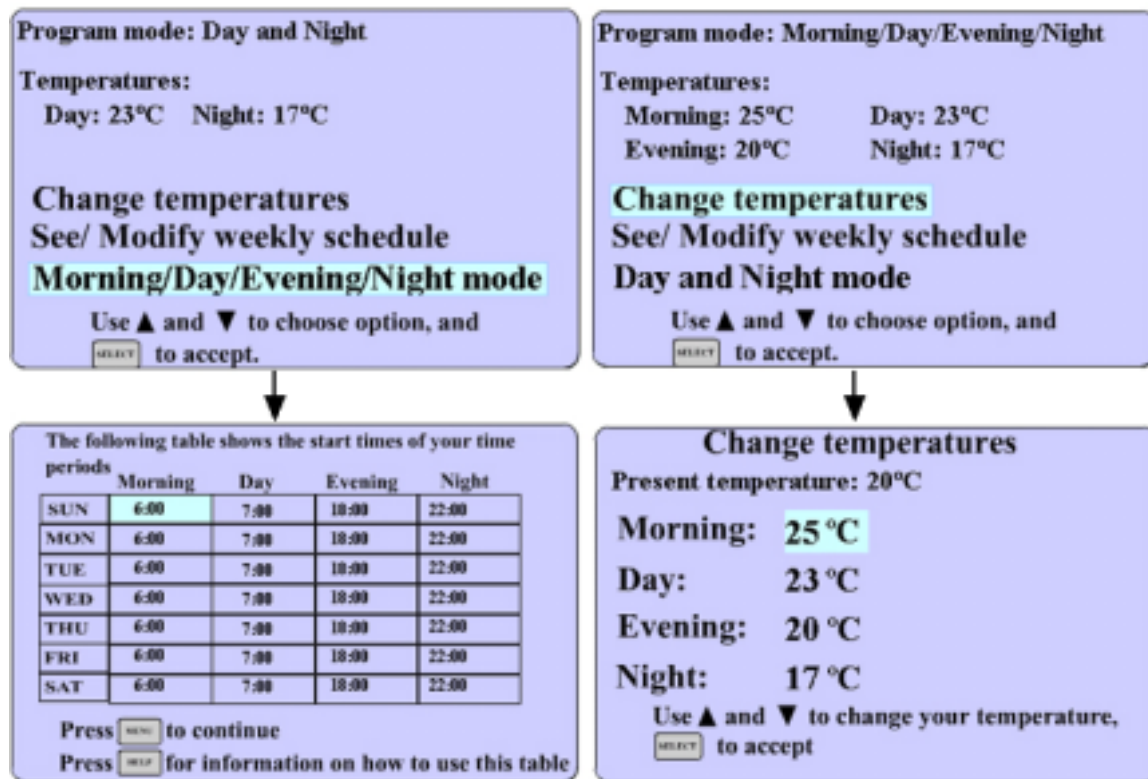


Figure 4: Programming the thermostat (Morning, Day, Evening and Night mode)

You must now decide at what times the morning, day, evening and night temperatures are to come into effect for each day of the week. Some default times are already entered in the table. For example, say you want the evening temperature to start at 7:30PM on Mondays. Press the down key until the 'Monday/Evening' box is highlighted, then press select. The hours will now be shown in a red rectangle. Press the up key once, so now you have 19 for the hours, and then press select. The minutes are now in the red rectangle. Press the up key until 30 is shown, and then select. The time is now set. Repeat the procedure to set other times. When you are done, press the menu.

To set the temperatures for the morning, day, evening and night, select 'Review/Modify Program' from the main menu, which you should be in at this point. You will be presented with the screen shown in the top right of figure 4. Some default temperatures are shown. To modify them, press select to get into the 'Change Temperatures' option, which is already highlighted. The screen shown on the bottom right of figure 4 will appear. The morning temperature is selected. Use the up and down buttons to adjust it, and then press select to move on to the day temperature. Again use the up and down buttons to adjust it, and press select to accept it. Proceed in the same manner to adjust the remaining temperatures. After accepting the night temperature, you will be presented with a screen confirming that the changes have been made and giving you the option of re-adjusting the temperatures by pressing the back button. Press menu to return to the main menu, or main screen to have the main screen appear.

THE FAN

The fan can either be set in automatic mode, or in manual mode, in which case you turn the fan on or off yourself. The current state of the fan is shown in the bottom left portion of the main screen, beside the fan picture.

In the manual mode, to turn the fan on or off, from the main menu, press the down key until 'fan' is highlighted, then press select. If the fan is currently off, the option selected by default is 'Turn fan on', and if the fan is currently on, the option selected by default is 'Turn fan off'. You simply have to press select. A screen will then be shown to confirm that the fan has been turned on or off, press menu to continue.

If the fan is currently in manual mode and you would like to switch to the automatic mode, simply go into the fan section from the main menu and select 'switch to auto mode'. A screen will then come up to confirm the switch, press menu to continue.

If the fan is in auto mode and you would like to switch to the manual mode, the fan section of the main menu allows you to switch to 'manual mode, fan off' or 'manual mode, fan on'.

OVERRIDES

The temperature program can be overridden to the temperature of your choice by using the override feature. The temporary override prompts for a duration in hours: after that time is up, the program will start running again. The indefinite override last indefinitely.

TEMPORARY OVERRIDE

From the main menu, use the down key until 'overrides' is highlighted, then press select. You will be presented with the screen shown in the top left of figure 5. Since 'temporary override' is already highlighted, simply press select. You will now see the screen on the bottom left (figure 5). The override temperature must be entered: use the up and down buttons to adjust it, and then press select to accept it. The duration of the temporary override in hours is now requested, as shown on the bottom right (figure 5). Use the up and down buttons to choose the number of hours, and then press select. Finally, you will be presented with the screen shown on the top right of figure 5, which confirms the override temperature and the duration of the override, and additionally provides instructions on how to cancel the override – see the 'cancel override' section below. Press menu to continue.

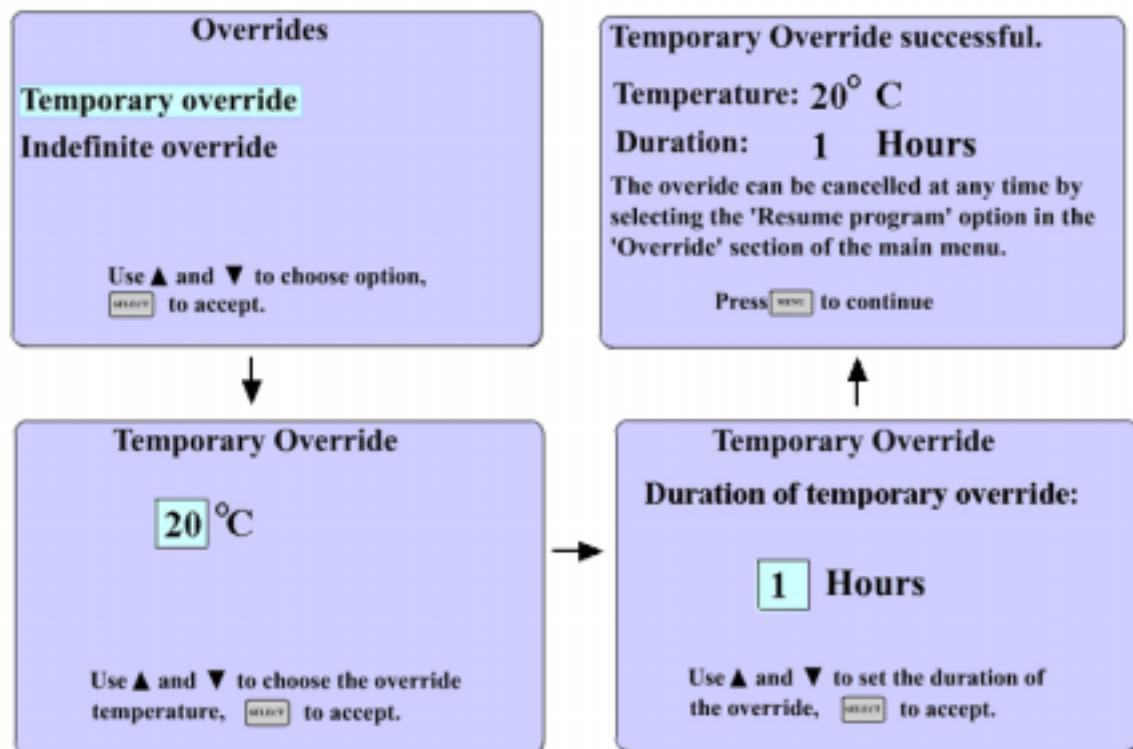


Figure 5: Temporary override

INDEFINITE OVERRIDE

From the main menu, press the down button until 'overrides' is highlighted, then press select. Then, as shown in the top left of figure 6, press the down button until 'indefinite override' is highlighted, then press select. You will be presented with the screen on the bottom left (figure 6). Using the up and down buttons, select the override temperature, then press select to accept it. Finally, you will be presented with the screen on the bottom right (figure 6) which confirms the indefinite override and gives instructions as to how to cancel the override – see the 'cancel override' section below. Press menu to continue.

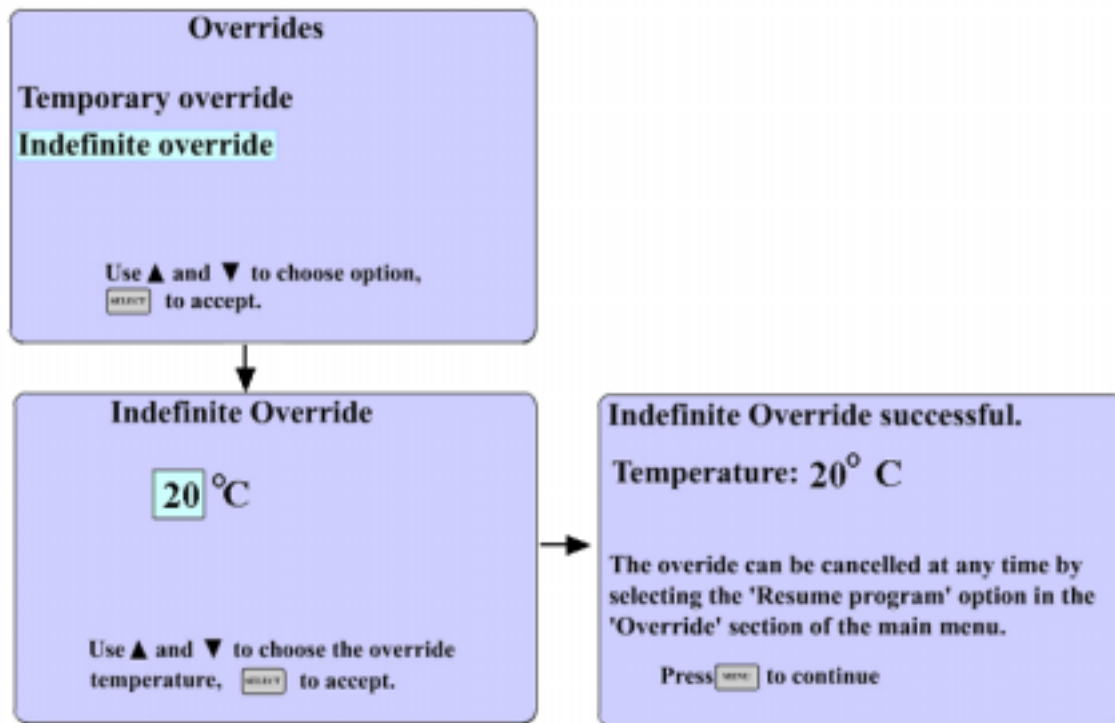


Figure 6: Indefinite override

CANCELLING AN OVERRIDE

To cancel a temporary or indefinite override and continue with normal program operation, from the main menu use the down button until 'overrides' is selected, then press select. Press the down button twice until 'resume program' is selected, then press select. A screen will come up, confirming the cancellation of the override and indicating that the system is now back to 'day and night' or 'morning, day, evening and night' mode.

FILTER CLEANING

The filter cleaning feature reminds you of when your furnace filters are to be changed or cleaned. You set an interval in days, and when that time arrives, you will be notified by a little picture of filters on the main screen with 'wash filters' written under it, as shown below in figure 7. When you've cleaned them, simply reset the filter cleaning option.

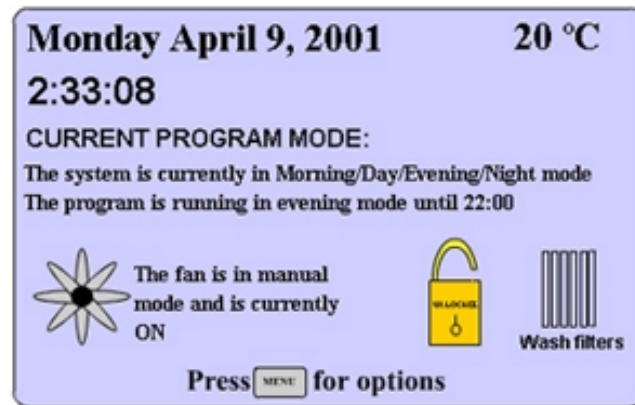


Figure 7: Filter cleaning, reminder on main screen (bottom right)

SETTING THE CLEANING INTERVAL

In the main menu, use the down button until 'filter cleaning' is highlighted, then press select. You will be presented with the screen shown in figure 8, which shows how many days ago the filters were last cleaned, and in how many days the filters are due for their next cleaning. 'Set cleaning interval (in days)' is highlighted, so simply press select. You will then be presented with the screen shown in figure 9. Using the up and down buttons, set the cleaning interval in days, and then press select. A screen will then confirm the cleaning interval, press menu to continue.

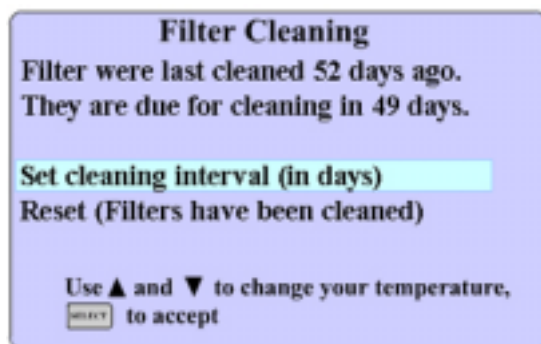


Figure 8: Filter cleaning menu

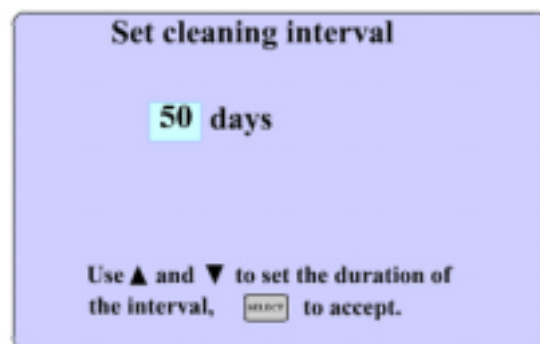


Figure 9: Set filter cleaning interval

RESETTING THE FILTER CLEANING FEATURE

When you've cleaned your filters, you must reset the feature. The system will then wait the amount of days specified by the interval you've selected (see the above section entitled 'setting the cleaning interval') before notifying you again. From the main menu, use the down button until 'filter cleaning' is highlighted, then press select. You will then be presented with the screen shown in figure 8. Press the down button to choose 'reset (filters have been cleaned)' and press select. You will be presented with the screen shown in figure 10, which confirms the reset and indicates when the next cleaning is scheduled for. Press menu to continue.



Figure 10: Resetting the filter cleaning feature

SYSTEM LOCK

When the system is locked, nothing can be done with the system, all features are locked. Most importantly, changes to the program are not permitted. To have the options available again, the system must be unlocked. The default password is 111.

LOCKING THE SYSTEM

To lock the system, from the main menu use the down button until 'system lock' is highlighted, then press select. You'll be presented with the screen on the top left of figure 11. Since the 'lock' option is already selected, simply press select. You will now be prompted for the password. The first digit is highlighted, use the up and down buttons to select it, then press select. The next digit will now be highlighted, again use the up and down buttons to choose it, then press select to accept it and move on to the third and last digit, which is to be entered in the same manner. You can use the 'back' button to return to a previous digit and make adjustments. If the password is correct, you will be presented with the last screen of figure 11, which confirms that the system is locked and that the unlock option must be used to unlock the system. If the password is incorrect, a

screen indicating that the entry is invalid will come up, with instructions to press back to enter it again.

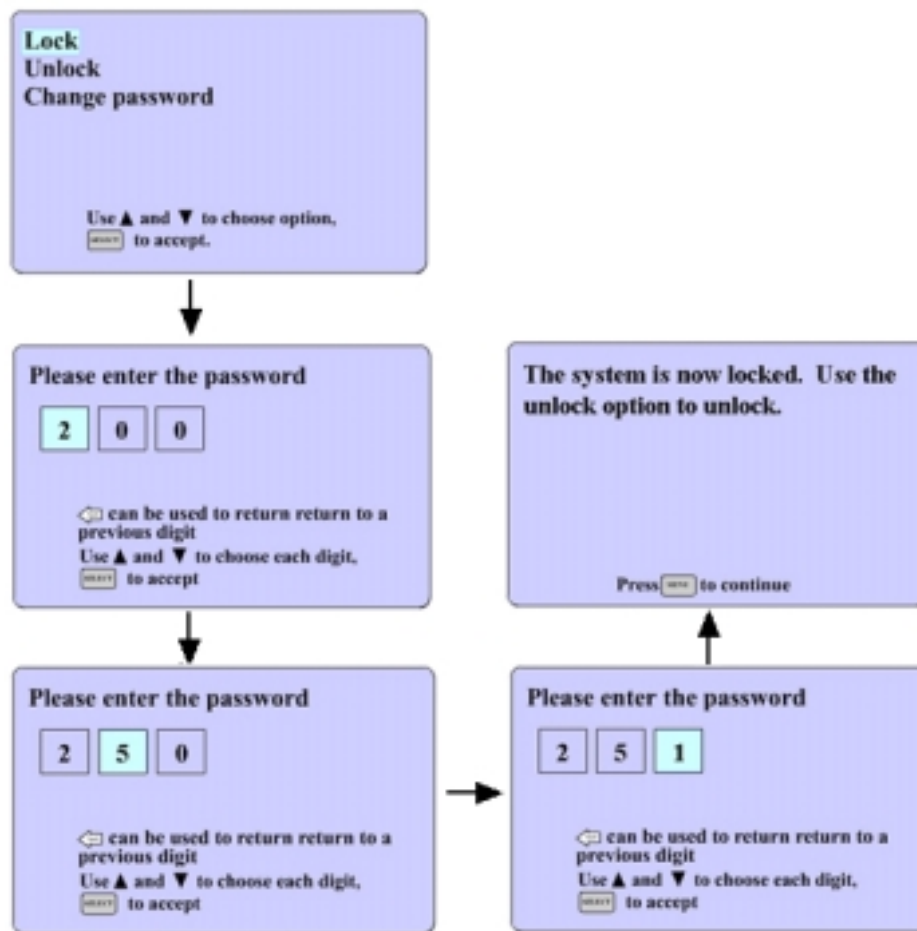


Figure 11: Locking the system

UNLOCKING THE SYSTEM

To unlock the system, from the main menu use the down key until 'system lock' is highlighted, then press select. The screen on the top left of figure 11 is shown. Press the down key once and then select to get into the 'unlock' section. You will be asked for the password, which is to be entered in exactly the same way as when you're locking the system – please refer to the previous section entitled 'locking the system' for explicit instructions on this. If the password is correct, a screen confirming this will come up, press menu to continue. If the entry is incorrect, a screen explaining this appears, you may press back to try again.

CHANGING THE PASSWORD

To change the password, from the main menu use the down key until 'system lock' is highlighted, then press select. Using the down button, get 'change password' highlighted, as it is in the top left screen of figure 12, then press select. The screen on the bottom left of figure 12 is now shown: the old password must be entered. The procedure to do this is exactly the same as when you're locking the system – refer to the 'locking the system' section for explicit instructions on how to do this. If the entry is incorrect, the system will inform you of this and give you the option of trying again by pressing the back button. If the old password is correct, you'll be presented with the screen shown on the bottom right of figure 12, in which the new password is required. Finally, the screen on the upper right is shown, confirming the new password. The password can be immediately re-changed by pressing the back button at this point. To accept the password, press menu.

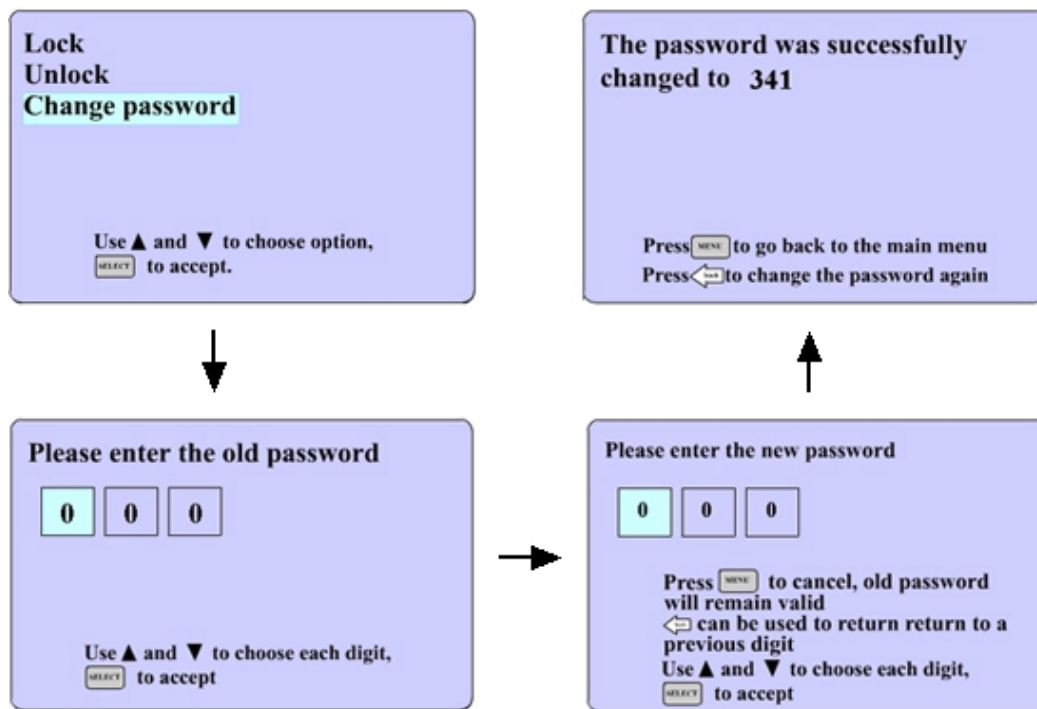


Figure 12: Changing the password

CHANGING THE TIME

From the main menu, press the down button until 'Time / Date' is highlighted, then press select to accept. You'll be presented with the top-left screen of figure 13. Since 'change current time' is already chosen, simply press select to accept. The current time is now shown, split up into hours and minutes, as can be seen in the middle-left screen of figure 13 (say it is 11:57 right now). Suppose we want to change the time to 16:30. Since the hours are already selected, use the up button until 16 is displayed, then press select. The minutes will now be selected. Use the down button until 30 is reached, then press select.

Finally, the screen shown on the top right of figure 13 appears, confirming the new time, and giving you the option of pressing the back button to re-adjust the time. To accept this new time, press menu to access the main menu, or main screen to return to the main screen.

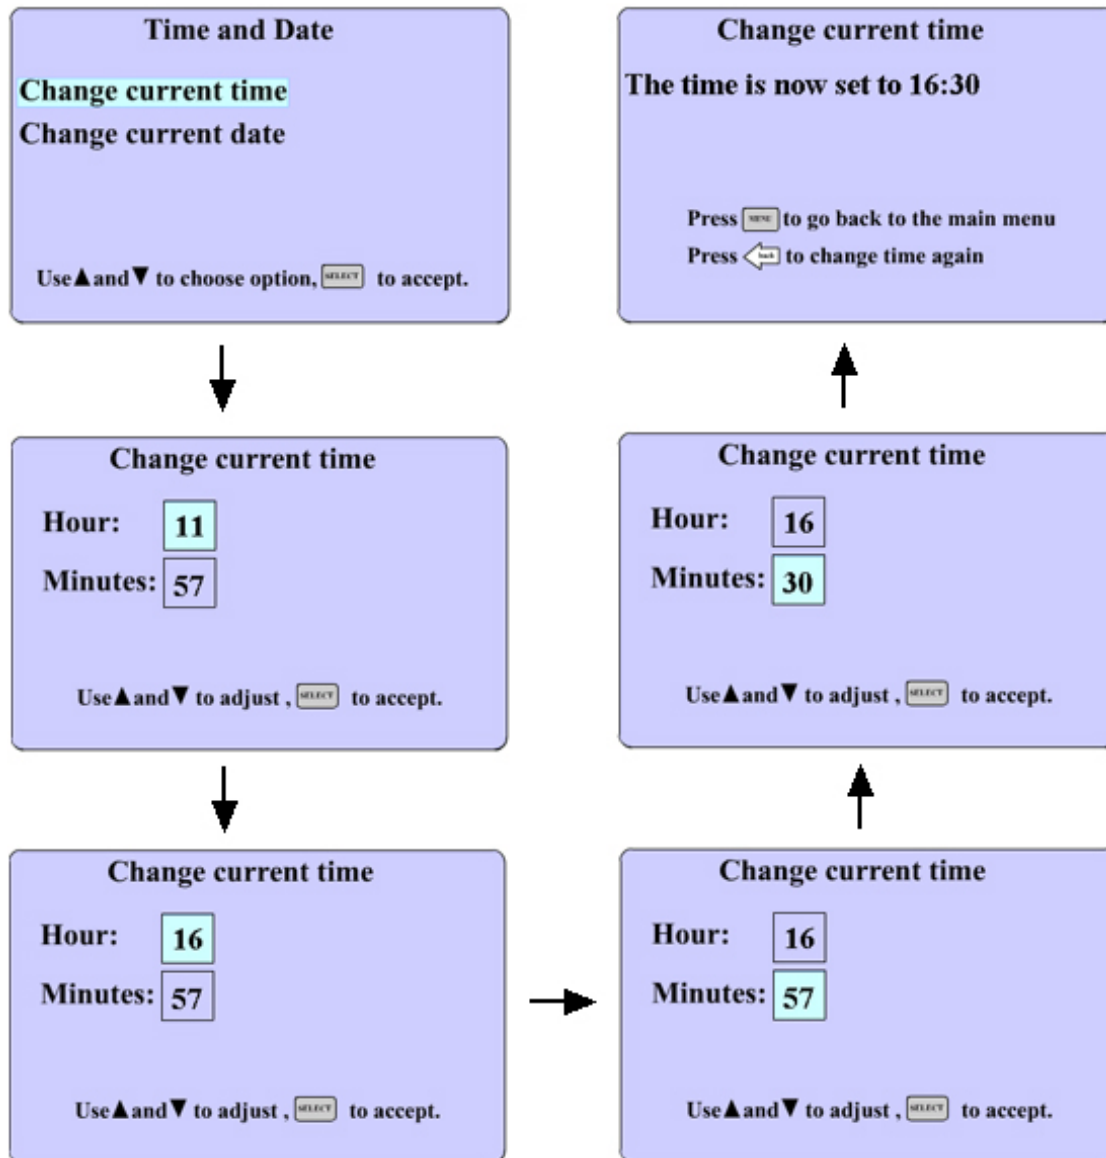


Figure 13: Changing the time

CHANGING THE DATE

From the main menu, press the down button until 'Time / Date' is highlighted, then press select to accept. Press the down button once to choose 'change current date', as shown in the top left of figure 14. The next screen shows the date currently stored in the system (April 9th 2001 in our example), and the year is selected. Say we want to change the date to June 24th 2001. Since the year is correct, press select to accept it. The month box will

now be highlighted, simply press the up button until 6 is shown, press select to accept it. You're now in the day box, press the up button until 24 is shown and then press select. The screen shown in the top right of figure 14 is displayed, confirming the new date, and giving you the option of pressing the back button to go change the date again. If the date is correct, press menu for the main menu or main screen to return to the main screen.

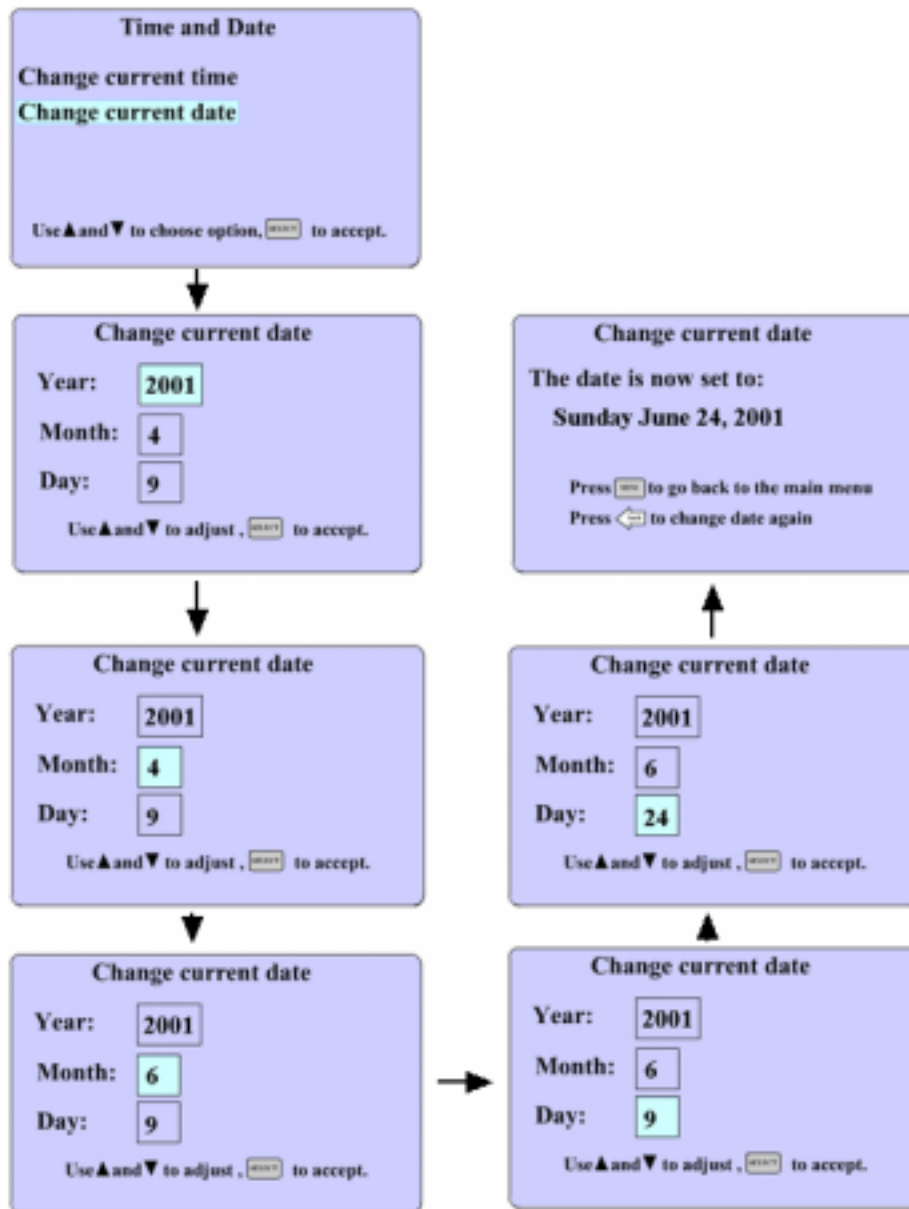


Figure 14: Changing the date

CHANGING TO CELSIUS OR FAHREINHEIT

The thermostat ships with temperature units set to Celsius by default. To switch to Fahrenheit, from the main menu use the down button until 'display options' is selected, then press select. You will be presented with a list of six options, the 5th of which is 'display temperature in Fahrenheit'. Using the down button, get this line highlighted and press select. The next screen will confirm the switch of temperature units. Press menu to go to the main menu, main screen to return to the main screen, or back to adjust more display options.

To switch back to Celsius, follow the same steps as above, the only difference being that the 5th option in 'display options' will now be 'display temperature in Celsius'.

DISPLAYING TIME IN STANDARD OR MILITARY FORMAT

The thermostat ships with the time displayed in military format (19:00, 01:00). To switch to the standard notation (AM/PM), from the main menu use the down button until 'display options' is selected, then press select. You will be presented with a list of six options, the 6th of which is 'display time in standard format'. Using the down button, get this line highlighted and press select. The next screen confirms that time will now be displayed in standard format. Press menu to go to the main menu, main screen to return to the main screen, or back to adjust more display options.

To switch back to military format, follow the same steps as above, the only difference being that the 6th option in 'display options' will now be 'display time in military format'.

CUSTOMIZING THE MAIN SCREEN

The look of the main screen can be tailored to your personal preferences. The current time and date as well as current program information can be hidden, and finally the big yellow padlock, indicating whether or not the system is locked, can be removed if desired. To access these options, from the main menu use the down button until 'display options' is highlighted, then press select. You will be presented with a list of six options, the first four of which are for adding or removing information from the main screen. So for example, suppose you want to remove the current date from the main screen. In the 'display options' screen, press the down button once to get 'hide current date on main screen' selected, then press select. A screen will then confirm that the current date will no longer be shown on the main screen. Press menu to go to the main menu, main screen to get to the main screen, or the back button to make more display adjustments. If ever you would like to have the current date shown again, simply repeat the same steps, except this time in 'display options' instead of having a line reading 'hide current date on main screen', you will see a 'show current date on main screen' line.

APPENDIX

INSTALLATION

<Detailed installation instructions, electrical specifications of the unit>

WARRANTY

TempMaster's Z-505 programmable thermostat is guaranteed for 5 years from the date of purchase – please conserve your original proof of purchase. Contact us at 1-800-777-9990.