

## WinCE PC Station User Guide

### Installation under Windows

WinCE PC Station Introduce: .....	2
Install software on the host computer .....	2
Add users for HOST system .....	7
Start using Terminal(Below parts suitable for WinCE 5.0 system only) .....	8
Connect to HOST .....	9
System Settings.....	11
Screen Resolution Settings .....	12
Network Settings .....	13
Automatic Sever Connection Settings .....	14
Changing Password on Setting Interface .....	15
Volume Settings .....	15
Local Mode.....	16
Local Internet.....	16
Local Office.....	16
Local Player.....	17
Remote control terminal Users from HOST .....	17

WWW.PCSTATIONEN.COM

## WinCE PC Station Introduce:

 
WinCE PC Station make a number of network terminal users share a single normal computer. Models including N430, N530,N630 series, all pc station that builtin WinCE 5.0 or WinCE 6.0 system.

Working diagram as below:




## Install software on the host computer

Insert the CD into the CD-ROM in the host computer, double click the

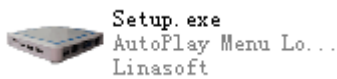


icon, go to picture 1.

WWW.PCSTATIONCN.COM

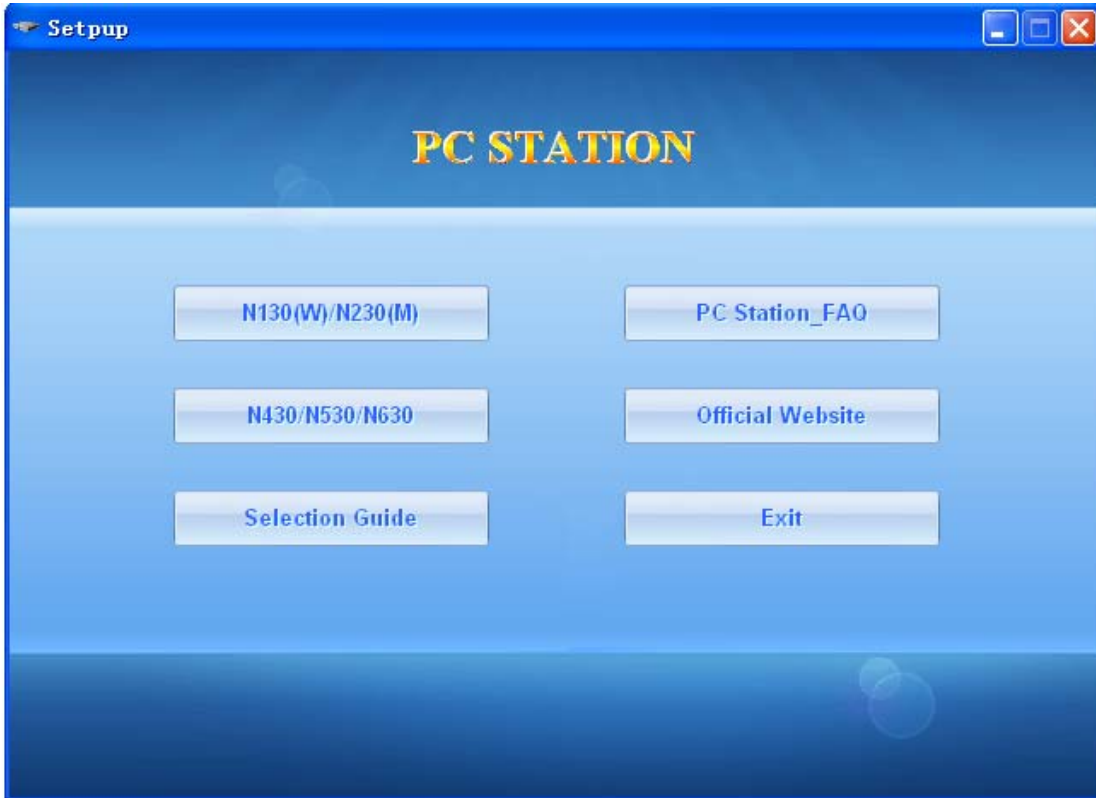

Picture 1.


Here, double click  and go to installation guide of WinCE pc stations as picture 2. You can check selection guide of pc station and FAQ to learn more about how to select and use pc stations, Visite our Official Website to learn more about our company.



Picture 2.




To setup software on HOST directly pls click  and go to picture 3, if you want to check User Guide or brown CD, click others as you want.

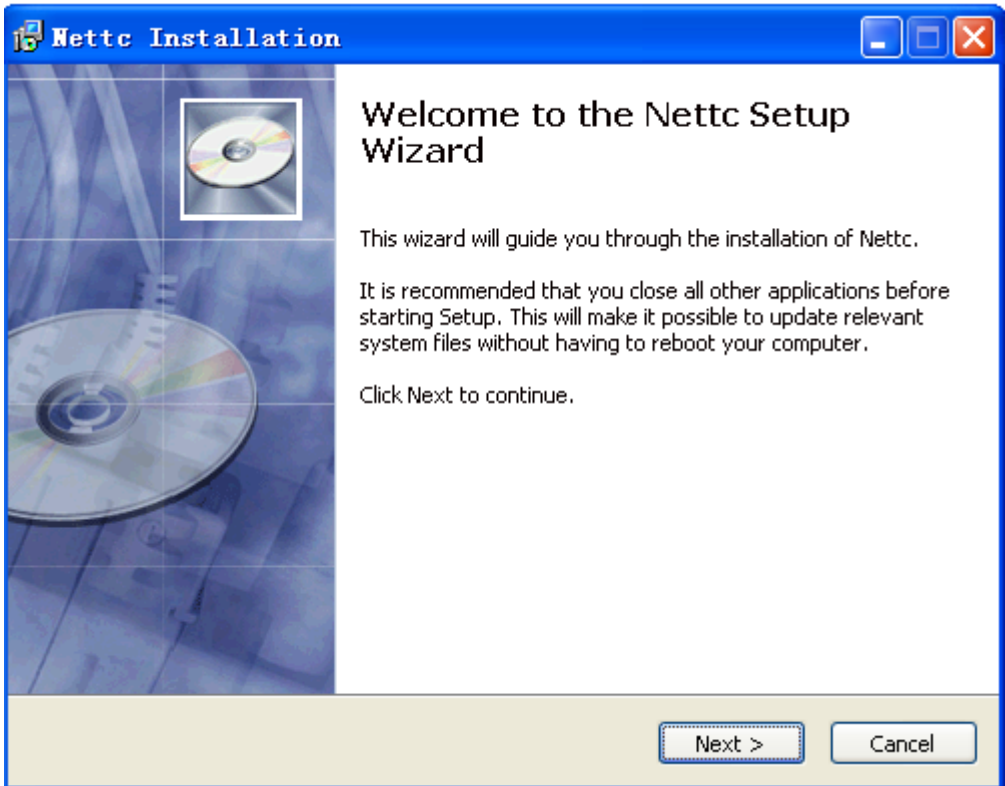

Pic 3

Click "Next"

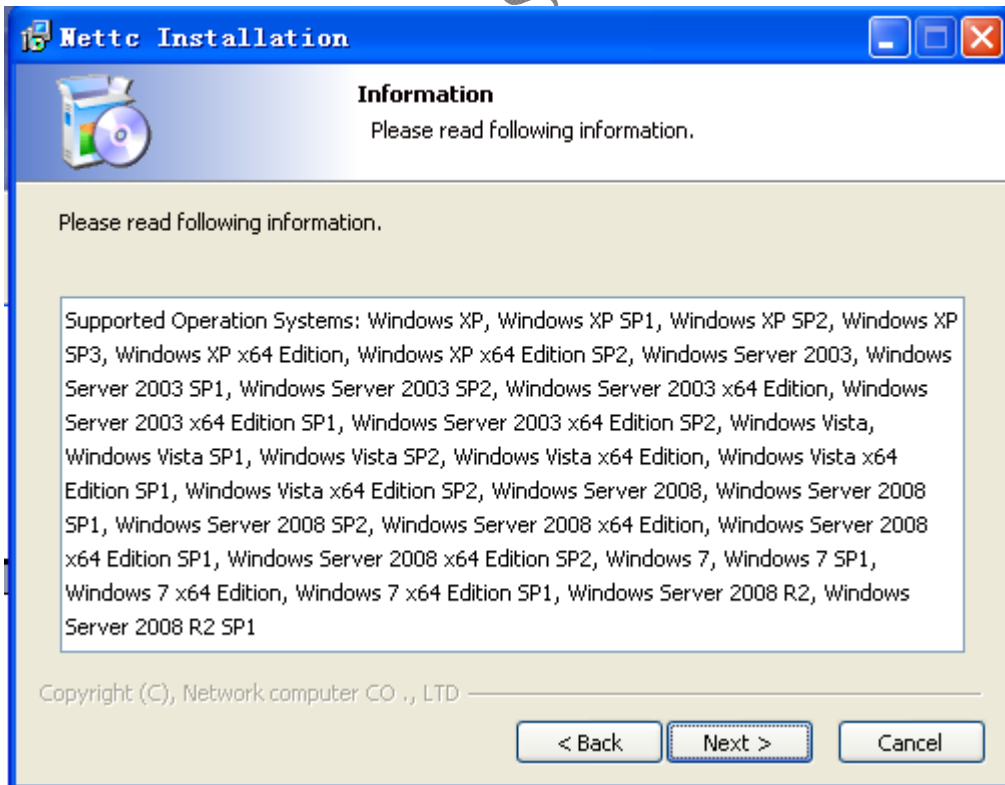

Pic 4


Click "Next"



Pic 5


Click "Next" (default installation), can change the installation directory

www.pccstc.com

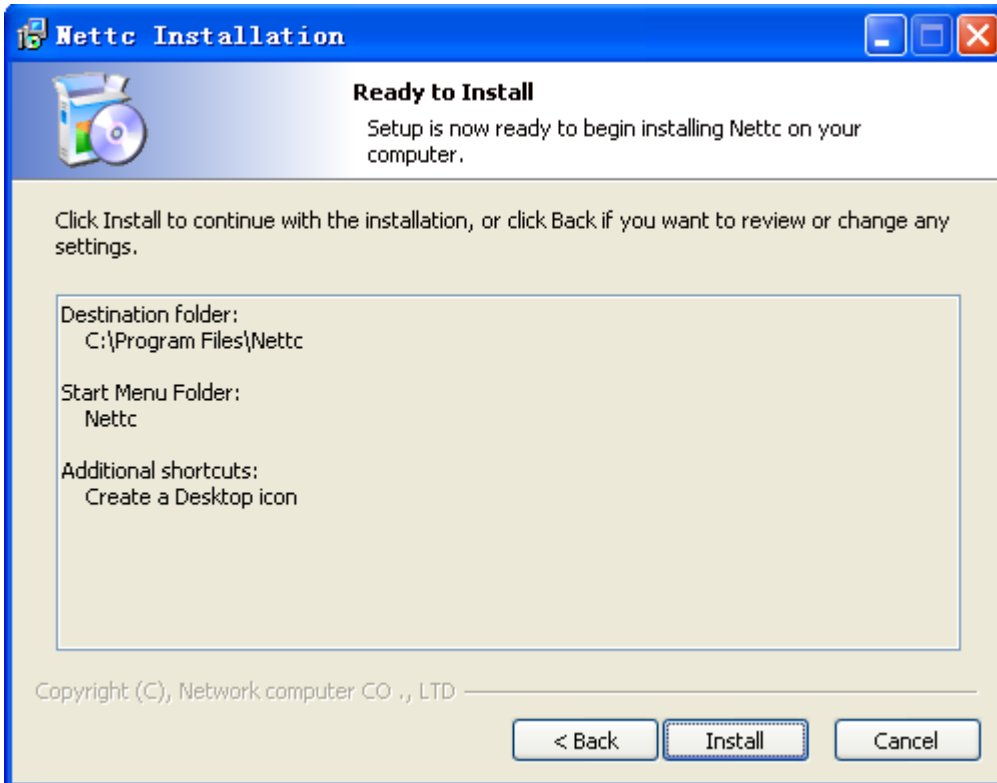

Pic 6

Click "Install"

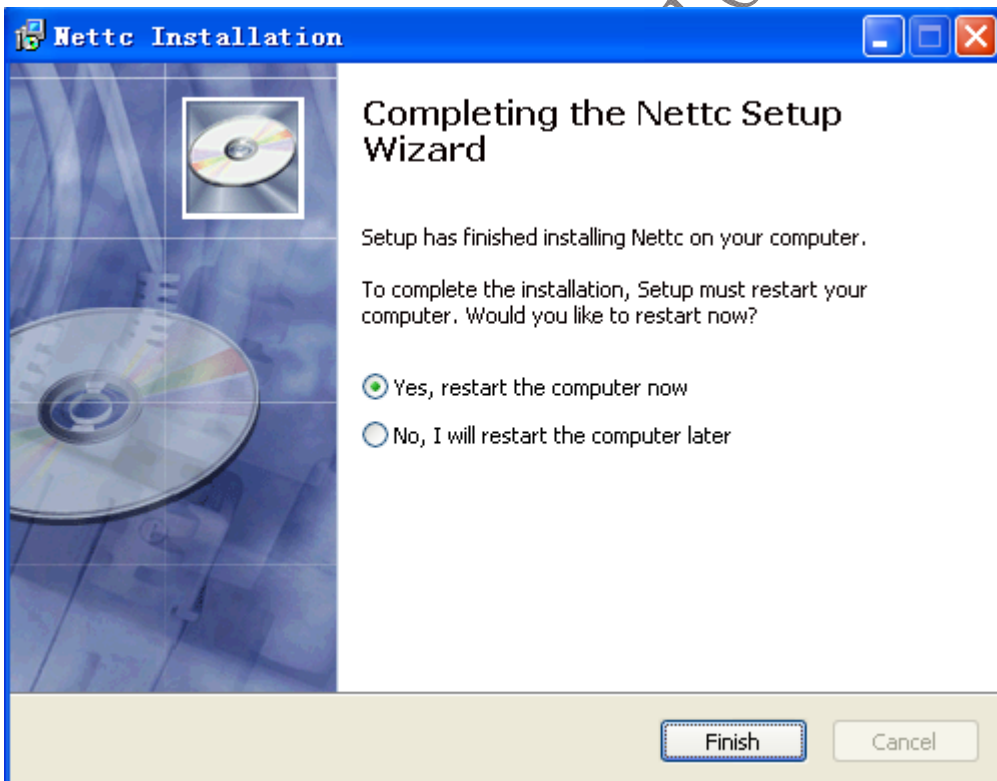

Pic7

Click "Finish"

Click "Yes", the installation is successful after restart the computer

# Add users for HOST system




Double click on HOST screen




Pic 8

 Click

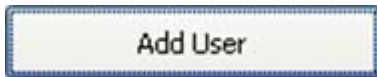

www.pcstationcn.com

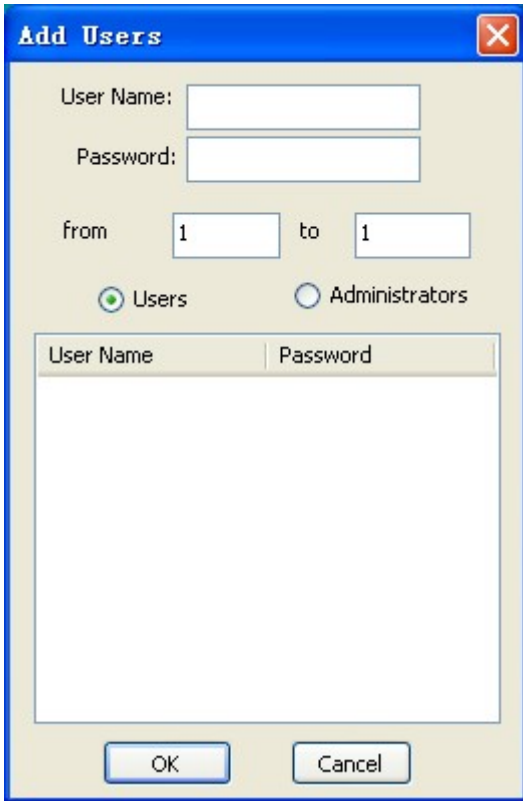

Pic 9

Remember the User Name and Password you set, later you will use them to logon HOST from Terminal.

## Start using Terminal(Below parts suitable for WinCE 5.0 system only)

Connect the peripherals such as keyboard, mouse, monitor, RJ 45 Lan, power adapter, speakers properly. (Lan cable should connect to same Switch or Router with HOST PC)



Pic 10


Then turn on power switch. The following interface will appear after the scrollbar ends





Pic 11
 
### Connect to HOST

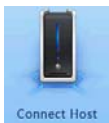


Click **Connect Host** in Pic 11.




Pic 12

After click **Add** and then input server IP address ,click **OK** .

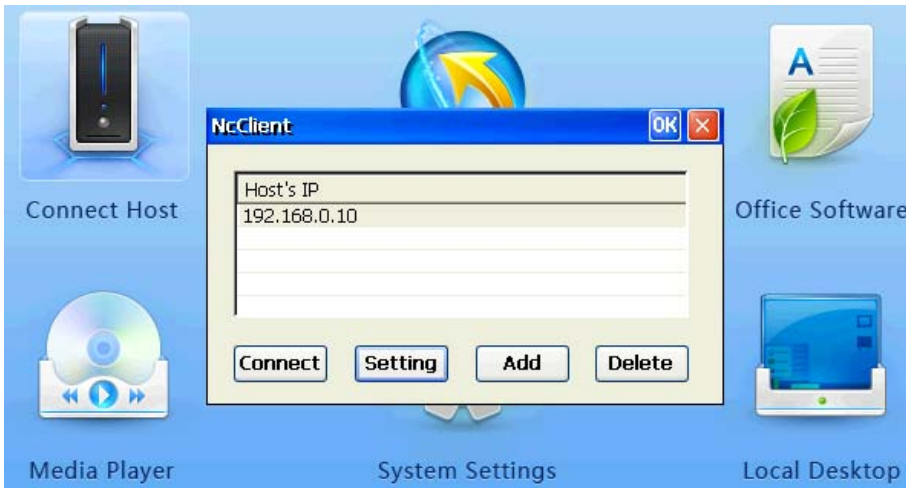


Pic 13

Selected the ip  and then click the  button

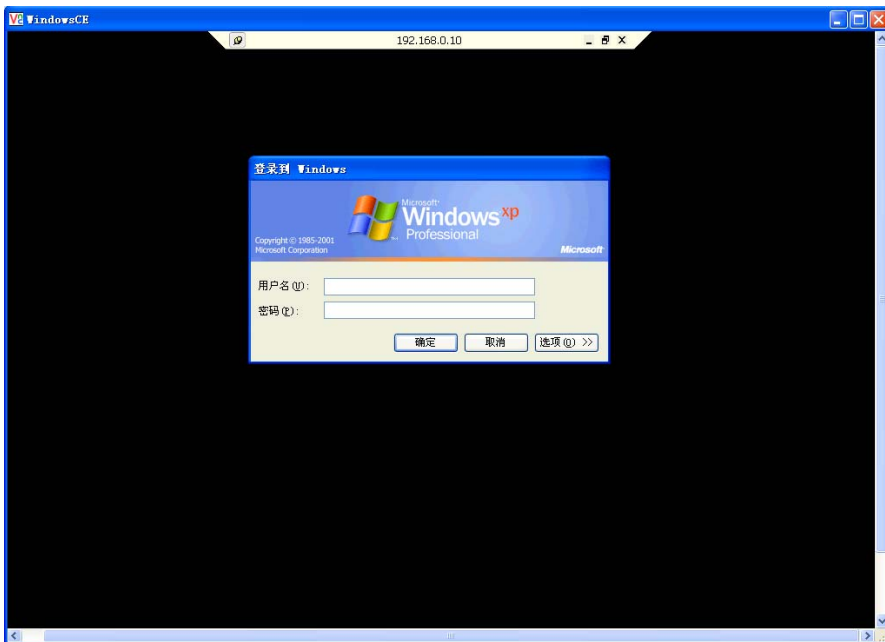

Pic 14

Input your user name and password that you set in Pic 9, then you will be able to enter the server and use it as a single computer, share all the resources with HOST.

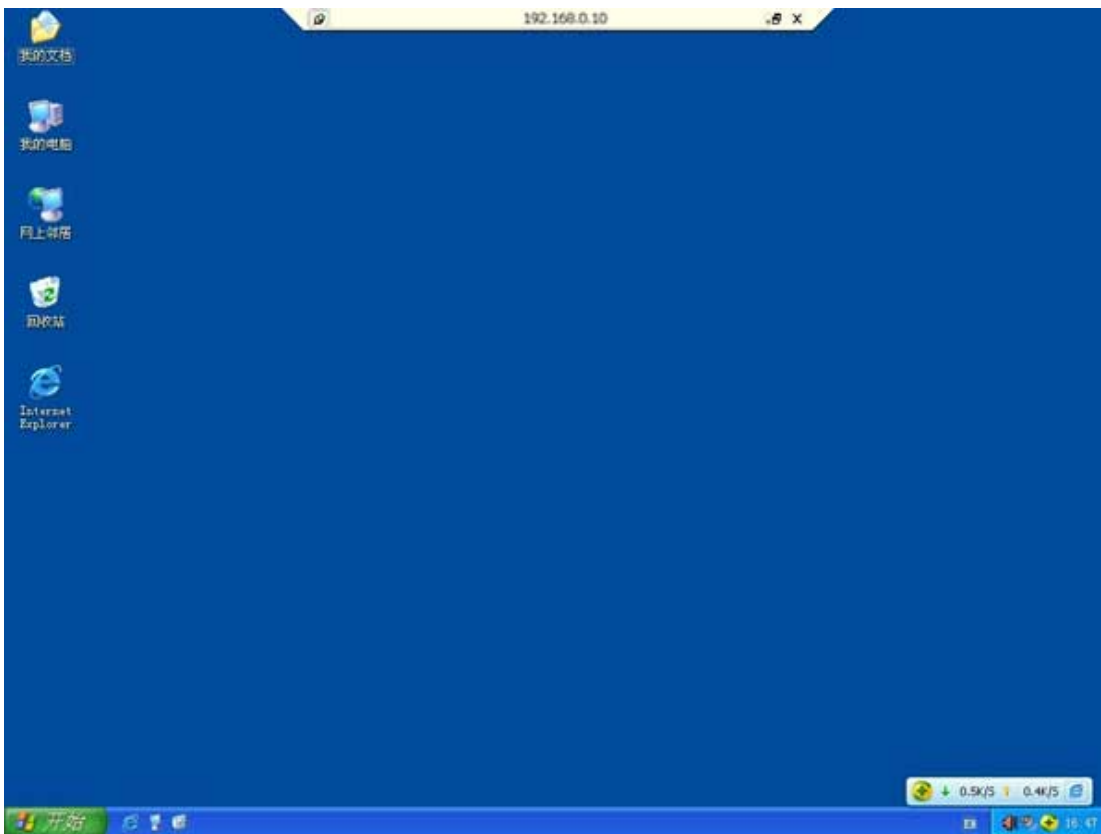

Pic 15

## System Settings




Click the button **System Settings** in Pic 11 to enter password validation(super password 123):



Pic16


Entering the system setting interface after the password been validated:

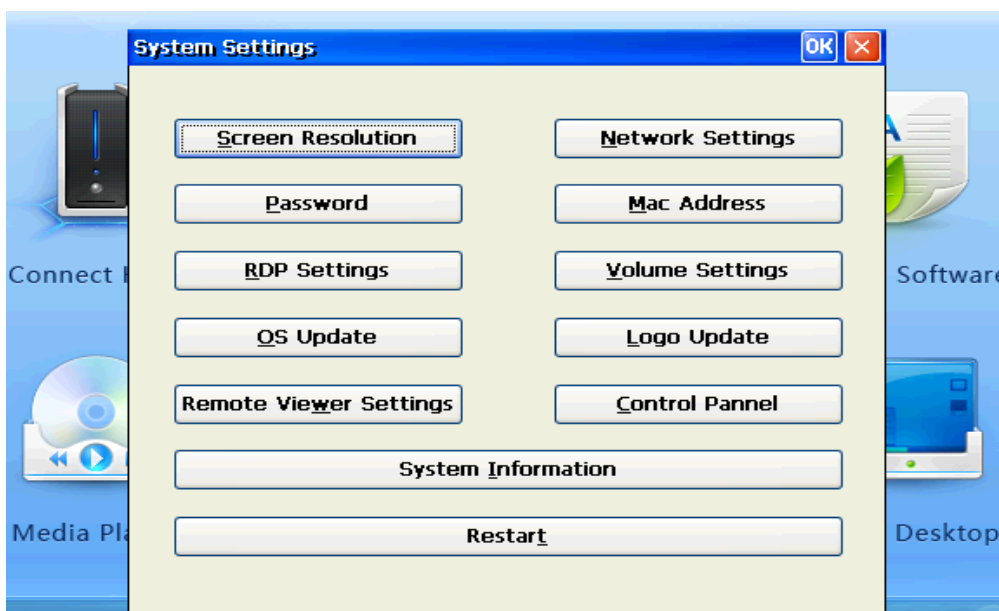

Pic17

## Screen Resolution Settings

Click the button **Screen Resolution** in Pic 17 to enter screen resolution settings interface

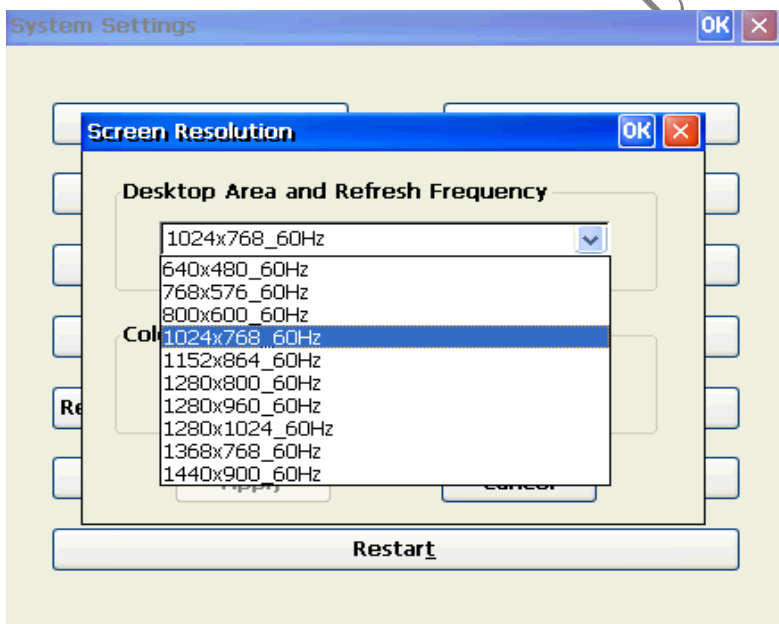

Pic18

Choose the corresponding resolution, and click “OK”, the system will restart

## Network Settings

Click **Network Settings** in Pic 17 to enter Net card Interface;



Pic 19



Click **DM9CE1** to enter Network Settings Interface



Pic 20

**1. Obtain an IP address Automatically**


Click  Obtain an IP address via DHCP to obtain an IP address automatically, then click “ok” button.

**2. Specify an IP address**

Click  Specify an IP address to specify an IP address as follows:



Pic 21

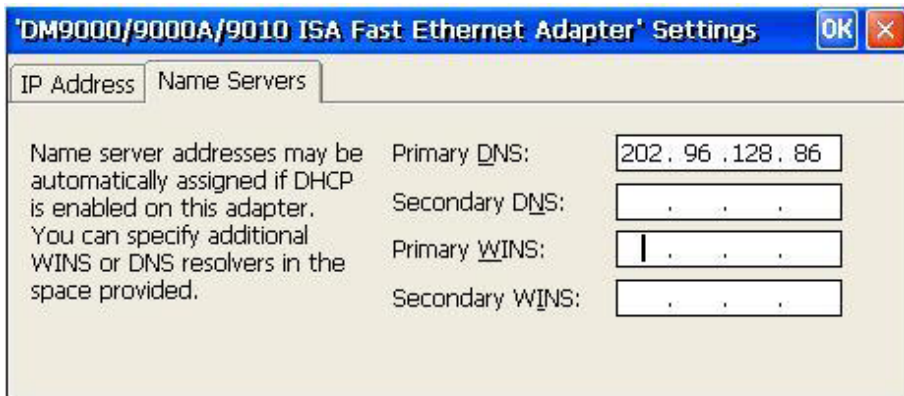


Pic 22

Input the relevant IP address, Subnet Mask, Gateway, and then click **Name Servers** to enter DNS settings. After input the relevant DNS address, click the “ok” button.

## Automatic Sever Connection Settings

Click **RDP Settings** in Pic 17 to enter the automatic settings interface.

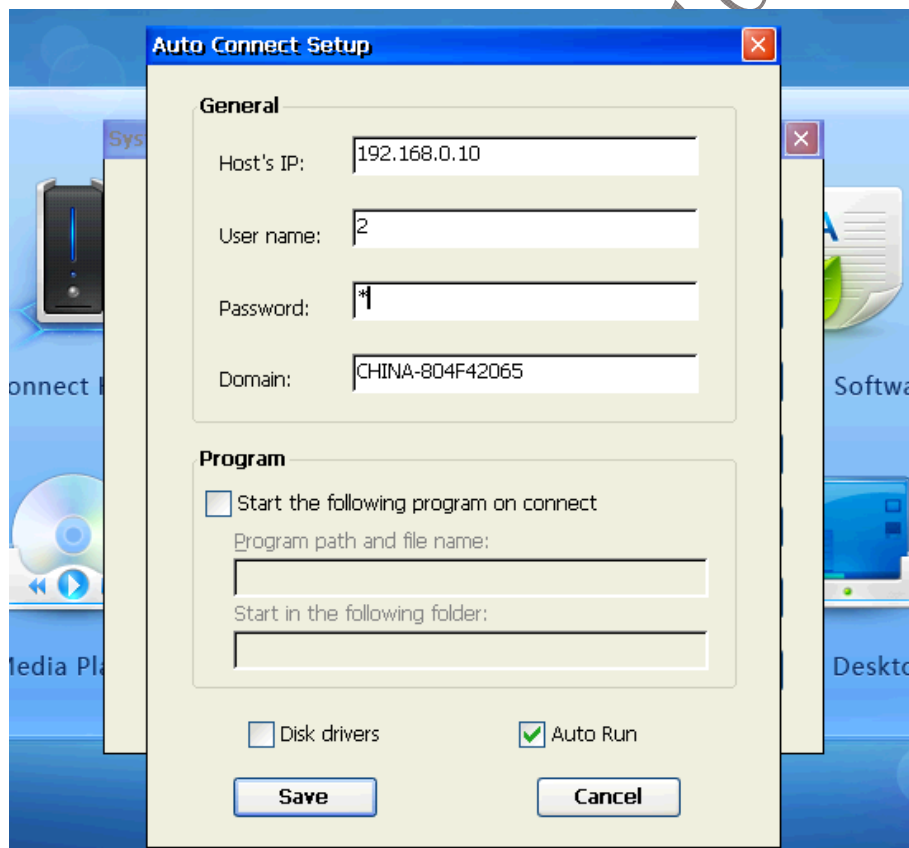


Pic 23

Select **Auto Run** and click “save”. The login interface will appear automatically when it start next time. If

you need to delete the automatic connection setting, select  Auto Run and then click “save” button..

## Changing Password on Setting Interface

Changing Password on Setting Interface  in Pic 17 to enter password changing interface:

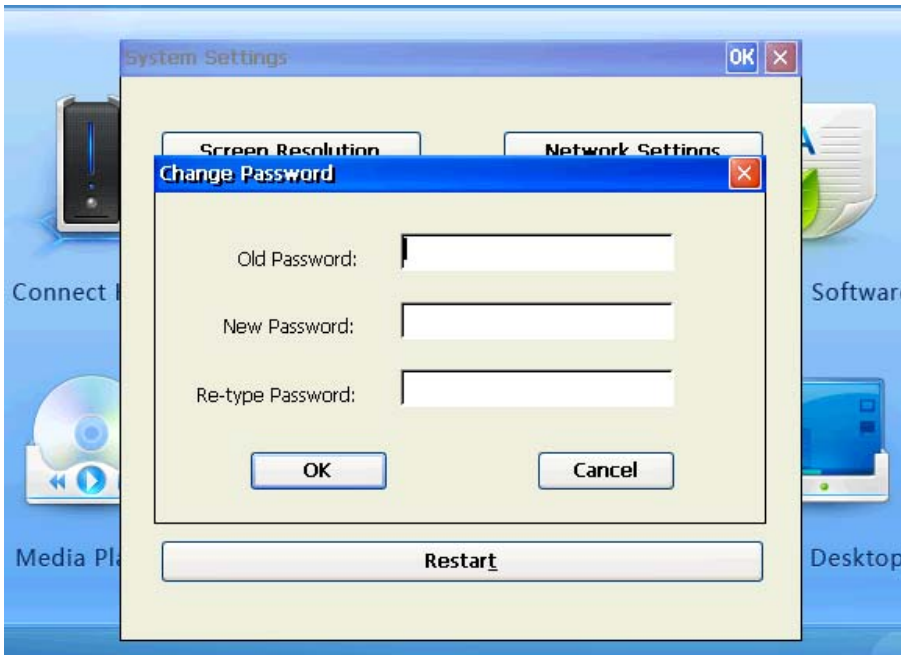


Pic 24

Input the old password and new password, then click “save” button

## Volume Settings

Click  in Pic 17 to enter volume setting interface

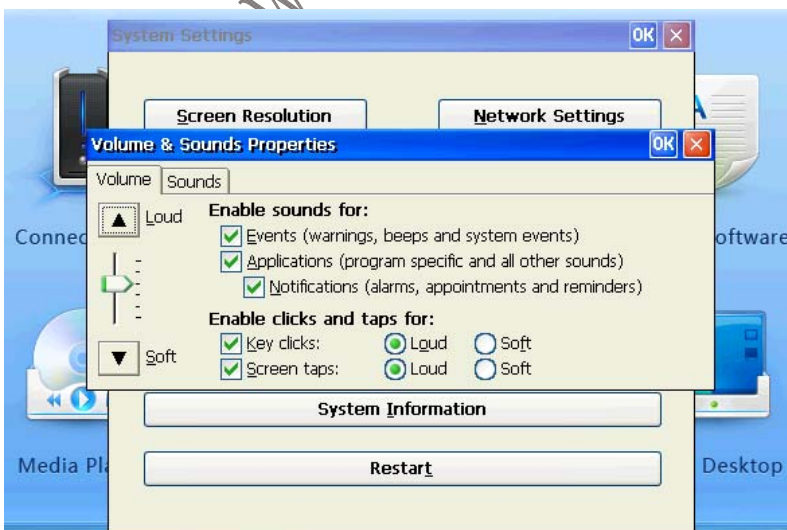

Pic 25

Use your mouse to pull seek bar on left to set the volume lever

## Local Mode



Click **Local Desktop** in Pic 11 to enter password validation:



Pic 26

## Local Internet




Click the button **Internet Explorer** in Pic 11 to open the terminal browser, can stat to browse web pages.

## Local Office



Click the button **Office Software** in Pic 11 to enter office file browsing as follows:




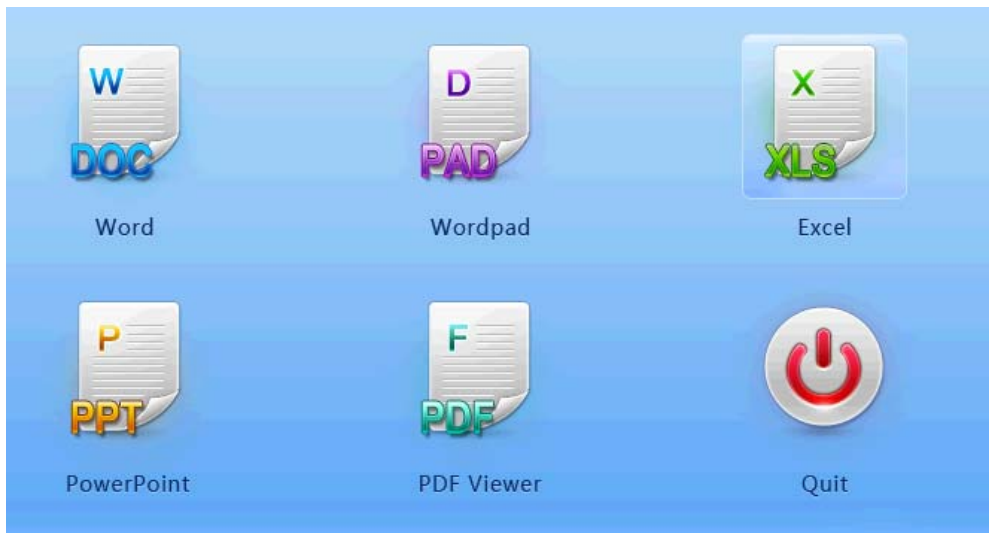

Pic 27

Click "QUIT" to logout.

## Local Player

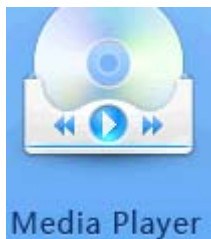

Click the button in **Media Player** in Pic 06 to enter media player.

## Remote control terminal Users from HOST



After installing Nettc software, you will find icon **Nettc** and go to picture 24



Picture 24. Click  and continue

to picture 25.




Picture 25. Enter terminal's IP address here and click OK. Then you will see the terminal's screen, you can control it directly or just see what terminal is doing now.

Note: You can set remote viewer on local system, choose whether use password for host controlling or not. Steps as this:

First go to system setting as picture 10, click , and select on picture 26.

www.pcstationcn.com

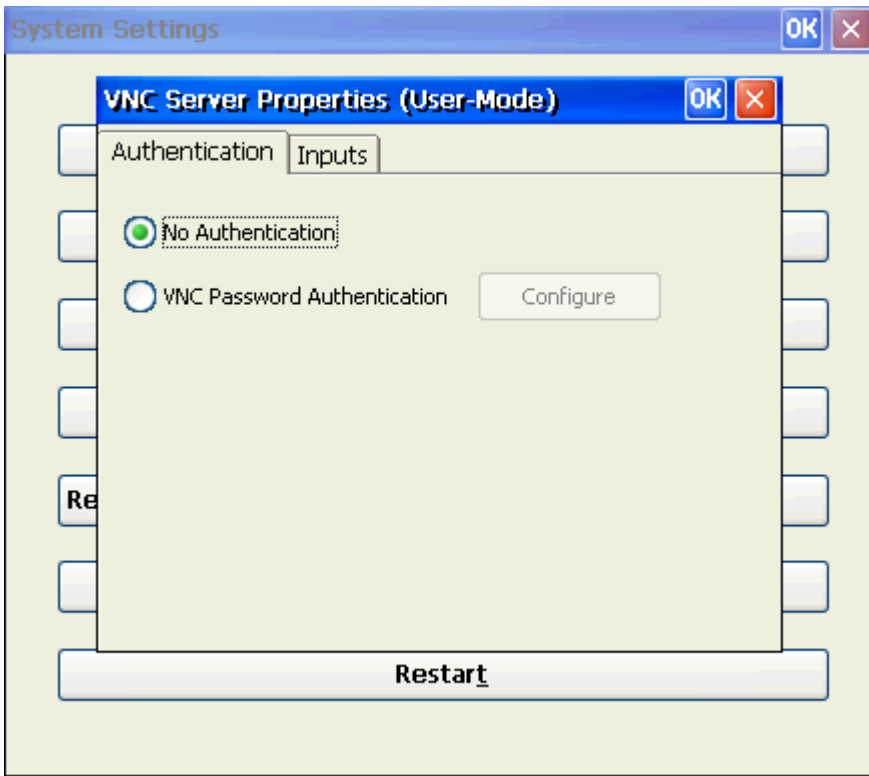

Picture 26.

Thanks for purchasing our PC Stations, any suggestion or problem please feedback to us freely.

www.pcstationcn.com