

Fisher-Price®

J4185

3-in-1 Rockin' Gym

Please keep this instruction sheet for future reference, as it contains important information.

Requires three "AA" batteries (included).

Adult assembly is required.

Tool required for assembly:
Phillips screwdriver
(not included).



1 Floor Gym




2 Take-Along Xylophone



3 Rockin' Good Time



Parts

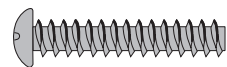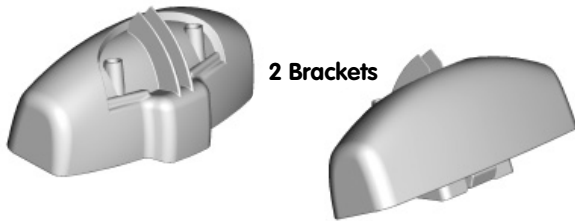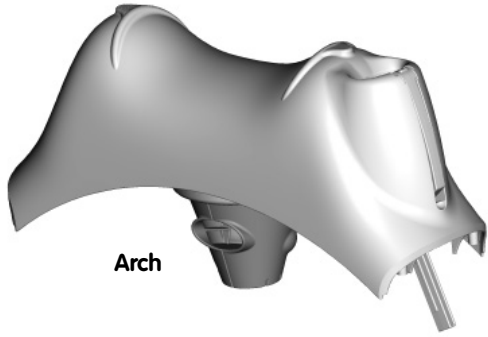


#10 x 1" (2.5 cm) Screw - 4

Shown Actual Size

One-Time Assembly

CAUTION

This toy contains small parts
in its unassembled state.
Adult assembly is required.

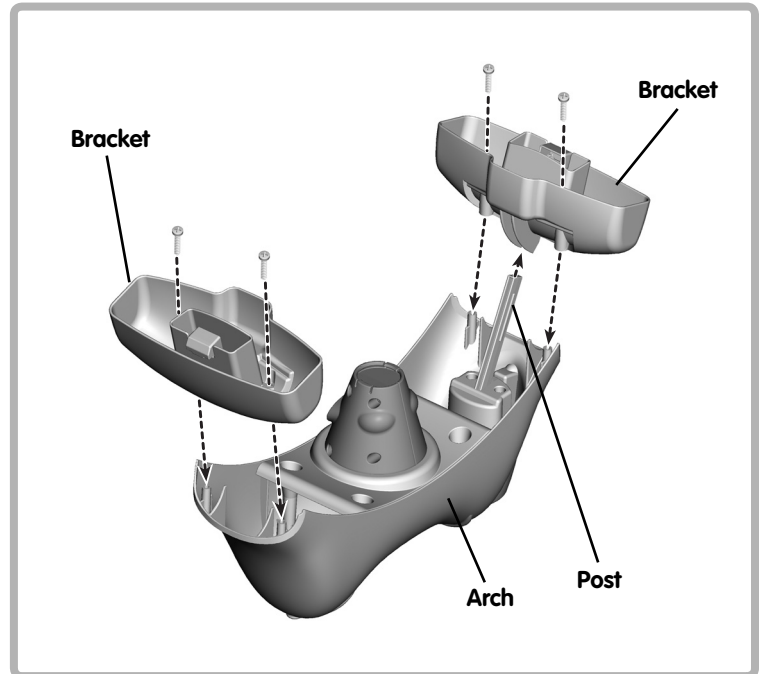

- Position the arch so the underside is facing you. **Note the post at one end of the arch.**
- Fit a bracket onto the end of the arch with the post, **making sure the post fits into the opening in the bracket.**
- Fit the other bracket to opposite end of the arch.
- Insert two screws into each bracket and tighten.


Before First Time Use

CAUTION

Please keep small parts such as the plastic tabs out of children's reach. Throw the plastic tab away.

Note: A plastic tab is attached to the toy for in-store demonstration purposes. Pull and remove the plastic tab from the back of the xylophone. Throw the plastic tab away.

Battery Replacement

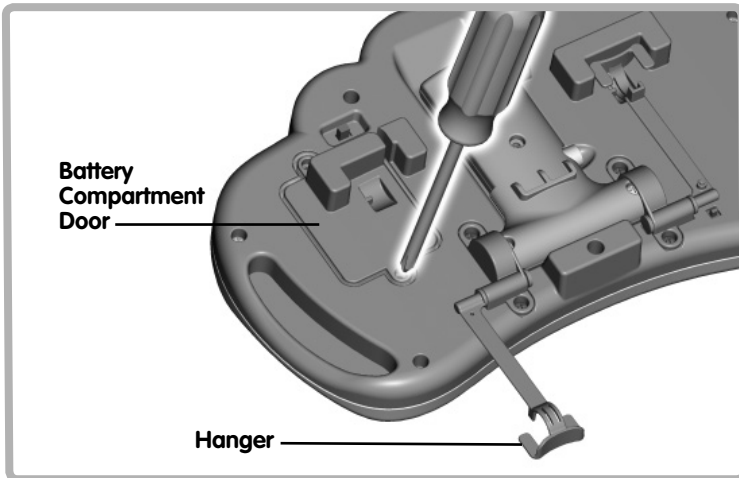


For best performance, we recommend replacing the batteries that came with this toy with three, new alkaline "AA" (LR6) batteries.

- Locate the battery compartment on the back of the xylophone.
- Lift the hanger off the battery compartment door.
- Loosen the screws in the battery compartment door and remove the battery compartment door.
- Insert three "AA" (LR6) **alkaline** batteries, as indicated inside the battery compartment.

Hint: We recommend using **alkaline** batteries for longer battery life.

- Replace the battery compartment door and tighten the screws.
- **"Snap"** the hanger back in place.
- When lights or sounds from this toy become faint or stop, it's time for an adult to change the batteries!

Battery Safety Information

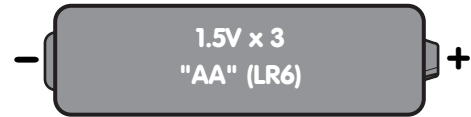

Shown Actual Size

In exceptional circumstances, batteries may leak fluids that can cause a chemical burn injury or ruin your product. To avoid battery leakage:

- Do not mix old and new batteries or batteries of different types: alkaline, standard (carbon-zinc) or rechargeable (nickel-cadmium).
- Insert batteries as indicated inside the battery compartment.
- Remove batteries during long periods of non-use. Always remove exhausted batteries from the product. Dispose of batteries safely. Do not dispose of product in a fire. The batteries inside may explode or leak.
- Never short-circuit the battery terminals.
- Use only batteries of the same or equivalent type, as recommended.
- Do not charge non-rechargeable batteries.
- Remove rechargeable batteries from the product before charging.
- If removable, rechargeable batteries are used, they are only to be charged under adult supervision.

Building the Floor Gym


⚠️ WARNING

To prevent entanglement injury, never place the gym in a crib or playpen. Never add strings, ties or other products to the gym.




1

- Insert and **“snap”** a leg into each end of the arch.
- Pull up on the leg to be sure it is secure.

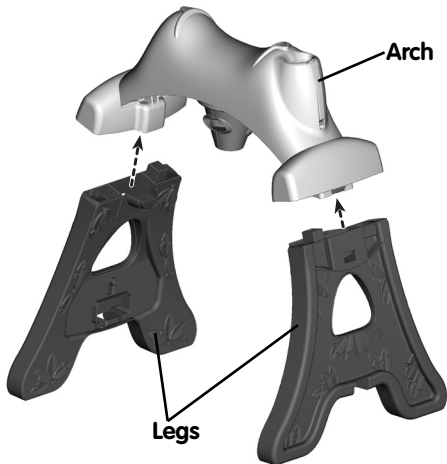


3

- While pressing the button on the neck of the xylophone insert and **“snap”** it into the opening in the arch.

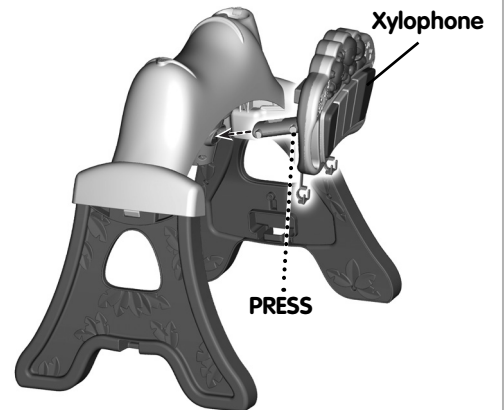


2

- Press the button on the neck of the xylophone and lift.
- Lift both hangers and rotate down.

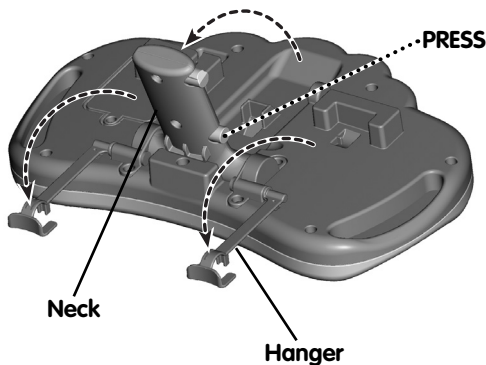

4


- Attach the activity toys to the hangers under the xylophone.

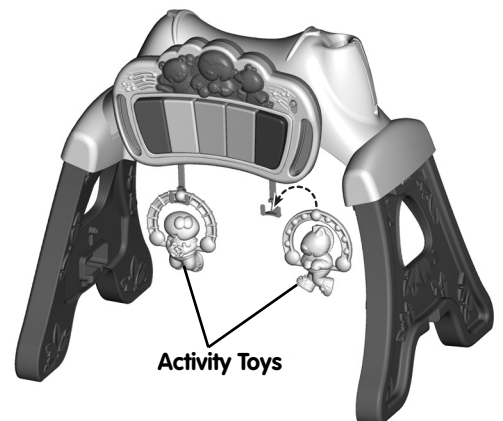



1

- Remove the activity toys from the hangers.
- Press the button on the neck of the xylophone and pull to remove it from the arch.

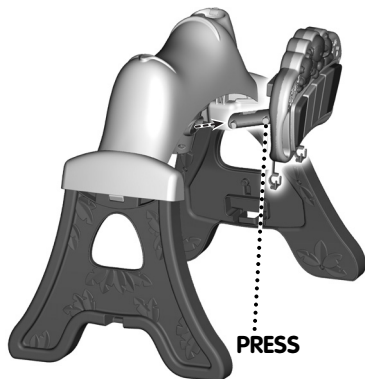


3

- Press the button on the side of a leg and pull to remove the leg.
- Repeat this procedure to remove the other leg.




2

- “Snap” the hangers back onto the back of the xylophone.

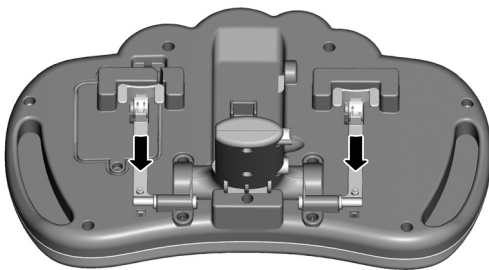


4

- Fit the legs together, as shown.

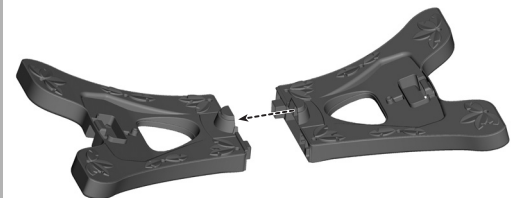


5

- Position the arch above the legs.
- Press and “snap” one end of the arch to the legs **A**.
- Press and “snap” the other end of the arch to the legs **B**.

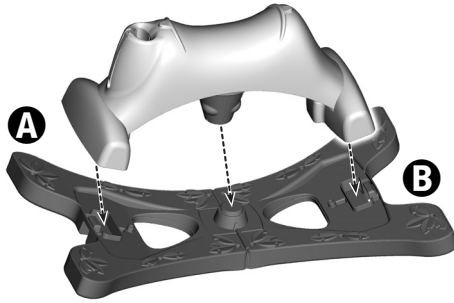


6

- Press down **firmly** in the center of the arch to “snap” it to the legs.
- Hint:** This may require some force.
- Pull up on the arch to be sure it is secure to the legs.

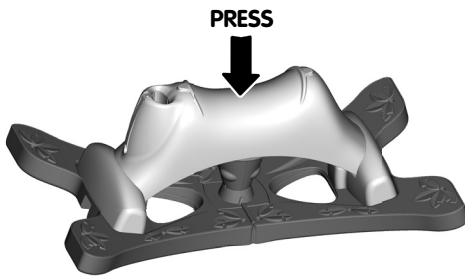


7

- Press the tab and lift the support.

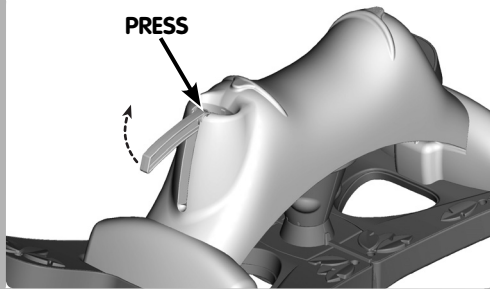

8


- While holding the support upright, insert and snap the xylophone into the opening in the top of the arch.
- Make sure the end of the support fits into the grooved area in the underside of the xylophone.

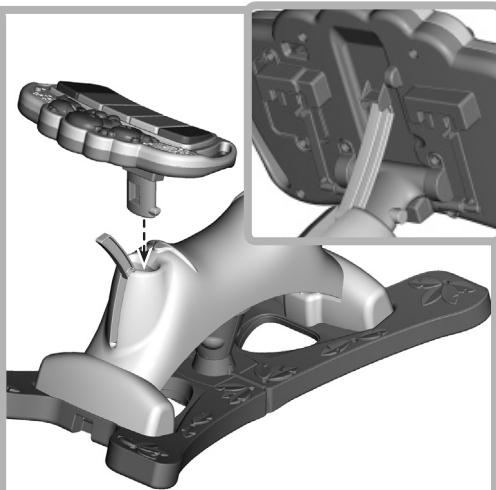

Convert Back to a Floor Gym


1

- Press the button on the neck on the xylophone and remove it from the arch.
- Lower the support underneath the xylophone.

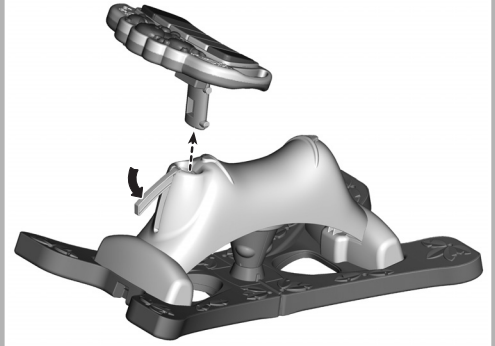


2

- First, press the leg firmly to the arch, as shown **A**.
- Then, press the button on the end of the leg **B** and lift the arch to separate it **C**.
- Repeat this procedure to separate the other leg from the arch.

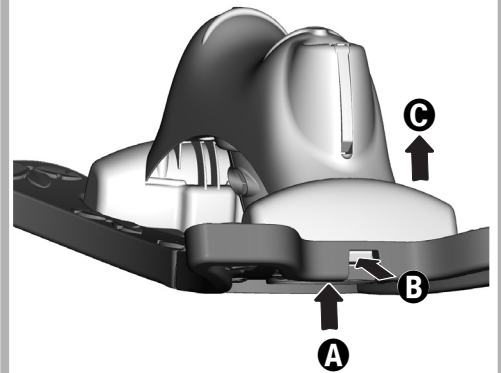

3

- Grasp the arch near the center and pull firmly to separate it from the center of the legs.


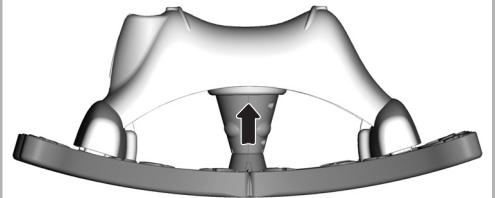


4

- Now, follow the instructions on page 4 to build the floor gym.




Take Along Xylophone

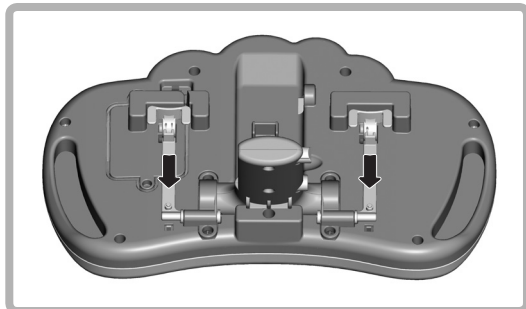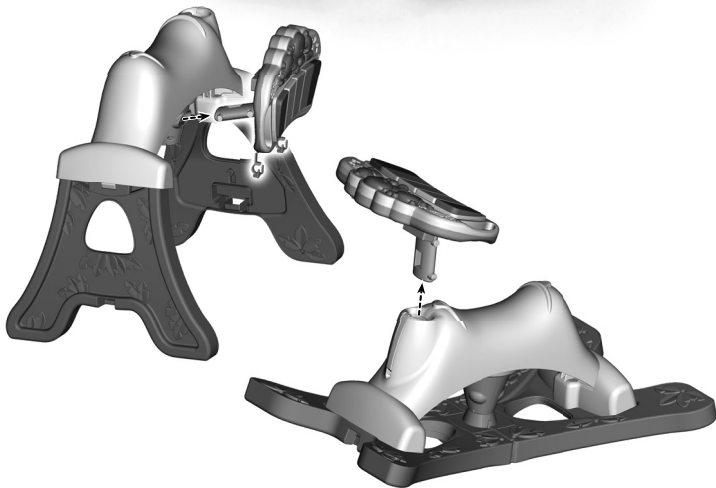



- Press the button on the neck of the xylophone and pull to remove it from the top or bottom of the arch.
- **“Snap”** both hangers back onto the back of the xylophone.

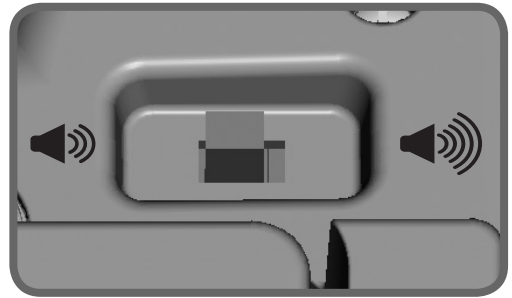3 Ways to Play!







Volume Switch

- Slide the volume switch on back of the xylophone to high  or low , for your child's comfort.



Mode Switch

- Slide the mode switch to . Baby can press the xylophone keys or bat at the hanging toys for about five minutes of music.
- Slide the mode switch to . Press the xylophone keys to “build a song.” Each time you press, you hear part of a song. Press again to hear more.
- Slide the mode switch to . Rock the toy for music or press the xylophone keys to hear individual notes.
- When you are finished playing with this toy, slide the mode switch off .

Care

- Wipe this toy with a clean cloth dampened with a mild soap and water solution. Do not immerse this toy.
- The xylophone has no consumer serviceable parts. Do not take the xylophone apart.

FCC Note Statement (United States Only)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Consult the dealer or an experienced radio/TV technician for help.

Note: Changes or modifications not expressly approved by the manufacturer responsible for compliance could void the user's authority to operate the equipment.

Consumer Information

Visit us on line at www.service.fisher-price.com.

Call Fisher-Price® Consumer Relations, toll-free at **1-800-432-5437**, 8 AM - 6 PM EST Monday through Friday. Hearing-impaired consumers using TTY/TDD equipment, please call 1-800-382-7470. Write to us at: Fisher-Price® Consumer Relations, 636 Girard Avenue, East Aurora, New York 14052.

For countries outside the United States:

CANADA: Questions? **1-800-432-5437**. Mattel Canada Inc., 6155 Freemont Blvd., Mississauga, Ontario L5R 3W2; www.service.mattel.com.

GREAT BRITAIN: [Mattel UK Ltd, Vanwall Business Park, Maidenhead SL6 4UB](http://www.service.mattel.com/uk). Helpline: 01628 500303; www.service.mattel.com/uk

AUSTRALIA: Mattel Australia Pty. Ltd., 658 Church Street, Locked Bag #870, Richmond, Victoria 3121 Australia. Consumer Advisory Service 1300 135 312.

NEW ZEALAND: 16-18 William Pickering Drive, Albany 1331, Auckland.

ASIA: Mattel East Asia Ltd, Room 1106, South Tower, World Finance Centre, Harbour City, Tsimshatsui, HK, China.