

DAEWOO



Instruction manual

Video recorder

For model number, see the front display of your video
This manual covers the 'T, ST, CT' range.

The following standard functions are available on this set.

NTSC playback See page 14


MESECAM tape playback See page 14

Index scan See page 15

Wide-screen pictures See page 16

Commercial skip See page 16

High-speed rewind





Important : If you switch the video off at the mains supply overnight, you do not have to retune the video. Simply press  and then MENU on the remote control to restore all the programme settings.

See back cover for quick-start guide

Helpline number: 0118 925 2577

With queries, please quote the page number, reference number and model number.

W A O R T H
k n o w i n g

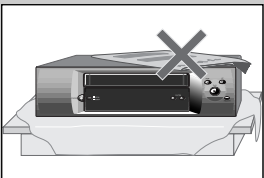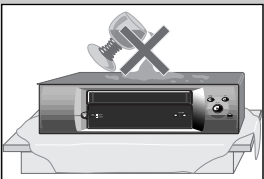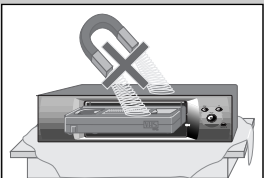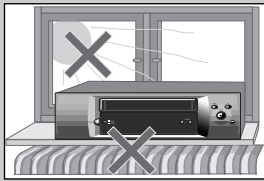


Please keep the video's guarantee sheet (pages 29 and 30) and receipt for your video in a safe place.

Precautions

- ◆ Read this booklet carefully.
- ◆ Make sure the rating of your household electricity supply matches that shown on the back of the video recorder.
- ◆ Read this chapter and the "Setting up your video" chapter to help you set up and adjust your video recorder.
- ◆ Do not put the video recorder in a hot or humid place (to avoid the risk of fire and electric shock).
- ◆ Do not open the video recorder. Get a qualified technician to carry out any repairs.
- ◆ Do not connect the video recorder to the power supply if you have just moved it from a cold environment to a warm room. This can lead to condensation inside the video which can seriously damage the video and cassettes. Wait around two hours to allow it to reach room temperature.
- ◆ Make sure the recorder should be placed at least 10cm apart from the other home appliances or the obstacles to get sufficient ventilation.
- ◆ This apparatus shall not be exposed to dripping or splashing and no objects filled with liquids, such as vases, shall be placed on this apparatus.
- ◆ Put the video on a steady, flat surface.
- ◆ Make sure there is good ventilation all around the video.
- ◆ Only clean the video with a soft, lint-free cloth. Do not use harsh or alcohol-based cleaning agents.

 The power cable must be fitted with a fused plug approved by ASTA or BSI to BS 1362 and provided with a 5A fuse.



The fuse cover must always be securely replaced. If the video recorder is not working, the fuse may need replacing (see also "Electrical connection" on page 26).

For your own safety!




- ◆ There are no components in this video recorder you can service or repair yourself.
- ◆ Do not open the case of the video recorder. Only allow a qualified engineer to repair or service your video.



- ◆ This video recorder is designed to work continuously. Switching it off (onto stand-by) does not disconnect it from the mains. To disconnect it from the mains, you have to unplug it.

"People are always telling me that instructions for using electrical goods are the most difficult to understand. We have worked closely with Daewoo to make these instructions crystal clear. I hope this instruction book helps you to use your new video. We would be interested to hear your views. Please write to us at PO Box 3, New Mills, High Park, England. SK22 4QP".

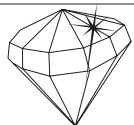

**Crystal
Mark**

Clarity
approved by
Plain English Campaign

Chrissie Maher OBE, MA
Founder and Director, Plain English Campaign

Before you do anything with the video, please read the chapter "Setting up the video".

Contents

Setting up the video

Connecting your video through RF lead, Connecting your video through a scart lead	4
Connecting your video to the satellite system, Connecting your video to the hi-fi system (Option 1),	
Connecting your video to the hi-fi system (Option 2)	5
How to connect your video to another video, How to connect your video to a camcorder	6
Tuning to the TV using an antenna cable (RF cable), What to do if you get picture interference	7
Tuning your video recorder to the television, setting time and date	8
Decoder or 2nd scart socket	9

Tuning in new stations

Manual tuning	10
Station names.....	11
Sorting programme locations, Clearing programme locations.....	12
Front panel controls.....	13

Playing cassettes

Play	14
Still, Variable picture search, Variable slow motion,	
Finding new recordings (index scan)	15
16:9 Wide Screen format, CM skip (commercial skip).....	16
Child lock, OSD (On Screen Display) On/Off.....	17

Recording cassettes

Simple recording, One touch recording-OTR	18
Recording cassettes, Timer recording using VideoPlus+	19
Normal timer recording	20
Timer review – changing and erasing record settings	21

More functions

Clock and counter display, Remaining time and cassette length,	
Finding the counter zero position, Resetting the counter to zero	22
Cassettes, Power-saving features	23
Choice of sound output	24
The hi-fi system, What you can listen to.....	25

Connections

Electrical connection	26
Moulded Plugs.....	27

Appendix

Index, Technical information	28
warranty card	29
Problem-solving guide	31
Quick-start guide	back cover




- ◆ On the following pages, the pictures show the buttons you need to press on the remote control and what you should see on the television screen or video display.

Put the batteries into the remote control. Make sure the (+) and (-) signs on the batteries agree with the (+) and (-) signs in the battery compartment.

Setting up your video (Option 1) - Connecting your video through RF lead


Before you start, unplug all the equipment from the mains supply.

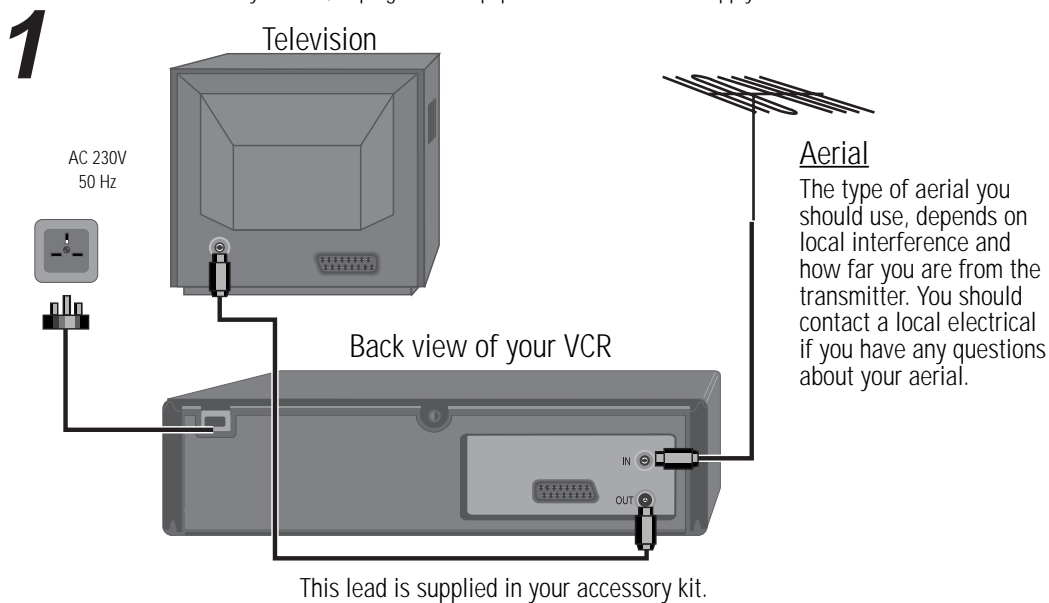

If you have connected your video as shown in option 1, turn to page 7.

Setting up your video (Option 2) - Connecting your video through a scart lead

Before you start, unplug all the equipment from the mains supply.

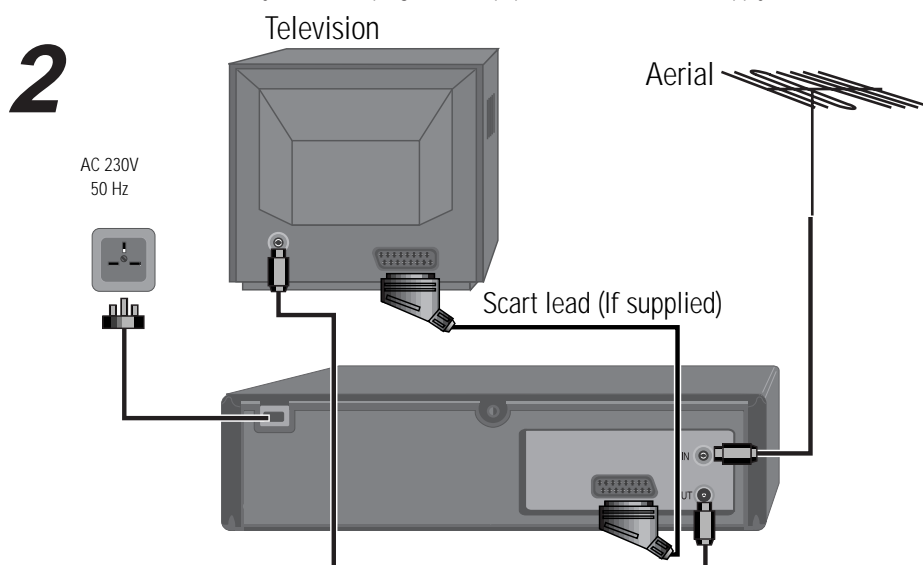


With this connection, if your VCR is receiving BBC1 and your TV is ON CH3, when you press the TV/VCR button on the remote control, your TV will automatically display BBC1.

In most cases you will not be able to change channels using the controls on your TV until you turn this feature off by pressing TV/VCR on your remote control.

You will get better pictures and sound quality if you connect your video with a scart lead.

 If you have connected your video as shown in option 2, turn to page 8.




Connecting your video through extra equipment

Connecting your video to the satellite system

Before you start, unplug all the equipment from the mains supply.

3

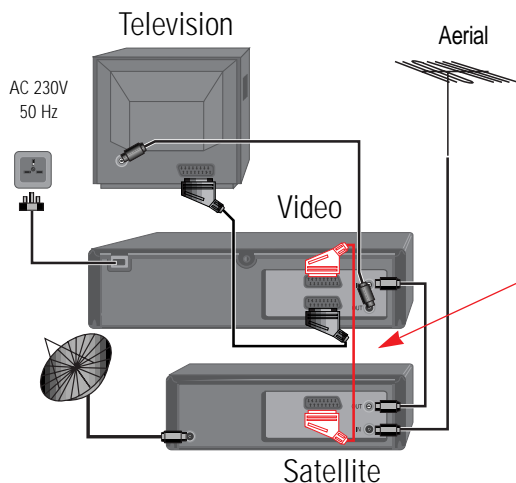

You can use this connection if your video has two scart sockets. This will improve sound and picture quality when you are recording from satellite.


To use this function, see page 9.

Make sure the satellite receiver is switched to Sky One.

Connecting your video to the hi-fi system - Option 1

Before you start, unplug all the equipment from the mains supply.

4

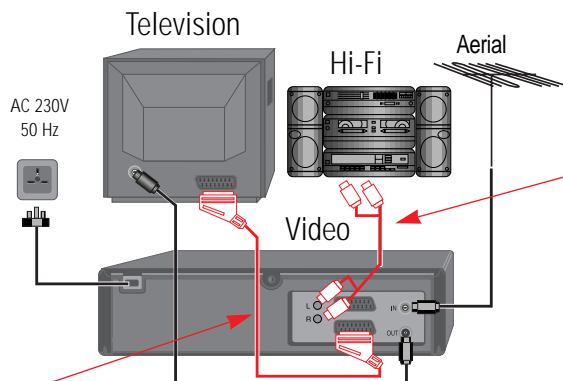


Plug a phono cable into the 'Audio L/R' sockets on the back panel and into the audio sockets on any audio amplifier, if needed. If your video does not have this connection, see below (Option 2).

You can also use a scart lead to improve picture and sound quality from your video.


Connecting your video to the hi-fi system - Option 2


Before you start, unplug all the equipment from the mains supply.

5

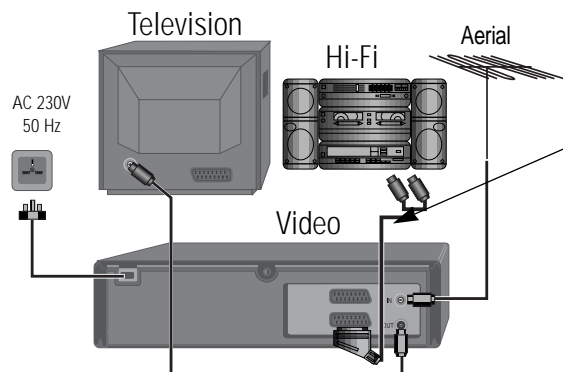

  Plug a scart to phono cable into the 'AV1' socket on the back panel and into the audio socket on any audio amplifier, if needed.






How to connect your video to another video

Before you start, unplug all the equipment from the mains supply.

6

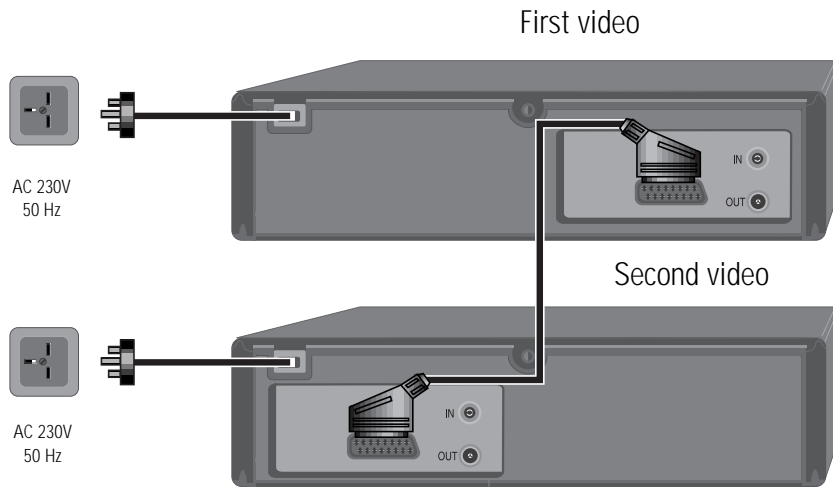


- 1) Insert the tape you wish to record on into the first video and press **AV** until 'AV1' appears on the front display.
 - 2) Insert the tape you wish to record from into the second video. Press the play button on the second video.
 - 3) Press the record button on the first video
- The video will start recording.

If your video has two scart sockets, you can use the other socket 'AV2' to connect other equipment. To use this function, see page 9.


How to connect your video to a camcorder

Before you start, unplug all the equipment from the mains supply.


7

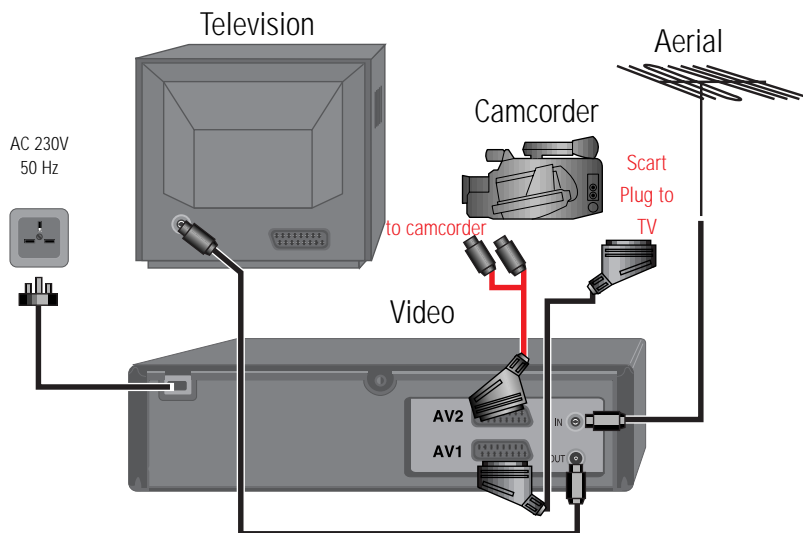


If you have connected your camcorder in this way, you can also connect a scart lead from 'AV1' on the back panel of the video to the television. To use this function, see page 9.

You can also connect the camcorder by using a phone cable if your video has front input sockets.  Check the front of your video for this connection.

  6


 
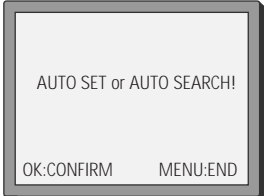




Tuning your video to the TV using an antenna cable (RF cable)

If you have connected your video through the scart connection (diagram 2 on page 4), go to page 8. Use the following method to tune your video in if you have connected it through RF cable (as shown in diagram 1 on page 4)

Once you have carried out the steps in 'Setting up your video' (diagram 1 on page 4), switch on your TV.

- 1  Press  on the remote control and RF52 will be displayed on the front of your video.
- 2  Tune the TV, using the pre-set functions on your TV as described in its manual, until you see a blue 'Auto Set' or 'Auto Search' screen. Store this setting on the TV and go to page 8.



What to do if you get picture interference



The RF output can be adjusted from 21 to 69. If other broadcasts are causing picture interference, you can change the RF output until your television has a noise-free channel for your video.


Option 1

The following screens will appear during the Auto Set function, for Auto set models only.

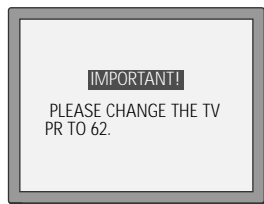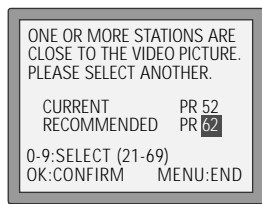

Change the number using buttons **0-9**. Press **OK** to confirm. Press **MENU** to end.

Option 2

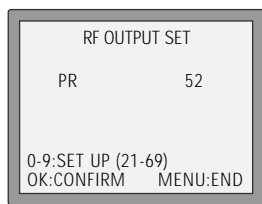


Change the RF output from 52 using the remote control. Press MENU. Press PR- twice then OK. Press PR- then OK. Change the channel number using buttons 0-9. Press OK to confirm. Press MENU to end.


If there is still picture interference repeat option2.

Option 3

Buy a scart lead from your local electrical shop. Connect the scart lead as shown on page 4, diagram 2.

  If you want to change the RF output in the future due to new broadcasting stations or equipment and so on, press and hold the **OK** button on the remote control until RF 52 is displayed on the front of the video. Then go to option 1 above.






Tuning your video recorder to the television

'Auto set' only will appear on your screen if your video has this function.


'Auto search' only will appear on your screen if your video has this function.

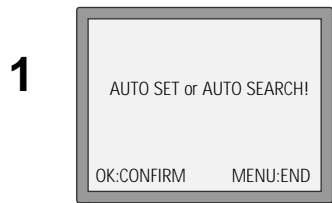

Press on your remote control.


If you do not see this picture, check that the video is connected properly.

Press **OK** for 'Auto Set' or 'Auto Search'.

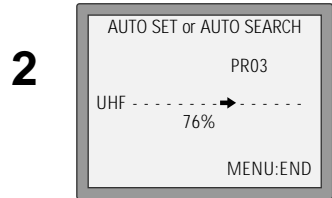

Unless you are living in an area with poor reception, 'Auto Set' or 'Auto Search' tunes in all the stations you can receive in your country and sorts them in a common order, for example, BBC1 on programme 1, BBC2 on programme 2 and so on.

See page 11 and page 12 if you need to change any of the automatic settings. You should finish stage 4 before you go to page 11 or page 12.

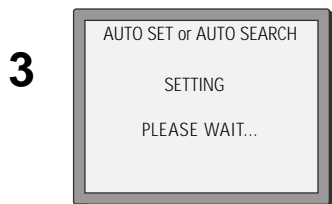


The clock is also set automatically. If the clock has not been set, the clock setting screen will appear.

Please see "Setting time and date" below.

If you want to change the station names, see page 11.

If you want to change the programme locations see page 12. You need to change programme locations if the stations are not in order, for example, BBC1 on programme 1, BBC2 on programme 2 and so on.

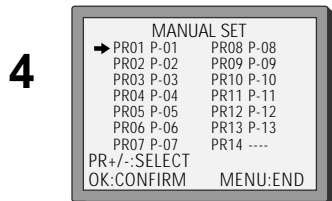


Press **MENU** to end.

Important : If you switch the video off at the mains supply overnight, you do not have to retune the video. Simply press and then **MENU** on the remote control to restore all the programme settings. See below to set the time and date.



- The video's automatic tuning system usually gets the best results. In poor reception areas, **fine tuning** may improve reception. Choose the station and tune it using the and buttons. Use the number buttons on the remote control to enter the programme number you want to store the station on.


Setting time and date

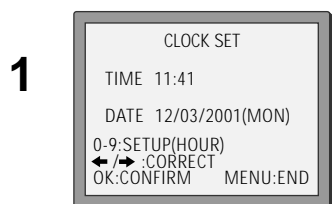

If the 'CLOCK SET' display is not already on the screen press **MENU**.

Choose 'VCR SET UP' by pressing **PR-** twice, then press **OK**.

Choose 'CLOCK SET' by pressing **OK**.

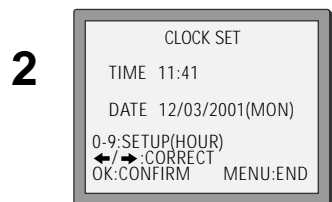


Once the 'CLOCK SET' display is on the screen, move to the position you want to change by pressing or .

Use the number buttons **0** to **9** on the remote control to enter the correct time and date.




 Press **OK** to confirm the settings, and press **MENU** to end.



Decoder or 2nd scart socket

If your video has the output, shown in the diagram below, you can connect other equipment as seen on pages 5 and 6.

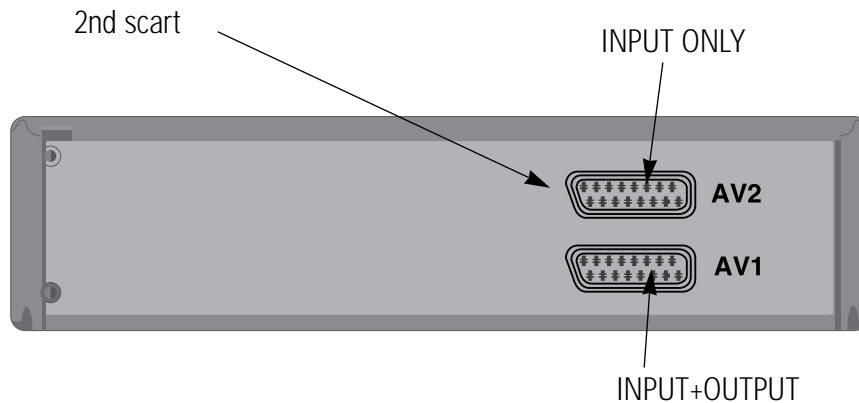

Tuning equipment to the video.

Press **MENU** and choose 'VCR Setup' by pressing **PR-** twice then **OK**.

Choose '2nd SCART Set' by pressing **PR-** twice then **OK**.

Extra equipment AV2

For example, camcorder, another video or a satellite system.

Choose 'AV2' by pressing **OK**.

 
Press **MENU** to end.

Press the **AV** button until 'AV2' appears on the front display.

You may change the AV mode on the VCR by pressing 'AV', or 00 or PR+ or PR-. The change will appear on the VCR display.

Satellite and cable systems can also work in AV2 mode. In this case put your video into AV2 to watch or record satellite or cable television.

Read your satellite decoder and TV instruction manuals to get the best connections for your home entertainment system.



Manual tuning


Manual tuning allows you to tune in new stations or equipment such as a satellite receiver and so on.

When your video is in certain AV modes you cannot use 'PR Preset'. Press AV until P-_- is displayed on the front of the video.




These buttons are used on the following two pages.

1

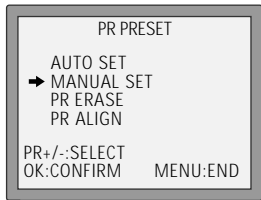


Press **MENU**.
Choose 'PR Preset' by pressing **PR-** then **OK**.

2

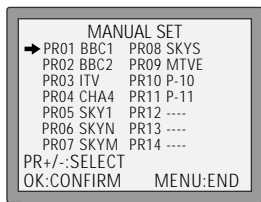


Choose 'Manual Set' by pressing **PR-** then **OK**.

3

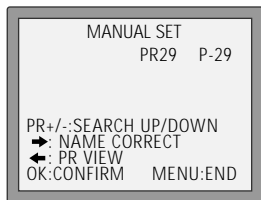


Press **PR+** or **PR-** to select any programme number that is not being used, for example '----' or 'P-xx'.
Press **OK** to confirm.

4

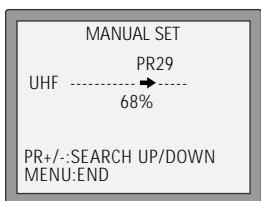

Press **PR+** or **PR-** to tune in the station you want.

5

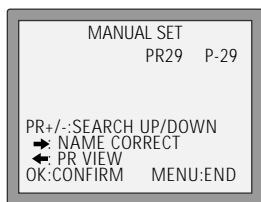


When 'Manual Set' comes back on the screen, press and hold **PR-** button to see the picture.


If it isn't the station you want, or the picture is of poor quality, carry on tuning by pressing **PR+** or **PR-**.

6

Press **OK** to store the picture you want.
Tune in other stations (by following step 3 onwards) or press **MENU** to leave the tuning mode.

  Your video has 99 available channel slots. IT will only store programmes that are available in your area. You can tune in other stations in any channel slot that is not already being used.





Station names

If your video is showing no station name or is showing a station name incorrectly, you can change this.

When your video is in certain AV modes you cannot use 'PR Preset'. Press AV until P-__ is displayed on the front of the video.


1

Press **MENU**.

Choose 'PR Preset' by pressing **PR-** then **OK**.

Choose 'Manual Set' by pressing **PR-** then **OK**.


2

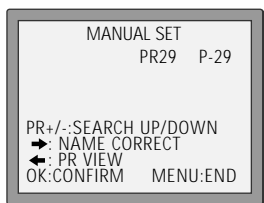

Move to the details you want to correct by pressing **PR+** or **PR-** then **OK**.

Select 'name correct' by pressing **→**.


3

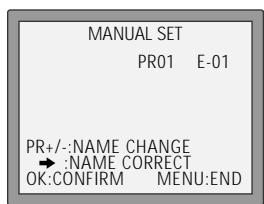

Use **PR+** or **PR-** to select the name from the stored list or select 'name create' again **→** and enter a four-digit name.

To enter a four-digit name, change the letters with the **PR+** or **PR-** buttons, or move to the next letter with the **←** or **→** buttons.


4

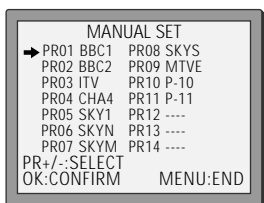


Press **OK** to confirm and **MENU** to end.



  The video's automatic tuning system usually gets the best results. In poor reception areas, **fine tuning** may improve reception. Choose the station and tune it in using the **←** and **→** buttons. Use the number buttons on the remote control to enter the programme number you want to store the station on.






Sorting programme locations

Sorting programme locations allows you to put the video programme in the same order as your TV.

When your video is in certain AV modes you cannot use 'PR Preset'. Press AV until P_ _ is displayed on the front of the video.

- 1 Press **MENU**.
Choose 'PR Preset' by pressing **PR-** then **OK**.
Choose 'PR Align' by pressing **PR+** then **OK**.

2

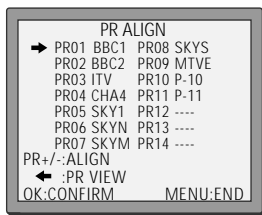

Press **PR+** or **PR-** to select the programme you want to swap.
Confirm by pressing the **OK** button.

Press **PR+** or **PR-** to move the station to the program number you want to store it on.
Confirm with the **OK** button.

3

Press **MENU** to end.


Clearing programme locations

Clearing programme locations allows you to erase any stored programmes you no longer want.

When your video is in certain AV modes you cannot use 'PR Preset'. Press AV until P_ _ is displayed on the front of the video.

- 1 Press **MENU**.
Choose 'PR Preset' by pressing **PR-** then **OK**.
Choose 'PR Erase' by pressing **PR+** twice and then **OK**.


2

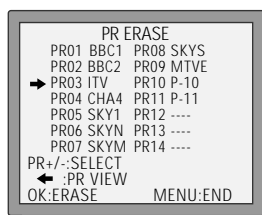

Press **PR+** or **PR-** to select the station you want to clear.
Press **OK** to confirm.

Press and hold **←** to watch the picture.

3

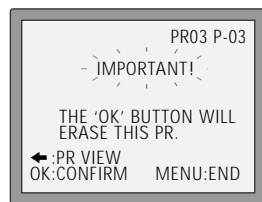


If you want to erase the station, press **OK**.


Press **MENU** to end.

If you don't want to erase the station, press **MENU**.



  These buttons are used on the following two pages.







Front panel controls

The following buttons are on the front of your video.

 STANDBY/ON stand-by/ power on

 STOP/ EJECT ▲ Stop and eject

VIDEO  AUDIO 

 
front input sockets for connecting a stereo camcorder (left and right channels)
This is only available on some models. Check the front of your video to see if this connection is available.

▲
 CH./TRK Change the station
 ▼

RECORD
 /OTR Recording or one-touch record
 Every time you press the button the recording time is increased by 30 minutes.

◀◀ ▶▶
 REW F.FWD Rewind or fast forward a cassette from stop, or picture search backwards or forwards if the video is playing a cassette.

▶
 PLAY Play




Playing cassettes

Play

Push the cassette smoothly and squarely into the cassette bay, with its windows pointing up.




 These buttons are used on the following two pages.



Start playback.

 A.Sel is only available on some models. If this screen does not appear when you press the button, A.Sel is not available on your video.



If you hear an unclear, mixed sound output in different languages, select one of the sound options.

 
The screen will only appear if you use a hi-fi tape or play a hi-fi or NICAM recording.



Stop playback.



Fast forward or rewind the cassette from stop.



Eject the cassette.



- When you load a **protected cassette** such as pre-recorded film (see page 23) playback will start automatically.
- When you are playing tapes of poor quality or tapes which have been recorded on another machine, you can use the **PR+** or **PR-** buttons while the cassette is playing to reduce horizontal interferences stripes.
- Playing **NTSC tapes on PAL TV**: If you play cassettes which have been recorded on the NTSC colour system (as used in the USA), you can watch the pictures on most PAL TVs.
On older TVs, some black lines may appear at the top and bottom of the screen. The picture may also roll up or down. To prevent these problems adjust the V-HOLD knob on your television.
NTSC : National Television Systems Committee.
- This video can also play **MESECAM** (middle east secam not secam) cassettes.

PLAYING cassettes

Still

There must be a cassette in the video.



Still picture from playback.

Each press of the button moves the picture on one frame.

Press the play button to switch back to normal playback.

 
After approximately five minutes on still, the cassette will automatically switch to normal playback.

If the still picture is jumping, you can steady it by using the **PR+** and **PR-** button.

Variable picture search



Keep pressing **▶▶** to vary the forward search speed.



Keep pressing **◀◀** to vary the rewind search speed.

Press **▶** to switch back to normal playback.

Variable slow motion



Starting from playback you can keep pressing **▶** to control slow motion speed in six steps.

Press **▶** to switch back to normal playback.

Finding new recordings (index scan)

 
The video index search system allows you to find the beginning of any recording you have made on your video. Your video automatically records index marks on the tape whenever a recording is started.



Press **INDEX +** or **INDEX -** to search forwards or backwards.

The video will now wind to the beginning of a recording, play it for about 6 seconds, then wind on to the next one.


When you see the recording you want to watch, press **PLAY**.



16:9 Wide-screen format

16:9 Wide-screen format is only available through wide-screen broadcasts. Your TV must have 16:9 wide-screen function and you must connect your TV and video using an A/V scart lead. (See page 4, diagram 2.)

- 1 Choose '16:9 set' by pressing **MENU**. Press **PR-** twice then **OK**. Press **PR+** three times then **OK**.

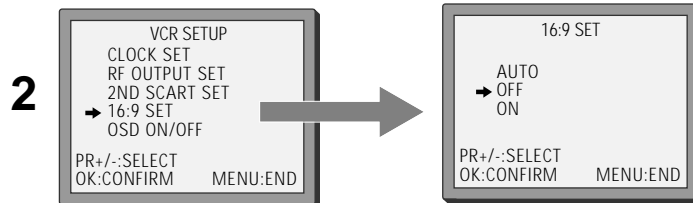

Press **PR-** to choose the setting you want, for example, -AUTO, -ON or -OFF. Confirm the setting with **OK**.

- 16:9 Set

- Auto : This video will check whether the cassette is recorded in wide screen format (16:9) or normal TV format (4:3), and will play the cassette with the appropriate format.

 
- 3

 
- ON : For recording and playing the programme with 16:9 wide-screen format

- OFF : For recording and playing the programme with 4:3 normal TV format

CM skip (commercial skip)

If you press '▶▶ 30' button on the remote control, the video will picture search forward for 30 seconds.






Remote lock



 You can only set the remote lock with your remote control.

You can prevent anyone from using the controls on the remote control or the front display.



Press and hold the  button until  is displayed on the front of your video.

Your video cannot be used, only timer recordings will work.

Keep your remote control in a safe place. To release the remote lock, press and hold  until  disappears from the front display.


OSD(On Screen Display) ON & OFF

This VCR is set to "OSD (On Screen Display) ON" mode at the factory, but you can change it to OFF mode. When a function is changed at the front display or remote control the change will be displayed on the screen.

1


Press **MENU**.
Choose "VCR SETUP"
And press **OK**.

2

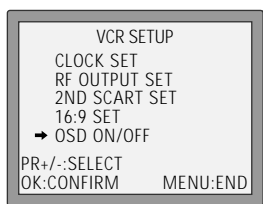


Choose "OSD ON/OFF".

3

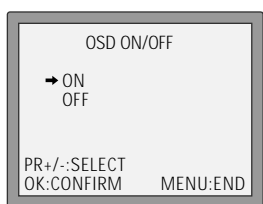

If you want OSD OFF mode, press **PR-** and press **OK**.

 
OSD characters will not displayed in the normal picture at the start of each mode change.



Simple recording



Load a cassette with its safety tab in place (see page 23).

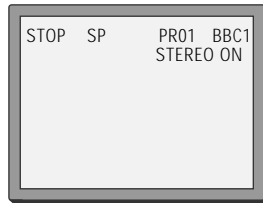

Press **PR+** or **PR-** to choose the station you want to record.
Press **SP/LP** if you wish to double the length of the cassette's recording time.

For example, on an E-240 cassette you can record for up to four hours when SL is displayed, or up to eight hours when LP is displayed.




Press **●** to start your recording.



Press **||** if you want to stop the recording for a short while.

 Press **●** to continue recording.



Press **■** to stop your recording.

One-touch recording-OTR

 


 
Press **PR+** or **PR-** to choose the station you want to record. Every time you press **●**, the recording time will increase by 30 minutes. It is possible to record for up to 10 hours if there is enough room on the cassette.

These buttons are used on the following two pages.



- To cancel OTR press and hold the **STOP** button for about five seconds until the video stops recording.
- If you want to record from other equipment that is connected to your video, see pages 5, 6 and 9.






Recording cassettes

- ◆ If you want to use the video's timer to record a programme, the clock, date and stations must be set correctly.
- ◆ Load a cassette with its safety tab in place (see page 23) and with enough free tape for the recording.


Timer recording using VideoPlus+

VideoPlus is an automatic system which makes it easier to set the timer.

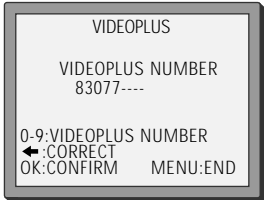
- 

Press **SV/V+** to select the VideoPlus screen. (If this button is not on your remote control, the function is not available on your video. Go to page 20).


Videoplus numbers are shown in TV guides.

From your current TV guide, type in the number next to the programme you want to record using the number buttons **0-9**. Press **OK** to confirm.
- 

Press **PR+** or **PR-** to select how often you want to make the recording, for example, once, weekly and so on.

Press **OK** to confirm.
- 

If you wish to change any details: Move to the details you want to change using the **←/→** buttons. Change the setting using the **PR+** or **PR-** or number buttons **0-9**.

If all the settings are correct, press **OK**. The on screen display will remind you to enter a cassette and turn the VCR off.
- 

Press **⏻** to **switch your video off**. Your video will not record unless you do this.

You can switch the video on again if you want to set the timer to record another programme. Remember to switch the video off when you have finished setting the timer.

If PDC does not appear on the screen, it is not available on your video. PDC= Programme Delivery Control.

 
- PDC sets your video to adjust the start times of your timed recording. This happens even if a programme starts earlier or later than advertised.

PDC works when the broadcaster sends a signal, but the signal is not always sent.

If you are not sure the signal will be sent, it is best to switch PDC off.



- If there is **no programme number** displayed under 'PR' in the change menu, the video doesn't yet know the number for the programme you want. Type it in and this will be stored for later recordings.
- If you wish to record from a **satellite receiver**, select under 'PR' the satellite programme or AV (depending whether the video is connected with the antenna cable or the scart-cable). Leave the satellite tuner switched on and set the programme you want to record.
- The video will warn you if you have set the timer to start recording a second programme before the first recording has finished.
- To stop the recording after it has already started, press and hold the **STOP** button for about five seconds until the video stops recording.
- VideoPlus + and Plus code are trademarks of Gemstar Development Corporation. VideoPlus + system is manufactured under license from Gemstar Development Corporation.




- ◆ For timer recordings, clock, date, and stations must be set correctly.
- ◆ Load a cassette with its safety tab in place (see page 23) and with enough free tape for the recording.

Normal timer recording



These buttons are used on the following two pages.

1

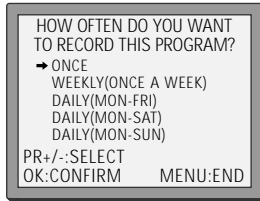

Press **MENU**.


Choose "Timer Program" by pressing **OK**.

Press **PR+** or **PR-** to select an unused channel, for example '----' then press **OK** to confirm.

There are positions for eight timer programs.

Press **PR+** or **PR-** to select how often you want to make the recording, for example, once, weekly and so on. Press **OK** to confirm.

2

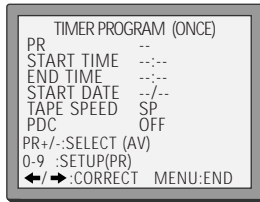

- ◆ **PR** : Use **PR+** if you want to choose the AV channel or **0** to **9** for other channels.

- ◆ **Start time** : Use buttons **0** to **9** to enter the start time.


- ◆ **End time** : Use buttons **0** to **9** to enter the end time.

- ◆ **Start date** : Use buttons **0** to **9** to enter the date.

- ◆ **Tape Speed** : Use **PR+** if you want to choose LP (see page 18).

- ◆ **PDC** : Use **PR+** if you want to switch PDC on (see page 19). **If PDC does not appear on the screen, it is not available on your video.**

3

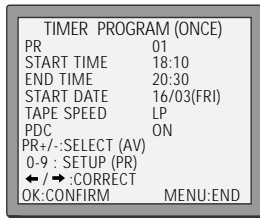

If you want to change any of the details. Move to the details you want to change using the **←** and **→** buttons.

 
Change the setting using the **PR+** or **PR-** or number buttons **0** to **9**.

4

If all the settings are correct, press **OK** to confirm.

The on screen display will remind you to enter a cassette and turn the VCR off.

5




Switch your video off by pressing the **⏻** button.

You can switch your video on again if you want to set the timer to record another programme. Remember to switch the video off when you have finished.




 - The video will warn you if you have set the timer to start recording a second programme before the first programme has finished. If you don't adjust the times, the video will record the first programme completely, then start to record the second one.
- If there is not enough free space for the recording on the cassette the video will **automatically switch to 'LP'** to double the recording time left on the cassette.
- The recorder will **eject** cassettes which have the safety tab removed (page 23)
- To stop a recording which has already started, press and hold the **STOP** button for about five seconds until the video stops recording.



Timer review - changing and erasing record settings


1

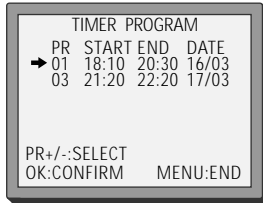

Press **MENU**.

Choose "Timer Program" by pressing **OK**.


2

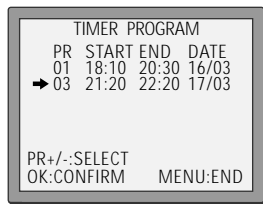

Select the program you want to change or erase by pressing **PR+** or **PR-**.

Press **OK** to confirm.

3a

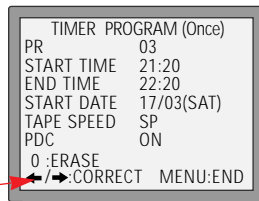

3b

Changing a setting

Select the details you want to change by pressing **←** or **→**.

Use the number buttons **0** to **9** to change the settings. Use **PR+** to select the AV channel, to change the tape speed and to switch PDC on and off.

When you have made all the changes, press **←** or **→** until you see 'OK : confirm' on the bottom line of the screen.

Press **OK**.

 
Remember to load a cassette and **switch the video off** by pressing .

 
Erasing a setting

Press the number **0**.

Press **OK** to confirm.

Press **MENU** twice to end.






- ◆ The counter counts in real time from when you load the cassette. This does not have to be at the beginning of the cassette. The counter does not count unrecorded parts of the cassette.
- ◆ If you rewind the cassette, the counter will count backwards, if you rewind beyond the zero position, the counter counts in negative values for example, - 0:01:15.

Clock and counter display

This display will only appear when there is a cassette in the video.

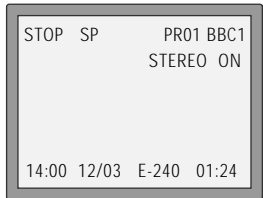


- Press **[A]** once to display the time and date.
- Press **[A]** twice to display the counter time and how long is left to the end of the cassette.
- Press **[A]** three times to clear the screen.

Remaining time and cassette length

This display will only appear when there is a cassette in the video.


Press **MENU** and choose 'Tape Control' by pressing **PR+** and then **OK**

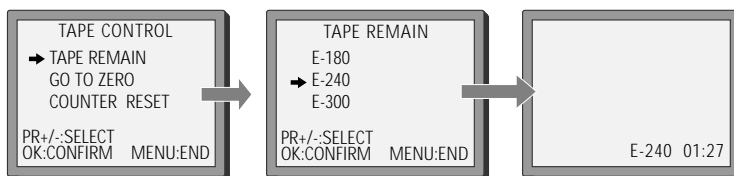

- Choose 'Tape Remain' by pressing **OK**.
- Press **PR+** or **PR-** to select the length of your current cassette.
- Press **OK** to confirm. The display will show how long is left to the end of the cassette.

Finding the counter zero position


This display will only appear when there is a cassette in the video.

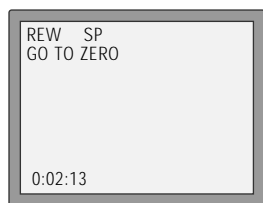

- Press **MENU** and choose 'Tape Control' by pressing **PR+** and then **OK**.
- Choose 'Go to Zero' by pressing **PR-** and then **OK**.
- The video will wind to the position 0:00:00 and stop.

Resetting the counter to zero


This display will only appear when there is a cassette in the video.

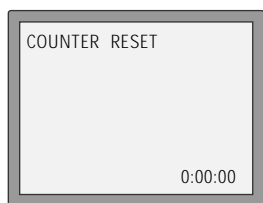


- Press **MENU** and choose 'Tape Control' by pressing **PR+** and then **OK**.
- Choose 'Counter Reset' by pressing **PR-** twice and then **OK**.
- The video will reset the counter to zero.



  These buttons are used on the following two pages.






Cassettes



Use only good-quality cassettes with the VHS logo.

- Keep cassettes away from moisture or dust, magnetic and electrical fields (for example, loudspeakers and computer monitors).
- Always rewind cassettes to the beginning when you have finished using them. Stand cassettes up with the full spool at the bottom. Always keep cassettes in their cases.

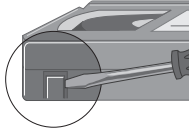

You can protect your precious recordings from being recorded over by breaking off the safety tab on the side of the cassette (some cassettes have a slide). When you have removed the tab your video will eject the cassette if ever you try to record onto it.

If you want to record onto the cassette after removing the tab, cover the hole with sticky tape.

We advise you to use a head - cleaning cassette every six months to keep your video in perfect working order.

 
Power - saving features

 
Dimmer

Your video recorder's display will go dim when the video is on stand-by.

Auto power off


If your video is connected through RF, it will switch to stand-by when no station is received for more than five minutes.





Choice of sound output

If this screen does not appear when you press the A.SEL button, this function is not available on your video

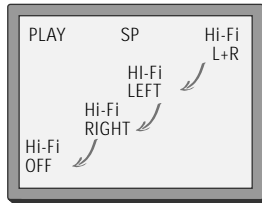

While you are watching a stereo broadcast or playing back a hi-fi recording


The first time you press the A.SEL button while you are playing a recording, 'Hi-Fi' will be shown on the screen. If you are watching a broadcast, 'STEREO' will be shown on screen. If you keep pressing the button, the sound output will change in the following order.

First press: the on-screen display of sound output appears.

Second press: the video selects the left audio channel only.

Third press: the video selects the right audio channel only.

Fourth press: the video selects the normal mono soundtrack of a hi-fi cassette.

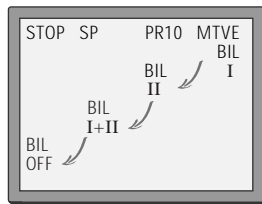

While a bilingual performance is being broadcast

 
First press: the on-screen display of sound output appears and the main language (original sound track) is selected.

 
Second press: the video selects the sub-language.

Third press: the video selects both main language and the sub-language.

Fourth press: the video returns to the original soundtrack.


For mono sound performance there is no choice available.





The hi-fi system

If this screen does not appear when you press the A.SEL button, this function is not available on your video.

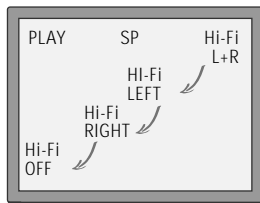

As well as the normal mono sound track of VHS video recorders, your video has a high-quality hi-fi sound system.


This means you can enjoy the following.

- Films with excellent stereo sound
- Films of full-length concerts in high quality stereo
- Films with impressive surround sound using extra surround-sound equipment
- Films with two dialogue modes (dual, bilingual), usually the original sound track and dubbed sound track.
- VHS cassettes with hi-fi stereo sound and also VHS cassette with normal sound.



What you can listen to

If this screen does not appear when you press the A.SEL button, this function is not available on your video.

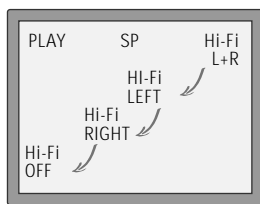

During stop, the video displays what the current station is **broadcasting**.

 
When you switch to another station or the new station may change the sound mode, your video will display the programme and sound mode on the screen (if not, press **A.SEL**).

 
- 'STEREO' = stereo
- 'BIL L' / 'BIL R' = bilingual
- Nothing = mono sound



During **playback**, the video will display what is recorded on the cassette (if not, press **A.SEL**).

- 'hi-fi' = stereo/bilingual
- Nothing = mono sound





- ◆ For your own safety read the following instructions carefully before you try to plug this video into the mains.

Electrical connection

- ◆ Check that the voltage on the rating plate matches the voltage in your home. The rating plate is on the back panel of the video.
If the mains plug fitted to this appliance is not suitable for your mains sockets, remove the plug and replace it following instructions below.
(See over the page for how to get rid of the original plug).

 
The wires of the mains lead fitted to this appliance are coloured as follows.

 
Blue = **N**eutral (black)
Brown = **L**ive (red)

The colours of wires in the mains lead fitted to this video may not correspond with the coloured markings of the terminals in the plug.

- ◆ The wire which is coloured blue must be connected to the terminal which is marked with the letter '**N**' or coloured black.
- ◆ The wire which is coloured brown must be connected to the terminal which is marked with the letter '**L**' or coloured red.
- ◆ Do not connect any wire to the earth terminal of a three-pin plug.

If the terminals in the plug are not marked or you are in any doubt about the correct connections, consult a qualified electrician.





Moulded plugs

- ◆ If it is necessary to remove a moulded plug from the mains cable, you should cut it off and replace it with a suitable replacement.
- ◆ You cannot use the moulded plug for any other appliance, so remove the fuse and throw it away immediately and safely to prevent anyone, especially children, from plugging it into a wall socket which would be very dangerous.
- ◆ If the mains lead ever needs replacing, a qualified electrician should replace it with a flexible cord from the manufacturer.
- ◆ After you have replaced a fuse in the plug, you must put the fuse cover back on. If you have lost the fuse cover, you must get a replacement cover. The replacement fuse cover should be the same colour as the coloured insert in the base of the plug or the colour that is embossed in words in the base of the plug, or anywhere else on the plug. Always mention this colour when you order a replacement fuse cover.
- ◆ Only 5-amp replacement fuses which are ASTA approved to BS 1362 should be fitted.



This symbol means that this unit is double insulated, an earth connection is not necessary.



 
Caution :
To prevent electric shock, do not remove any covers.



Caution:
There are no parts inside which you can repair yourself. Always get a qualified service engineer to carry out any repairs.



Caution:
When you are using this video on AC 230V ~ mains supply, please remember that when the video is on stand-by, it is not disconnected from the mains supply. However, it is perfectly safe to leave the video connected to the mains supply.



Index

Aerial	4, 7	OSD ON/OFF	17
Bilingual	14, 24, 25	OTR (One Touch Recording)	18
Cassette length	22	PDC (Programme Delivery Control)	19
Channel	7-8, 10-12	Protected cassette	23
Child Lock	17	Remaining time	22
CM Skip	16	Remote lock	17
Condensation	Precautions	RF out	7-8
Counter	22	Satellite	5, 9
Euro AV	9	Scart socket	4-6, 9
Fine-tuning	11	SP (standard play)	18-20
Location number	7-8, 12	Stand-by	Precautions
LP (long play)	18, 20	Station	7-8, 12
Mains	4-6, 26	Still-frame adjustment	15
Mesecam	14	Test picture	7
NTSC	14	TV/VCR button	4
		Tracking	14
		VideoPlus+	19
		16:9 Set	16

Technical information

Dimensions

Width x height x depth	360 x 90 x 288 mm
Weight	3.85 kg

Power supply

Voltage	AC 230 V ~, 50 Hz
Power consumption	Mono 14 Watts Hi-Fi 16 Watts

System

Video	PAL-I
Channel range	UHF 21 - 69,
Channel locations	99 + AUX
RF Out	UHF CH 21 - 69 (52)

Video

System	VHS
Speeds	Short play and long play

Hi-Fi (Available on some models. See pages 24 and 25)

Frequency response	20 Hz to 20 KHz
Dynamic range	> 80dB
Signal-to-Noise-Ratio	> 60dB

General

Temperature range	5° C to 35° C
Humidity range	< 80 %
Timer	8 events, 1 month

These technical details may change.

DAEWOO CERTIFICATE OF REGISTRATION

REGISTERING YOUR NEW DAEWOO PRODUCT

To register your product for its 12 month guarantee please complete and return the section below.

MR _____
 MRS _____
 MS _____
 SURNAME _____ INITIALS _____

NUMBER/HOUSE NAME/STREET _____

TOWN _____

COUNTRY _____ POSTCODE _____

PRODUCT DETAILS

MODEL No. _____ SERIAL No. _____ DATE OF PURCHASE _____

PRODUCT DESCRIPTION _____ PRODUCT VALUE _____

NAME OF RETAILER _____

On the expiry date of the manufacturer's guarantee you will be sent details of our annual insurance plan but if you have already bought an extended warranty for this product from your retailer please tick box

The information provided will be held on computer by the DAEWOO Registration Department of Domestic & General Insurance Co. Limited for the provision of warranty insurance or product related purposes.
The information will not be disclosed to third parties, should you prefer not to receive product related details writes to Domestic & General Insurance Co. Limited, on the address overleaf.

DAE REG / 295

IMPORTANT

YOUR 1ST YEAR MANUFACTURER'S GUARANTEE


Please keep this with your purchase receipt, which will be required if service is needed on this product during the guarantee period.

KEEP THIS SECTION FOR FUTURE REFERENCE


MODEL No. _____

SERIAL No. _____

DATE OF PURCHASE _____

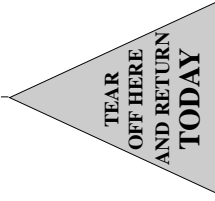

DAEWOO

 

DAEWOO GUARANTEE CONDITIONS

This product is guaranteed for 12 months from the date of original purchase. Any defect that arises due to faulty materials or workmanship will be repaired free of charge during this period by the dealer from whom you purchased the unit. The guarantee is subject to the following provisions.

The guarantee does not cover accidental damage, misuse, cabinet parts, knobs or consumable items such as batteries, drive belts or bulbs.

The product must be correctly installed and operated in accordance with the instructions contained in the manual. It must be used solely for domestic purposes. For further information regarding your guarantee please see the section at the rear of your user manual.

The guarantee will be rendered invalid if the product is resold or has been damaged by inexpert repair.

DAEWOO disclaims any liability for incidental or consequential damages.

 
 
The guarantee is in addition to and does not diminish your statutory or legal rights.

 
In the event of a breakdown please refer to your instruction manual and check all plugs, fuses and electricity supply. In the event of there being no breakdown you will be charged for the repair.



Insert into envelope and send to :

DAEWOO GUARANTEE DEPARTMENT
Leicester House
17, Leicester Street
Bedworth
Nuneaton
Warwickshire CV12 8JP





Problem-solving guide

The video has the time or -.- - on the display

If while you are setting up the video, the timer or -.- - is in the display, the video is switched off or has already gone through the autaset procedure (OK has already been pressed). In this case, please turn to page 7 and carry out step 2 until you see the manual tuning screen.

The arrow will not go to preset in the menu

If the arrow will not go to preset, come out of the menu completely by following the on-screen instructions and press AV on the video remote control until P-__ is displayed. P-__ will be displayed on the front of the video where the time normally is displayed.

A blue screen is displayed when you switch the video on

If a blue screen appears when you switch the video on, the AV button has been pressed. Press AV on the remote control until P-__ appears on the display of the video, or until a TV picture is displayed.

The video has lost programmed channels

If the video has lost the programmed channels, check whether the video has been switched off. If the video is left with no power for up to eight hours, you can press the **MENU** button when the autaset screen appears to bring back the original settings. See page 8 for how to set time and date.

The timer light stays on the display, even though the recording has finished

If the timer light stays on even though the recording has finished, this is because PDC takes into account a delay in recording for up to 24 hours.

The TV/VCR button on the video remote control will not work

This button will only work if the TV has the appropriate internal switch.

The television will not change channel when the video is turned on

If the television will not change channel while the video is on, check whether a scart lead has been connected. (See page 4 option 2)

 
If a scart lead has been connected, you need to press the TV/VCR button on the video remote control. When the small VCR symbol appears on the display, you can only change channel by using the video remote control.

If the TV/VCR button on the video remote control does not work, read the instruction book for the TV to find out about an audio video button.

The video has a number other than 52 when RF appears

A number other than 52 might be displayed on the video when RF is flashing in the display. This means that the number has been adjusted in the past.


The TV needs to be tuned in to get the blue auto set or auto search screen.



Quick-start guide

Please follow the guide from the beginning to the end. Before you connect the video equipment make sure all equipment is switched off at the plug.

Stage 1. Connecting the video to your TV

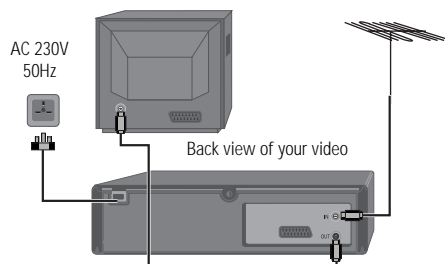

A Fit the batteries we have provided into the remote control. Make sure that the (+) and (-) marks on the batteries agree with the (+) and (-) marks inside the battery compartment.


B Plug your aerial into the ANT IN socket of the video.

C Connect the black aerial lead provided from the ANT OUT socket of the video to your TV aerial socket.

D Plug the video into the mains and turn it on by pressing the POWER button. RF 52 will now be displayed on the front of your video.

There are more details, including how to connect extra equipment, on pages 4 to 6.


Stage 2. Tuning in your TV

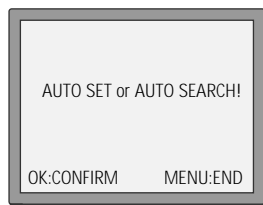

A Tune a spare channel of your TV until you see the blue 'AutoSet' or 'AutoSearch' screen. Store this setting on your TV.


B If there is any distortion (lines, flickering and so on) use the number buttons on the remote control to change RF 52. This channel recommended on the screen see page 7.

Stage 3. Auto Set! or Auto Search! (When you have got a clear picture)

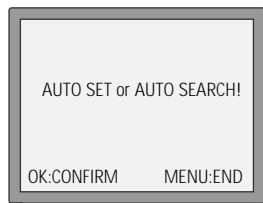


A Point the remote control at the video and press **OK**.

B The video is now tuning all the television stations available in your area.

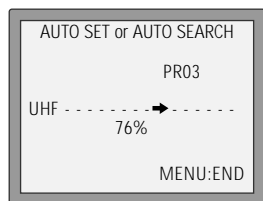

C If 'Clock Set' appears on the TV screen, please enter the time and date. Use the number buttons **0** to **9** on the remote control. Press **OK** to confirm.

D When 'Manual Set' appears on the TV screen, press **MENU** to end.

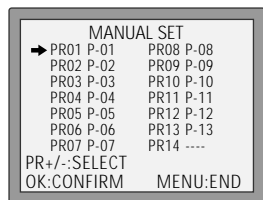

F Your video is now set up. If you want to change station names or the programmes they are stored on see pages 11 and 12.



Important : If you switch your video off at the mains overnight you do not have to retune the settings. Press **POWER** and then **MENU** to restore all the settings. See page 8 to set the time and date. If you have had any problems setting up your video, please read the problem-solving guide on page 31.