

Blue
mr Handsfree® **TabCover**

QWERTY

USER'S MANUAL

GB

NL

FR

E



DECLARATION OF CONFORMITY

Hereby,

Company	TE-Group NV
Address:	Kapelsestraat 61, 2950 Kapellen, Belgium

Declares that

Product Name	mr Handsfree Blue TabCover
Product Type	Bluetooth® keyboard + protective case

is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC.

The product has been tested against the followings standards and specifications, applying versions valid in November, 2012:

EN 301489-1

EN 301489-17


EN 300328

EN 60950-1

Joseph van Oosterum, CEO TE-Group NV, 12-11-2012



 PARTS AND FUNCTIONS

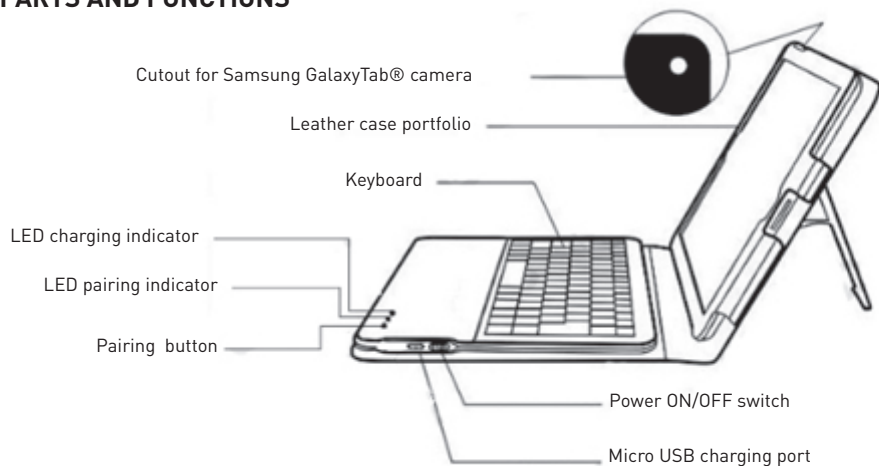

CHARGING THE QWERTY KEYBOARD

 
The QWERTY keyboard can be charged using the supplied USB to micro-USB charging cable. Connect the micro-USB end of the supplied cable into the QWERTY keyboard.

Connect the other end of the USB cable to your laptop/computer or any other USB charging device. During charging, the red LED indicator will light. When the battery is fully charged, the LED indicator will turn off.


Note: When the blue LED indicator is flashing quickly, the battery is almost empty. Please charge it ASAP.

TURNING ON / PAIRING THE QWERTY KEYBOARD

Turn on the QWERTY keyboard with the power ON/OFF switch on the right side.




 Press the Pairing button located in the right bottom corner of the QWERTY keyboard to start the Bluetooth® pairing process. The blue LED indicator will start flashing.

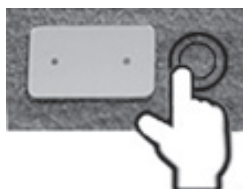

Select the “Settings” icon on your Samsung GalaxyTab® screen, then select “Bluetooth®” and turn “Bluetooth®” to ON.

 Your Samsung GalaxyTab® will search for available Bluetooth® devices. Select “MHF TAB-Cover” from the Devices list: at this point, your Samsung GalaxyTab® will display a pop-up message indicating the pairing code.

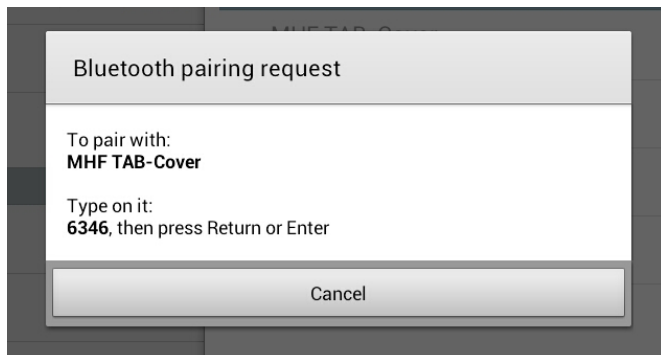


Enter this code followed by the “Enter” key using the QWERTY keyboard.

Your QWERTY keyboard is now paired and connected with the tablet. The blue LED pairing indicator will now turn off.

The QWERTY keyboard will enter into battery-saving sleep mode after 30 minutes of inactivity. To activate the keyboard again, press any button, and wait while the connection is being restored.

INSTALLING THE QWERTY KEYBOARD

 Go back to the “Settings” screen and scroll down to the “Personal” tab. Click “Language and input” and open the Settings menu of the Samsung keyboard.

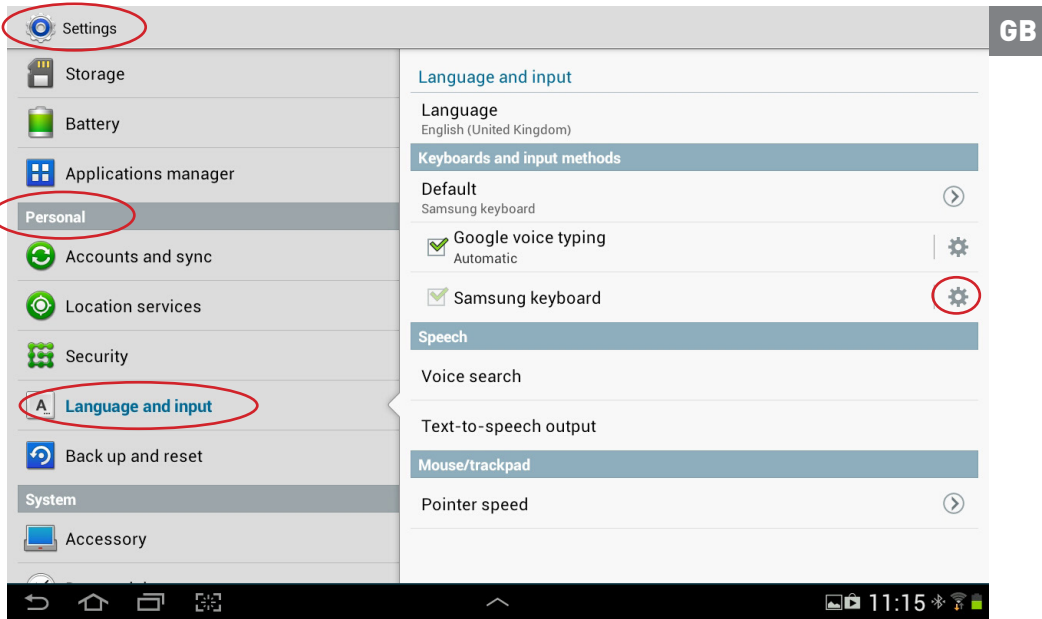

From the list that appears when clicking “Input language” choose “English (United Kingdom)”.

The Bluetooth® QWERTY keyboard can now be used with all text-based applications for Samsung GalaxyTab®.

To select special characters or language accent marks, you should keep the right “CTRL” key pressed while pressing the key that you would normally press on a standard European QWERTY keyboard. For example, “Ctrl”+“4”= € or “Ctrl”+“e” = é, “Left Alt” + “s” = ß or “Left Alt” + “c” = ç

SPECIAL GALAXYTAB® FUNCTION BUTTONS



- | | | |
|----------------|----------------|--------------------|
| 1. Home/Escape | 6. Select all* | 12. Previous track |
| 2. Luminance – | 7. Copy | 13. Next track |
| 3. Luminance + | 8. Paste | 14. Mute |
| 4. E-mail | 9. Cut | 15. Volume – |
| 5. Search | 10. Stop | 16. Volume + |
| | 11. Play/pause | 17. Lock Screen |

* This function is not supported by all models. If this button does not work, you can use “Ctrl”+“Q” to select all.

CUSTOMER SUPPORT

For all product related questions, please contact: support@mrhandsfree.com.

BLUETOOTH®

The Bluetooth® word mark and logos are owned by the Bluetooth® SIG, Inc. and any use of such marks by TE-Group NV is under license. Other trademarks and trade names are those of their respective owners.

DISPOSAL



Do not dispose of electrical appliances as unsorted municipal waste, use separate collection facilities. Contact your local government for information regarding the collection systems available. If electrical appliances are disposed of in landfills or dumps, hazardous substances can leak into the groundwater and get into the food chain, damaging your health and well-being. When replacing old appliances with new ones, the retailer is legally obligated to take back your old appliance for disposals at least free of charge.

GUARANTEE

Copyright © mr Handsfree. Mr Handsfree is a registered trademark of TE-Group NV. The mr Handsfree brand stands for superior product quality and outstanding customer service. That is why mr Handsfree warrants this product against all defects in material and workmanship for a period of **two (2) years** from the date of original purchase of the product. The conditions of this guarantee and the extent of responsibility of mr Handsfree under this guarantee can be downloaded from our website: www.mrhandsfree.com.