

Always here to help you

Register your product and get support at
www.philips.com/welcome

Question?
Contact
Philips


BT5275
BT5270
BT5260



User manual

 PHILIPS



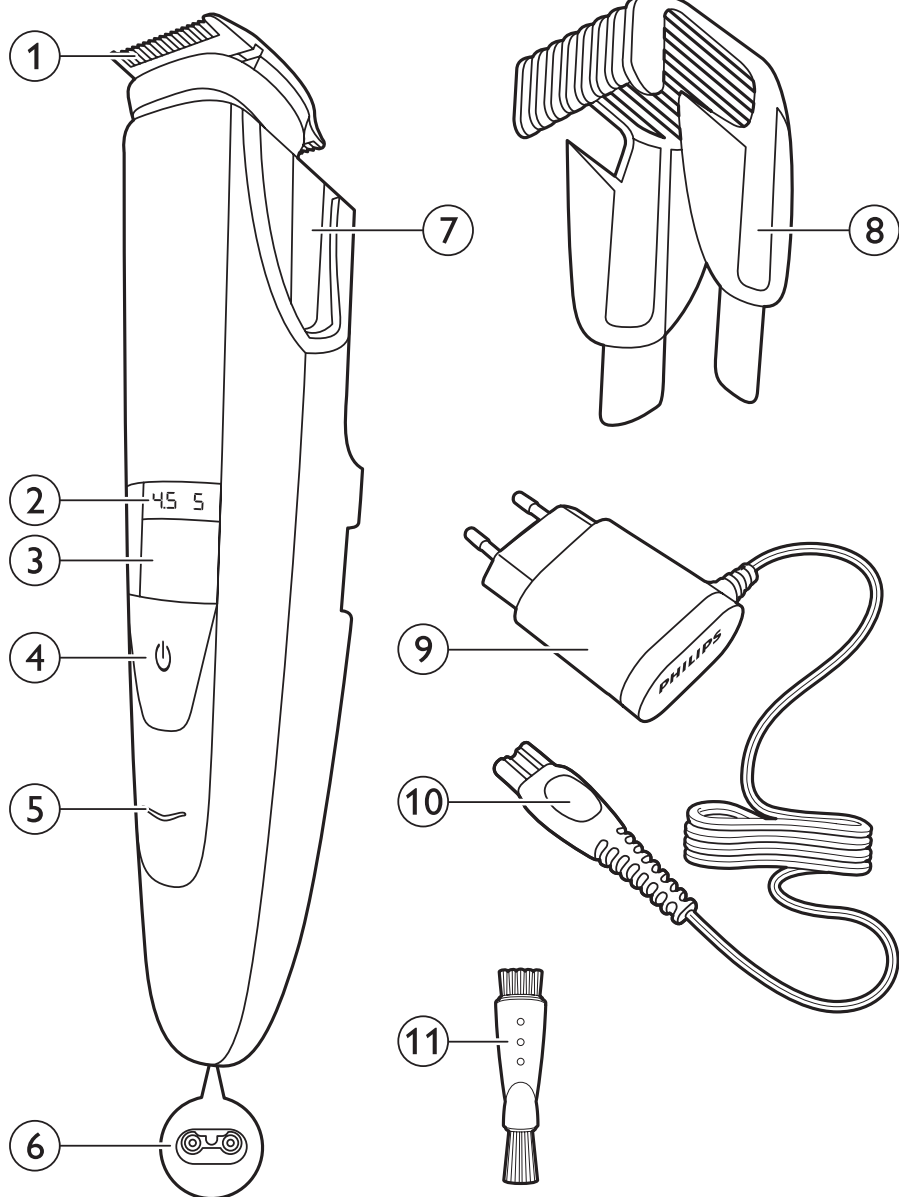

ENGLISH	6
DANSK	14
DEUTSCH	23
ΕΛΛΗΝΙΚΑ	32
ESPAÑOL	41
SUOMI	50
FRANÇAIS	58
ITALIANO	67
NEDERLANDS	76
NORSK	85
PORTUGUÊS	93
SVENSKA	102
TÜRKÇE	111

Introduction

Congratulations on your purchase and welcome to Philips! To fully benefit from the support that Philips offers, register your product at **www.philips.com/welcome**.

General description (Fig. 1)

- 1 Turnable trimming head
- 2 Length setting
- 3 Zoom wheel
- 4 On/off button
- 5 Battery light
- 6 Socket for small plug
- 7 Guiding groove for trimming comb
- 8 Trimming comb
- 9 Adapter
- 10 Small plug
- 11 Cleaning brush

Important

Read this user manual carefully before you use the appliance and save it for future reference.

Danger

- Keep the adapter dry.

Warning

- Check if the voltage indicated on the adapter corresponds to the local mains voltage before you connect the appliance.
- The adapter contains a transformer. Do not cut off the adapter to replace it with another plug, as this causes a hazardous situation.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Keep the appliance and its cord out of the reach of children.
- Do not use the appliance in the bath or in the shower.

Caution

- Always check the appliance before you use it. Do not use the appliance if any of its parts is damaged or broken, as this may cause injury.
- Only use this appliance for its intended purpose as shown in the user manual.
- Use, charge and store the appliance at a temperature between 5°C and 35°C.
- Only use the adapter supplied to charge the appliance.
- Make sure the appliance is switched off and disconnected from the mains before you clean it under the tap.
- If the appliance is subjected to a major change in temperature, pressure or humidity, let the appliance acclimatise for 30 minutes before you use it.
- If the adapter is damaged, always have it replaced with one of the original type in order to avoid a hazard.





- Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.
- Noise level: $L_c = 65 \text{ dB(A)}$

Compliance with standards

- The appliance complies with the internationally approved IEC safety regulations and can be safely cleaned under the tap.
- This Philips appliance complies with all applicable standards and regulations regarding exposure to electromagnetic fields.

Preparing for use

Charging

Charge the appliance fully before you use it for the first time and after a long period of disuse.
Charging takes about 60 minutes if the appliance is completely empty.


- 1 Make sure the appliance is switched off.
- 2 Insert the small plug into the appliance and put the adapter in the wall socket.



- ▶ The battery light flashes orange and white alternately.

- ▶ After about 3 minutes, the battery light flashes white only. At this point, the battery contains enough energy for one cordless trimming session.

- ▶ The battery light continues to flash white and when the appliance is fully charged, it lights up solid white.
- ▶ If the fully charged appliance is still connected to the mains after 1 hour, the battery light goes out after 30 minutes.

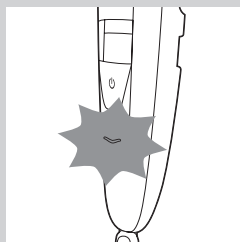


Battery low and battery empty signals


- ▶ When the battery is almost empty, the battery light starts flashing orange. When you switch off the appliance, the battery light continues to flash orange for a few seconds.
- ▶ The battery light flashes orange at a higher frequency if the battery is empty and if you press the on/off button.

Corded trimming

You can also operate the appliance from the mains.

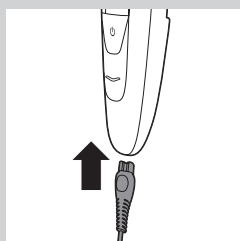

- 1** Insert the small plug into the appliance.
- 2** Put the adapter in a wall socket.

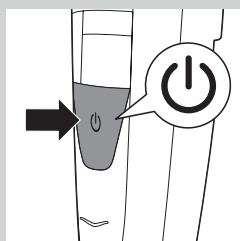


- 3** Press the on/off button to switch on the appliance.

Using the appliance


You can use the appliance to trim facial hair (beard, moustache and sideburns). This appliance is not intended for trimming lower body parts or scalp hair.

Trimming with comb

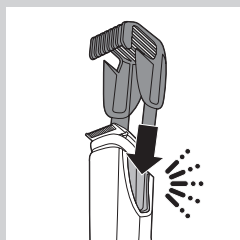


The appliance comes with a comb that keeps the trimming head at a certain distance from your skin. This distance determines the remaining hair length and can be adjusted by turning the zoom wheel.

- 1** Slide the comb into the guiding grooves on both sides of the appliance ('click').

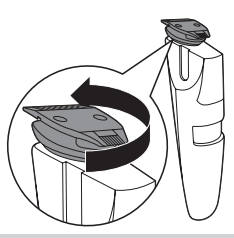


Note: The comb does not fit on the trimming head when the 15mm (0.6in) side is pointing towards the front of the appliance. If this is the case, turn the trimming head before you slide the comb onto the trimming head.

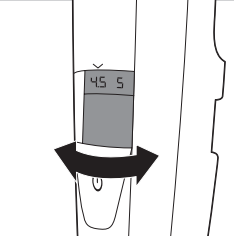

2 Turn the zoom wheel to select a length setting.


- The length setting selected is the one right below the indicator on the front of the appliance.
- You can select a length from 0.4mm to 10mm (see table in section 'Length settings' below).

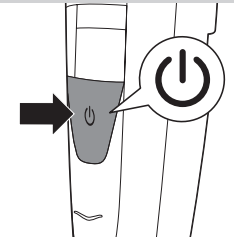

3 Press the on/off button to switch on the appliance.



4 To trim your beard, move the comb through the hair slowly.

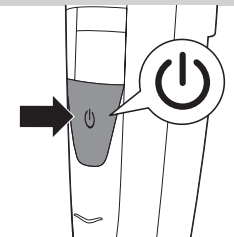

5 When you are finished, press the on/off button to switch off the appliance.

Tips

- Always make sure that the tips of the comb point in the direction in which you move the appliance.
- Make sure that the flat part of the comb is always in full contact with the skin to obtain an even hair length result.
- Since hair grows in different directions, you need to move the appliance in different directions (upward, downward or across).
- Trimming is easier when skin and hair are dry.

Length settings

mm				
0.4	0.6	0.8	1	1.5
2	2.5	3	3.5	4
4.5	5	6	7	8
9	10			

Trimming without comb




If you trim without the comb, your hair is cut off close to the skin. The trimming head has a 32mm(1.25in) side and a 15mm (0.6in) side.


- The 32mm (1.25in) side is for regular trimming and contouring.




- The 15mm (0.6in) side of the trimming head allows more precise styling and contouring than the 32mm(1.25in) side.

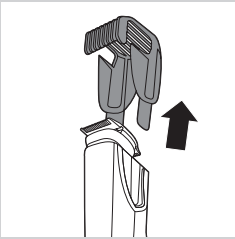

- 1** If the comb is still on the trimming head, pull it off.
Never pull at the flexible top of the comb. Always pull at the sides.

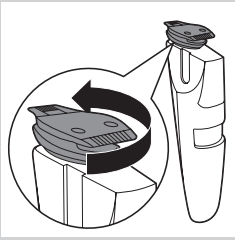


- 2** Turn the trimming head until the side you want to use points to the front of the appliance.

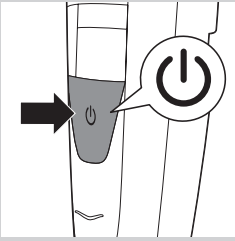

3 Press the on/off button to switch on the appliance.

4 Hold the appliance in the position that is most convenient for the area you want to trim and make upward or downward strokes.

Tip: For a comfortable trim close to your skin, place the flat side of the trimming head against your skin and make strokes in the desired direction.

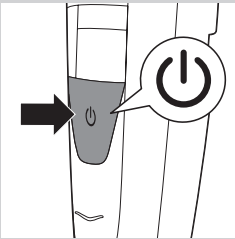

5 When you are finished, press the on/off button to switch off the appliance.

Cleaning and maintenance

Clean the appliance after every use.


Never use compressed air, scouring pads, abrasive cleaning agents or aggressive liquids such as petrol or acetone to clean the appliance.

Note: The trimming head does not need any lubrication.


Cleaning the appliance and the comb

1 Switch off the appliance.


2 Pull the comb off the trimming head.

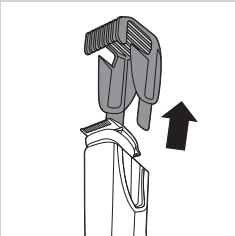

3 Clean the trimming head under the tap with lukewarm water or clean it with the cleaning brush supplied.

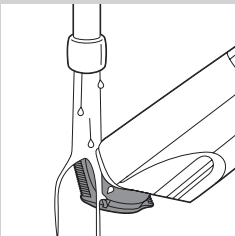


4 Clean the comb under the tap or clean it with the cleaning brush supplied.

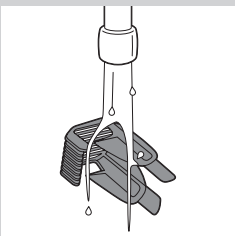


Cleaning the trimming head connector

Note: Make sure you clean the trimming head connector at least once every three months.


1 Switch off the appliance.

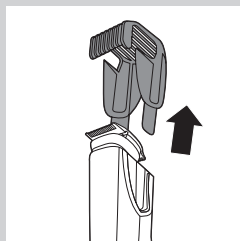


2 Pull the comb off the trimming head.

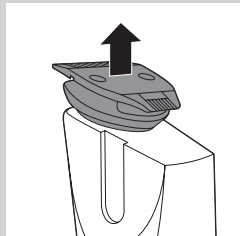

3 Pull the trimming head off the appliance.

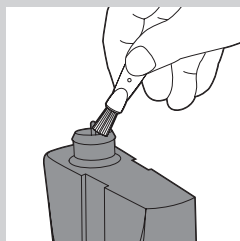

4 Clean the trimming head connector with the cleaning brush supplied.

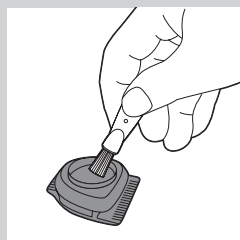

5 Clean the inside of the trimming head with the cleaning brush supplied.

6 After cleaning, put the trimming head back onto the appliance.

Ordering accessories

To buy accessories or spare parts, visit **www.shop.philips.com/service** or go to your Philips dealer. You can also contact the Philips Consumer Care Centre in your country (see the worldwide guarantee leaflet for contact details).

Guarantee and support

If you need information or support, please visit the Philips website at **www.philips.com/support** or read the worldwide guarantee leaflet.

Environment



- Do not throw away the appliance with the normal household waste at the end of its life, but hand it in at an official collection point for recycling. By doing this, you help to preserve the environment.



- The built-in rechargeable battery contains substances that may pollute the environment. Always remove the battery before you discard and hand in the appliance at an official collection point. Dispose of the battery at an official collection point for batteries. If you have trouble removing the battery, you can also take the appliance to a Philips service centre. The staff of this centre will remove the battery for you and will dispose of it in an environmentally safe way.

Troubleshooting

This chapter summarises the most common problems you could encounter with the appliance. If you are unable to solve the problem with the information below, contact the Consumer Care Centre in your country.

Problem	Possible cause	Solution
The appliance does not work when it is switched on.	The battery is empty.	Charge the appliance fully (see chapter 'Charging'). It takes approximately 60 minutes to charge the appliance fully. You can also operate the appliance from the mains.
The appliance does not trim as well as it used to.	The cutting element of the trimmer head is dirty.	Thoroughly clean the trimming head (see chapter 'Cleaning and maintenance').
	You do not move the appliance in the optimal direction.	For the best possible trimming and suction performance, we advise you to move the trimmer upwards, against the direction of hair growth, making smooth and gentle strokes. See chapter 'Using the appliance'.