

INNOVATIVE GERMAN QUALITY

**USER MANUAL** 



# NETWORK STORAGE CENTER NETWORK MEDIA CENTER EXTERNAL NETWORK HARD DRIVE ( 3.5" / LAN

#### Dear user,

Thank you for selecting the **Freecom Network Storage Center / Network Media Center**. The Freecom Network Center offers easy-to use Network Storage possibilities. To ensure you get the best performance and ease of operation, please read this manual carefully before using the Freecom Network Storage Center / Network Media Center. In addition to the Freecom Network Center, the Freecom Network Media Center offers the possibilities to use the device as UPnP Media Server and Torrent Download Client.

Freecom Network Center users can upgrade their device to Freecom Network Media Center functionality by purchasing a product key online at <u>http://www.freecom.com</u>.

#### Freecom Technologies GmbH • Germany www.freecom.com

#### **Contents of the box**

Please check the contents of the box to ensure it contains the following items:

- Freecom Network Storage Center / Network Media Center
- Power adapter & power cord
- LAN connection cable
- 2 rubber footstands for positioning the drive upright
- Manual, safety manual and application software on CD
- Quick Install Guide

#### **Need assistance? Have questions?**

In case you have a question about the use of this product, need information about other Freecom products or need technical assistance, please contact the Freecom Service Center for your country. See <u>www.freecom.com</u> for details.

Freecom offers free unlimited helpdesk support.

#### Warning!

All rights reserved. The products named in this manual are only used for identification purposes and may be trademarks or registered trademarks of the respective companies. This device was designed for home or office use.

This device is equipment complying with EN55022 class B.

Freecom cannot be made liable for any damages, loss of data or damage following thereof -whatsoever (including, without limitation, damages for loss of business profits, business interruption, loss of business information, or other pecuniary loss) arising out of the use of or inability to use this Freecom product, even if Freecom has been advised of the possibility of such damages.

We reserve the right to upgrade our products in keeping with technological advances.

# **User's Guide**

# **General Information**

System requirements Page	4
Precautionary measures Page	5
Freecom Network Storage Center /	
Network Media Center Setup OverviewPage	6

# **Chapter 1:**

Hardware InstallationPage	7
---------------------------	---

### **Chapter 2:**

Computer Configuration Page	10
-----------------------------	----

# Chapter 3:

# **Chapter 4:**

Accessing the Network Storage	Center / Network Media Center	Page	18

# Chapter 5:

Configuration of the Freecom Network Storage Center /	
Network Media CenterPage	22

# **Chapter 6:**

Network Storage Center / Network Media Center Functions F	Page	26
---	------	----

# Chapter 7:

# **General Information**

Your system needs to meet the following hardware and software requirements for the device to function properly.

#### **System requirements**

To use the Freecom Network Storage Center / Network Media Center, you will require the following components:

#### PC:

- Intel Pentium III / AMD Duron 900 MHz or higher
- 256 MB RAM (Vista: 512 MB RAM) or higher
- LAN (1000Base-T full duplex connection recommended)
- CD-ROM drive
- · Internet connection for online warranty registration, software updates and downloads
- Operating system: Windows XP, Windows Vista

#### Mac:

- PowerPC G3/G4/G5, Power Book G3/G4 or Intel Mac
- 256 MB RAM or higher
- LAN (1000Base-T full duplex connection recommended)
- CD-ROM drive
- · Internet connection for online warranty registration, software updates and downloads
- Operating system: Mac OS X v10.4 or higher

#### **Precautionary measures**

To ensure that your Freecom Network Storage Center / Network Media Center functions properly, please take note of the following precautions. If these are not followed, you may void your warranty and damage the Freecom Network Storage Center / Network Media Center.

- Do not drop the Freecom Network Storage Center / Network Media Center or expose it to other kinds of sudden mechanical shocks as this may result in data loss and damage to the Network Storage Center / Network Media Center.
- Do not use the Freecom Network Storage Center / Network Media Center when the ambient temperature is below 10°C or above 35°C.
- If the Freecom Network Storage Center / Network Media Center is moved from a cool environment to a warmer environment, please allow the drive to acclimatize to the ambient temperature before operating the device. Failing to do so may lead to condensation within the drive enclosure, which in turn may cause the drive to malfunction.
- Do not place liquids or drinks on the Freecom Network Storage Center / Network Media Center. When liquids are spilled and get in contact with the electronics within the drive enclosure, it will damage the drive and will cause the drive to malfunction.
- Do not use the Freecom Network Storage Center / Network Media Center in a dusty environment. Dust inside the enclosure may damage the internal electronics and result in drive malfunction.
- Only use the power adapter that was supplied with the Freecom Network Storage Center / Network Media Center.
- Opening the Freecom Network Storage Center / Network Media Center will void the warranty.

### Freecom Network Storage Center / Network Media Center Setup Overview



LAN (Ethernet)

# **Chapter 1: Hardware Installation**

1. Plug the LAN cable into the Freecom Network Storage Center / Network Media Center.

2. Insert the power cord into the Freecom Network Storage Center/Network Media Center and plug the power supply into the socket.

3. Connect the other end of the LAN cable to a network router.

Please note: Your router must be configured as DHCP server. See the manual of your router for further information how to setup DHCP server function.

4. Switch on the Freecom Network Storage Center / Network Media Center.











### **1.1 LED Description**

LED off: Device power is off LED on: HD switched on LED flashes: Data transfer



### **1.2 Power switch**

Please turn the Freecom Network Storage Center / Network Media Center off when it is not in use. This conserves electricity and extends the life of the device. The power switch is located on the rear of the Freecom Network Storage Center / Network Media Center.



#### **1.3 Reset button**

The Reset button has different functions, depending on how long the button is pressed:

Press "Reset" button for	LED Status	Action
1 - 3 seconds	white LED blinking slowly	Hardware will be resetted, all user and networks settings will be kept
4 - 7 seconds	white LED blinking fast	Device is shut down
8 - 9 seconds	white LED off	No action, "Reset" button can be released now without any action to be done
10 - 15 seconds	white LED blinking very fast	Network settings are set to factory default:
		- IP address = DHCP
		<ul> <li>Administrator password = admin</li> </ul>
		- Host name = NetworkCenter
		- Workgroup name = WORKGROUP
		Note: all user settings will be kept!
> 15 seconds	white LED off	No action, "Reset" button can be released now without any action to be done

### **1.4 Footstand**

Use the two rubber foot stands that come with the device to place the Network Storage Center / Network Media Center in upright position.



# **Chapter 2: Computer Configuration**

### 2.1 Check TCP/IP Settings in Windows XP

1. Open "Start" -> "Settings" -> "Control Panel".



2. Double-click on "Network Connections".



3. Right-click on your "Local Area Connection" and select "Properties".

- 4. The following screen will appear. Select "Internet Protocol (TCP/IP)" and click on the "Properties" button.
  - Local Area Connection Properties ? X General Authentication Advanced Connect using: Intel(R) PRO/100 VE Network Conne Configure... This connection uses the following items: QoS Packet Scheduler ^ AEGIS Protocol (IEEE 802.1x) v2.2.1.0 Internet Protocol (TCP/IP) ~ < > Uninstall Install. Properties - Description Transmission Control Protocol/Internet Protocol. The default wide area network protocol that provides communication across diverse interconnected networks. Show icon in notification area when connected Notify me when this connection has limited or no connectivity OK Cancel
- 5. In the "General" tab, select "Obtain an IP address automatically" and "Obtain DNS server address automatically".

matically if your network supports
ask your network administrator for
Ŋ
N 1 1
matically
dresses:
a. a. a. a.
Advanced
OK Cance

EN

### 2.2 Check TCP/IP Settings in Windows Vista

1. Open "Control Panel" -> "Network and Sharing Center".



2. Click on "Manage network connections".



- 3. Right-click on "Local Area Connection" and select "Properties".
  - 🔵 📲 « Network Connections ✓ 4 Search 2 🌗 Organize 🔻 🔡 Views 🔻 ? Name Status **Device Name** Connectivity Network Category Owner » LAN or High-Speed Internet (2) ^ In × × Local Area Wireless Connection Network ...
- 4. In the "Networking" tab, select "Internet Protocol Version 4 (TCP/IPv4)" and click on "Properties".

Connect using:	
🔮 Realtek R	TL8139/810x Family Fast Ethernet NIC
	Configure
his connection	uses the following items:
🗹 📑 Client fo	or Microsoft Networks
	acket Scheduler
	Printer Sharing for Microsoft Networks
Internet	Protocol Version 6 (TCP/IPv6)
🗹 🔺 Internet	Protocol Version 4 (TCP/IPv4)
✓ ▲ Internet ✓ ▲ Link-La	Protocol Version 4 (TCP/IPv4) yer Topology Discovery Mapper I/O Driver
✓ ▲ Internet ✓ ▲ Link-La	Protocol Version 4 (TCP/IPv4)
<ul> <li>✓ Internet</li> <li>✓ Ink-La</li> <li>✓ Ink-La</li> </ul>	Protocol Version 4 (TCP/IPv4) yer Topology Discovery Mapper I/O Driver yer Topology Discovery Responder
<ul> <li>✓ Internet</li> <li>✓ Internet</li> <li>✓ △ Link-La</li> <li>✓ △ Link-La</li> </ul>	Protocol Version 4 (TCP/IPv4) yer Topology Discovery Mapper I/O Driver
<ul> <li>✓ Internet</li> <li>✓ Link-La</li> <li>✓ ▲ Link-La</li> <li>✓ Install</li> <li>Description</li> </ul>	Protocol Version 4 (TCP/IPv4) yer Topology Discovery Mapper I/O Driver yer Topology Discovery Responder
<ul> <li>✓ Internet</li> <li>✓ A Link-La</li> <li>✓ A Link-La</li> <li>✓ Install</li> <li>Description</li> <li>Transmission</li> <li>wide area net</li> </ul>	Protocol Version 4 (TCP/IPv4) yer Topology Discovery Mapper I/O Driver yer Topology Discovery Responder

5. In the "General" tab, select "Obtain an IP address automatically" and "Obtain DNS server address automatically".



### 2.3 Check TCP/IP Settings in Mac OS X

1. Open "System Preferences" -> "Network".



2. In the "TCP/IP" tab, select "Using DHCP" in the "Configure IPv4" settings.

Network	Q	
on: Automatic	•	
ow: Ethernet (integriert)	•	
PPPoE AppleTalk Proxies	Ethernet	
ing DHCP	;	
2.168.1.206	Renew DHC	P Lease
5.255.255.0 DHCP Client IE		
2.168.1.1	(If required)	
		(Optiona
		(Optiona
:0000:0000:0000:020d:93ff:fe38	e598	
onfigure IPv6		(
	W:     Ethernet (integriert)       PPPoE     AppleTalk     Proxies       ing DHCP     2.168.1.206     5.255.255.0     DHCP Client IE       2.168.1.1     DHCP Client IE     DHCP Client IE	on: Automatic   Ethernet (integriert)  PPPOE AppleTalk Proxies Ethernet  Ing DHCP  2.168.1.206  Renew DHCP  Client ID: (If required)  C.168.1.1  C.10000.00000:020d:93ff:fe38:e598

# **Chapter 3: Installation of the application software**

### 3.1 Installation of the Freecom Network Storage Assistant Software (PC)

The Freecom Network Storage Assistant quickly detects and performs the basic setup of your Network Storage Center / Network Media Center. When you start it, it displays all Freecom Network devices available in your network and helps you creating network folders.

- 1. Please insert the Manual & Application CD into your CD/DVD drive. It contains user manuals and software, including the Freecom Network Storage Assistant. Once the CD is inserted, a window should appear automatically on the screen. If this does not happen, please proceed as follows:
- 2. Open "My Computer".
- 3. Double-click the CD drive containing the CD. The CD window should now open.



- 4. Click on "Software Installation" -> "FNS Assistant". The installation starts now. Follow the instructions on the screen, confirm with "Next" in order to continue with the installation. After installation has finished, press "Quit" to exit the menu screen.
- 5. Start the Freecom Network Storage Assistant by clicking on the "FNSA" icon on your desktop or via "Start" -> "program files".
- 6. Check the Freecom Network Storage Assistant whether your Network Storage Center / Network Media Center was detected. This may take some time. If your Network Storage Center / Network Media Center is not immediately detected, click "Search again for available Freecom Network Storage devices" to repeat the search.



7. For a detailed functional description on the Freecom Network Storage Assistant, please refer to chapter 7.

### 3.2 Installation of the Freecom Network Storage Assistant Software (Mac)

The Freecom Network Storage Assistant quickly detects and performs the basic setup of your Network Storage Center / Network Media Center. When you start it, it displays all Freecom Network devices available in your network and helps you creating network folders.

- 1. Please insert the Manual & Application CD into your CD/DVD drive. It contains user manuals and software, including the Freecom Network Storage Assistant.
- 2. You will now see CD icon on your Mac desktop.
- 3. Double-click on the CD icon. Click "Start". The CD window should now open.



- 4. Click on "Software Installation" -> "FNS Assistant". The installation starts now. Follow the instructions on the screen, confirm with "Next" in order to continue with the installation. After installation has finished, press "Quit" to exit the menu screen.
- Start the Freecom Network Storage Assistant. This can be found in "Applications" -> "Utilities".
- 6. Check the Freecom Network Storage Assistant whether your Network Storage Center / Network Media Center was detected. This may take some time. If your Network Storage Center / Network Media Center is not immediately detected, click "Search again for available Freecom Network Storage devices" to repeat the search.
- 7. For a detailed functional description on the Freecom Network Storage Assistant, please refer to chapter 7.

# Chapter 4: Accessing the Network Storage Center / Network Media Center

### 4.1 Accessing data via SMB

Server Message Block (SMB) operates as a network protocol mainly used to provide shared access to files between nodes on a network.

#### Windows

Open Windows Explorer and enter either

\\networkcenter\* or

\\IP\_ADDRESS in the address bar (IP\_ADDRESS is the IP address of your Network Storage Center / Network Media Center).



If you have changed the host name or the IP address, please use the new settings. Enter your username and password for accessing the Network Storage Center / Network Media Center. If you are logging on as the administrator, you will have access to all folders on the Network Storage Center / Network Media Center.

#### Linux

Open the file browser (Konqueror, for instance) and enter

smb:// networkcenter \* or

smb:// IP\_ADDRESS in the address bar (IP\_ADDRESS is the IP address of your Network Storage Center / Network Media Center).

Enter your username and password for accessing the Network Storage Center / Network Media Center. If you are logging on as the administrator, you will have access to all folders on the Network Storage Center / Network Media Center.

#### Mac OS

18

Mac OS X Vers.10.4 and higher

Select 'Go To' -> 'Connect to Server...'from the menu bar. The Network Storage Center / Network Media Center address is:

smb:// networkcenter \* or

smb:// IP\_ADDRESS in the address bar (IP\_ADDRESS is the IP address of your Network Storage Center / Network Media Center).

00	Connect to Server	
Server Address:		
smb://networkcenter		(+) (0.)
Favorite Servers:		
-		
() (Remove	Browse	Connect

Click 'Connect'. Enter the workgroup, your username and password for accessing the NetworkStorageCenter/NetworkMediaCenter.Ifyouareloggingonastheadministrator, you will have access to all folders on the Network Storage Center / Network Media Center.

Note: Yousettheworkgroup name of the Network Storage Center / Network Media Center under Configuration - Update Device/ Workgroup names in the Network Storage Center / Network Media Center Configuration menu.

SMB/CIFS File System Authentication Enter the workgroup or domain and your user name and password to access the server "NETWORKCENTER."	***	Enter your user name and password to access the file server "networkcenter".
Workgroup or Domain	the second se	Connect as: O Guest
WORKGROUP		Registered User
Name		
admin		Name: admin
Password		Password:
Remember this password in my keychain		Remember this password in my keychain
Cancel OK		Cancel Connect
Mac OS X 10.4		Mac OS X 10.5

You now need to select a shared folder on the next screen. Press OK to continue. After pressing OK, the Network Storage Center / Network Media Center is configured and an icon appears on your computer desktop.

Select the SMB/CIFS shared volume you want to connect to.	Select the volumes to mount: music PUBLIC
Cancel Authenticate OK	Cancel OK
Mac OS X 10.4	Mac OS X 10.5

To access all the Network Storage Center / Network Media Center folders that your username has been assigned user privileges, simply double-click this icon.





Mac OS X 10.5

#### 4.2 Accessing data via FTP

Note: Not all browsers can upload data via FTP. Those that can include InternetExplorerandKonqueror.WerecommendusingFTPclientsoftware such as WS\_FTP, SmartFTP or CuteFTP.

The File Transfer Protocol (FTP) is a standard network protocol used to exchange files over an Internet Protocol (TCP/IP) computer network. The FTP protocol is built on a client-server architecture.

#### 4.2.1 Local access

Enable the FTP Server option. Use any FTP client software or open your browser and enter

ftp://USERNAME:USERPASSWORD@IP\_ADDRESS \*

or

ftp://USERNAME:USERPASSWORD@networkcenter \*

(IP\_ADDRESS is the IP address of your Network Storage Center / Network Media Center)

#### 4.2.2 FTP access via the Internet

Enable the FTP Server option in the Network Storage Center / Network Media Center Configuration. Your router must be configured as follows:

#### 1. Port forwarding

Forward port 21 to the IP address of your Network Storage Center / Network Media Center. While configuring the FTP Server option, you will be informed to which IP address port 21 has to be forwarded.

<sup>\*</sup> If you have changed the hostname or the IP address of the Network Storage Center / Network Media Center, please use the new settings here.

#### 2. Dynamic DNS

Dynamic Domain Name System gives the ability to provide an official DNS name such as www.yourname.com to the dynamic IP address you have gotten from your ISP.

To do so, you first need to register with a DynDNS service. It updates the modified IP addresses and forwards this to the domain name. This enables you to be reached at one single domain name at any time even if your IP address changes.

If your router supports this option, we recommend using this feature, otherwise you always need to know the WAN IP of your router to access the Network Storage Center / Network Media Center via FTP from the internet.

Use any FTP client software or open your browser and enter ftp://USERNAME:USERPASSWORD@YOUR\_INTERNET\_IP or ftp://USERNAME:USERPASSWORD@YOUR\_DYNDNS\_HOST. USERNAME = your username USERPASSWORD = your user password YOUR\_INTERNET\_IP = your WAN IP address YOUR\_DYNDNS\_HOST = your Dynamic DNS address

# Chapter 5: Configuration of the Freecom Network Storage Center / Network Media Center

### **5.1 The Freecom Network Storage Assistant**

You can use the "Freecom Network Storage Assistant" to configure the Freecom Network Storage Center / Network Media Center. This tool offers the following functions:

	LAN IP Address	Server Name	Name	
II FREECOM	(192.168.11.26	\\NetworkCenter	Freecom Network Media Center	
	• <u>Web interfa</u> • <u>Add &amp; Rem</u>	esic settings of you ce of your Freecom ove mapped shares	r Freecom Network Storage device Network Storage device	
	Add a new printer     Start recovery procedure			
	• Scerch egei	n for available Freed	om Network Storage devices	

#### Accessing your Network Storage Center / Network Media Center web interface

When you click this menu item, the web interface for your Freecom Network Storage Center / Network Media Center opens in your default browser.

#### Adding and removing shared folders

You can assign a drive letter to shared folders on your Freecom Network Storage Center / Network Media Center. This allows you to access files more quickly.

Shared Folders			
PUBLIC	🗙 Don't map share	•	
nusic	Not mapped		

#### Repeat search for available Freecom Network Storage Center / Network Media Center

Click here to repeat the search for your Freecom Network Storage Center / Network Media Center if it was not detected during the first search. Please make sure that your network is configured as described in this manual and that all cables are properly attached.

Contact the Freecom Support Center if all cables are connected but your device is still not recognized after several attempts.

### 5.2 Using the Freecom Network Storage Center / Network Media Center Initial Setup Wizard

Use the Freecom Network Storage Assistant to go to the web interface of your Network Storage Center / Network Media Center or open your browser and enter

http://networkcenter

to open the web interface.

When starting the Network Storage Center / Network Media Center for the first time, the "Initial Setup Wizard" will open to configure the basic settings of your Network Storage Center / Network Media Center.

<b>II</b> FREECOM	
Itone     Configuration     Registration     Drivetarrangen     Hodio Ensise     Information	wations to the initial Senap waved. This setters will guide you through the steam necessary to configure your back for use in your home or office notices. Plante dide "Next" whom you are reader [Mat the ]

Click on "Next". The login dialog box will appear:



Please use the following username and password for initial login

Username: admin

Password: admin

#### **Initial User & Password Setup**

In the first step, the administrator password has to be changed:

II FREECOM		
Home Configuration Tile Sharing Drivemanager Meda Server Information	Initial User & Password Setup Admin Username: admin New Password: Confirm Password: Next >> Block	

Enter the new password twice and click on "Next".

Note: We recommend changing the password because every Network Storage Center / Network Media Center comes with the administrator password 'admin', in other words any person in your network could potentially access your Network Storage Center / Network Media Center with administrator rights.

#### Initial Date & Time Setup

In the next step, time zone, date and time have to be configured.

FREECOM				
Home Configuration File Sharing Drivemanager Modia Server Information		Time Setup 1: Wednesday 8 July 2009 1: 14:11:28 CEST Europe/Berlin		
	New Date: New Time: Next >> [	8 V July V 2009	×	

Enter your time zone and correct date and time and click on "Next" to continue.

#### Summary

A summary of your settings will be displayed. Click on "Update settings" to apply the changes.



You will be guided to the device main page afterwards and you can continue with the advanced configuration of your Network Storage Center / Network Media Center.

# Chapter 6: Network Storage Center / Network Media Center Functions

This section describes the functions of your Network Storage Center / Network Media Center.



### **6.1 Configuration**

The Configuration section allows configuring the basic settings of your Network Storage Center / Network Media Center.

The following settings can be configured here:

- Change Admin Password
- Change current date and time
- Upgrade device/workgroup names
- Configure the network settings
- Upgrade the system firmware
- Restore or save the system configuration

#### **6.1.1 Change Administrator password**

Go to Configuration -> Change Admin Password.

Here you can change the administrator password. Please enter the new password and a retype of the new password.

If you have completely lost your administrator password, please do a reset to factory default settings as described in chapter 1.3 (Reset button).

### Network Storage Center / Network Media Center Functions

<b>II</b> FREECOM		NETWORK CENTER	EN
Home Configuration File Sharing	Change Admin Password Admin Username: admin		6
Drivemanager Media Server Information	Nem Password: Confirm Password: Updele   Cancel		

Click on "Update" to apply the changes.

II FREECOM		NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Server Information	<u>Change Password</u> Password is updated.	

#### 6.1.2 Change date and time

Go to Configuration -> Change current date and time.

You can change the date and time on the Network Storage Center / Network Media Center here. The settings are changed manually here. To configure an NTP Time Server, go to the manual configuration of the "Network Settings".



Time Zone	Select your time zone from the pull-down menu
New Date:	Enter the new date by using the pull-down menus
New Time:	enter the new time by using the pull-down menus

Click on "Update" to apply the changes.



#### 6.1.3 Upgrade device/workgroup names

Go to Configuration -> Upgrade device/workgroup names.

You can change the device name and the name of the workgroup where your Network Storage Center / Network Media Center is located.

#### **New Name**

When changing the name of the Network Storage Center / Network Media Center, your device can be reached under <a href="http://NEW\_NAME">http://NEW\_NAME</a> (NEW\_NAME stands for the name you give to the device).

Maximum length for the device name is 15 characters. Only characters A-Z, a-z and 0-9 are allowed.

#### **New Workgroup**

Here you can change the name of the workgroup where your device is located.



Maximum length for the workgroup name is 15 characters. Only characters A-Z, a-z and 0-9 are allowed.

After changing the settings, click on "Update". Your Network Storage Center / Network Media Center will be rebooted to update the settings.

#### 6.1.4 Configure the network settings

Go to Configuration -> Configure the network settings.

When selecting "Configure the network settings", the Network Address Wizard will open. Click on "Begin Wizard" to start the network configuration.

You may configure the network settings either automatically or manually.



#### **Automatic configuration**

When selecting "Automatic", the Freecom Network Storage Center / Network Media Center will obtain an IP address automatically from a DHCP server (usually from your router). Click on "Next" to proceed.

<b>II</b> FREECOM		NETWORK CENTER
Home Configuration Tile Sharing Dreemanager Media Server Information	Network Address Witzerd - Step 1 Obtain Network Address: Automatic V Nest >> Back Cancel	

In the next step, click on "Finish". Your Network Storage Center / Network Media Center will be rebooted afterwards.



#### **Manual configuration**

Attention: Do not use the manual configuration if you are unsure about what to do here.

The manual configuration allows configuring your Network Storage Center / Network Media Center with a static IP address and entering an NTP server for automatic time synchronization with an internet time server.

In the first step, select "Manual" from the pull-down menu and click on "Next".

<b>II</b> FREECOM		NETWORK CENTER
Home Configuration File Sharing Drivemapp Model Saner Information	Network Address Wizard - Step 1 Obtain Network Address: Manual Net >> Back Cancel	

In the next step, network address and subnet mask have to be entered.

"Network Address" is the static IP address that is going to be assigned to your Network Storage Center / Network Media Center.

Make sure that the IP address you are going to assign to your Network Storage Center / Network Media Center is in the IP address range of your router and not used for other devices in your network.

Example: if the gateway address of your router is 192.168.1.1, the IP address of your Network Storage Center / Network Media Center must be 192.168.1.x, where "x" must be a value between 2 and 254.

II FREECOM		
Home Confouration File Sharing Drivemanager Media Server Information	Step 2 - Network Address and Submit Settings Network Address: 192	

In step 3, gateway address, DNS servers and NTP server can be configured:

Gateway address	Enter the gateway address of your router here
DNS Servers	Enter the IP address of your router here. Usually, it is not
	necessary to add additional DNS servers here.
NTP Server	Enter a server address of an internet time server to
	automatically synchronize the time of your Network Center.

II FREECOM		NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Geneer Information	Sten 31 Gateway           Gateway:           OVS Server:           -           -           NTP Server:           Ntext >>           Back           Cancel	

In the last step, click on "Finish" to apply the changes. Your Network Storage Center / Network Media Center will automatically be rebooted afterwards.



#### 6.1.5 Upgrade the system firmware

Go to Configuration -> Upgrade the system firmware.

Here you can update the firmware. New firmware usually fixes bugs and adds additional features to your Network Storage Center / Network Media Center. Check on www.freecom. com if new firmware updates are available for the Freecom Network Storage Center / Network Media Center.

Freecom will release new and updated firmware on a regular basis.

## Freecom Network Storage Center / Network Media Center

EN	<b>II</b> FREECOM		NETWORK CENTER
6	Nome Configuration File Sharing Drivemanager Midda Genver Information	Upgrade firmware Please enter or select file for upgrade: Upgrade now Cancel	

Select firmware file and click on "Upgrade now" to start the update.

#### 6.1.6 Restore or save the system configuration

Go to Configuration -> Restore or save the system configuration.

In this window, you can save the current configuration file on your computer or restore a saved configuration.

<b>II</b> FREECOM		
Home Configuration File Sharing Drivemanager Heda Server Information	Restore/Save System Configuration Save your current Configuration Save Restore your saved Configuration Please enter or select configuration file: Restore Cancel	

#### Saving a configuration

Click on "Save" to save the current device configuration. After clicking on "Save", you will be prompted where you want to save the backup copy of the configuration file. Select a location and click 'Save Configuration'.

#### **Restoring a configuration**

This window offers you the option of restoring a previously saved configuration file.

Press 'Browse' to select an existing backup copy of your configuration file. Then click the 'Restore' button to start the process.

Do not turn the Network Storage Center / Network Media Center off while the configuration is being restored. This will corrupt and destroy the configuration of your Network Storage Center / Network Media Center.

### 6.2 Sharing

This section allows managing user and shared folders. The following functions are available:

- User Management
- Shared Folder Management
- FTP Server Management

Freecom		NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Server Information	Fåle Sharing • Usar Management • Shared Folder Hanagement • FTD Sarver Management	

#### 6.2.1 User Management

Go to Sharing -> User Management.

#### **Creating new users**

II FREECOM		
Home Configuration 9 File Sharing Drivemanager Media Server Information	User Management Username: Ceate User Cancel Auxilable users	

In the first step, enter a user name and click on "Create User" (User name must be at least 5 characters long).

FREECOM		
Home Configuration File Sharing Drivemanager	User Management Username: [astuser [Ads User]	
Media Server Information	Cancel Password: Confirm Password:	
	Sharename Full access Read only Forbidden music O O O	
	Available users	

Next, you have to assign a password for the user. Enter a user password and confirm it in the second field.

Furthermore, you have to define what shared folders can be accessed by the new user. All shared folder will be listed and you can specify the access rights for each folder individually. The default setting for a new user is that no folder can be accessed.

You can assign the following access rights:

Full accessUser has read/write access to the folderRead OnlyUser has read-only access to the folderForbiddenUser cannot access this folder

By default, the share permissions for each folder are set to "Forbidden" which means the user cannot access this folder.

After defining all user settings, click on "Add user" to create the new user.

#### **Deleting and editing users**

Go to Sharing -> User Management. A list of available users will be shown under "Available users":

Home Configuration Privemanager Media Server Information	User Management	Create User Cancel	
	Available users		
	testuser	Delete Edit	

To delete a user, click on "delete" next to the user name. You will be asked if you really want to delete the user. By confirming this, the user will be deleted.

To edit user name, user password and access rights for shared folders, click on "Edit" next to the user name.

<b>II</b> FREECOM					NETWORK CENTER	
Home Configuration II: File Sharing Diterenatager Media Server Toformation	Uter Man Spener Username: Password: Confirm Password: Sharename music Acceluter testuser	testuser	Read only	Apply Charges Cancel Forbidden O		

Please note: when leaving the fields "Password" and "Confirm Password" empty, the password that was already assigned for the user will be kept.

Click on "Apply Changes" to accept your changes.

#### **6.2.2 Shared Folder Management**

Go to Sharing -> Shared Folder Management.

On top of the menu list, a list of shared folders will be shown. The folder "PUBLIC" is automatically configured as shared folder.

#### Creating a new shared folder

In the first step, select a name for the shared folder and click on "Create Folder".

ATTENTION: Mac OS X 10.4 and earlier versions have a SMB 12 character limit which means that folders with names longer than 12 characters will not be displayed!

<b>  </b> FReeCOM		
Home Configuration © File Sharing Drivemanager Media Server Information	Folder Management Folder name: Coate Folder Cancel	
	Available Shares PUBLIC	

In the next step, define the access rights for each user.

You can assign the following access rights:

Full access User has read/write access to the folder

Read Only User has read-only access to the folder

Forbidden User cannot access this folder

By default, the share permissions for each user are set to "Forbidden" which means no user can access this folder.

Remark: The security settings can be updated later any time.

 Image: Second second

Select the access rights for each user and click on "Add Folder". The folder name will be added to the list of available shares.

#### **Deleting and editing shared folders**

Go to Sharing -> Shared Folder Management. A list of available shared folders will be shown under "Available Shares":

<b>II</b> FREECOM			NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Server Information	Folder Management	Create Folder Cancel	
	Available Shares PUBLIC music	Delete Edt	

To delete a shared folder, click on "delete" next to the share name. You will be asked if you really want to delete the shared folder and all its contents. By confirming this, the folder will be deleted.

ATTENTION: All files in the deleted folder are irreversibly deleted!

To edit folder name and access rights for shared folders, click on "Edit" next to the share name.
Home Configuration File Sharing Drivemanager Media Server	Folder Manage		(	Apply Changes Cancel		
Information	Username	Full access	Read only	Forbidden		
	testuser	0	0	۲		
	Available Shar	es				
	PUBLIC			Delete Edit		

Click on "Apply Changes" to accept your changes.

### 6.2.3 FTP Server Management

Go to Sharing -> FTP Server Management.



This option allows you to enable and configure an FTP Server on your Network Storage Center / Network Media Center.



## Freecom Network Storage Center / Network Media Center

Options	Explanation
FTP Server enabled	Check box to enable the FTP server.
Allow anonymous FTP access	Allows anonymous login with user name "anonymous" and e-mail address as password
	Anonymous users will have access only to the PUBLIC folder.
Enter a port number (default 21)	Enter a port here if you do not want to use the default port for FTP (port 21).

Clicking on "More Options" opens the advanced configuration of the FTP Server. The following options can be configured here:

Enter a server name	Here you may enter a server name for your FTP Server
Enter max open connections	Allows configuring the maximum number of simultaneous open connections (default = 20). Reduce the number of max open connections if you are having a low bandwidth
Enter max anonymous clients	Allows configuring the maximum number of anonymous clients that can simultaneously connect to your FTP Server.

FREECOM		
Home Configuration Print Sharing Drive Saver Britomation	FTP Server Configuration FTP Server enabled Addw anonymous FTP Servers FTP use port number (default 21): Advanced Settings: Enter max anonymous Gients (default 20): Enter max anonymous Gients (default 20): Enter max anonymous Gients (default 20): Ites Options + Apply Cancel To enable FTP access from outside your not	

Click on "Apply" to accept your changes.

If you want to access the Network Storage Center / Network Media Center from outside the network (e.g. over the Internet) via FTP (default port is 21), you will need to forward this port on your router to the IP address assigned by the router to the Network Storage Center / Network Media Center.

In the FTP Server configuration screen, you find the information to which IP address the port has to be forwarded.

For more details on forwarding ports, please refer to your router's manual.

EN

### 6.3 Drivemanager

In this section, you are able to:

- format the user partition
- change the spindown timer for the hard disk

Click on "Drivemanager" and select an option.

II FREECOM		NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Server Information	Drive Management • Format User Partition • Change HGO spindown timer	

### 6.3.1 Format user partition

Go to Drivemanager -> Format User Partition.

This option allows formatting the user partition.

ATTENTION: All user data on your Network Storage Center / Network Media Center will be irreversibly deleted!

Click on "Format user partition" to start formatting.

You will be prompted if you really want format the partition. By clicking on "Yes, I'm sure", the formatting will be started:

II FREECOM		NETWORK CENTER
Home Configuration File Sharing © Cricemanager Media Server Information	Format User Partition All your data will be deleted. Are you sure you want to do this? Yes. Im sure Cancel	

### 6.3.2 Change HDD spindown timer

Go to Drive Manager -> Change HDD spindown timer.

The hard disk can be configured to spin down after a certain time when it is not used. This saves energy and increases the lifetime of the hard disk. By default, this option is disabled.

From the pull-down menu, select a time after which the hard disk will be sent to standby. You may choose the following settings:

- disabled
- 5 min
- 10 min
- 15 min
- 20 min

II FREECOM		NETWORK CENTER
Home Centiguration File Sharing Drivemanager Media Server Information	Chunge HDD spindown timer Standby: <u>S min</u> <b>20 min</b> <b>15 min</b> <b>10 min</b> <b>3 min</b> <b>10 min</b>	

Click on "Apply" to accept the settings.

### **6.4 Mediaserver**

The Freecom Network Media Center can be used to store all your multimedia files on, and play them back on any computer or Audio/Video (UPnP) streaming device in your network.

### **6.4.1 Freecom Network Storage Center**

The Freecom Network Storage Center does **not** support UPnP Media Server and Torrent Download functionality.

Freecom Network Storage Center users who want to use UPnP Media Server and Torrent Download functionality can purchase a key at http://www.freecom.com to upgrade the device to Freecom Network Media Center.

#### 6.4.2 Freecom Network Media Center

This section allows configuring:

- UPnP Server
- Torrent Download Client

II FREECOM		NETWORK CENTER
Home Configuration File Sharing Drivemanager Media Server Information	Media Server & Torrent Cleas - Configure Media Server - Configure Torrent Cleas	

### 6.4.2.1 Configure UPnP Server

Go to Mediaserver -> Configure UPnP-Server.

Before using UPnP Server functionality of the Network Media Center, the product key has to be entered to activate this function.

If you purchased a Network Media Center, use the product key that comes with your Network Media Center.

<b>II</b> FREECOM		NETWORK CENTER
Home Configuration File Shang Dreemanger Break Server Information	Media Server Configuration         The Media Server will accomatically scan all folders in the media folders list for available media files.         Select shared folder to add to the media folders list:	

In the basic UPnP Server configuration, folders can be added and removed from the media folder list.

For advanced configuration of the Twonky Media Server click on the link at the bottom of the page.

Select one or more folders to be added or removed and click on "Apply". Press "Rescan" afterwards to rescan the folders for media contents.

The Network Media Center uses Twonky Media Server as UPnP Server. More information can be found on <u>http://www.twonkymedia.com</u> and in the Twonky Media Server manual that can be found as pdf file on the Manual & Application CD.

### 6.4.2.2 Configure Torrent Download Client

Go to Mediaserver -> Configure Download Client.

The Torrent Download Client supports the download of files over the bittorrent network.

Enter the URL of a torrent file and click on "Start Download". You may also copy \*.torrent files directly into the PUBLIC folder of your Network Media Center.

When starting a torrent download for the first time, a folder named "Torrent" will be created in the "PUBLIC" folder.

This folder contains two subfolders: "Temp" and "Finished". The "Temp" folder contains files that are currently downloaded, the "Finished" folder contains all files where the download is finished.

You can specify the maximum upload and download rate (KB/s) for each file individually by entering values in the corresponding fields before pressing "Start Download".

Reecom						
Home	Torrent Client Configuration					
Configuration File Sharing	URL of the torrent file					
Drivemanager Media Server	You can copy ".torrent files directly in			Start Download		
	Connection Settings Torrent Client enabled:	Ð				
	Torrent max upload rate limit:	25	KB/s			
	Torrent max download rate limit:	175	KE/s			
	Torrent port number (default 2706):	2706				
	Apply Cancel					

After starting a download, the download status can be found in the Torrent Client configuration screen.

RefreshRefreshes the download status of your downloadsTerminateTerminates a running download

	Sources     URL of the torrent file     Stat. Download       Server     Star. Download     Tourest files directly into your device PUBLIC folder.       After pressing Start Download these files are moved automatically to the right position.     Connection Settings       Torrent Client enabled:     C       Torrent max upload rate limit:     25       Torrent max upload rate limit:     175       Torrent max download rate limit:     175       Torrent of the number (default 2700):     2765							
VEL of the torrent fle     VEL of the torrent fle     VEL of the torrent fle     VeL can copy * Torrent fles directly into your device PUBLIC folder.     After preseng Start Download these files are moved automatically to the right position.      Connection Settings      Torrent Takes download rate limit:     Ze _ xti/s      Torrent max download rate limit:     Torrent max	hanng hanng is driver is driver is driver is driver We can copy * Zoreset files directly into your divice PUBILC folder. After pressing Start Dewelload these files are moved automatically to the right position. Connection Settings Torrent Client enabled: Torrent max download rate limit: Torrent max download rate limit: Torrent max download rate limit: Torrent max download rate limit: Torrent port number (default 2700): ZOG Connicod status Torrent Default 2700): ZOG Connicod status Torrent Default 2700: ZOG Connicod status		Torrent Client Configuration					
Improvembager Index Server     Sat Download       You can copy "horvert files directly into your device PUBLIC Iddition After pressing Start Download these files are moved automutically to the right position.       Connection Settings       Torrent Clevel enabled:       Torrent max upload rate limit:       25       Torrent max download rate limit:       26       Torrent port number (default 2706);       Z706       Apply       Counclead stature       Name     Progress       Rate     Download size	Start Deventional       Start Deventional       You can copy * Sorrect Rise directly into your device Britis Dir foldow       After pressing Start Deventional three Rises are moved automatically to the right position.       Connection Settings       Torrent Client anabled:       Torrent max upload rate limit:       Torrent max upload rate limit:       Torrent port number (default 2706):       Z006       Apply       Cancell       Connoid statue       Name     Progress       Rate		URL of the torrent file					
Information  Top Carl cogn 2 wint in the part of your server worked automatically to the right position.  Connection Settings  Torrent max upload rate limit:  25 x8/s  Torrent max download rate limit:  75 x8/s  Torrent port number (default 2706);  706  Apply Carcel  Councidead stature  Name Progress Rate Download siz	Instein     To can loop ' does the banktop' and your seven in deal," loops', does not be night position.       After investige Start Bownhood bries filter are moved automatically to the night position.       Connection Settings       Torrent max upload rate limit:       Torrent port number (default 2706):       Z006       Apply Cancel       Connection Status	rivemanager			Start D	ownload		
Connection Settorys Torrent Chent enable: Torrent aux tobad rate limit: Torrent max download rate limit: T75 k8/s Torrent port number (default 2206): Z706  Apply Cancel  Name Progress Rate Download siz	Connection Settings       Torrent Clent anabled:       Torrent max download rate limit:       25       Torrent max download rate limit:       Torrent nor number (default 2700):       Z756    Convoltand status        Name     Progress     Rate     Download size		You can copy ".torrent files directly in	to your d	levice PUBLIC folder.	abt position		
Torrent Chent enabled: Torrent max download rate limit: Torrent max download rate limit: T5 kg/e Torrent port number (default 2706): Conclead stature Name Progress Rate Download size	Torrent Client enabled:     25     kil/e       Torrent max upload rate limit:     25     kil/e       Torrent port number (default 2706):     2206         Apply:     Cancell   Convolutional statute       Name     Progress     Rate     Download size		non preserve start borninger orest	1003 840	Institution autoritiautoriality contante in	Buc brownone		
Torrent Client enabled: Torrent max upload rate limit: 25 kB/s Torrent max download rate limit: 175 kB/s Torrent port number (default 2706): 2706 Apply Cancel Convoload stature Name Progress Rate Download stature	Torrent Client enabled:     25     kil/e       Torrent max upload rate limit:     25     kil/e       Torrent port number (default 2706):     2206         Apply:     Cancell   Convolutional statute       Name     Progress     Rate     Download size		Connection Settions					
Torrent max upload rate limit: 25 kU/s Torrent max download rate limit: 175 kB/s Torrent port number (default 2706): 2706 Apply Cancel Counclead stature Name Progress Rate Download size	Torrent max upload rate limit:     25     kil/s       Torrent, max download rate limit:     175     kil/s       Torrent, port number (default 2706):     2706         Apply     Cancell   Council at status       Name     Progress     Rate     Download size							
Torrent max download rate limit: 175 kB/s Torrent port number (default 2206): 2706 Apply] Cancel Conveload status Name Progress Rate Download siz	Torrent max download rate limit: 175 sal/s Torrent port number (default 2706): 2705 Apply Cancel Convribed status Rame Progress Rate Download size							
Torrent port number (default 2706): [2706 [Agely] Cancel Cownload statur Name Progress Rate Download size	Torrent port number (default 2706): 2705 Apply Cancel Converticad status Name Progress Rate Download size		Torrent max upload rate limit:	25	KB/s			
Apply] Cancel           Converticad statue           Name         Progress           Rate         Download statue	Apply         Cancel           Coverioud statue         Name           Name         Progress         Rate         Download size		Torrent max download rate limit:	175	KB/s			
Download statur Name Progress Rate Download siz	Covricad status Name Progress Rate Download size		Torrent port number (default 2706):	2705				
Download statur Name Progress Rate Download siz	Covricad status Name Progress Rate Download size		(test) (test)					
Name Progress Rate Download siz	Name Progress Rate Download size		Apply Cancel					
Name Progress Rate Download siz	Name Progress Rate Download size							
			Download status					
	901970-programme-free-shareware-opera-9-64.torrent     0% (0% Avail)     0 8/s     0 8		Name			Progress	Rate	Download size
981970-programme-free-shareware-opera-9-64.torrent 0% (0% Avail) 0 B/s 0			981970-programme-free-sha	0% (0% Avail)	0 B/s	0.0		

To get maximum performance for your torrent downloads, you can configure a port to be forwarded from your router to the Network Media Center.

In the Torrent Client configuration screen, you find the information to which IP address the port has to be forwarded.

You can use the standard port 2706 for the port forwarding, but you may also select another port.

Enter the port number and click on "Set Port".

Please check the manual of your router for further information how to setup a port forwarding.

ATTENTION: Please respect the law and only download legally! Freecom cannot be held responsible for the content of your downloads!

### **6.5 Information**

When selecting this option, an overview of the device and network settings as well as the disk status will be displayed:

 Image: Constraint of the second se

# **Chapter 7: The Freecom Network Storage Assistant**

### 7.1 Features of the Freecom Network Storage Assistant (PC)

The Freecom Network Storage Assistant helps you to locate each Network Storage Center / Network Media Center in your network. When started, it displays all Network Storage Center / Network Media Center available in your network and helps you to create network folders. You may also perform any of the functions of the Freecom Network Storage Assistant manually.

	LAN IP Address	Server Name	Name
FREECOM	(1)192.168.11.26	\\NetworkCenter	Freecom Network Media Center
	You can do follov • <u>Configure b</u>	-	r Freecom Network Storage device
	Contractor -		Network Storage device
	Add & Rem     Add a new (	ove mapped shares	
	<u>Start recove</u>	ry procedure	
	· Courch agai	n for available Free	om Network Storage devices

The preset password and login name for the Network Storage Center / Network Media Center are:

Login Name:	admin
Password:	admin

### 7.1.1 Configure basic settings of your Network Storage Center / Network Media Center

In this screen, you can set an IP address, subnet mask, device name and workgroup name for your Network Storage Center / Network Media Center. With this information, it is easy to locate your Network Storage Center / Network Media Center in the network without the FNSA. To change the settings, you have to enter the administrator password.

# 7.1.2 Accessing your Network Storage Center / Network Media Center web interface

When you click this menu item, the web interface for your Network Storage Center / Network Media Center opens in your default browser.

### 7.1.3 Adding and removing mapped network shares

You can assign a drive letter to shared folders on your Network Storage Center / Network Media Center. This allows you to access files in Windows more quickly.

Shared Folders			
PUBLIC	🗙 Don't map share	-	
music	Not mapped		

### 7.1.4 Start recovery procedure

This procedure can reset and repair a Network Storage Center / Network Media Center to factory default settings if you cannot access your Network Storage Center / Network Media Center anymore.

To restore your settings, please proceed as follows:

- a) Enable the Recovery mode by clicking 'Start the recovery procedure' in the Freecom Network Storage Assistant.
- b) Turn the Network Storage Center / Network Media Center off.
- c) Use a pointed object to carefully press the 'Reset' button. It is located next to the AC power slot on the back of the Network Storage Center / Network Media Center.
- d) Keep the 'Reset' button pressed down and turn device on again.
- e) Wait until white LED goes off (ca. 1 second), the release the 'Reset' button.

After recovery procedure is started, system and user partitions will be checked. If all partitions are OK, you will be asked if you want to reset your device and if all user settings should be kept or not.

If an error was found on one of the device partitions, you will get a message that an irreparable error was found and that the device has to be restored to factory defaults.

When accepting this, the internal hard disk will be formatted and system factory defaults will be restored.

Attention: This will delete all user data on the Network Storage Center / Network Media Center!

### 7.1.5 Repeat search for available Freecom Network Storage devices

Click here to repeat the search for your Network Storage Center / Network Media Center if it was not detected during the first search. Please make sure that your network is configured as described above in this manual and that all cables are properly attached.

### 7.2 Features of the Freecom Network Storage Assistant (Mac)

The Freecom Network Storage Assistant helps you to locate each Network Storage Center / Network Media Center in your network. When started, it displays all Network Storage Center / Network Media Center available in your network and helps you configure the Network Storage Center / Network Media Center and that create network folders. You may also perform any of the functions of the Freecom Network Storage Assistant manually.

00	Freecom Network Storage Assistant		
	IP Address	Server Name	Name
<i>II FREECOM</i>	<b>0</b> 192.168.11.26	smb://Network	. Freecom Network Media Center
	You can do following	tasks:	
	Configure bas	ic settings of your	Freecom Network Storage device
	Web interface of your Freecom Network Storage device		
	Connect to a sh	Connect to a shared folder of your Freecom Network Storage device	
	Search agai	again for available Freecom Network Storage devices	

The preset password and login name for the Network Storage Center / Network Media Center are:

Login Name:	admin
Password:	admin

### 7.2.1 Configure basic settings of your Freecom Network Storage Center / Network Media Center

In this screen, you can set an IP address, subnet mask, device name and workgroup name for your Network Storage Center / Network Media Center. With this information, it is easy to locate your Network Storage Center / Network Media Center in the network without the wizard. To change the settings, you have to first enter the administrator password.

### 7.2.2 Web interface of your Freecom Network Storage device

When you click this menu item, the web interface for your Network Storage Center / Network Media Center opens in your default browser.

### 7.2.3 Connect to a shared folder of your Freecom Network Storage device

This window allows you to mount any folder of your Network Storage Center / Network Media Center on your Mac. This allows fast accesses to this folders.

	000	
Select the SMB/CIFS shared volume you want to connect to.	****	Select the volumes to mount: music PUBLIC
Cancel Authenticate OK		Cancel
Mac OS X 10.4		Mac OS X 10.5

### 7.2.4 Search again for available Freecom Network Storage devices

Click here to repeat the search for your Network Storage Center / Network Media Center if it was not detected during the first search. Please make sure that your network is configured as described above in this manual and that all cables are properly attached.

# WARRANTY (valid in Europe/Turkey only)

We thank you for purchasing this Freecom product and hope you will enjoy using it. In order to avoid unnecessary inconvenience on your part, we suggest reading the quick install guide, instruction manual and any additional electronic and or printed manuals. When problems occur we have a database with Frequently Asked Questions (FAQ) on our Freecom website (www.freecom.com), please check this site before you contact the helpdesk.

### **Your Guarantee**

All Freecom products come with unlimited technical phone and web support. By this Guarantee, Freecom warrants their products to be free from defects in material and workmanship for a period listed below from the date of its original purchase. If during this period of guarantee the product proves defective due to improper materials or workmanship, Freecom will, without charge for labour or parts, at its sole discretion, repair or replace the product or its defective parts upon the terms and conditions set out below.

### Conditions

This guarantee will be granted only when the original invoice or sales receipt (indicating the date of purchase, product and serial number) is presented together with the defective product and a Freecom RMA number received from the Freecom Website or given by a Freecom Service Center. Freecom reserves the right to refuse the free-of-charge guarantee services when the date of purchase of the product cannot be proven. This guarantee will not apply if the RMA number is missing, the serial number on the product has been altered, removed or made illegible.

This guarantee covers only the hardware components packaged with the product. This guarantee covers none of the following: (a) any consumable supplied with the product, such as media or batteries; (b) damage to or loss of any software programs, data or removable storage media; (c) any damage resulting from adaptations, changes or adjustments, which may have been made to the product, without the prior written consent of Freecom; (d) attempted repair by any party other than authorized by Freecom and (e) accidents, lightning, water, fire or any other such cause beyond the reasonable control of Freecom.

With respect to all services provided, Freecom is not responsible for any damage to or loss of any programs, data or other information stored on any media or any part of any product serviced. Freecom is not liable for the consequence of business loss in case of system failure. Be sure to exclude all parts not covered by this guarantee prior to returning the product to Freecom. Freecom is not liable for any loss or damage to these items. If during the repair of the product the contents of the hard drive are altered, deleted or in any way modified, Freecom is not liable whatsoever.

Repair parts and replacement products will be provided on an exchange basis and will be either new, equivalent to new or reconditioned. All replaced parts and products become the property of Freecom The period of guarantee for any product or part repaired or replaced in warranty shall be the balance of the original guarantee. Repairs or replacements on product or parts out of warranty carry **6 (six)** months guarantee.

