



Cipher-520

Programmable Terminal

User's Manual



Syntech Information Co., Ltd.

Table of Contents

1. FEATURES	3
2. COMPONENTS	4
2.1. FRONT VIEW	4
2.2. REAR VIEW	5
3. CHARACTERISTICS.....	6
3.1. ELECTRICAL	6
3.2. ENVIRONMENTAL	6
3.3. PHYSICAL	6
4. INSTALLATION.....	7
4.1. POWER SOURCE.....	7
4.2. KEYPAD	7
4.3. READER PORTS	7
4.4. EXTERNAL KEYBOARD PORT	8
4.5. COM PORT	9
4.6. DIGITAL INPUT / OUTPUT.....	12
4.7. SPEAKER & EARPHONE	13
4.8. WALL-MOUNT SHELF/ TABLE STAND	13
5. THE RESIDED TIME AND ATTENDANCE SYSTEM.....	14
5.1. PARAMETERS SETUP PROCEDURES	14
5.2. SETUP	16
5.3. INIT SYSTEM.....	24

6.	KERNEL SYSTEM	25
6.1.	MEMORY MENU	25
6.2.	SET TIME	25
6.3.	READER	25
6.4.	POWER	25
6.5.	TEST MENU	26
6.6.	VERSION	27
7.	RS-232 COMMANDS.....	28
7.1.	DATA MANAGEMENT COMMANDS	28
7.2.	INQUIRE SYSTEM PARAMETER SETTING COMMANDS	29
7.3.	PROGRAM SYSTEM PARAMETER COMMANDS	30


1. Features

The CIPHER-520 Programmable Terminal offers outstanding features in a compact and rugged housing suitable for office and industrial applications alike. It can be used as a single unit or networked with up to 32 stations and is an ideal solution for companies of all sizes. It can be programmed in "C" or "Basic". With its versatile programmable features, it can be easily configured to accommodate most application needs. Features of the Cipher-520 are listed below.

- TLCS-900 16 bit CPU running at 14.7456 MHz
- Program : 512 KB flash memory
- Data memory : 128 KB battery back-up SRAM
- Memory card : optional, 512 KB to 2 MB SRAM (in 512 KB increments)
- Fine-tunable calendar chip
- Memory & calendar chip backup 3.6V NiCd battery
- Optional 1.2V x 7, 1200 or 1800 mAh rechargeable NiMH battery pack for operation backup. 1 or 2 packs may be used.
- Battery/external DC voltage monitor circuit on-board
- Self-shutdown circuit on-board (to prevent battery over-discharge)
- Optional slot bar code reader or magnetic card reader
- 2 reader ports each for barcode scanners (Wand or Laser-emulation), or single/dual-track magnetic card readers
- 240X64 graphic type LCD display with LED back-light
- Rubber keyboard (up to 8 X 8)
- Up to 16 LEDs on the keyboard board
- 8 digital input/output, each can be configured to input or output
- External keyboard port for PC/AT keyboard attachment
- RS232 port X 1
- Communication port X 2, each can be configured as CMOSRS232, RS232, RS485 (half-duplex), RS485 (full-duplex) or 20-mA current loop.


2. Components

2.1. Front View

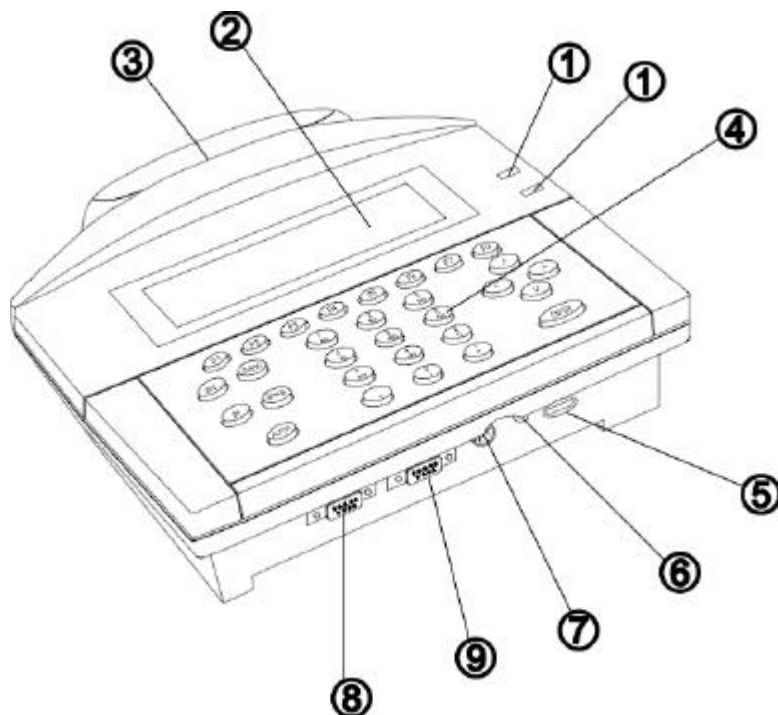

1. Red and Green LED for status indication
2. LCD display (240 X 64 or 128 X 64)
3. Optional slot-type reader (barcode or magnetic card)
4. Keyboard
5. Volume control
6. External ear-phone connector
7. External PC/AT keyboard connector
8. Reader port #1
9. Reader port #2

2.2. Rear View

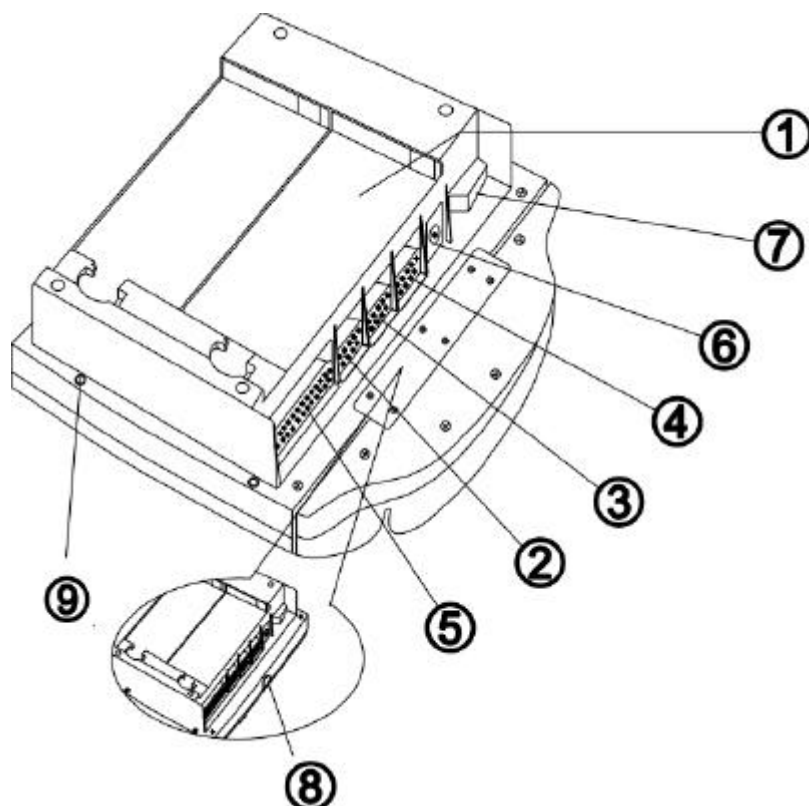

1. Optional Operational Battery
2. COM1 connector
3. COM2 connector
4. COM3 connector
5. Digital input/output connector
6. External DC-power jack
7. Power switch
8. Through-hole for slot reader cable
9. Table stand mounting hole

3. Characteristics

3.1. Electrical

- Main Power Supply Voltage : 12VDC $\pm 5\%$
- Power consumption : 0.5W maximum with LCD backlight off and no external devices attached

3.2. Environmental

- Humidity (operating) : non-condensed 20% to 90%
- Humidity (storage) : non-condensed 10% to 95%
- Temperature (operating) : 0 to 50 °C
- Temperature (storage) : -20 to 70 °C
- EMC regulation : FCC class A and CE approved

3.3. Physical

- Dimensions : 261 X 125 X 100 mm (including battery holder)
- Weight : 1 Kg maximum including all batteries
- Material : ABS
- Color : dark-Gray

4. Installation

4.1. Power Source

The 520 can be powered from:

1. The external +12VDC, or
2. Operation backup battery. If line power was down, the 1200 or 1800 mAh NiMH battery pack will then provide the system power.

4.2. Keypad

An 8 by 8 scanning circuit has been reserved for accessing the built-in rubber keyboard and LED (up to 16) indicators. The standard keyboard provides the following keys,

- numbers 0~9
- function keys, F1-F8 (each has a corresponding LED)
- ESC, escape
- clear
- BS, back space
- Space
- Alpha, toggle between numbers and alphas (with LED)
- 4 direction keys (up, down, right and left)
- Enter

4.3. Reader Ports

There are 2 reader ports provided, each can be either a Barcode slot reader, Barcode Scanner (Wand/Laser emulation), or up to dual-track magnetic card reader. They are equivalent in both hardware and software. Their connectors and pin-assignments are listed below.

DB-9 Male




Front View

Pin Number	Barcode	Magnetic
1	Start Of Scan	Not used
2	Data	Clock 1
3	Good Read	Not used
4	Not Used	Data 1
5	Switch	Clock 2
6	Power Enable	Not used
7	Ground	Ground
8	Not used	Data 2
9	Vcc, +5V	Vcc, +5V

4.4. External Keyboard Port

Besides the built-in rubber keyboard, an external PC/AT keyboard can be attached for tedious data entry. The connector and pin assignment conforms to PC/AT standard keyboard.

Mini-DIN 6M

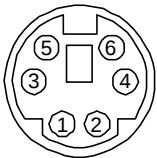

Front View

Pin Number	Description
1	N.C.
2	data
3	+5V
4	Ground
5	N.C.
6	clock

4.5. COM port

 
There are 3 serial communication ports, namely COM1, COM2 and COM3. All ports use DB-9 female connectors.

For flexibility, COM1 & 2, can have 4 kinds of COM boards attached to accommodate various application needs. These are:

1. RS232
2. Half-duplex RS485
3. Full duplex RS485
4. 20 mA current loop

COM3 is a standard RS232 port.

DB-9 Male



Front

View

1. RS232

This is an EIA-RS232C compatible interface and provides 4 signals as follows,



Pin No.	Description	Pin No.	Description
1	Ground	6	No connection
2	Transmit data	7	CTS
3	Receive data	8	RTS
4	No connection	9	+5V
5	ground		

2. Half-duplex RS485

This is a differential serial communication interface where all terminals send and receive data from a pair of signal lines.



Pin No.	Description
1	Inverting data
2	Ground
3	Non-inverting data
4 - 9	No connection

3. Full duplex RS485

This is a differential serial communication interface where all terminals send and receive data each from a pair of signal lines.

Pin No.	Description	Pin No.	Description
1	Non-inverting transmit data	6	ground

2	Ground	7	Inverting receive data
3	Inverting transmit data	8	No connection
4	No connection	9	+5V
5	Non-inverting receive data		

RS485 transceivers (both half and full duplex board) are protected by a pair of surge protectors. Also, when the terminal is at either end of the RS485 bus, a terminator should be used to cancel signal echoing. This can be easily done by putting the slide switch to ON position which will connect 3 resistors onto the bus as follows,

4. 20-mA current loop

This is usually used when electrical isolation between communication sides is required. Pin assignments of the 20-mA current loop are as follows,

Pin No.	Description	Pin No.	Description
1	Transmit power	6	Receive cathode
2	Transmit collector	7	Ground
3	Transmit emitter	8	Ground
4	Receive power	9	+5V
5	Receive Anode		

 
4.6. Digital Input / Output

4 digital input and 4 digital output pins has been reserved and an optional DIO board can be used to accommodate many kinds of input/output needs.

- Digital Input-2 kinds of digital inputs are available,
 - CMOS type
 - Photo-coupled
- Digital Output3 kinds of digital outputs are available,

- (3) CMOS type
- (4) Open-collector
- (5) Relay

DB-25 Female



Front View

No.	Description	No.	Description
1	Ground	23	+5V
2	Ground	24	+5V
3-22	DIO board dependent	25	+5V

4.7. Speaker & Earphone

The Cipher –520 is equipped with a buzzer for audio indication. Its tone is software controlled whereas the volume is to be tuned via a variable resistor. Depending on application needs, an earphone can also be attached. The audio-jack has been intentionally designed to disable the buzzer while the earphone is connected. The usual earphone used in Walk-Man type devices can be used with 520.

4.8. Wall-mount shelf/ Table Stand

Optional metal case or table stand can be used if mounting on the wall



5. The Resident Time and Attendance System

The CIPHER-520 Programmable Terminal is flexible for versatile applications. It is especially, a highly efficient yet cost effective tool for employee time and attendance control. Users can easily create their own program and download it to the Cipher-520. For users' convenience, Syntech has developed the Time and Attendance system which is resident in the Cipher-520. The following describes the parameter settings for the program.

Beside normal working mode, a special mode called system management mode is also provided to setup system parameters, maintenance and so on. To prevent from neither illegal nor unwanted entries, a special label (master card) must be swiped followed by the correct password being entered. Scanning this card will instruct the Cipher-520 to enter the **setup mode** and then the system parameters can be accessed. The default (factory) setting of the master card is **1234567890**. To further secure the system, a **password** (up to 6 digits) must be correctly entered after scanning of the master card. The default (factory) setting of the password is none which implies no password is needed.

Upon successful entry, the following message will be shown on the display,

System Manager

1.Setup

Under this mode, 2 major tasks can be done. They are:

- Setup
- Initialize System

5.1. Parameters Setup Procedures

For maximum clarity, a step-by-step procedure is described below.

1. Make sure that the Cipher-520 is in working mode (520 displaying current system time on the LCD display). If not, the Cipher-520

might already be in the setup mode, press **F2** key to go back to the working mode.

Mar . 01
Mon AM 12:00
【F1】

2. Scan the **master card**. If successfully scanned with the correct master card, the Cipher-520 will show,

PASSWORD :

3. Now the Cipher-520 is waiting for entry of the password. However, if the password was set to none, this message will not be shown and this step is simply ignored. The system manager must key in the password. To avoid side-peeking the password, the screen will simply show "*" instead of the real password entered. Upon completion of the password entry, press the ENTER key. Note that neither the BACKSPACE key nor the CLEAR key are active at this stage, the system manager must enter the right password at the one time. If the password was not correct, the Cipher-520 will activate a warning beep (consecutive beeps) then go back to the working mode. If the password is correctly entered, Cipher-520 will be in the **System Management** mode.

System Manager
1.Setup

4. Press the ENTER key and now the Cipher-520 is in the setup mode and is ready to accept system parameter modification. The Cipher-520 will show the name of parameter on the upper side of the display and the original setting value on the lower side.

1. Line Connection:
=Master

5. Press ENTER to change the setting value of this parameter. Use the "<" and ">" keys to select a new setting value or type in a new

value via the numeric keys. Then press ENTER to conclude the new setting value.

1. Line Connection:

-><Single>

6. If you only want to check the parameters then simply press the “<” or “>” keys. This will leave the setting unchanged and scroll through the parameters. This is a handy way to simply peek at the current settings. After all the system parameter modifications are completed, the F1 key must be pressed to update these modifications and save the new settings into the program memory. The system will restart with the new settings. To abandon the modifications and leave the settings as they were when setup was entered press the F2 key instead of the F1 key. The modifications will be discarded and the original settings retained.

5.2. Setup

After entering the setup mode, the user can program the setting of each system parameter via the keypad.

The system parameters available are listed below with the parameter number as the heading. Detailed descriptions are given and the allowed settings are shown.

1. Line Connection Setting

Selectable values of the communication line connection parameter are listed below.

- <Master> (default value)
- Reserved
- Single
- Slave

2. On Line Printing Setting

Selectable values of the On-line printing of the ID entries are listed below.

- <Disable> (default value)

- Enable

3. Prefix Code Setting

Selectable values of the prefix code are listed below.

- <Disable> (default value)
- Enable

4. Keyboard Entry Setting

Selectable values of the keyboard entry are listed below.

- < Enable > (default value)
- Disable

5. Station Lock Setting

Selectable values of the station lock are listed below.

- <Not Locked> (default value)
- Locked

6. Station ID Setting

Acceptable values of the keyboard entry are listed below. Note that In case of multi-station connections, care should be taken not to set more than one station to the same station ID which will cause the RS485 communications not to work properly.

- <1> (default value)
- integer up to 99

7. Master Card Setting

The master card ID can be modified as needed. However, differing from other parameter modifications, the new master card must be input by scanning the card not by entering from the keyboard. Up to 20 characters for master card ID can be set.

- <1234567890> (default value)
- please scan the new master card

8. Password Setting

Up to a 6-digit password can be set to further secure the system. Note that if a null string is entered, the password checking will be skipped when entering setup mode. If a single **ENTER** key is pressed without preceding digits, it will be treated as a *null* password. That is, peeking

only function is not available for this parameter since there is no way to distinguish between peeking-only and a null password.

- <none> (default value)
- enter the new password

9. Time Setting

This is used to modify the system time of the Cipher-520. A 14-digit value (YYYYMMDDHHNNSS) must be entered.

- YYYY : total 4 digits of the year
- MM : month (1 - 12)
- DD : day of the month (1 - 31)
- HH : hour (24 hour format, 0 - 23)
- NN : minute (0 - 59)
- SS : second (0 - 59)

10. Timer Fine Tune Setting

The Cipher-520 is equipped with a fine tunable calendar chip. The speed of the calendar chip can be tuned in units of ppm via a digital trimming register. The trimming range is from 0 to 255 ppm. The bigger value of the trimming register the slower the calendar chip runs. For instance, if the calendar chip is 1 second **slow** in one day then the value of the trimming register should **decrease** 12 to correctly adjust the calendar chip. During system initialization, this register is set to 186.

- <186> (default value)
- 0~255

11. ID Length Setting

A 2-digit value from 0 to 99 can be set to qualify the ID entries. If set to 0, ID length will not be checked.

- <0> (default value)
- 0~99

12 : Bar Code Symbology Setting

The Cipher-520 decoding software supports 6 types of symbology and each symbology can be individually enabled or disabled. This option is

a menu level and allows access to the individual barcode settings. Press the **ENTER** key to change the individual barcode type settings. After setting the individual symbologies and returning to this menu level the F1 key will update the memory and exit setup mode. The F2 key will abandon the changes made and restore the original settings.

Whilst in the individual barcode type setting the ENTER key will allow the user to modify the setting. The F1 key will update memory and exit setup mode. The F2 key will return the user to the Bar Code Symbology Menu level.

12.1. Code 39

Selectable values for Code 39 are:

- < Enable > (default value)
- Disable

12.2. Code 128

Selectable values for Code 128 are:

- < Enable > (default value)
- Disable

12.3. Interleave 25

Selectable values for Interleave25 are:

- <Enable> (default value)
- Disable

12.4. Industrial 25

Selectable values for Industrial25 are:

- <Enable> (default value)
- Disable

12.5. Codebar

Selectable values for Codabar are:

- <Enable> (default value)
- Disable

12.6. UPC/EAN

Selectable values for UPC/EAN are:

- <Enable> (default value)
- Disable

13: COM1 Setting

The communication port attributes for COM1 and COM3 can be changed individually. Press the **ENTER** key to change the individual parameters. After setting the individual parameters and returning to this menu level the F1 key will update the memory and exit setup mode. The F2 key will abandon the changes made and restore the original settings.

Whilst in the individual parameter setting the ENTER key will allow the user to modify the setting. The F1 key will update memory and exit setup mode. The F2 key will return the user to the COM1 Setting Menu level.

13.1 COM1 BaudRate

Selectable values for COM1 baud rate are listed below.

- 115200
- 76800
- 57600
- 38400
- 19200
- <9600> (default value)
- 4800
- 2400

13.2 COM1 Parity

Selectable values for COM1 parity are listed below.

- <None> (default value)
- Odd
- Even

13.3 COM1 Data Bits

Selectable values for COM1 data bits are listed below.

- <8> (default value)
- 7

13.4 COM1 Handshake

Selectable values for COM1 handshake are listed below.

- <None> (default value)
- XON/XOFF
- CTS/RTS

14 : COM3 Setting

Press the **ENTER** key to change these settings. Whilst in the individual parameter setting the ENTER key will allow the user to modify the setting. The F1 key will update memory and exit setup mode. The F2 key will return the user to the COM3 Setting Menu level.

14.1 COM3 BaudRate

Selectable values for COM3 baud rate are listed below.

- 115200
- 76800
- 57600
- 38400
- 19200
- <9600> (default value)
- 4800
- 2400

14.2 COM3 Parity

Selectable values for COM3 parity are listed below.

- <none> (default value)
- Odd
- Even

14.3 COM3 Data Bits

Selectable values for COM3 data bits are listed below.

- <8> (default value)
- 7

14.4 COM3 Handshake

Selectable values for COM3 stop bits are listed below.

- <none> (default value)
- XON/XOFF
- CTS/RTS

15. Alarm Table Setting

After selecting this parameter, the original settings will be shown on the display.

Whilst in the individual Alarm table setting the ENTER key will allow the user to modify the setting. The F1 key will update memory and exit setup mode. The F2 key will return the user to the Alarm Table Setting Menu level.

e.g.

15.Alarm 01 =16:00 010 SEC

In the example above, the original settings of the timetable entry 01 is 16:00 for 10 seconds.

- To modify this entry press the ENTER key and enter a 7 digit string (HHMMSSS), where
 - ─ HH : hour (24 hour format, 0 - 23)
 - ─ MM : minute (0 - 59)
 - ─ SSS : digital output duration in seconds (01 - 999, 00 if this entry is to be ignored)
- Press the "<" or ">" keys to display the next timetable entry. The entries will cycle from 01 to 16 accordingly.

16: Workshift Table Setting

After selecting this parameter, the original settings will be shown on the display,

Whilst in the individual Workshift table setting the ENTER key will allow the user to modify the setting. The F1 key will update memory and exit setup mode. The F2 key will return the user to the Workshift Table Setting Menu level.

e.g.

16.work shift 01 =08:00-10:00 1

For the example above, the original settings of the timetable entry 01 is 08:00 to 10:00 for working shift type 1.

- To modify this entry press the ENTER key and enter a 9-digit string (HHMMhhmmW), where,
 - HH : hour of the starting time (24 hour format, 0 - 23)
 - MM : minute of the starting time (0 - 59)
 - hh : hour of the ending time (24 hour format, 0 - 23)
 - mm : minute of the ending time (0 - 59)
 - W : working shift type (1 to 4, 0 if this entry is to be ignored)
- Press the "<" or ">" key to shift to next timetable entry. The timetable entry will cycle from 01 to 16 accordingly.

17: LCD Backlight Setting

The LCD backlight can be set by this parameter. Acceptable values are:

- <on> (default value)
- off

18: Max Station ID Setting

The station ID number can be limited by this parameter setting. To modify this setting, enter a 2-digit number from 0 to 99.

- <99> (default value)
- 0-99

5.3. Init System

This is used to set all system parameters to their default values and initialize the systems files. Care should be taken, as this will destroy all data stored in the memory.

6. Kernel System

Pressing the "F1", "F2" and "F3" keys simultaneously while switching the power on, will enable the user to get into the System Menu.

6.1. Memory Menu

1. Memory Info: displays the amount of Flash, Base and card memory.
2. Test Memory: will test the main memory and the card memory and display s status.
3. Initialize Memory: Initialize the data memory this will clear all memory in the Cipher520.

6.2. Set Time

Time: 1999/03/01 12:00:00

New: __/__/__ __:__:__

Set the system time, as YY/MM/DD hh:mm:ss.

6.3. Reader

Reader 1:

Reader 2:

This is used for testing the reader port. If Reader 1 or Reader 2 read the barcode successfully, it will show as "P, Q13, 1". P is the Barcode type; Q13 means there are 13-digits in the barcode; 1 means scanned once.

6.4. Power

Main Power: 11.914V

Battery:

If Mains Power is connected the display will show the actual voltage. If the unit is powered by batteries only it will display "main power Lost" and show how many batteries are installed.

6.5. Test Menu

1. Buzzer: Buzzer test
2. LCD: LCD will be toggled between on and off for 15 seconds
3. LED: LED testing
4. KBD

(1) Membrane KBD testing

Each key shows on the display in reversed color. Press each key to become normal, when all keys are pressed the user will be returned to the KBD test menu.

(2) PC/AT KBD testing

Connect with an external keyboard and type any key for testing.

5. Digital I/O

Display the state of the digital I/O port; Ok means on, Fail means off.

6. Communication

(1) COM1-COM3

Press ENTER, the display shows the following:

COM1 RTS..ON/OK OFF/FAIL

COM3 RTS..ON/OK OFF/FAIL

(Tests the Request To Send signal of COM1 or COM3 if it is available)

Txmit from COM1 to COM3..OK/FAIL

Txmit from COM3 to COM1..OK/FAIL

(Tests the data transmission between COM1 and COM3)

(2) COM2-COM3

Similar to the above tests, using COM2 and COM3.

(3) Self Loop-Back

The display will show the interface of COM1, COM2 and COM3 when the special loop back connector is used. (refer to the Cipher-520 Hardware Reference Manual).

6.6. Version

1. Version

2. Flash Download

Set the Baud Rate of COM3 (RS232 fixed) for the Basic/C program or data download.

7. RS-232 Commands

This chapter explains how to control the Cipher-520 via the RS232 port. Each communication transaction starts from the host side and ends with an echoed message from the station (stand-alone, or the master station). The carriage return (hex0d) is used as the delimiter/terminator of each command or message. If any format error occurred, the station would echo a **NAK** message.

Commands have been categorized into 3 groups according to their functions. Their formats and usages are described below.

7.1. Data Management Commands

The commands listed in this section are used to manipulate the ID entry data stored in Cipher-520.

<i>Format</i>	<i>Usage</i>	<i>Return</i>
READ	Read 1 record of data	<i>OVER</i> : buffer is empty <i>Kppyyymmddhhnnabcq...q</i> where, K:"K", identifier of 520 yyymmddhhnn:date & time a:"0" b:working shift (1-4) c:prefix code (0-9) q...q:employee ID
REMOVE	Remove the record just read	<i>NEW</i> :done <i>OVER</i> :buffer empty
CLEAR	Initialize memory	<i>DONE</i> :done
X	on-line stations inquiry	<i>aabb..pp</i> each 2-digits represent one station ID
TR	System time	<i>yyymmddhhnn</i> yy:year hh:hour mm:month nn:minute dd:day ss:second
TWyyymmddhhnn	System time	<i>yy</i> :year <i>hh</i> :hour <i>mm</i> :month <i>nn</i> :minute <i>dd</i> :day <i>ss</i> :second

7.2. Inquiry System Parameter Setting Commands

The commands described in this section are used to get current system parameter settings of Cipher-520.

<i>Format</i>	<i>Usage</i>	<i>Return</i>
G01pp	Line connection	00:reserved, 10:slave 01:stand alone,11:master
G03pp	On-line printing	0:disable, 1:enable
G12pp	Barcode symbologies	ABCDEF A:Code 39 B:Code 128 C:Interleave 25 D:Industrial 25 E:Coda-Bar F:UPC/EAN 0:disable, 1:enable
G13pp	Prefix code	0:disable, 1:enable
G14pp	ID code keyboard entry	0:disable, 1:enable
G18pp	Master card	nn..nn , current master card
G19pp	Password	nn..nn , current password
NRppnn	Relay output timetable	Hhmmdd nn:entry number from 01 to 16 hh:starting hour mm:starting minute ddd:duration
DRppnn	Automatic shift change timetable	hhmmxxyyww nn:entry number from 01 to 16 hh:starting hour mm:starting minute xx:end hour yy:end minute

		w:working shift from 1 to 4
FRpp	ID length	nn :ID length
VRpp	Get current company code	n..n :current company code

7.3. Program system Parameter Commands

The commands described in this section are used to program the system parameters of Cipher-520. The host computer should receive a **DONE** string as the return message to indicate successful setting of a command.

<i>Format</i>	<i>Usage</i>	<i>Parameter</i>
S01ppnn	Line connection	00:reserved, 10:slave 01:stand alone, 11:master
S03ppn	On-line printing	0:disable, 1:enable
S12ppABCDEF	Barcode symbologies	A :Code 39 B :Code 128 C :Interleave 25 D :Industrial 25 E :Coda-Bar F :UPC/EAN 0:disable, 1:enable
S13ppn	Prefix code	0:disable, 1:enable
S14ppn	ID code keyboard entry	0:disable, 1:enable
S18ppnn..nn	Master card	nn..nn :master card, up to 20 haracters
S19ppnn..nn	Password	nn..nn : password, up to 6 digits
NWppnnhhmmdd	Set relay output timetable	Nn :entry number from 01 to 16 Hh :starting hour Mm :starting minute Ddd :duration
Dwppnnhhmmxyyw	Set automatic shift change timetable	Nn :entry number from 01 to 16 hh :starting hour mm :starting minute

		xx :end hour yy :end minute w :working shift from 1 to 4
FWppnn	ID length	nn :ID length allowed, from 0 to 99
VWppn.n	Set company code	n.n :company code up to 30 characters
Lnpp	Station lock	0 :unlock, 1 :lock