

Table of Contents

Table of contents	1
Safety Precautions	2
Safety Information	3
Package Contents	4
Front Overview	5
Remote control	6
Connection	7
Listen to FM Radio	8
Saving (storing) station	8
Compatible iPod	8
Listening to external source	8
Listening to iPod	9
Battery Caution	10
Remote control	10
Battery installation	10
battery replacement	10
Trouble shooting	11
Specification	11

Safety Precautions

To achieve the utmost in enjoyment and performance, and in order to become familiar with its features, please read this manual carefully before attempting to operate this product, this will assure you years of trouble free performance and listening pleasure.

Important Notes

- This safety and operating instruction should be retained for future reference.
- The apparatus should not be exposed to dripping or splashing or placed in a humid atmosphere such as a bathroom.
- Do not install the product in the following areas:
 - Places exposed to direct sunlight or close to radiators
 - On top of other stereo equipment that radiate too much heat
 - Blocking ventilation or in a dusty area
 - Areas where there is constant vibration
 - Humid or moist places.
- Do not place near candles or other naked flames
- Operate the product only as instructed in this manual
- Before turning on the power for the first time, make sure the power adaptor is properly connected.

For safety reasons, do not remove any covers or attempt to gain access to the inside of the product. Refer any servicing to qualified personnel.

Do not attempt to remove any screws, or open the casing of the unit; there are no user serviceable parts inside, refer all servicing to qualified service personnel.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK), NO USER SERVICEABLE PARTS INSIDE, REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.

DANGEROUS VOLTAGE



Dangerous Voltages that may be of sufficient magnitude to constitute a risk of electric shock to persons are present within this product's enclosure.



ATTENTION

The owner's manual contains important operating and maintenance instructions, for your safety, it is necessary to refer to the manual.

WARNING: TO PREVENT FIRE OR SHOCK HAZARD, DO NOT EXPOSE THIS APPLIANCE TO DRIPPING OR SPLASHING.

Note: This unit will become warm when used for a long period of time. This is normal and does not indicate a problem with the unit.

Safety Information

Some Do's and Don'ts on the Safe Use of Equipment

This equipment has been designed and manufactured to meet international safety standards but, like any electrical equipment, care must be taken if you are to obtain the best results and safety is to be assured.

DO read the operating instructions before you attempt to use the equipment.

DO ensure that all electrical connections (including the mains plug, extension leads and inter-connections between the pieces of equipment) are properly made and in accordance with the manufacturer's instructions. Switch off and unplug the power before making or changing connections.

DO consult your dealer if you are ever in doubt about the installation, operation or safety of your equipment.

DON'T remove any fixed cover as this may expose dangerous voltages.

Overheating will cause damage and shorten the life of the equipment.

DON'T allow electrical equipment to be exposed to dripping or splashing, or objects filled with liquids, such as vases, to be placed on/near the equipment.

DON'T place hot objects or naked flame sources such as lighted candles or nightlights on, or close to equipment. High temperatures can melt plastic and lead to fires.


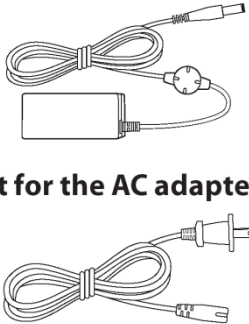 
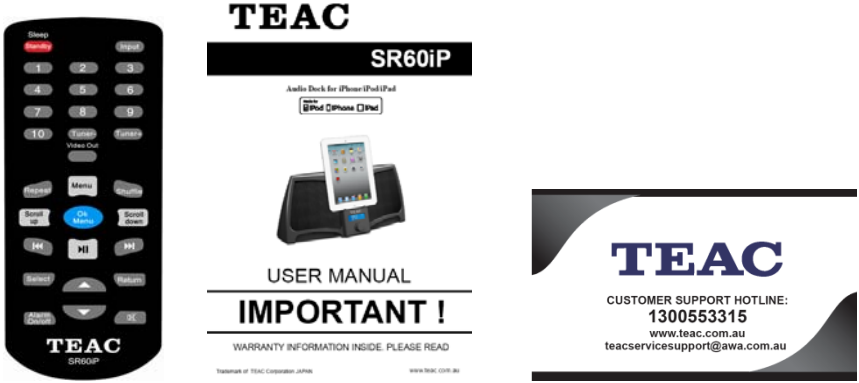 
DON'T use equipment such as personal stereos or radios so that you are distracted from the requirements of traffic safety.

DON'T leave equipment switched on when it is unattended unless it is specifically stated that it is designed for unattended operation. Switch off using the switch on the equipment and make sure that your family knows how to do this. Special arrangements may need to be made for infirm or handicapped people.

DON'T continue to operate the equipment if you are in any doubt about if it's working normally or if it's damaged in any way. Switch it off, unplug the mains power and consult your dealer.

ESD Remark: In case of malfunction due to electrostatic discharge just reset the product (reconnection of mains power maybe required) to resume normal operation.








Package Contents

<p>Main unit</p>	
<p>AC/DC Adapter, AC power cord</p>	 <p>Power cord set for the AC adapter x 1</p> <p>Photo only for reference the actual adaptor may be differ from picture show <u><i>(To prolong your radio's lifespan, please use the adapter we provided only.)</i></u></p>
<p>Remote control, User manual, Contact card</p>	 <p>TEAC SR60iP</p> <p>Audio Deck for iPhone/iPod/iPad iPhone/iPhone/iPad</p> <p>USER MANUAL IMPORTANT!</p> <p>WARRANTY INFORMATION INSIDE. PLEASE READ</p> <p>TEAC CUSTOMER SUPPORT HOTLINE: 1300553315 www.teac.com.au teacservicesupport@awa.com.au</p>

  
Front view

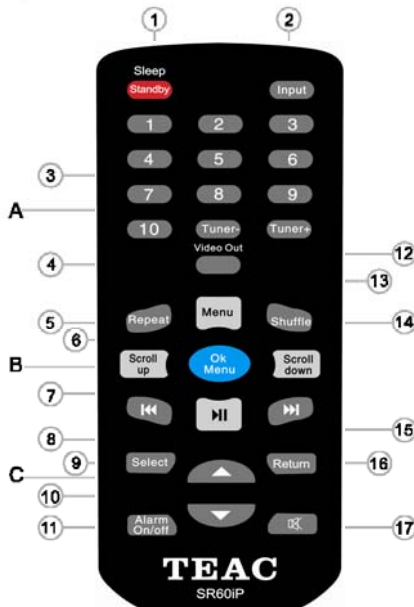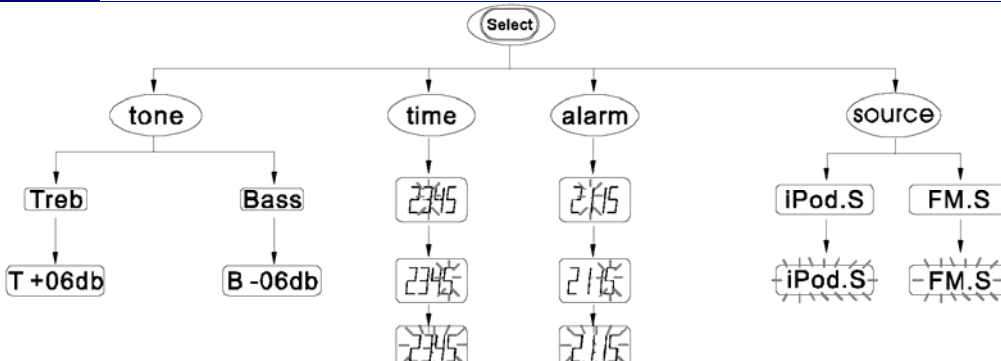

Control		All mode
LCD Display		<p>1. Multipurpose Display Area 2. Current Input Display Area</p>
TUNING/ MULTI JOG	<p>Rotate to browse menu options, press to confirm</p>	
STANDBY/ON	<p>Press to turn on/off</p>	
MENU	<p>Press to enter main menu, rotate and select other menus</p> <pre> graph TD Root[Press the knob] --> TONE[TONE] Root --> INPUT[INPUT] TONE --> TREB[TREB] TONE --> BASS[BASS] TREB --> TREB_val[T +02db] BASS --> BASS_val[B +04db] INPUT --> AUX[AUX] INPUT --> FM[FM] INPUT --> iPod[iPod] FM --> FM_val[87.5MHz] </pre>	
VOLUME	<p>Turning to adjust volume level</p>	
TONE	<ul style="list-style-type: none"> - Press to enter first level MENU, - Rotate to select TONE then - Press to enter and rotate to select TREB or BASS 	

	- Rotate to adjust
INPUT Select	- Press to enter first level MENU, - Rotate to select INPUT then - Press to enter and rotate to select AUX, FM and iPod.
Remote control operation	<p>(2) Operations of the Remote Control</p>  <p>1."Sleep mode" control selector 2.Select the input source (iPod. AUX. FM.) 3.Tuner number selector 4.iPod video out selector 5.iPod/iPhone/iPad-toggle repeat selector 6.iPod/iPhone/iPad-ok menu selector 7.iPod/iPhone/iPad-scroll up/down selector 8.iPod/iPhone/iPad -skip selector 9.Select control selector 10.Adjust increase/decrease selector 11.Alarm on/off control selector 12.Tuner band control selector 13.iPod/iPhone/iPad-menu selector 14.iPod/iPhone/iPad-toggle shuffle selector 15.iPod/iPhone/iPad play/pause selector 16.Return to the previous menu 17."Mute mode" control selector</p> <p>A: FM Control Area B: iPod/iPhone/iPad Control Area C: Multipurpose Control Area</p>
Multi function control	
	Press to access MENU
	Return to previous MENU
	Press to select or adjust setting
	Press to turn ON/OFF Alarm
	Press to Mute or un-mute sound

 Connection

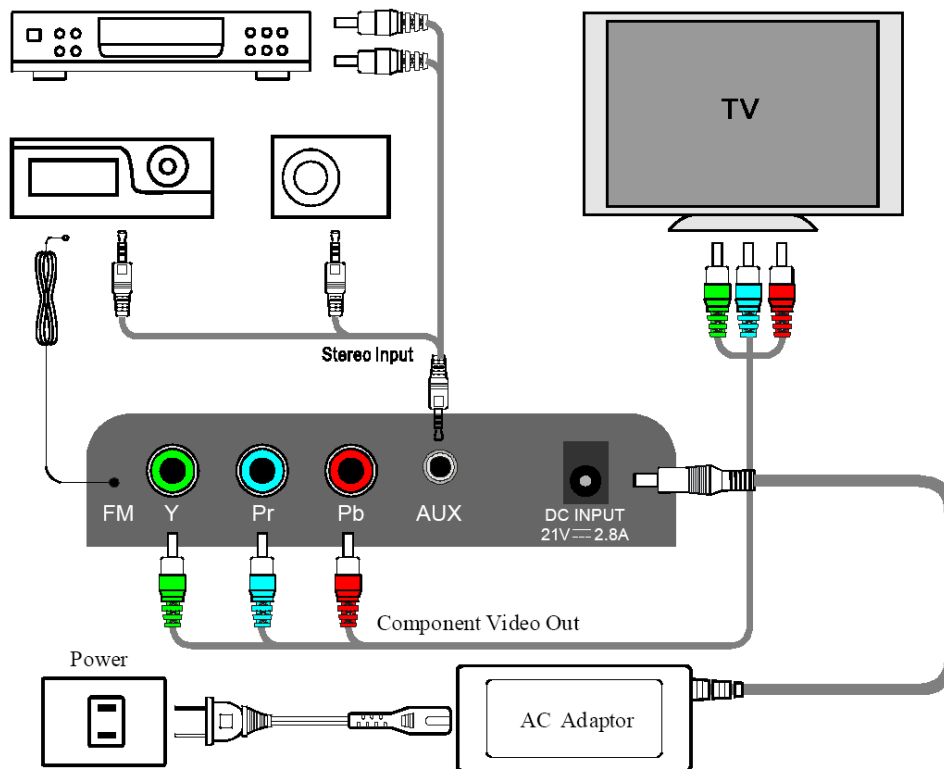

Socket	Remark
DC IN	<p>Connect the provided DC power adaptor (21V) to this socket, and then connect the AC plug to the AC wall outlet.</p> <p>⚠ Do not use any AC adaptors other than the one included with this unit to avoid fire, electric shock, etc. Be sure that only connect to an AC outlet that match the AC adaptor.</p>
Antenna	<p>Extend the aerial to ensure best reception for FM Radio.</p>
3.5mm AUX IN socket	<ul style="list-style-type: none"> . Connects to external audio device. . When connect the 3.5mm PHONES jack from your MP3 player, you must adjust the volume of the MP3 player or you may not hear sound from your SR60iP. . Turning up volume too high on your MP3 player may cause sound distortion from your SR60iP. If this is the case, reduce the volume on the MP3 player until the distortion stops and then adjust the volume level on the SR60iP to a comfortable listening level.
Component Video output	<p>This terminal outputs the video signal from a Connected iPod/iPhone to a TV monitor component video input.</p> <p>Note: Make the following settings on your iPod/ iPhone's menu to output video to a TV via the Dock. In the [Video] menu, select [Video Settings], and then set [TV OUT] to [On] or [Ask].</p> <ul style="list-style-type: none"> ➤ When you have set [TV OUT] to [Ask], each time you play a video your iPod/iPhone prompts you to specify whether to output it to a TV. ➤ When you output video to a TV from your iPod/ iPhone, the video is not displayed on the iPod/ iPhone's screen. <p>iPod touch* and iPhone models do not have this menu. You must specify whether to output video to a TV each time you play it. * iPod touch 1st generation: Software ver. 2.2 or later</p>

Listening to FM Radio

- Press "input" and select FM mode; the LCD display will display the current tuned station.
- Press the tune+/_ to tune in a station (you can also tune by turn the "Multi function" knob.

Saving (store) a station manually

Using the remote key pad (1~10) you can save up to 10 channels.

- Tune in a station you want to store
- Press and hold one of the number keys from the remote control for more than 2 seconds to storing the station.
- To select and listen to a saved channel, just press the desire channel number key.

AUX- Listening to external source

See page 7 "Connections".

 
- To listen to an external source connected to the AUX IN jack, select AUX.
- Press "input" and select AUX mode.
- Play the source, and adjust the volume using the volume button on remote and the connected portable audio player.

Compatible iPod







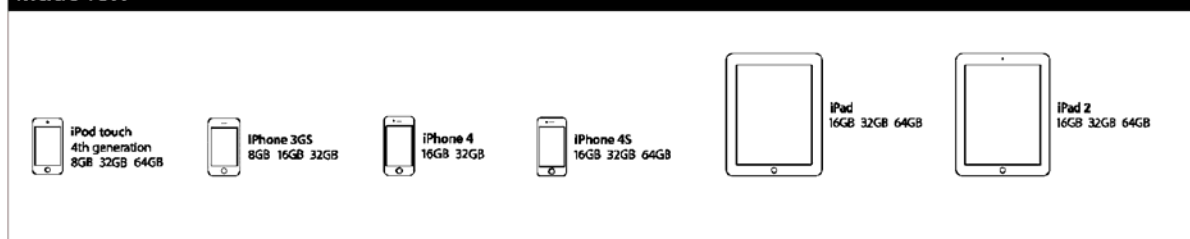


Supported iPod/iPhone/iPad

iPod		Supported iPod Features			
Model	Generation	Charging	Audio Playback	Menu Control	Video Playback
iPod	3rd, 4th, 4th(photo) 5th, 6th(Classic)	Yes	Yes	Yes	Yes
iPod mini	1st, 2nd	Yes	Yes	Yes	Yes
iPod nano	1st, 2nd, 3rd 4th, 5th, 6th	Yes	Yes	Yes	Yes
iPod touch	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes
iPhone	1st, 2nd, 3rd, 4th	Yes	Yes	Yes	Yes
iPad	1st, 2nd	Yes	Yes	Yes	Yes

Made for:



Listening to iPod/iPhone/iPad

Control	All mode
	<p><i>In iPod mode, use this button to start or pause playback.</i></p>
	<p><i>In iPod mode, use these buttons to skip to songs.</i></p>
	<p><i>Hold down these buttons to search for a part of a song.</i></p>
	<p><i>In iPod mode, use these buttons to scroll up and down in a menu. These buttons have the same functions as the Click Wheel on an iPod.</i></p>
	<p><i>In iPod mode, use this button to go back to the previous menu. This button has the same functions as its iPod counterpart.</i></p>
	<p><i>Press to start playback a highlighted track.</i></p>
	<p><i>In iPod mode, use this button to set the repeat function.</i></p>
	<p><i>In iPod mode, use this button to start shuffle playback.</i></p>
	<p><i>Press to switch between TV display and iPod/iPhone/iPad.</i></p>

Battery Precautions

- *Be sure to insert the batteries with correct positive “+” and negative “-” polarities.*
- *When the remote control unit is not to be used for a long time (more than a month), remove the battery from the remote control unit to prevent it from leaking.*
- *If the batteries leak, wipe away the leakage inside the battery compartment and replace the batteries with new ones.*
- *Do not use any batteries other than those specified. Do not mix new batteries with old ones.*
- *Do not heat or disassemble batteries. Never throw them in fire or water.*
- *Do not carry or store batteries with other metallic objects. Doing so could cause batteries to short circuit, leak or explode.*
- *Never recharge a battery unless it is confirmed to be a rechargeable type.*

Remote Control

The included remote control allows the unit to be operated from a distance.

When using the remote control, point it towards the remote sensor on the front of the unit.

- *Even if the remote control is used within its effective operation range (5 m), the unit might not respond to the remote if there are any obstacles between them.*
- *The remote control might function incorrectly if it is operated near other products that generate infrared rays or if other remote control devices that use infrared rays are operated near the unit. Likewise, the other products might also function incorrectly.*

Battery installation

- 1- *Remove the battery compartment cover.*
- 2- *Put in the lithium battery (CR2025, 3 V).*
- 3- *Close the cover.*

Battery replacement

If the distance to the unit from which the remote control can be used decreases, the battery is losing its charge. In this case replace the battery with a new one.

- *For information about the collection of batteries, please contact your local municipality, your waste disposal service or the place where you purchased them.*

Trouble Shooting

If you have problems with your system, read this page and try to solve the problem yourself before calling your dealer or a TEAC service Centre.

Problem	Remark
General No power	Check the connection to the AC power supply. Check whether or not the AC source is a switched socket. If it is, confirm that the switch is turned on. Confirm that there is power to the AC socket by plugging another item such as a lamp or fan into it.
No sound from speakers	<ul style="list-style-type: none"> ➤ Select the source by pressing the FUNCTION button. ➤ Adjust the volume. ➤ If "MUTING" appears on the display, press the MUTING button. ➤ The external audio device attached to the AUX IN is not turned on.
Sound but noisy.	<ul style="list-style-type: none"> ➤ The unit is too close to a TV or similar device. Relocate it away from the interfering device or turn it off.
Remote control unit does not work	<ul style="list-style-type: none"> ➤ Press the STANDBY/ON button to turn the unit on. ➤ If the battery is exhausted, replace it with a new one. ➤ Use the remote control unit within the operation range (5 m) and point it at the remote sensor on the front panel. ➤ Remove obstacles between the remote control unit and the main unit. ➤ If a bright light is near the unit, turn it off.
iPod/iPhone Cannot insert the iPod/iPhone	<ul style="list-style-type: none"> ➤ Remove dust or obstacles from the dock connectors of the SR-2DAB and the iPod/iPhone, and insert the iPod/iPhone again.
iPod will not play	<ul style="list-style-type: none"> ➤ Remove the iPod/iPhone from the Dock, wait a few seconds, and insert it again. ➤ A software update might solve the problem. Visit the Apple website and download the latest iPod/iPhone software

If normal operation cannot be restored, unplug the power cord from the socket and plug it in again.

Specifications

TUNER

FM Frequency Range. . . . 87.5 MHz to 108 MHz

SPEAKER SYSTEM

Output power 25 W + 25W

Frequency response 50 Hz – 20 kHz

Driver unit 5 inch

Signal to Noise S/N 85dB

THD 0.1%

INPUT iPod/iPhone/iPad, FM, AUX in 3.5mm

Power Requirement AC 230 V, 50 Hz

Power supply 60W

Power Consumption 5.5 W

Operating Temperature -40°C ~ 60°C

Dimension (W x H x D). 485 x 225 x 210 mm

Weight (Net) 4.25 kg

- Design and specifications are subject to change without notice.
- Weight and dimensions are approximate.
- Illustrations may differ slightly from production models.