### **EPFL - CMi**

# **FLX 2320-S**

## WARNING

Only the CMi Staff is qualified to do a service or to do maintenance

## User manual

#### 1. Login

1.1. Logon on the ACCESS CONTROL SYSTEM on the zone computer to unlock the keyboard of the FLX 2320-S

#### 2. Starting up

- 2.1. "SOURCE" light must be already ON (tool powered up) . Orange light
- 2.2. "MAIN POWER" : Breaker ON → . Green light .
- 2.3. "LASER" : Turn the key to ON → . Green light .

#### 3. Loading

- 3.1. Open the door
- 3.2. Place the Locator Ring for 4" wafer positioning at a given angle
- **3.3.** Put your substrate on the substrate holder
- **3.4.** Close the door

#### 4. Recipe Selection and Start Measurement

4.1. Start WINFLX, enter your login and password



Login User Name			
	Select User:	cmi	ок
		aguillet	
		etrioux T	<u>N</u> ew
	Password:		E <u>x</u> it
l			





▼ MPa

C Dyne/cm

Close

C Notch

4.2. Select the Process program (substrate)







- 4.3. First measurement : no film : Measure / First (no film)
  - Enter File name (for example ID number of the wafer)
  - Enter ID for the first measurement (for example: 1 @ 0°; 2 @ 90°)
  - Thickness of the substrate can be adjusted if need be.



 WINFLX Windows Application[UserID : planglet]

 Measure
 Utilities

 Edit
 Analysis

 View
 Help

 First (no film)

 Single

 Time

 Temperature

 Exit

- 4.4. Perform your thin film deposition on upper side of your wafer
- 4.5. Stress measurement
  - 4.5.1. Select "Single" from the Measure tab on the main screen



- File : File name (for example ID number of the wafer)
- ID of the first measurement (for example: 1 @  $0^\circ$ ; 2 @  $90^\circ$ )
- Film thickness in Å

4.5.2. Press the "Measure" button. The instrument will perform a scan.

4.5.3. Results are then displayed: Intensity graph, Deflection graph with stress calculation.

#### 5. Unloading

5.1. Open the door – Get back your substrate on the substrate holder – Close the door

#### 6. Shutting down

- 6.1. "LASER" : Turn the key to OFF
- 6.2. "MAIN POWER": OFF
- 6.3. "SOURCE" light stays always ON (tool powered up) . Orange light .

#### 7. Logout

- 7.1. Logout from the FLX 2320-S
- **7.2.** Logout from the ACCESS CONTROL SYSTEM.