

FRONT

AUDIO
DYNAMIX®

MESH 2

USER MANUAL




KEY FEATURES

- 2 x 3 Watt stereo digital amplifier
- Dual Ndfef full range speakers
- Touch sensitive controls
- Up to 12hrs battery life from a single charge
- Built-in 1200mAh Lithium battery
- Inputs via 3.5mm Aux, Bluetooth or Micro SD card reader
- Built in mic for hands free conference calls
- Intelligent voice guidance

OPERATING INSTRUCTIONS

- ① Indicator Light
- ② Volume Down [Hold]
Previous Track [Double Touch]
- ③ Answer [Touch] / Hang Up [Hold]
Play / Pause
- ④ Volume Up [Hold]
Next Track [Touch]
- ⑤ Micro SD card and 3.5mm AUX
- ⑥ USB Charging Port
- ⑦ Power On/Off

OPERATING INSTRUCTIONS

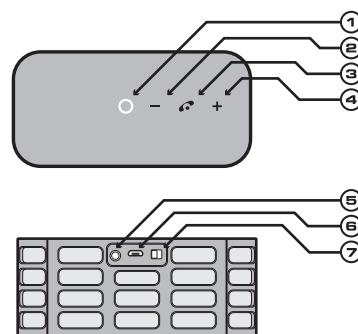

Turning the speaker on

Slide the Power Switch (7) to the ON position

Charging the speaker

Connect the speaker to your computer or other 1Amp USB charger using the supplied USB cable. The indicator Light (1) will flash red whilst charging and turn off when fully charged. Charging time is approximately 6 to 8 hours.

CONNECT

Wireless

1. When turned on, the Speaker will automatically start in wireless Bluetooth mode and will either:
a) Connect to an already paired device
b) Search for a compatible device by saying "Waiting for connection" and the indicator light will flash rapidly green and blue.
2. Access the Bluetooth menu on your audio device and search for the 'Mesh'. Once selected and connected, the indicator will turn blue and flash slowly.
3. Some devices may request a password, enter "0000" and confirm the connection.

Wired

Connect the speaker to any Audio device headphone port using the supplied 3.5mm audio cable.

Note: Bluetooth function is disabled when using the 3.5mm cable and wireless devices will not be connected.

BACK

AUDIO & PHONE CONTROLS

Wireless Audio

When connected wirelessly the audio device will automatically begin playing. If the audio is not audible then check or re-establish the Bluetooth connection.

Wired

When connected by the 3.5mm audio cable, the indicator light will alternately flash green and blue. Playback controlled by the audio player.

Music Control [see Operating Instructions]

Hold the + and - keys to adjust volume and double-touch to skip tracks forward or backward. Press the Call key once to Play or Pause playback. In wired mode this will only silence the audio.

Phone Control

Incoming calls will be transferred to the Speaker when connected in Bluetooth mode. The indicator light will flash blue and a voice prompt will announce the call.

Press the Call button to answer or hold down to reject.

Music play is automatically paused during a call.

SUPPORT

Frequently Asked Questions

Q: I can't hear my music.

A: 1. Check the speaker volume

2. Check the speaker is paired correctly or connected by the audio cable to a device playing music.

Q: I can't answer or end a call.

A: Some mobile devices do not support hands free calling. Check your mobile device manual.

Q: I can't connect two devices at once.

A: This speaker does not support multiple connections.

Q: I can't wirelessly connect to the speaker.

A: 1. Check your device has Bluetooth enabled and that the device and speaker are paired.

2. Disconnect any previously connected device.

Q: I hear a crackling noise.

A: Objects can interfere with the wireless Bluetooth signal. Ensure that the speaker is within 10 metres of the connect device and no major objects (walls, etc.) are obstructing the signal.

Caring for your speaker

Always store the speaker with the power off and in a clean, dust free environment, and away from children.

Avoid storing at extreme temperatures that may affect battery life and speaker performance.

TECHNICAL INFORMATION

Weight: 240 grams

Dimensions: 122 x 60 x 48mm

Speaker: Stereo + Harmonic Bass matrix

Power Supply: 5Volts DC via USB

Power: 2 x 3 Watt

Speaker Unit: 2 x 40mm Ndfef full range speakers

Audio Port: 3.5mm Audio line in

Battery: 1200mah Lithium-ion battery

Operating Range: Up to 15 metres

Bluetooth: Version 2.1

Bluetooth Profile: HPPV1.5, HSPV1.2, AVRCP

Playing Time: Up to 12hrs depending on volume

Charging Time: Approx. 4 to 5 hours Via USB from PC

Stored Temperature: -10°C to 55°C

Pairing Password Key: 0000

Accessories: User Manual, USB cable, Aux Cable

All information contained herein is true and correct at the time of print. Any further queries can be directed through our website. Thank you.

AUDIO DYNAMIX®

Is a registered trade mark of Audio Dyanmix LTD

Made in China

Warranty

Your purchase comes with a one year limited warranty. Your warranty will cover a replacement or refund of your speaker for the first 28 days, after this time and for the remainder of your warranty a repair will be offered. If the speaker cannot be repaired, it will be replaced. Your Warranty covers you against faults caused by the poor manufacturer or the failure of parts. Your warranty and any entitlement to the above will be void if it is found that any defects have been caused by negligent use; including (but not limited to): Damage caused by playing music at excessive levels, drop or water damage and not charging the speaker in accordance with the User Manual.

*This product contains a Lithium ion battery. The battery MUST be charged in accordance with the instructions of the manual. When charging the speaker should be in an area free of flammable items that is well ventilated. The speaker should not left unattended. Chargers Must not exceed 3.7 volts or 1000mAh. Batteries should be disposed of in accordance with your countries legislation. Details can be found at: www.audiodynamix.co.uk

This product has been certified and conforms with the following EU legislation:

