


RVOSD 5.1

On Screen Display + Autopilot for Model Airplanes

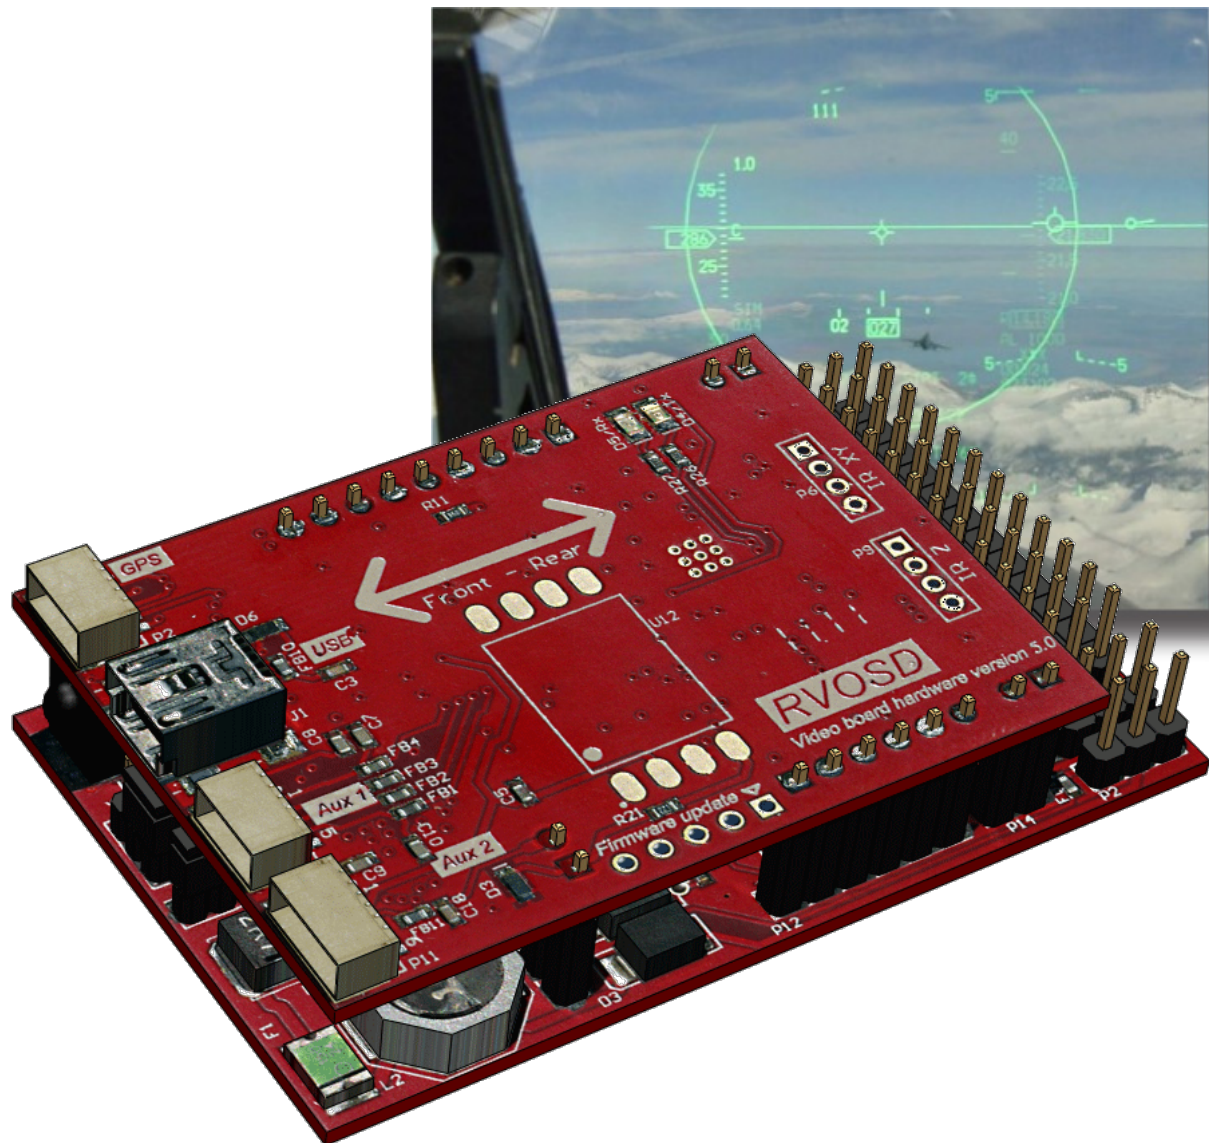

RVOSD5 USER MANUAL

TABLE OF CONTENTS

1 SAFETY PRECAUTIONS	3	4 RVOSD5 CONFIGURATION ...	29
1.1 Definitions	3	4.1 Configuration	29
1.1.1 Warnings, Cautions and Notes ..	3	4.2 RVOSD5 In-flight Screen	
1.1.2 Use of Shall, Should and May ...	3	Selection & PPM Link Loss	
1.2 Common Hazards	3	Detection	29
1.2.1 Autonomous Vehicle Warning ...	3	4.3 PCM Link Loss Detection.....	29
 		4.4 Autopilot Configuration	29
2 INTRODUCTION.....	4	4.5 Using PPM Receivers	30
2.1 What is FPV Flying?	4	4.6 Video Hardware.....	30
2.2 Kit Contents	5	4.7 Video Hardware Power	
2.3 Not Included.....	5	Management.....	30
2.4 Dead on Arrival and Repairs.....	5	4.8 Using an Auxiliary Battery for	
 		Video Equipment	31
3 RVOSD5 AUTOPILOT.....	6	4.9 Connecting the Main Battery ..	32
3.1 Autopilot.....	6	4.10 Connecting the Current Sensor	32
3.2 Aircraft Compatibility	6	4.11 Current Sensor Calibration.....	32
3.3 Autopilot Flight Modes.....	7	4.12 Aux Battery Input.....	33
3.4 Hardware Overview	8	4.13 Connecting Servos	33
3.4.1 RVOSD5.....	8	4.14 Autopilot/OSD Control Interface	33
3.4.2 GPS Receiver.....	8	4.15 Receiver Signal Strength	
3.4.3 Current Sensor	8	Indication (RSSI).....	34
3.4.4 External Temperature Sensor....	9	4.16 Throttle Control:	35
3.4.5 Remote Control	9	4.17 Landing Gear Configuration ...	35
3.4.6 Wiring	9	4.18 Navigating RVOSD5 Menus	35
3.4.7 Video Camera.....	9	4.19 Changing OSD Screens	36
3.4.8 Video Transmitter	10	4.19.1 Run the wizard.....	36
3.4.9 Video Receiver	10	4.19.2 Rx not detected	37
3.4.10 Video Monitor	10	4.19.3 If R/C link is lost.....	37
3.4.11 Main Battery	11	4.20 Configuring Warnings	37
3.4.12 Auxiliary Battery.....	11	4.21 Configuring Waypoints	37
RVOSD Main Board Connections	15	4.22 Configuring RSSI.....	38
3.5 RVOSD OSD Menus.....	16	4.23 Configuring GPS.....	39
3.5.1 Main menu, page 1/4.....	16	4.23.1 GPS Satellite Lock.....	40
3.5.2 Main menu, page 2/4.....	17	4.24 Configuring Current Sensor ...	40
3.5.3 Main menu, page 3/4.....	19	4.25 Debug Screen.....	40
3.5.4 Main menu, page 4/4.....	20	4.26 Saving OSD Settings	41
3.5.5 Autopilot menu, page 1/3.....	22	4.27 Flying Wing Configuration	41
3.5.6 Autopilot menu, page 3/3.....	25	4.28 Autopilot Tuning	41
3.6 On Screen Display.....	26	4.29 Stuff You Need to Know!.....	43

RVOSD5 USER MANUAL

5 SETUP PROCEDURE 44

5.1 Basic Setup 44

5.2 PPM Receiver Setup 46

5.2.1 Primary PPM Reciever 46

5.2.2 Secondary PPM Receiver 46

6 UPDATING THE FIRMWARE.. 48

7 APPENDIX A: LIST OF ACRONYMS 50

8 APPENDIX B: RVOSD5 JUMPER SETTINGS 51

List of Figures

Figure 3-1 Autopilot Block Diagram..... 6

Figure 3-2 RVOSD 8

Figure 3-3 GPS Receiver 8

Figure 3-4 70A Current Sensor with XT60 connectors 8

Figure 3-5 External Temperature Sensor..... 9

Figure 3-6 Remote Control..... 9

Figure 3-7 Video Camera 10

Figure 3-8 Video Transmitter..... 10

Figure 3-9 Video Receiver..... 10

Figure 3-10 Video Monitor..... 11

Figure 3-11 Main and Aux Battery Examples 11

Figure 3-12 RVOSD5 Main Board..... 12

Figure 3-13 RVOSD Main Board Pin-Outs..... 12

Figure 3-14 RVOSD Interconnection Diagram..... 13

Figure 3-15 RVOSD Input/Output Connections 14

Figure 3-16 Low Altitude Angle 17

Figure 3-17 On Screen Display Description (F16)..... 27

Figure 3-18 On Screen Display Description (Simple)..... 28

Figure 4-1 Video TX Connector..... 30

Figure 4-2 Connecting your video equipment 31

Figure 4-3 Main/Auxiliary Battery Jumper Selection 31

Figure 4-4 Current Sensor Wiring Diagram..... 32

Figure 4-5 Connecting Current Sensor 32

Figure 4-6 RVOSD5/Receiver/Servo Connections 33

Figure 4-7 Transmitter Channel to Control the Autopilot/OSD 34

Figure 4-8 Installing a Diode for RSSI Measurement 39

Figure 4-9 Current AHI Indicator 42

Figure 5-1 Vibration Level Indicator... 44

RVOSD5 USER MANUAL

Read this user manual completely prior to connecting any RangeVideo hardware items to your aircraft or any power source.

This highly versatile, user-friendly system was designed with affordability and high performance in mind.

Do keep in mind that the Range Video On Screen Display Generation 5 (RVOSD5) and your remote controlled aircraft have certain requirements and limitations. By observing these requirements and limitations, you will extend the useful life of the system and assure safe system operations.

While not intended for novice users, this guide is designed to provide step-by-step instruction for the installation and operation of the RVOSD5. It assumes a certain level of experience and familiarity with terms, and is intended to be used in conjunction with the user guide for your transmitter, aircraft, video equipment and other hardware you will be using. It also assumes the air vehicle and associated components are flight worthy.

RVOSD5 – SAFETY PRECAUTIONS

1 SAFETY PRECAUTIONS

1.1 Definitions

1.1.1 Warnings, Cautions and Notes

The signal words WARNING, CAUTION, and NOTE are used to identify levels of hazard seriousness. These signal words are used throughout this document to emphasize critical information. Read and follow these statements to ensure personnel safety and prevent product damage. The signal words are defined below.

WARNING

A procedure, practice, or condition that may result in injury or death if not carefully observed or followed.

CAUTION

A procedure, practice, or condition that may damage equipment if not carefully observed or followed.

NOTE

A procedure, practice, or condition, etc. that is essential to emphasize.

1.1.2 Use of Shall, Should and May

Within this technical manual, the word shall is used to indicate a mandatory requirement. The word should is used to indicate non-mandatory but preferred method of accomplishment. The word may is used to indicate an acceptable method of accomplishment.

1.2 Common Hazards

The following are general safety precautions that are not related to any specific procedures and therefore do not appear elsewhere in this user manual. These are recommended precautions that users must understand and apply.

1.2.1 Autonomous Vehicle Warning

Keep clear of propeller and hold the aircraft securely when the engine is running or the ESC is powered. It is possible that the RVOSD5 could command the throttle automatically if an autonomous mode is commanded, if components have failed or have been assembled incorrectly.

INTRODUCTION

2 INTRODUCTION

2.1 What is FPV Flying?

First Person Viewing (FPV) is an exciting offshoot of a 60+ year old hobby, which enables a pilot of a radio-controlled plane to immerse themselves in flying by watching the video from an onboard camera.

OSD stands for on-screen-display. The OSD is a main component of an FPV plane. A basic OSD will overlay GPS telemetry on a live video signal to help the pilot navigate.

More advanced OSD have additional software and sensors to provide more information to the pilot.




Figure 2-1 Flying via FPV



Basic OSD



OSD connection

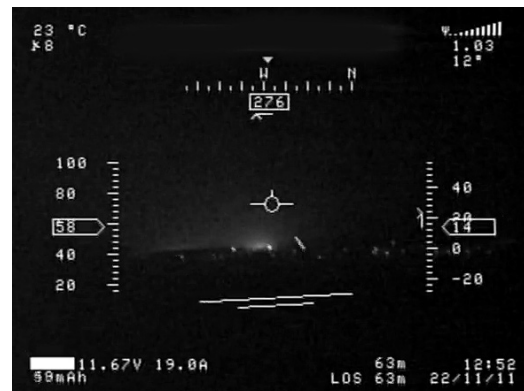

RVOSD

INTRODUCTION

2.2 Kit Contents

- (1) RVOSD
- (1) GPS
- (1) 70A current sensor
- (1) IR Remote
- (4) 150mm male to male wires

2.3 Not Included

Video camera
Video transmitter
Video receiver
Video monitor
Vibration mount for RVOSD

2.4 Dead on Arrival and Repairs

Each RVOSD and GPS is tested before shipment. Before thinking that your RVOSD is faulty please read this manual carefully. In most case, the problem is a misunderstanding of how the RVOSD works or a trivial mistake. We have designed the RVOSD to

handle common user errors like reverse battery connections and short circuits on the video in/out power rails. Even so, it's possible to damage the RVOSD by connecting your battery somewhere it shouldn't go!

In the unlikely case your RVOSD gets damaged, RangeVideo performs i repairs.

Mail the RVOSD5 with a note explaining what happened to:

1970 NE 124th St

Miami, FL 33181

Return shipping cost is \$10 USD to USA/Canada, \$15 USD international Priority Mail \$28 USD international EMS.

INTRODUCTION

3 RVOSD5 AUTOPILOT

3.1 Autopilot

The RVOSD autopilot relies on a combination of gyros and accelerometers to sense the airplane's pitch and roll.

The most important function of the autopilot is to return the airplane back home when R/C signal is lost.

The RVOSD5 can also stabilize(fly-by-wire mode) and autonomously(by waypoints) fly the aircraft.



Figure 3-1 Autopilot Block Diagram



- Flying wings. Throttle, right elevon, and left elevon.



3.2 Aircraft Compatibility

The RVOSD autopilot can control these types of aircraft:

- Stable trainer aircraft. Throttle, elevator, and rudder.



- 2. Low wing Aerobatic aircraft. Throttle, elevator, and ailerons.

RVOSD MANUAL

3.3 Autopilot Flight Modes

RTH (return to home)	This autopilot mode will engage automatically when R/C link lost is detected, and will fly the model back to the takeoff spot.
Level flight	The autopilot will keep the attitude of the model leveled on the pitch and roll axes.
Heading hold	The autopilot will keep the heading of the plane at the moment this of activation; it will also try to keep the actual altitude.
Position hold	The autopilot will fly figure eight patterns around the GPS coordinates at the moment of activation; it will also try to keep the actual altitude.
Fly-by-wire	The control of the plane is given up to the OSD computer. It will check for user stick movements and will translate to model desired attitudes. Control sticks are interpreted from 0 to full as 0-60° on each axis.
Waypoint navigation	(this mode is disabled outside of North America)

RVOSD MANUAL

3.4 Hardware Overview

3.4.1 RVOSD5

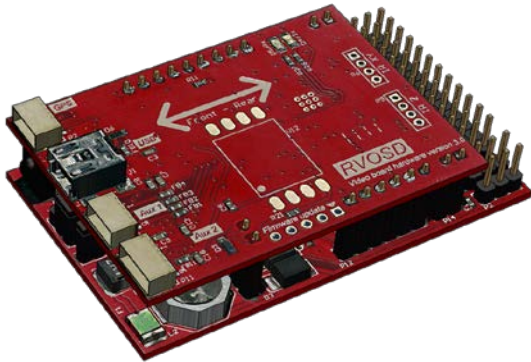


Figure 3-2 RVOSD

The RVOSD performs all of the text and graphic overlay, navigation, autopilot control, and power management. A custom graphics engine draws a flicker free overlay. Two microprocessors handle all of the tasks. The RVOSD5 contains an onboard Barometric Pressure Sensor for measuring aircraft altitude.

3.4.2 GPS Receiver

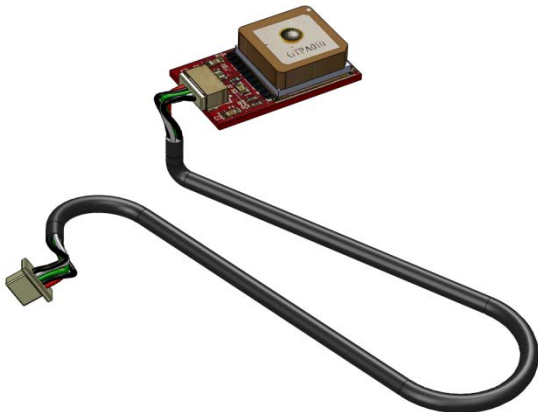


Figure 3-3 GPS Receiver

The included 10Hz GPS with SAW filter is immune to jamming from video transmitters. It is WAAS enabled, and has an accuracy of < 2m. It has a lithium backup battery to retain GPS settings for quicker satellite acquisition times. GPS data provides ground speed, ground track, and latitude and longitude.

NOTE

GPS Ground Track, also known as GPS Heading is not the same as Magnetic or True Heading. Ground track is dependent on aircraft flight directions and winds at altitude.

3.4.3 Current Sensor

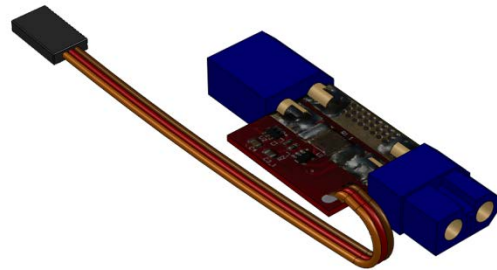


Figure 3-4 70A Current Sensor with XT60 connectors

The current sensor measures the current consumption of your electric motor system from 6-25VDC, 70A maximum.

NOTE

Optional 140A sensor with no pre soldered battery connectors available separately.

RVOSD MANUAL

3.4.4 External Temperature Sensor

No longer included.



Figure 3-5 External Temperature Sensor

If the external temperature sensor is left disconnected, then RVOSD will display the onboard temperature sensor reading.

Temperature sensor operating range:

external temp sensor LM34	-40 to +150 degrees Celsius
onboard temp sensor MCP9700	-40 to +150 degrees Celsius

3.4.5 Remote Control



Figure 3-6 Remote Control

The IR remote is used to navigate the RVOSD menus. The IR signal is powerful enough to penetrate foam and balsa; there is no need to remove the RVOSD from your model.

NOTE

If you lose the included remote, you can replace it with a universal TV remote. Just program the universal remote for Sony TV codes. The "mute" key will change screens, Channel (+) and Channel (-) will change menu selection, volume (+) and volume (-) will change the menu value

3.4.6 Wiring



Cables to connect video in, video out, GPS, current sensor, R/C receiver, are all included.

3.4.7 Video Camera

A video camera is not included with the RVOSD5. The RVOSD will not provide a video output without a valid video

RVOSD MANUAL

input. Use the included cables to connect your camera to the RVOSD. There are cables for the KX131/KX191, KX171, and DX201. Or you can make your own cable to connect any camera with composite video out.

NOTE

RVOSD is compatible with both PAL and NTSC composite video formats.



Figure 3-7 Video Camera

3.4.8 Video Transmitter

A video transmitter is not included with the RVOSD5. The RVOSD5 will send the combined camera video and OSD to the connected video transmitter so the video can be sent down to you on the ground for monitoring.



Figure 3-8 Video Transmitter

The video out connector is the video signal with the graphic/text data overlay. You can connect this directly to a TV monitor, DVR, or wireless video transmitter. Use the included male to male servo cable to connect the video out to a RangeVideo *Aerial Video System* transmitter.

3.4.9 Video Receiver

A video receiver is not included with the RVOSD. You will need a video receiver that operates on the same frequency as your video transmitter. The video receiver will receive the transmitted video with RVOSD5 overlays. Connect the video receiver output to a video monitor to watch the video in real-time.

3.4.10 Video Monitor

You will need a video monitor (not included with RVOSD5) to view the video being received by the video receiver.



Figure 3-9 Video Receiver

RVOSD MANUAL

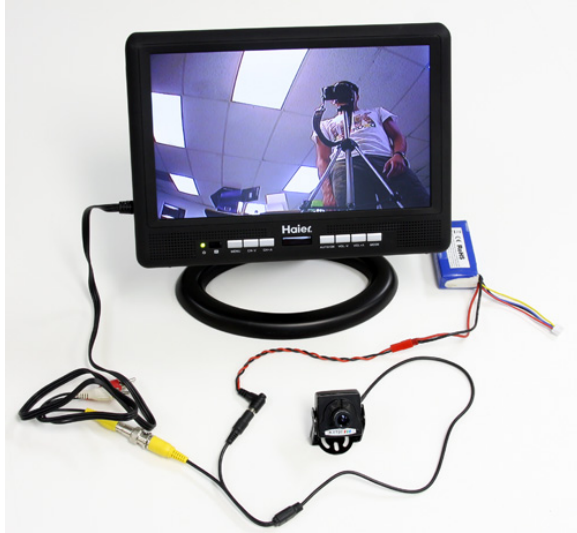


Figure 3-10 Video Monitor

3.4.11 Main Battery

Your electric aircraft already has a battery to power the motor and electronics. The RVOSD5 and related components can use this existing battery as a power source. The Main Battery voltage and current can also be monitored and displayed on the OSD. A video transmitter and video camera can also be powered from the main battery via RVOSD5 connections.

3.4.12 Auxiliary Battery

The Auxiliary (Aux) Battery is optional and not included with the RVOSD5. The input range is 6-35 VDC.

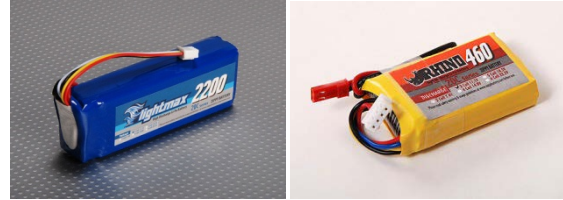


Figure 3-11 Main and Aux Battery Examples

CAUTION

Double check all wiring and hardware connections for proper placement prior to connecting any power source. Failure to connect hardware properly could damage the hardware or your aircraft.

RVOSD MANUAL

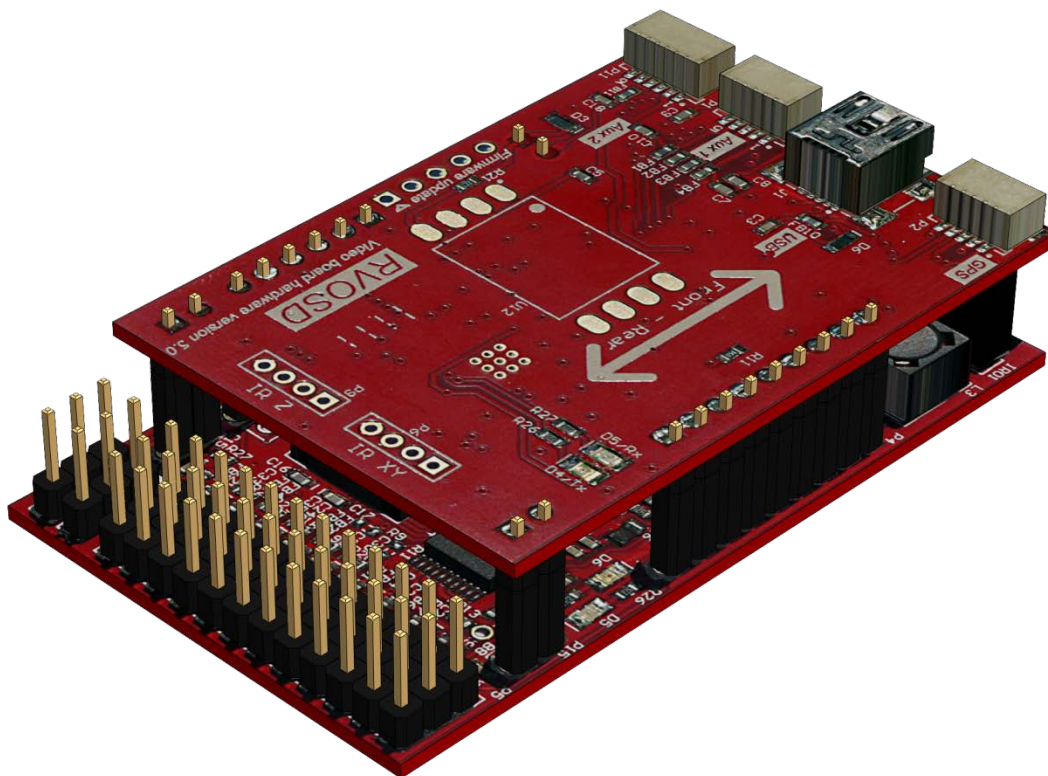


Figure 3-12 RVOSD5 Main Board

RVOSD main board gen4 kit

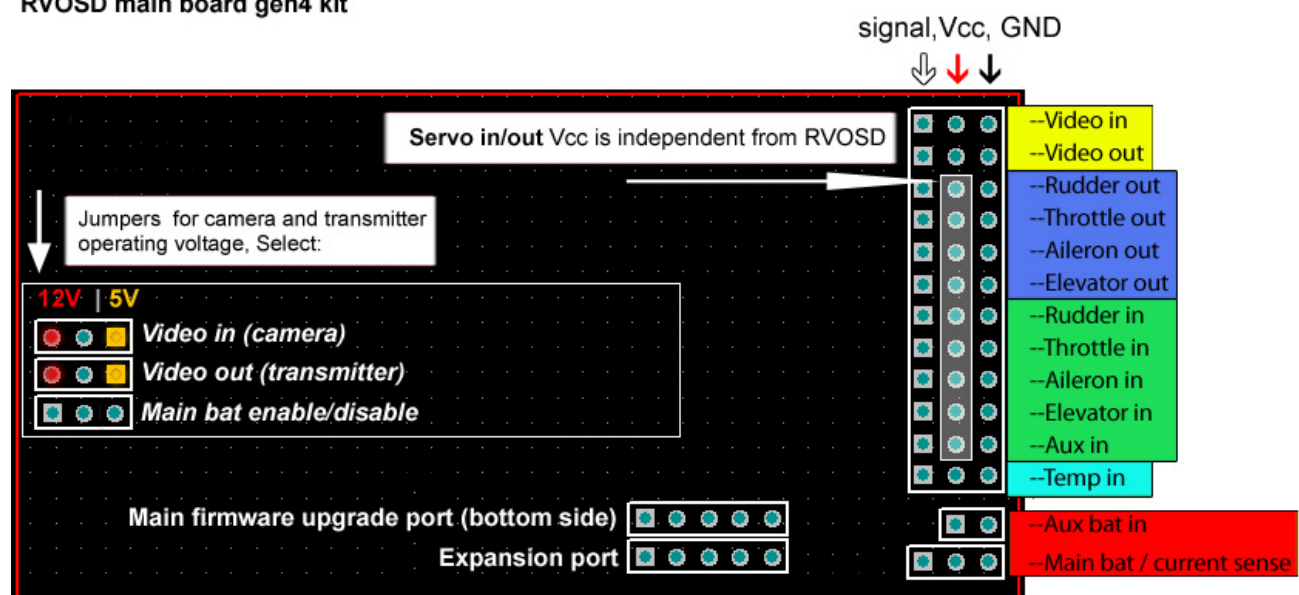


Figure 3-13 RVOSD Main Board Pin-Outs

RVOSD MANUAL

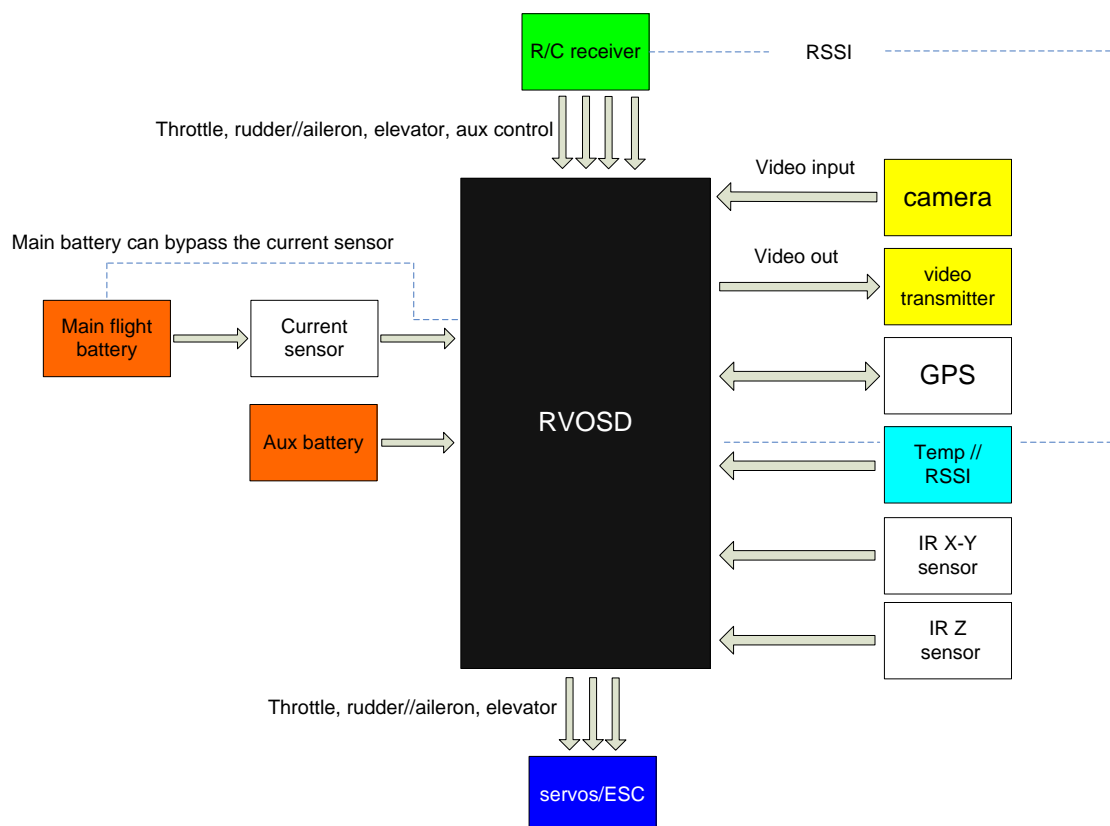


Figure 3-14 RVOSD Interconnection Diagram

Table 3-1 RVOSD5 Connector Data

Name	Pin	Signal Type	Range	Notes
Video Input	Signal	Composite video input	PAL/NTSC	Video input from camera
Video out	Signal	Composite video output	PAL/NTSC	Video output w/ OSD
Rudder out	Signal	Servo pulse output	1.0-2.0mS 3-5VDC	Connect to your rudder or ailerons
Throttle out	Signal	Servo pulse output	1.0-2.0mS 3-5VDC	Connect to your ESC or throttle servo
Aileron out	Signal	Servo pulse output	1.0-2.0mS 3-5VDC	
Elevator out	Signal	Servo pulse output	1.0-2.0mS 3-5VDC	Connect to your elevator servo
Rudder in	Signal	Servo pulse input	1.0-2.0mS 3-5VDC	Connect to your receiver rudder output

RVOSD MANUAL

Throttle in	Signal	Servo pulse input	1.0-2.0mS 3-5VDC	Connect to your receiver throttle output
Aileron in	Signal	Servo pulse input	1.0-2.0mS 3-5VDC	
Elevator in	Signal	Servo pulse input	1.0-2.0mS 3-5VDC	Connect to your receiver elevator output
Aux in	Signal	Servo pulse input	1.0-2.0mS 3-5VDC	Switch OSD screens in-flight
Temp in	Signal pin	Analog voltage input		Can be used for RSSI
Aux bat	Vcc	DC voltage input	6-30 VDC	Input is Reverse polarity protected
Main bat	Vcc	DC voltage input	6-30 VDC	Input is Reverse polarity protected
Main Bat Current sense	Signal	Reading from current sensor		Current sensor reading
Current sensor input	Gold plated pads on the current sensor board	DC voltage input	6-30VDC 100 A	Connect main flight battery here
Current sensor output	Gold plated pads on the current sensor board	DC voltage output	6-35VDC 100 A	Connect ESC here

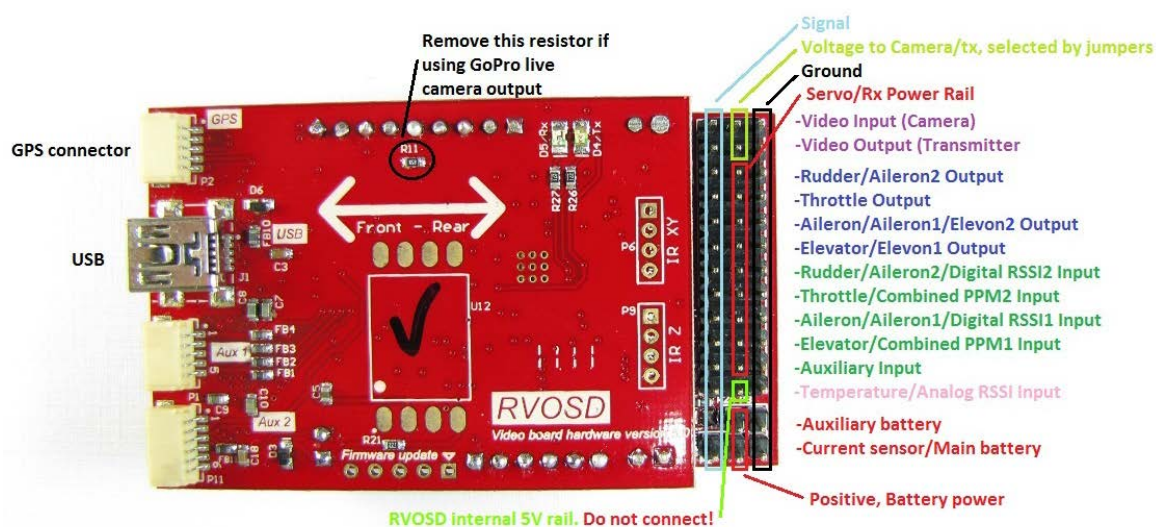


Figure 3-15 RVOSD Input/Output Connections

RVOSD MANUAL

RVOSD Main Board Connections

Each connection is comprised of three pins; a ground, supply voltage and signal pin. Please pay attention to the polarity of the RVOSD5 pins and the cable being connected.

- Video Input – supplies 5VDC or 12VDC from the Main Battery to the video camera if the Main battery is enabled by the jumper on the RVOSD5. If the Main Battery is disabled, voltage to the video camera is supplied by the Auxiliary Battery. The pin labeled “S” receives the video signal from the video camera. If you are powering the camera from an alternate source you must still connect a ground and signal wire from the camera to the RVOSD5.
- Video Output - supplies 5VDC or 12VDC from the Main Battery to the video transmitter if the Main battery is enabled by the jumper on the RVOSD5. If the Main Battery is disabled, voltage to the video transmitter is supplied by the Auxiliary Battery. The pin labeled “S” sends the video signal with the OSD overlay to the video transmitter. If you are powering the transmitter from an alternate source you must still connect a ground and signal wire from the transmitter to the RVOSD5. You can connect this output directly to a TV monitor, DVR, or wireless video transmitter.
- OUT4/Rudder Output - Supplies power and commands to the rudder servo(s). If you have multiple rudder servos you will need to use a servo “Y” cable (not included).
- OUT3/Throttle Output – Supplies power and commands to the throttle servo. If you have multiple throttle servos you will need to use a servo “Y” cable (not included).
- OUT2/Aileron Output – Supplies power and commands to the aileron servo(s). If you have multiple aileron servos you will need to use a servo “Y” cable (not included).
- OUT1/Elevator Output – Supplies power and commands to the rudder servo. If you have multiple elevator servos you will need to use a servo “Y” cable (not included).
- OUT7/Rudder Input – receives rudder commands from the aircraft receiver.
- OUT6/Throttle Input – receives throttle commands from the aircraft receiver.
- PPM2 input/Aileron Input – Receives aileron commands from the aircraft receiver.

RVOSD MANUAL

- PPM1 input/Elevator Input – Receives elevator commands from the aircraft receiver.
- OUT5/Auxiliary Input – This is connected to a spare channel on your receiver to facilitate the RVOSD5 onscreen menus to be accessed via your r/c transmitter.
- Temperature Sensor/RSSI – This is where the supplied temperature sensor is connected (optional).
- Aux. batt. – Here is where the Auxiliary Battery (optional) is connected if you choose not to power the video transmitter and/or video camera from the main battery. Battery jumper settings must be configured properly on the RVOSD5 board.
- Current Sensor/Main batt. – Here is where the supplied Current Sensor is connected for the Main Battery. Utilizing the current sensor will allow you to monitor the Main Battery voltage and current draw on the OSD.
- Voltage Selection Jumpers - The RVOSD has a 5V 1.5A switch mode regulator, which can be used to supply 5V to cameras and transmitters, and a **filter** for powering 12V cameras from the main flight pack. The main flight pack must be 12V (3s 11.1V Lipoly). *Yes! You can power the camera, video transmitter, OSD and ESC/motor with no interference thanks to this filter.*

The following diagrams show the location and label of each connection.

3.5 RVOSD OSD Menus

3.5.1 Main menu, page 1/4

Restart OSD - Software restart, it is an alternative to cycle power to the OSD, the conditions to set home will be required again.

Display FPM: - Enable/Disable Flight Path Marker (FPM).

FPM position adjust - This setting allows adjustment of the vertical position of the Flight Path Marker (FPM) as well

as the center of the rotating Home and Waypoint indicators.

AHI Size - Adjust the Size of the of the Artificial horizon indicator, while this parameter its being adjusted you will see the main screen, with AHI displayed, Vol+ and Vol- keys will make the AHI line bigger or smaller respectively.

Display compass - Enable/Disable the compass on simple and F16 screens.

Display home arrow - Change the type of home arrow to be displayed on the

RVOSD MANUAL

Simple screen. Change also the FPM type on the F16 screen.

Display turn rate - Enable/Disable the turn rate indicator to be displayed on the F16 screen

Display Vario - Select the type of display for the variometer information.

**Disabled:* Vario not shown

**Digital:* Vario display on digital form for the F16 screen

**Analog:* Vario display on analog form for the F16 and simple screens.

Display G. force - Enable//disable the display of the result vector length of all forced acting on the plane.

Display temperature - Enable/disable temperature display.

Display clear ground - When this parameter is ON, most of the OSD information is displayed in the upper side of the F16 screen.

Display speed ladder - Enable/Disable the speed ladder on the F16 screen.

Hide ground distance - Maximum distance to display Ground Distance, if this value set to zero Ground Distance is always displayed.

Display Width - Adjust the OSD sides to wider or narrower positions.

3.5.2 Main menu, page 2/4

Display units - Select imperial or metric units for the OSD.

Low altitude angle - When the angle between the airplane and the observer's local horizon gets under this value, GPS coordinates and date will be shown.

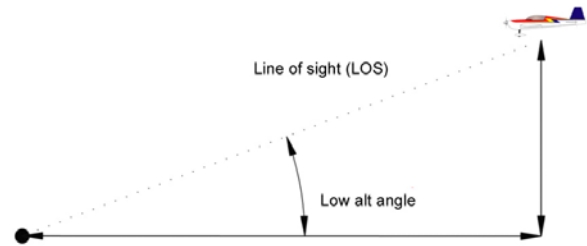


Figure 3-16 Low Altitude Angle

Dist warning - Distance indicator will start to blink when it goes over the value set on this menu.

Battery voltage warning - The Main Battery voltage indicator will start to blink when it goes under the value set here.

The Video Battery voltage indicator will start to blink when it goes under 10.6V. This value is fixed. Note that video battery input can be connected to your 5 Volt servo – Rx rail if you don't want to use a video battery, this way you can monitor also the BEC voltage.

Set batt capacity - Sets the maximum battery capacity of your pack. RVOSD G1, 2,3 and 4 current sensors will only measure motor consumption, thus you need to calculate your static consumption (video Tx, camera, receiver). A typical value for 500mW Tx, KX191 camera and usual EzStar Rx and micro servos, its 500mAh. If your battery has a capacity of 2200mAh, a good practice is to set $2200-500=1700$ mAh as

RVOSD MANUAL

battery capacity for 1 hr flight time. The current indicator will start to blink when mAh consumed go over 80% of the value set.

RVOSD G5 current sensor will measure the absolute consumption of the system.

Curr sensor type - Set the current sensor used by your OSD.

Blank screen warnings - Enable/Disable the warnings to be displayed on the blank screen.

GPS fix update - Select the GPS module type to be 5Hz or 10Hz if available.

Set max HDOP - This value sets the minimum GPS signal Horizontal Dilution of Position (HDOP) your OSD will accept to start setting home. It will display "Searching Sats" when there is not any satellite lock reported from GPS and will change to "Setting Home" as soon as it locks on the first satellite.

It is recommended to set this value to the minimum possible to have an accurate set of zero altitude and home GPS coordinates, however it can take too long to set home with this value to low. Setting it to 1.30 seems to be the best compromise between accuracy and lower time to set. Keep in mind that this must be done with clear open sky visibility.

Speed select - Future use (not enabled yet).

Altitude select - Selects altitude to be used by the autopilot and displayed by the OSD.

**GPS:* Autopilot will use altitude from GPS, the same will be displayed in all screens.

**Barometric:* Autopilot will use altitude from the barometric sensor; same will be displayed in all screens.

**Both:* Autopilot will use altitude from the barometric sensor. OSD will display barometric altitude on the ladder and GPS altitude to the left of the ladder on the F16 screen.

**Both-GPS MSL:* Autopilot will use altitude from the barometric sensor. OSD will display barometric altitude on the ladder and GPS MSL (mean sea level) altitude to the left of the ladder on the F16 screen.

Call sign - You can set your call sign here and also turn it ON or OFF.

Landing gear - Assign a channel of the PPM string to the OSD "Gear" input and you can configure the display to show when the landing gear is down.

**Disabled:* Do not display the "landing gear down" warning.

**Down:* The actual position of the landing gear channel shows the "Landing gear down" warning.

**Up:* The actual position of the landing gear channel hides the "Landing gear down" warning.

RVOSD MANUAL

Debug screen - Enable debug information to be displayed on the blank screen.

**Disabled:* No debug info displayed on the blank screen

**Raw data:* Display servo inputs periods, Infrared thermal inputs, absolute barometric pressure and vibration detected on 3 axes.

**GPS data:* Display refresh rate, satellites detected, HDOP, Fix, lock mode, signal and location for every satellite in view of the GPS.

3.5.3 Main menu, page 3/4

RSSI input - Selects the RSSI input type to be displayed.

**Analog:* Temperature-RSSI port will become an analog input to measure a voltage from the radio RSSI output. User should provide a 100KiloOhm resistor in series connection to avoid affecting receiver sensitivity by overloading RSSI output. This will also protect the OSD input. Use only signal and ground pins of this port. The middle pin has 5Volt, the OSD could be damaged if this pins is connected to the radio.

If the **Rx input type** menu item is selected to *Combined PPM* there is additional options for the RSSI input.

**Packet1:* The aileron input can be connected to a specially modified Fr-sky V8R7SP to measure packets received/second.

**PWM1:* Do not use this mode yet, future upgrade.

Packet1 and Packet2:* Rudder input can measure RSSI from a second modified FR-sky receiver, the OSD will display both RSSI values if the **Configure/display menu item is selected to *PPM2*.

**PWM1 and PWM2:* Do not use this mode yet, future upgrade.

Display RSSI - Configure how to display the RSSI values.

**Off:* Do not display RSSI

**Digital:* Display RSSI value digital, it will show the percent of signal.

**Analog:* Display RSSI1 using the space of the GPS satellites indicator, if this is done then the number of satellites are displayed as a number in the upper left screen.

Minimum RSSI - Used to configure the RSSI when analog input is selected, note that when RSSI is selected for packets/second mode there is no need to set minimum, neither maximum RSSI.

Take the R/C transmitter away from the receiver until glitching starts, and then store this value. The OSD will take this value as the minimum RSSI.

Note that two values will be displayed on this menu. First value shows the stored RSSI level and second value shows the actual RSSI level.

RVOSD MANUAL

Maximum RSSI - With the R/C transmitter close to the receiver, store this value. The OSD will take this value as the maximum RSSI.

Waypoint select - This will be the last waypoint displayed on the radar screen. Also this is the last waypoint to be reached when the waypoint-sequencer is enabled. Notice that the next five menu items will display the waypoint latitude, longitude, altitude, speed and loiter radius. The last two settings are for future usage (not enabled yet). Waypoint sequencer can only be enabled for USA-Canada users.

After reaching this waypoint the autopilot will set RTH.

Waypoint LAT - Latitude of the current waypoint selected on **Waypoint select** menu.

Waypoint LON - Longitude of the current waypoint selected on **Waypoint select** menu.

Waypoint altitude - Altitude of the current waypoint selected on **Waypoint select** menu.

Waypoint speed - Speed of the current waypoint selected on **Waypoint select** menu. Future use (not working yet).

Waypoint loiter radius - Approach to the waypoint by the tangent of the current waypoint selected on **Waypoint select** menu. Future use (not working yet).

Virtual fence - Limits the maximum distance from home for any waypoint to be selected as target for the waypoint navigation (USA-Canada). If the model reaches this distance from home all waypoints will be cancelled and the model will go back to home.

Display waypoint indicator - Enable or disable the display of the selected waypoints

3.5.4 Main menu, page 4/4

R/C receiver connected - Enable//disable servo outputs.

*Yes: Enable the servo outputs and receiver detection. You have to plug in the inputs and configure the detection of R/C link lost.

*No: disable the servo outputs and receiver detection. Set this mode if you plan to use RVOSD without connecting any control input.

Rx input type - Select the input mode to the autopilot inputs, regular or combined pulse position modulation (PPM).

*Regular: OSD inputs will receive separated inputs from the receiver. Auxiliary, elevator, aileron, throttle and rudder, each one will use a separate connection to the receiver.

*Combined PPM: All inputs from the receiver connected to the OSD by using one single connection. This requires the user to associate each input from the

RVOSD MANUAL

receiver to the OSD by using the **PPM configuration** menu item.

PPM configuration - Enter the PPM configuration sub-menu.

Start R/C wizard - Start a semi-automatic configuration for RC link lost detection, Servo neutral positions, Maximum servo throws, Control surfaces directions and maximum//minimum throttle positions.

R/C link lost detection - Selects the way R/C link lost is detected

**Glitch counter:* Will check the auxiliary channel, if the incoming servo pulses have wrong pulse width or period, then R/C link is assumed to be lost.

Throttle FS point:* Will check the throttle channel, depending on the setting of the **FS detect menu item it will assume R/C link is lost when the servo pulse width is over//under the value set on the **Set throttle FS detect** menu item.

FS detect - When **R/C link lost detection** menu item is set to *Throttle FS point*. This menu will set the detection of failsafe from receiver.

**Over normal range:* Failsafe detected when throttle channel is over the *Set throttle FS detect*. R/C link lost detection has to be configured like this:

120% Failsafe for the throttle channel adjusted on the R/C receiver or transmitter

-110% Set throttle FS detect, this is set on the OSD menu.

100% Top of throttle stick movement

-100% Bottom of throttle stick movement

**Under normal range:* Failsafe detected when throttle channel is under the *Set throttle FS detect*. R/C link lost detection has to be configured like this:

100% Top of throttle stick movement

-100% Bottom of throttle stick movement

-110% **Set throttle FS detect**, this is set on the OSD menu.

-120% Failsafe for the throttle channel adjusted on the R/C receiver or transmitter

Set throttle FS detect - When **R/C link lost detection** menu item is set to *Throttle FS point*. This menu will set the detection point of failsafe from receiver. Can be set to work over or under normal range, on the above menu item. This should be properly configured in the R/C wizard.

Set failsafe - If *Fail safe* mode it is selected in the menu item **Enable autopilot**, RVOSD will send the values set on this menu, to rudder, elevator and aileron outputs when R/C link is lost.

Autopilot output - Select the output mode of the autopilot.

RVOSD MANUAL

**Airplane:* All outputs will match the board labels.

- Elevator output --> Elevator
- Aileron output --> Aileron
- Throttle output --> Throttle
- Rudder output --> Rudder

**Flying wing:*

- Elevator output --> Elevon 1
- Aileron output --> Elevon 2
- Throttle output --> Throttle
- Rudder output --> Rudder

**Airplane-diff. ailerons:*

- Elevator output --> Elevator
- Aileron output --> Aileron 1
- Throttle output --> Throttle
- Rudder output --> Aileron 2

Elevon-aileron CH1 - Reverse direction of elevon2 if needed.

Enter in-flight menu - Enter the in-flight submenu

Enable autopilot - Select action when R/C link is lost. *Failsafe, RTH, test in the air, test in the ground.* The last two modes are only available when the **AHI source** menu item is set to *No*.

Fail safe:* All control surfaces will be driven to the values set on the **Set failsafe menu item.

**RTH:* Control surfaces will be driven by the autopilot.

**Test in the air:*

**Test on the ground:*

Save configuration - -Saves all settings to permanent memory so when you cycle power to the OSD its parameters will be kept in memory. (You will see a very fast "Done" blink to confirm this action). After that, no further save is needed unless you want to modify something else.

3.5.5 Autopilot menu, page 1/3

Set neutrals - This menu item will store the neutral point for each one of the servo channels controlled by the autopilot, save the neutrals after the airplane is trimmed. Autopilot needs this to be set properly for correct operation.

Set cruise throttle - Sets the engine throttle position when the autopilot is trying to correct altitude (less than "Cruise altitude" + "Altitude limit")

Set glide throttle - In "Fail safe" autopilot mode, RVOSD will output this value to throttle if RC link lost is detected. In "RTH" autopilot mode, RVOSD also will output this value if the plane altitude is more than "Cruise Altitude" + "Altitude Bearing Limit" so you must set it to neutral(engine off), or to a slow descend setting.

Set neutral AHI - When this menu is activated, the system will get out of the autopilot menu, to the main screen (F16

RVOSD MANUAL

or simple) and a long line will be displayed in the center of the screen, after this the system will give you 4 seconds to align the line with the real horizon. And the actual attitude of the plane will be assumed to be the AHl position when the plane is flying leveled in both pitch and roll.

If the AHl source is selected to “thermopiles” it is better to set this in flight.

If the AHl source is selected to “IMU” is better to select this on the ground, or in flight with the motor OFF so there is no vibrations present.

Stabilization pitch gain (50):

This parameter will set how much the autopilot will deflect the controlled flight surfaces to set the plane pitch requested by the autopilot navigation module.

Stabilization roll gain (50) - This parameter will set how much the autopilot will deflect the controlled flight surfaces to set the plane roll requested by the autopilot navigation module.

Stabilization yaw gain (0) - This parameter will set how much the autopilot will deflect the controlled flight surfaces to set the plane yaw requested by the navigation module. Disabled for now, future use item.

Max pitch angle - Maximum angle the autopilot will allow the plane to pitch while correcting altitude.

Max roll angle - Maximum angle the autopilot will allow the plane to roll while correcting heading.

Autopilot mode - Select the autopilot mode to be activated when stabilization mode is activated by the auxiliary channel.

- RTH
- Level flight
- Heading hold
- Position hold
- Fly by wire
- Waypoint sequencer

Main screen selection - Choose the main flight screen; it can be F16 or Simple screen

Radar screen selection - Enable or disable the altitude and speed ladders on the radar screen.

AHl display - Sets how the AHl will be displayed.

ON = always

Autopilot = When autopilot is activated

OFF = never

Cruise speed (0) - Disabled for now, future use item.

Autopilot menu, page 2/3

AHl source - Selects the sensors used for attitude control.

RVOSD MANUAL

None: Autopilot will try to control the airplane by use GPS only.

Thermopiles: Autopilot will use the infrared sensors for attitude control.

IMU: Autopilot will use the inertial measurement unit for attitude control.

If this menu its set to *None*. All menus related to the attitude sensors will be set to “n/a”

IR XY head position: (Board roll orientation) - If the **AHI source** is set to *Thermopiles*. This menu will set the XY thermal head orientation. Heads aligned or skewed 45° with the roll and pitch axis.

If the **AHI source** is set to *IMU*. This menu will set the board roll orientation. Allows the OSD board placement, to be set at different roll angles on the airframe. 0-90-180-270°.

AHI pitch dir - If the **AHI source** is set to *Thermopiles*. This menu can correct the AHI pitch movement if the pitch sensors need to be placed reversed on the plane. If it is noticed that the AHI pitch is working backwards, change this parameter.

If the **AHI source** is set to *IMU*. This menu allows reversing the OSD board placement in the front-rear direction.

AHI roll - If the **AHI source** is set to *Thermopiles*. This menu can correct the AHI roll movement if the roll sensors need to be placed reversed on the plane. If it is noticed that the AHI roll is

working backwards, change this parameter.

Display max range - Enable/disable the display of the estimated distance left, the OSD will calculate this based on the speed, actual current consumption and battery capacity left adding then the estimated distance left based on the altitude and the value set on the **Glide ratio** menu item. The best accuracy of this calculation is when there is no tail or head wind. And the airplane is flying level, not loosing nor gaining altitude.

Glide ratio - Set the estimated glide ratio of your airplane. This parameter will be used by the estimated range left calculations.

Test in the air elevator - If the **AHI source** is set to *None*. This menu will enable/disable the option to activate the elevator for the GPS only autopilot on “test in the air mode”. This way you could run separated tests of the rudder and elevator control to adjust the autopilot.

Start IR sensors equalization - If the XY head module has different gains than the Z head module, a wizard will be started with the objective to improve the AHI response. This menu is only active if the **AHI source** is set to *Thermopiles*.

Acc to gyro proportional gain (73) - Adjust the accelerometer to gyroscope proportional gain. Don't touch this value unless you really know what you are doing.

RVOSD MANUAL

Acc to gyro integral gain (36) -Adjust the accelerometer to gyroscope integral gain. Don't touch this value unless you really know what you are doing.

Use centripetal compensation - Enable//disable the compensation of centripetal forces derived for aircraft changes in direction.

Use thrust compensation - Enable//disable the compensation of centripetal forces derived for aircraft changes in speed.

Roll servo direction - Set the autopilot control direction of the pitch servo. This parameter should be automatically set if the R/C wizard is properly executed.

Pitch servo direction - Set the autopilot control direction of the roll servo. This parameter should be automatically set if the R/C wizard is properly executed.

3.5.6 Autopilot menu, page 3/3

Heading limit (50) - When the **AHI source** is set to *None*, this parameter can be used to limit the maximum servo deflection allowing more authoritative response of the autopilot while avoiding too much bank angle when the plane is going completely away from home (maximum autopilot output) When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will limit the heading error to avoid excessive angles requested by the navigation module.

Heading proportional gain (40) - When the **AHI source** is set to *None*, this option adjusts the proportional gain on the Roll PID control. Autopilot output is proportional to the heading error (Plane heading – home direction). This parameter determines how much this error will deflect the aileron (rudder) of the plane.

When the **AHI source** is set to *Thermopiles* or *IMU*, then this parameter will set the desired bank angle instead of direct aileron deflection.

Heading Integral gain (40) - When the **AHI source** is set to *None*, this option adjusts the integral gain on the Yaw/Roll PID control. This parameter will make corrections to the set point of the PID control. When the neutral rudder position is not adjusted properly or there is some wind, an additional correction is needed to make the heading to home more accurate.

When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will make additional corrections if the heading keeps unchanged because autopilot correction is not enough to roll the plane due to AHI errors.

Heading derivative gain (30) - When the **AHI source** is set to *None*, this option adjusts the derivative gain on the Yaw/Roll PID control. This parameter will act as a damper making the planes rate of turn softer.

RVOSD MANUAL

When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will make the same action on the correction of the heading changes (smoother changes of heading).

Turn rate gain (0) - IF these gain it's set to anything but zero, the amount of Roll angle will proportionally cancel any pitch correction, allowing better heading control. Gains higher than 1, will add a proportionally related to roll, pitch up command.

Cruise altitude (200) - Sets desired altitude for autopilot corrections on the Pitch control (meters or feet depending on units setting on main menu).

Altitude limit (100) - When the **AHI source** is set to *None*, this limits PID action over and under Cruise altitude. Also, if actual altitude is greater than "Cruise altitude" + "Altitude limit" autopilot will set throttle to "throttle failsafe" and pitch control will be annulated, leaving to the "set neutral elevator" the elevator setting.

Pitch attitude to zero degrees angle when the **AHI source** is set to *Thermopiles* or *IMU*.

Altitude proportional gain - When the **AHI source** is set to *None*, this option adjusts the proportional gain on the PITCH PID control. Autopilot outputs its proportional to the altitude error (Plane altitude – cruise altitude), this parameter determines how much this error will deflect the elevator of the plane.

When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will set the desired pitch angle instead of elevator deflection.

Altitude integral gain - When the **AHI source** is set to *None*, this option adjusts the gain of the rudder to elevator mix available if you want to compensate pitch down due to rudder action.

When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will add additional corrections if the altitude is not changing towards cruise altitude.

Altitude derivative gain - When the **AHI source** is set to *None*, this option adjusts the derivative gain on the PITCH PID control. This parameter will act as a damper, making the rate of climb of the plane softer.

When the **AHI source** is set to *Thermopiles* or *IMU*, this parameter will make the same action on the correction of the altitude (smoother changes of altitude)

Speed proportional gain - Disabled for now, future use item.

Speed derivative gain - Disabled for now, future use item.

Speed integral gain - Disabled for now, future use item

3.6 On Screen Display

- Temperature
- Coordinates
- Home Position
- GPS Signal

RVOSD MANUAL

- HDOP
- Line of Sight Angle
- Compass
- Heading Indicator
- Speed Ladder
- Home Navigation Arrow
- Variometer
- Altitude
- FPM
- Artificial Horizon
- Primary Battery Status
- Aux Battery Status
- Distance to Home
- Date
- Flight Timer



Figure 3-17 On Screen Display Description (F16)

RVOSD MANUAL



Figure 3-18 On Screen Display Description (Simple)

RVOSD5 – CONFIGURATION

4 RVOSD5 CONFIGURATION

4.1 Configuration

NOTE

Please read carefully. The autopilot configuration requires special attention.

The simplest hardware configuration will require the least amount of components and allows you to monitor the aircraft battery, IMU and GPS navigation. You will need the following hardware:

- RVOSD5
- GPS Receiver
- Current Sensor
- Video Camera
- Video TX
- Video RX
- Video Monitor
- Aux Battery (optional)

4.2 RVOSD5 In-flight Screen Selection & PPM Link Loss Detection

After adding video hardware to your RVOSD5 configuration, you may want to be able to interact with OSD screens in-flight. To do so, you need to connect a male to male servo cable (included) from the RVOSD5 Auxiliary Input to a spare channel on your receiver. If you are using a PPM receiver in your

aircraft, this connection will also serve to detect R/C link loss (R/C glitch detection).

4.3 PCM Link Loss Detection

In PCM mode, the RVOSD detects R/C link loss when the throttle channel goes past a preset failsafe position called PCM failsafe point. This position can be set in the RVOSD main menu. During regular flight (not autopilot), the RVOSD will be transparent between the R/C receiver and ESC. To detect an r/c link loss with a failsafe equipped PCM receiver you need to connect RVOSD5 Throttle Input connection to the Throttle channel of your receiver using a male to male servo connector (included) and connect your ESC to the RVOSD5 Throttle Output.

4.4 Autopilot Configuration

During regular flight (not autopilot), the RVOSD will be transparent between the R/C receiver and servos. In autopilot mode, RVOSD takes over the connected channels to stabilize roll and pitch and also move the flight surfaces to navigate the in accordance with the defined flight route. Using male to male servo connectors (included), connect the RVOSD5 Rudder In and Elevator In to the receiver Rudder and Elevator outputs, respectively. Connect the Rudder and Elevator Servos to the RVOSD5 Rudder Out and Elevator Out.

RVOSD5 – CONFIGURATION

NOTE

Infrared Thermopile Sensors are not used with the RVOSD5. An onboard IMU is used to perform the autopilot functionality.

4.5 Using PPM Receivers

In case you are using a PPM R/C receiver which has no failsafes and hence glitches when the R/C link is lost, the Aileron in and Aileron out can be used to program a failsafe position when R/C link is lost. This is very useful. For example: the autopilot takes over the rudder and elevator when R/C link is lost, but you have an aileron servo which will keep glitching and make the plane unstable- even under autopilot control. The solution is to connect the aileron channel through the RVOSD and assign a neutral failsafe position. Of course you can use the Aileron in and Aileron out ports to set a failsafe position for any channel you want. And if you are using a radio with failsafes, you will likely never use the Aileron in and Aileron out ports. The Rudder out port can be connected to rudder OR ailerons.

4.6 Video Hardware

The RVOSD will not provide a video output without a camera connected. So the first step is to connect your camera to the RVOSD Video input.

Some video transmitter use a Male to Male Servo connector (included). If your video transmitter uses this type of connection, please note the polarity of the connections.

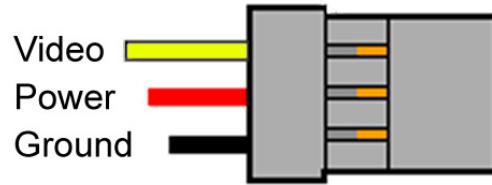


Figure 4-1 Video TX Connector

NOTE

The power wire is in the center position so that an accidental reverse connection will not reverse polarity.

4.7 Video Hardware Power Management

The OSD will supply power to the camera and video transmitter. If the voltage selection jumpers are set to 12V RVOSD will route the battery with the highest voltage to power the device (camera or video Tx associated with the selected jumper). So if the main battery voltage is more than 3S(12V), user will have to change the disable jumper to isolate the main battery and provide a 3S battery on the auxiliary battery input port.

When the voltage selection jumpers are set to 5V RVOSD will supply power from an internal 5V regulator. However if any of the jumpers are set to 12V you have to follow the above recommendations. Only when both jumpers (camera and video Tx) are set to 5V the OSD can work with any battery combinations in the 2S-6S range. The RVOSD is shipped pre-configured for 12V to be supplied directly from the Main Battery to the Video Input (camera) and Video Output (transmitter) connections.

RVOSD5 – CONFIGURATION

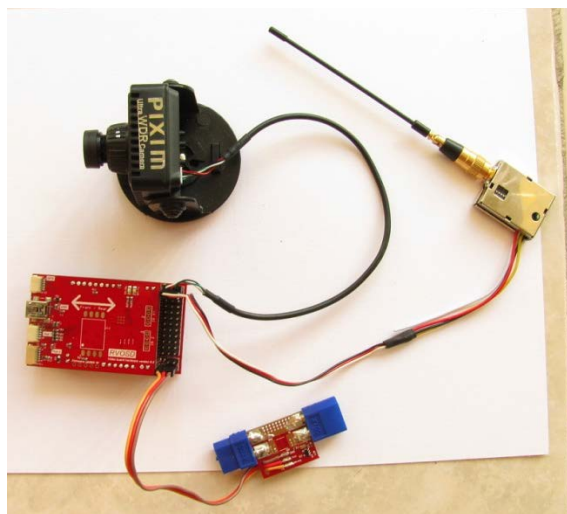


Figure 4-2 Connecting your video equipment

There are two jumpers, one for the transmitter power and one for the camera power, which select the desired voltage to be supplied to each item.

CAUTION

Identify the required voltage of your video transmitter and video camera prior to setting the voltage selection jumpers or connecting your video equipment.

4.8 Using an Auxiliary Battery for Video Equipment

You may choose to power your video transmitter and/or video camera from battery other than your main battery. To do so, remove the **Main battery enable/disable jumper** to disable the **Main bat** from powering the camera and transmitter when either 12V jumper is selected. Connect the battery you wish

to use to power the camera or transmitter to Aux Bat input.

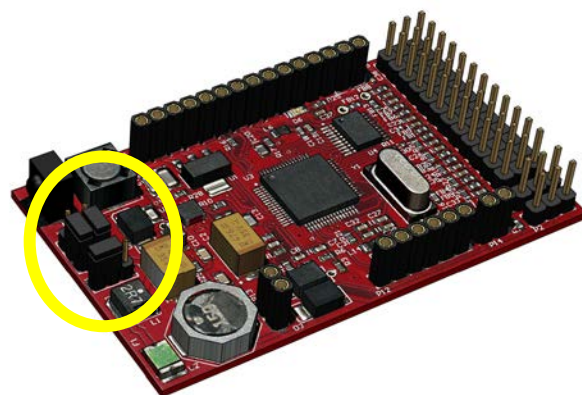


Figure 4-3 Main/Auxiliary Battery Jumper Selection

For examples of correct jumper settings for various configurations see *Appendix B: RVOSD5 Jumper Settings* for detailed examples.

WARNING

DO NOT connect a 5V device to the RVOSD before changing jumper position to 5V.

DO NOT connect a 12V device to the RVOSD before making sure that your main flight and or aux battery is no more than 3s 11.1V (12V). If your main battery is more than 3s 11.1V (12V), then remove the **main bat enable jumper**, and connect a 12V battery to Aux bat in.

NOTE

It is wise to check the voltage and

RVOSD5 – CONFIGURATION

polarity being supplied to your camera/transmitter before connecting them. Just in case a camera cable was reversed at the factory or you made a mistake somewhere. This will save your camera/transmitter from magic smoke!

4.9 Connecting the Main Battery

It's possible to connect the main battery directly to the RVOSD, without the current sensor. The RVOSD will display 0.0A current draw. In this case, it's better to connect the battery to Aux bat in, since this will hide the empty amperes display on RVOSD, and show just the battery voltage.

4.10 Connecting the Current Sensor

The current sensor is used to measure electric motor current. Connect it in between your flight battery and ESC, as follows:

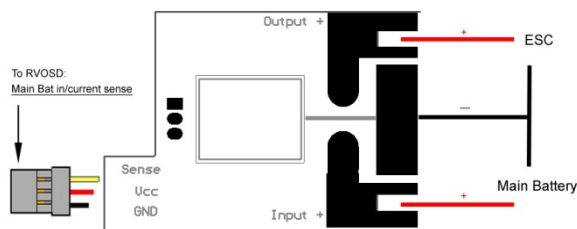


Figure 4-4 Current Sensor Wiring Diagram

The current sensor connects to RVOSD Main bat in/current sense port.

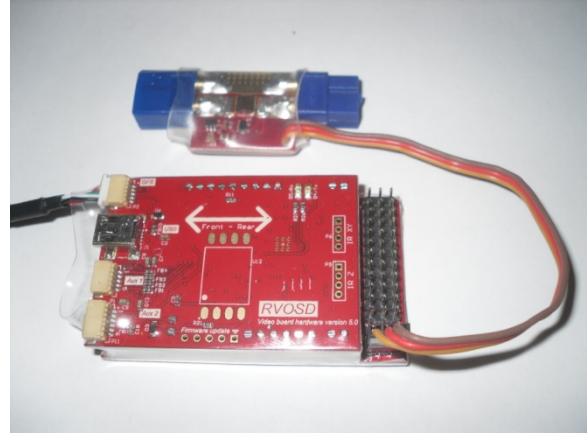


Figure 4-5 Connecting Current Sensor

You may use a standard servo extension wire to extend the wire between the RVOSD and current sensor board. Keep in mind the current used by the RVOSD + GPS (150mA) and other devices like the camera and transmitter.

CAUTION

Do not use a very thin gauge extension wire.

The 100A model can measure from 0-100 amps. The voltage range is 6-30VDC.

4.11 Current Sensor Calibration

Every time RVOSD is turned on, the current sensor is calibrated. It takes 30 seconds to calibrate. You will see '**Calibrating current sensor...**' on the screen. During this time, it's important to not run the motor or move servos a lot. Doing so will skew calibration bias values and the current reading will be inaccurate- usually too high.

RVOSD5 – CONFIGURATION

If you connect two batteries: a 3s 11.1V Main flight pack and a 3s 11.1V Aux bat, and connect the main bat enable jumper, the RVOSD will use the the higher voltage battery. This can be used as a safety feature. When your main flight battery dies, the RVOSD will use the auxiliary battery to power the video equipment.

CAUTION

Secure the connection between the current sensor and RVOSD. If this connector comes loose in-flight, you will lose all power to the RVOSD-unless you have another battery connected to Aux bat in.

4.12 Aux Battery Input

It's possible to connect another battery to the Aux bat in. In this case, the RVOSD will choose between the two battery inputs and select the higher voltage battery to use. If you want the RVOSD to select the lower voltage battery instead, remove the **Main bat enable jumper**, and connect that battery to **Aux bat in.**

4.13 Connecting Servos

The RVOSD is installed between your R/C receiver and servos/ESC. In manual flight, the RVOSD is transparent, and simply passes through all servo and ESC inputs to the outputs. See the autopilot section for more details.

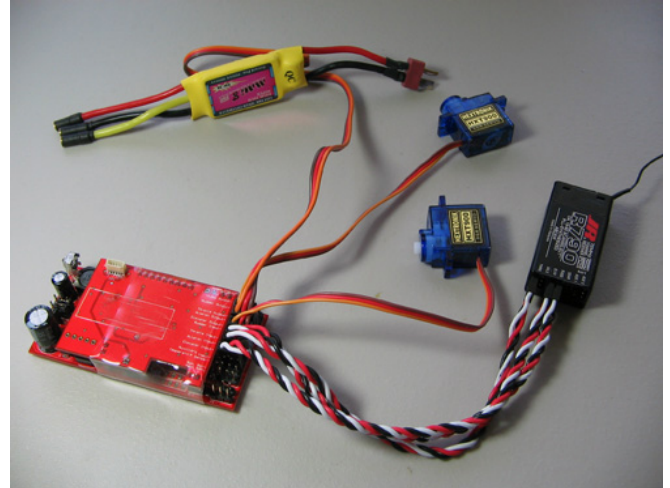


Figure 4-6 RVOSD5/Receiver/Servo Connections

4.14 Autopilot/OSD Control Interface

The autopilot is turned ON and OFF using a spare R/C channel. The RVOSD5 **Aux in** channel can be used to change the OSD screens, and activate/deactivate autopilot flight modes. It works by measuring the period of the pulse input (servo pulses). On a change from more to less than 1.35mS it toggles autopilot mode. On a change from less to more than 1.85mS it cycles OSD screens.

RVOSD5 – CONFIGURATION

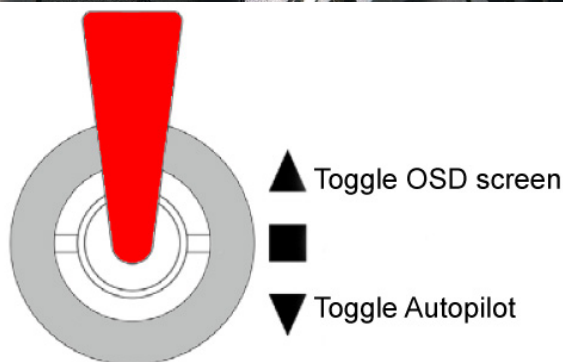


Figure 4-7 Transmitter Channel to Control the Autopilot/OSD

Ideally you need a three position switch assigned to this channel. Each time you toggle up you will cycle one screen and each time you toggle down it will turn the autopilot on and off. This action will depend on various menu settings.

CAUTION

The Aux input channel changes autopilot modes. If you are FPV flying, this won't be problem, but please pay attention if you are flying in third person mode and accidentally activate an autopilot mode. You will have to think and react fast! Consider disabling autopilot modes while flying third person.

4.15 Receiver Signal Strength Indication (RSSI)

WARNING

The center pin of RVOSD RSSI/temperature input port is directly connected to RVOSD 5V rail. If you plug the battery to this connector it could cause catastrophic failure of the OSD. Also do not connect RSSI from the receiver to this input using a three wire servo cable. The center wire of this cable has to be removed in order to isolate the OSD internal 5V rail from the receiver-servo 5V rail.

Advanced users can connect RSSI voltages from your receiver to the

RVOSD5 – CONFIGURATION

temperature sensor input on RVOSD. This should be done thru a series resistor of 100 kilo ohms, so the OSD input will not load too much the RSSI circuit, and affect your radio range.

If the **Rx input type** menu item is selected to *Regular*, the OSD can display RSSI from the analog/temperature input port only.

If the **Rx input type** menu item is set to *combined PPM*, the OSD can display packets received from PPM1 and PPM2 receivers if those receivers are modified to output packets received.

Operating range:

Temp in, signal pin	0V – 3.3V
---------------------	-----------

4.16 Throttle Control:

Throttle control on the autopilot it's fixed to two values, when the model is above "altitude limit"+"cruise altitude" the throttle control is fixed to the value on the "Set throttle failsafe" menu item, This value should be set so the airplane can gently glide at optimum battery consumption.

Bellow "altitude limit"+"cruise altitude" the throttle control is fixed to the value on the "Set cruise throttle" menu item, this value should be set to allow the airplane to dive and climb using the pitch control.

4.17 Landing Gear Configuration

First you have to be using combined PPM to RVOSD. Assign the landing gear channel on the PPM configuration.






The landing gear channel output of the Rx connected to the landing gear of course.

With the airplane landing gear up, set the menu item **Landing gear** to *UP*.

This way when you set the landing gear on your transmitter, the OSD does know that the landing gear is UP or DOWN. If it is down it will show Landing gear is actually down and will display the status on the OSD.




4.18 Navigating RVOSD5 Menus

The IR remote is used to access the RVOSD menus. The autopilot submenu can also be accessed using your R/C transmitter in-flight. To enter the Main

menu, press  until you see the main menu screen. Use   buttons to scroll menu options. There are 4 pages in the main menu. Use  or  to select an option or to change its value or to enter a submenu.

All menu changes take effect immediately after they are selected; but the settings are not saved to memory until you press Save. ('Save' is on Main menu page 4/4). If you turn off or reset the RVOSD before saving the changes, they will be lost.

RVOSD5 – CONFIGURATION

	Changes the OSD screens : 1. Main Screen 2. Navigation Screen 3. Blank Screen 4. Menu screen
	Scrolls through the menu options.
	Changes the value
Numeric pad	For entering coordinates in the waypoint menu option.

If the **Enable autopilot** menu item is set to anything other than No-Failsafe, you can navigate and change items on the in-flight submenu by using the elevator and aileron sticks. In order to allow these actions, the servo outputs will stay at the values they had just before entering the submenu. You can't control the plane while navigating the submenu, all controls will remain frozen until you get out of the submenu. To gain control again just cycle screens. If while you are navigating the submenu the RC link is lost, the OSD will automatically go out of the submenu to allow faster retake of control. Also if you enter the autopilot submenu with any of the autopilot modes activated, on the autopilot menu screen the autopilot will switch to level flight, and resume the previous autopilot

mode after leaving the menu screen. But some menus can't be changed if any stabilization mode is active.

4.19 Changing OSD Screens

You can toggle the OSD screen using a spare R/C channel.

If **R/C receiver connected: No** is selected, you can ignore this section.

4.19.1 Run the wizard

1. To use the servo in/out functions of the RVOSD, please set the menu option: **R/C receiver connected: Yes** (default)

2. The next step is to select **Start R/C wizard**. Remove your propeller before running the wizard, because it will ask you to move your throttle stick and turn off you radio, which can cause the motor to spin.

This wizard will guide you step by step, and set the following menu options for you:

R/C link lost detection: Glitch counter
// Throttle FS(*failsafe*) point

- **Set throttle FS detect:** This your failsafe throttle position which triggers RVOSD autopilot activate. The wizard will set this point a little above 100% throttle position. To use it, program your R/C Radio throttle failsafe to 110% .If you lose R/C contact, the failsafe moves the throttle to 110%, and RVOSD takes over. The RVOSD will release control

RVOSD5 – CONFIGURATION

back when the R/C system is out of failsafe.

- **Set neutrals:** this sets the neutral stick position for level flight. (for autopilot)

You can leave disconnected the channels which you don't use.

Additionally, you can edit these menu options directly, after you run the wizard.

4.19.2 Rx not detected

The RVOSD tries to detect the status of your R/C link by looking for valid servo pulses from the receiver, as follows:

Glitch counter mode: RVOSD looks for pulses on the Aux input. **Throttle FS point:** RVOSD looks for pulses on the Throttle input. If no valid pulses are detected by the RVOSD, it will display 'Rx not detected' on start up. Servo outputs will be disabled until a receiver is detected.

NOTE

Rx not detected' can also be displayed on startup if your throttle stick position is higher than **throttle FS detect point**.

4.19.3 If R/C link is lost

There are two safety options which can be chosen to activate automatically when R/C link lost is detected by RVOSD.

- 1- RTH (return to home autopilot)
- 2- Failsafes (RVOSD will set flight surfaces and throttle to failsafe positions)

- 3- Test in the air and test on the ground modes. (This is for tuning the RTH autopilot when not using IR stabilization sensors. These options let you toggle autopilot with Aux input.)

CAUTION

Avoid selecting the failsafes modes until you have tuned the autopilot.

4.20 Configuring Warnings

You can set warnings for:

- Low battery
- Line of sight distance too far
- Altitude too low

These settings are located on main menu page 2/4.

4.21 Configuring Waypoints

RVOSD can be set to navigate thru up to fifteen 3D waypoints. By using the **waypoint select (Main 3/4)** menu item is possible to assign latitude, longitude and altitude for each waypoint. This is done by using the remote control, note that it is possible to use the numbered keys in addition to the displacement keys to enter the latitude and longitude. Remember that RVOSD use decimal degrees coordinate system.

RVOSD will navigate up to the last waypoint selected on the **waypoint select (Main 3/4)** menu item, when the **Aux autopilot mode (AP 1/3)** is set to

RVOSD5 – CONFIGURATION

waypoint sequencer and the auxiliary switch is toggled to activate the autopilot mode.

The F16 screen will show direction to waypoint zero in addition to direction to home, in the form of a small segment around the Flight path marker (FPM). The radar screen will show the waypoints in the order that RVOSD will try to navigate them up to five waypoints ahead.

The distance to the next waypoint, and to home will be displayed all the time. RVOSD will switch to return home mode after reaching the last waypoint selected.

Waypoint sequencer can be seen working from time 7:51 on this video: <http://vimeo.com/19550368>

RVOSD allows inputting up to 5 waypoints to be displayed on the “Radar screen”. The number of displayed waypoints will be up to the “Last waypoint” selected. Each time you change the value on the “Last waypoint” menu item the “Waypoint LAT” and “Waypoint LON” menu items will display the selected waypoint coordinates. You can change this coordinates with the remote control using up or down arrows or the numeric keypad. Remember that an RVOSD use decimal degree coordinates. “Waypoint altitude” item is not used for the RVOSD version without waypoint sequencer.

4.22 Configuring RSSI

A new RSSI display option allows advanced users to connect RSSI voltages from your receiver to the temperature sensor input on RVOSD. This should be done thru a series resistor of 100 kilo ohms so the OSD input will not load to much the RSSI circuit and affect your radio range. After RSSI it's connected you can go to the Main menu page 2 and with your transmitter turned ON nearby, store the maximum RSSI value. Then take the transmitter far from the receiver until you start to see glitching or your receiver goes in to failsafe. Then store the minimum RSSI. Finally you can select how to display RSSI analog or digital. If digital mode is selected the RSSI will be shown in a value from 0 to 100% that will match the signal received. If analog display it's selected it will take place of the Satellite bars indicator showing 10 bars proportional to the signal strength. GPS satellite count will be shown digital instead.

If the **Rx input type** menu item is selected to *Regular*, the OSD can display RSSI from the analog/temperature input port only.

If the **Rx input type** menu item is set to *combined PPM*, the OSD can display packets received from PPM1 and PPM2 receivers if those receivers are modified to output packets received. Also from version 5.04 it can display the PWM RSSI signal from EZUHF receivers.

RVOSD5 – CONFIGURATION

When the **RSSI input** is selected to *analog*, you have to connect RSSI to the temp/rssi input. A 10K resistor series should be connected between signal output of the receiver and signal input pin of the OSD.

When the **RSSI input** is selected to *PPM1* or *PPM1 and PPM2*, you have to connect RSSI from receiver 1 to the aileron input and if *PPM2* is also selected, RSSI from receiver 2 should be connected to the rudder input. This mode does not need calibration and can be used with one or two V8R7SP Frsky receivers specially modified like this, the added part is a standard diode 1N4148:



Figure 4-8 Installing a Diode for RSSI Measurement

When the **RSSI input** is selected to *PWM1* or *PWM1 and PWM2*, you have to connect RSSI from receiver 1 to the aileron input and if *PWM2* is also selected, RSSI from receiver 2 should be connected to the rudder input. This mode needs calibration, this calibration require to set the maximum and minimum RSSI levels by using the menu items Minimum and Maximum RSSI. If *PWM1* is selected, the maximum and minimums will be set for *PWM1* RSSI input only. If *PWM1 and PWM2* is

selected, the maximum and minimums will be set for *PWM2* only, but previous values stored for *PWM1* are kept in the OSD memory.

The way to adjust RSSI minimum and maximum value (if required), is by turning On the transmitter at more or less two meters from the receiver and storing the maximum RSSI value, then take the transmitter to increased distance until the receiver lose the signal switching to fail-safe, store the actual RSSI value as minimum. Configuring OSD Display

These settings are on Main menu pages 2, 3 and 4. Some more display options can be found in Autopilot submenu page 1/3.

4.23 Configuring GPS

Be sure that the **GPS fix update:** is set to **10Hz** (default), if you are using the included 10Hz GPS module.

RVOSD will display "Searching Sats" when there is not any satellite lock reported from GPS and will change to "Setting Home" as soon as it locks on the first satellite.

The RVOSD start the 'Setting Home' timer after GPS HDOP value goes below Set **max HDOP:** value.

-This value sets the minimum GPS signal Horizontal Dilution of Position (HDOP). -Its recommended to set this value to the minimum possible (around 1.00) to have an accurate set of zero altitude and home GPS coordinates,

RVOSD5 – CONFIGURATION

however it can take too long to set home with this value too low. Setting it to 1.30 seems to be the best compromise between accuracy and lower time to set. Keep in mind that this must be done with clear open sky visibility.

4.23.1 GPS Satellite Lock

The first time a GPS tries to get a satellite lock, it's called a cold start.

During a Cold Start the approximate time to get satellite lock is:

- indoors: 5-10 minutes
- outdoors: 3-5 minutes

Sequential satellite locks are called warm starts.

During a Warm Start the approximate time to get satellite lock is:

- Indoors: 3-5 minutes
- Outdoors: 30 seconds- 2 minutes

The coordinates and satellite antenna icon will blink if the GPS still does not have locked on the satellites properly. Also the satellite antenna icon will be oriented to the left if normal fix it's acquired, and oriented to the right if differential fix is acquired (WAAS enabled). Five bars can show the number of satellites locked. Each bar represents the number of satellites plus three, so five bars indicate 8 satellites acquired. GPS coordinates will be shown when the plane goes below the value in degrees set on the Low altitude angle menu item, or the R/C link is lost.

NOTE

If you disconnect the GPS from the RVOSD5 it will lose the almanac information and will perform a cold start the next time it is connected and powered.

4.24 Configuring Current Sensor

Curr sensor type: 100 is default. Don't change it unless you use a different current sensor.

The **Bat capacity** option is used to calculate the scale of graphic mAh drawing.

4.25 Debug Screen

When the menu item "Debug screen" it's set to enable. The screen that is usually blank (no overlay) will display useful information.

- The first parameters: Elevator, Aileron, Throttle and rudder. Display the servo pulse width for every channel input. Those values are in milliseconds, and should change if you move the matching stick in your R/C remote control.
- Pitch, Roll and Abs thermal should display the RAW value of the three matching pair of sensors. This value is scaled down to be from 0 to 256. Every pair of sensors should give the maximum or minimum values when one sensor is pointed to earth and the other to the Zenith. By reversing the sensor orientation you should see the other extreme value. Middle value $((\text{max} + \text{min}) / 2)$ should be around 125-130, and all sensors should have similar maximums and minimums. Make sure to keep your body away from the sensors view when you do this test.

RVOSD5 – CONFIGURATION

-The other useful values are GGA, RMC and VTG. Those values should be 10 for all of them. And the “Buffer” values should be more than 30. This will help to know if your GPS digital communications are working (GPS is not dead or GPS cabling faulty).
-The values “Fix” and “mode” will provide information about the GPS lock status. When Fix is 1 or 2, and mode is autonomous or differential. The GPS is working properly.

4.26 Saving OSD Settings

Changes will be lost on a power reset or OSD reset, unless you **Save configuration**.

4.27 Flying Wing Configuration

RVOSD will make the elevon mixing, so set your R/C controller for normal outputs. Connect Rx elevator output to RVOSD elevator input, and Rx rudder output to RVOSD rudder input. Connect RVOSD rudder output to one elevon and elevator output to the second elevon.

Change the “Airplane type” menu item set to “flying wing”, and make sure rudder and elevator transmitter trims are to 0%. Go to the menu “Set neutrals” and set it.

Go out of the autopilot menu. Now mechanically adjust the elevons to neutral positions.

Make sure that the elevons move both up//down, when you move elevator sticks. If not change the menu item “Flying wing CH1 reverse”.

Adjust with the transmitter the correct rudder and elevator channel direction, so climb//dive and bank left/right are properly executed. At this stage the OSD has strong software limits to the servo throws, so don't increase those on the transmitter. One way to check the real servo throws is by changing “airplane type” back to “normal”, each elevon will become rudder and elevator but, you can check the throws for every channel.

Make sure the “airplane type” is back to “Flying wing”. Remove the propeller! And run the “Start R/C wizard” menu item on, main menu page 1/4.

4.28 Autopilot Tuning

CAUTION

Do not try to adjust the autopilot at a low altitude. You will not have a chance to recover from a bad autopilot response and could lose control of your aircraft.

The most important thing to get the autopilot to work properly is to have an artificial horizon indicator (AHI) that it is also accurate. Within +-40° on the roll axis the AHI should not have an error of more than 5°.

RVOSD5 – CONFIGURATION



Figure 4-9 Current AHI Indicator

The autopilot works in two stages. One stage is stabilization control whose function is to set the desired attitudes for pitch and roll axis. At this stage you can only tune proportional gain, and this is done with the menu items “Stabilization pitch gain” and “Stabilization roll gain”. If the plane attitude control is weak, the autopilot attitude corrections will be slow and you should increase the values for the appropriate axis. If the plane attitude control is too much strong, the autopilot will start to do roll or pitch oscillations, and you should reduce the gain for the offending axis.

This should be all the adjustments you need to do to get a working autopilot. Because the second stage (navigation) should work well enough with the default values for almost all models.

The other stage is navigation control. For heading, it outputs a request for the stabilization control to set the appropriate bank angle to correct the heading toward the desired target. It is

used a PID control that includes the gains:

- Bank limit
- Bank proportional gain
- Bank derivative gain
- Bank integral gain

For altitude, it outputs a request for the stabilization control to set the appropriate pitch angle to correct altitude towards the desired cruise altitude. It is used a PID control that includes the gains:

- Altitude limit
- Altitude proportional gain
- Altitude derivative gain
- Altitude integral gain

Some models, will not correct heading fast enough by just banking, for those you can use “Turn rate gain” the function of turn rate gain is to cancel any pitch request proportionally to the actual bank angle so the plane will not try to pitch down while it is banking, if the gain is increased it will also try to pitch the airplane up proportionally to the bank angle.

Throttle control on the autopilot it's fixed to two values, when the model is above “altitude limit”+“cruise altitude” the throttle control is fixed to the value on the “Set throttle failsafe” menu item, This value should be set so the airplane

RVOSD5 – CONFIGURATION

can gently glide at optimum battery consumption.

Bellow “altitude limit”+”cruise altitude” the throttle control is fixed to the value on the “Set cruise throttle” menu item, this value should be set to allow the airplane to dive and climb using the pitch control.

RVOSD return to home system and autopilot control, works on a separated microcontroller than the OSD display, so if the video signal it's lost, and you have your autopilot configured. Forcing RTH by turning off your transmitter or any other means will make the system to take the plane back to home. Any problem on the video signal will not affect the autopilot

4.29 Stuff You Need to Know!

- Do not move the airplane during the first 30 seconds after turning ON the power or a restart of the OSD.
- The board temperature will stabilize during the first minute after power is turned ON. It is recommended to restart the OSD after temperature is stabilized, 1-2 minutes after Power ON. This helps the inertial unit to have more accuracy, but this step is not mandatory.
- Never Turn OFF the transmitter with the Airplane powered, this could cause the autopilot to turn ON the motor. If you are testing the autopilot/RTH mode, either remove the propeller first or secure the aircraft in a suitable manner.
- Make sure the OSD does detect R/C link lost failure before taking OFF. Also you can test the autopilot by triggering *Level flight* mode. Make sure that when you move the airplane, the OSD autopilot moves the control surfaces to the correct directions to set the plane back to level flight.
- Make sure the AHI is leveled when your plane is leveled. Also, for small corrections you could use the menu item **Set neutral AHI**. To do this, set the airplane to the correct attitude to keep flying leveled, then start the **Set neutral AHI** procedure.
- Always test the autopilot at enough altitude to take manual control back if anything goes wrong.
- Make sure the failsafe value set on your receiver for the auxiliary channel is at neutral (~1.5mS), else screens or autopilot mode could change when RC link is lost and recovered.

RVOSD5 – CONFIGURATION

5 SETUP PROCEDURE

5.1 Basic Setup

The following steps will guide you through the common steps to install the RVOSD in your aircraft and prepare it for its first flight. This procedure assumes that these steps and the initial flights are performed by an experienced r/c pilot who is also familiar with the aircraft that will be used. It is also assumed that the aircraft is already constructed and safe for flight.

- 1- Make sure the propeller and motor are balanced.
- 2- It is recommended that orientation of the OSD on the plane is so that the USB connector on the top OSD board, will face the front of the airplane, and the graphic board (smaller OSD board) face the top of the airplane. If your installation requires the RVOSD5 be installed in a different orientation you will have to re-configure the menu items **Board roll orientation (AP 2/3)** and/or **AHI pitch dir (AP 2/3)**.

It is very important for RVOSD inertial unit to be isolated from extreme vibrations from the motor and propeller of the plane. The OSD can display a special screen that will show how much vibration is on the system. To activate this screen go to the **Debug screen (Main 2/4)** menu item, and set it to **Raw data**. After this the OSD will show some debug information on the screen that it is usually blank. The debug

information does include a vibration level indicator for every axis. The goal is to keep the bar indicators under the maximum at any throttle level.

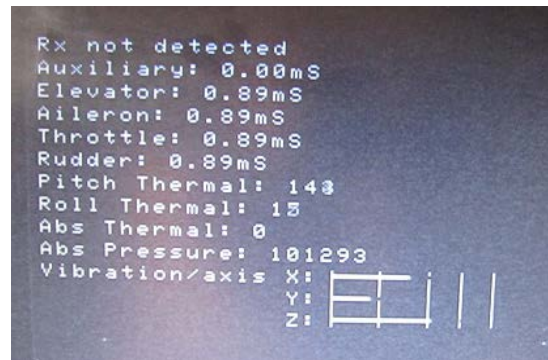


Figure 5-1 Vibration Level Indicator

CAUTION

It is very important to understand that the Artificial horizon indicator (AHI) does show the attitude estimation used by the autopilot. A wrong estimation will cause the autopilot to fail. Testing that the AHI does follow the real horizon as close as possible is the best indicator that the autopilot is going to work properly.

- 3- Connect the current sensor to the OSD.

NOTE

The inertial unit will be initializing. Keep RVOSD board quiet during the first 30 seconds after power ON.

RVOSD5 – CONFIGURATION

- 4- Set the R/C receiver connected (Main 4/4) menu item to Yes.

WARNING

Prior to continuing, remove the propeller from the motor.

- 5- Connect GPS and all inputs to RVOSD:

RVOSD defaults to "regular" inputs. This means each channel of the receiver has to be connected to separate input channels on RVOSD. If you want to use a PPM ready receiver you can use the "PPM configuration" explanation, otherwise configure inputs and outputs like this:

For regular airplane with rudder, elevator, throttle and aileron:

Rx auxiliary output ----> OSD auxiliary input

Rx Elevator output ----> OSD elevator input/output ----> Elevator servo

Rx Aileron output ----> OSD aileron input/output ----> Aileron servo

Rx Throttle output ----> OSD throttle input/output ----> Throttle servo

Rx Rudder output ----> OSD rudder input/output ----> Rudder servo

For flying wing:

The OSD will perform the elevon mixing. Disable elevon mixing on your transmitter.

Rx auxiliary output ----> OSD auxiliary input

Rx Elevator output ----> OSD elevator input/output ----> Elevon1

Rx Aileron output ----> OSD aileron input/output ----> Elevon2

Rx Throttle output ----> OSD throttle input/output ----> ESC

Make sure the Elevons move to the appropriate directions when you move the elevator and aileron sticks, otherwise reverse the directions on the transmitter. If after this you still can't set directions to work you could try to reverse the setting of the OSD menu item **Elevon-aileron CH1(Main menu page 4/4)** and try again. You may also try swapping the two servo connections on the RVOSD.

For regular airplane with differential ailerons:

Rx auxiliary output ----> OSD auxiliary input

Rx Elevator output ----> OSD elevator input/output ----> Elevator servo

Rx Aileron1 output ----> OSD aileron input/output ----> Aileron1 servo

RVOSD5 – CONFIGURATION

Rx Throttle output ----> OSD throttle
input/output ----> ESC

Rx Aileron2 ----> OSD rudder
input/output ----> Aileron2 servo

NOTE

If configuring with differential ailerons you have to connect the rudder of your airplane direct to the receiver, thus you have to set the failsafe setting on your receiver to neutral trims so the failsafe setting does not cause undesired turning in the event of a loss of command link.

- 6- Start the R/C Wizard. Make sure to follow all instructions. If you miss any step, just finish the wizard and start again.
- 7- Set the throttle stick position to maximum, set transmitter End point to 110%
- 8- Store the throttle stick position on the menu item **Set throttle FS detect**.
- 9- Set the transmitter End point to 120%
- 10-Set Failsafe for your receiver outputs
- 11-Set transmitter end point back to 100%
- 12-Set OSD fail-safe's on the menu item **Set failsafe**.
- 13-Menu item **Enable autopilot** to Yes-RTH

14-Change current sensor type if needed, menu item **Curr sensor type**.

15-Change battery capacity if needed, menu item **Set batt capacity**.

16-Enter **in-flight menu** (Autopilot menu), Set neutrals. This should be done after your plane is trimmed. Else make sure this setting is the closest possible to the neutral flight positions.

5.2 PPM Receiver Setup

5.2.1 Primary PPM Receiver

- 1- Connect the PPM receiver to the elevator input of the OSD.
- 2- Set the Rx input type (Main 4/4) menu item to combined PPM.
- 3- Enter the PPM configuration (Main 4/4) sub-menu.
- 4- Make sure the Configure/display menu item is set to PPM1.
- 5- While you move/toggle the transmitter controls watch the channel that changes the value in milliseconds (mS). Assign this channel to the corresponding OSD input. Repeat this for Elevator, Aileron, throttle, rudder and auxiliary channels.

After all is done exit the menu.

5.2.2 Secondary PPM Receiver

Connect the second PPM receiver to the throttle input channel of the OSD.

RVOSD5 – CONFIGURATION

Repeat the PPM configuration procedure but this time selecting the **Configure/display** menu item is set to PPM2.

While the **Configure/display** menu item is set to PPM2 the OSD will check for valid input on PPM1, if this channels enter failsafe (it has to be configured to detect it) then will switch to PPM2, if this enter failsafe also then the OSD will switch to return to home until signal is detected on either PPM1 or PPM2 inputs. The F16 screen will display the receiver input selected at every moment.

The second PPM input should be connected and configured only after PPM1 input is configured and the autopilot is perfectly working and configured, else the setting the detection of R/C link lost will not work.

If you are not sure of what are you doing make sure to keep the **Configure/display** menu item set to PPM1.

RVOSD5 – UPDATING THE FIRMWARE

6 UPDATING THE FIRMWARE

The RVOSD is has two microprocessors, and each one has its own firmware.

The main board processor handles the calculations and the graphic board processor does the video overlay.

Small bugs are usually addressed with a main board patch. Big updates, like a new generation update, requires updates to the graphic board + main board.

Download FW updates on www.rvosd.rangevideo.com or www.rangevideo.com

How to update main board FW :

You will need the PICkit 2 programmer to perform the update.

1. Install PICkit 2 software from microchip:

<http://ww1.microchip.com/download/en/DeviceDoc/PICkit%20%20v2.61.00%20Setup%20A.zip>

2. Connect the PICkit 2 to a USB port.
3. Remove power from your RVOSD and connect the PICkit 2 programmer as shown below. The white arrow on the PICkit 2 indicates pin 1. This pin matches the square on the RVOSD:



4. Open the PICkit 2 PC software and choose device family > dsPIC33



5. Go to File > import HEX file , (find the hex file you downloaded) Click > Write



RVOSD5 – UPDATING THE FIRMWARE

6. Keep the RVOSD connected to the PICkit 2. After the programmer is finished you will see this screen:

You are finished. You may disconnect the PICKit 2 from the RVOSD.

NOTE

Updating the main board will reset all settings back to defaults.



RVOSD5 – LIST OF ACRONYMS

7 APPENDIX A: LIST OF ACRONYMS

AHI	Artificial Horizon Indicator	OSD	On Screen Display
CG	Center of Gravity	RVOSD5	Range Video OSD
CH	Channel	R/C	Radio Control
FPV	First Person View	RPM	Rotations per Minute
GCS	Ground Control Station	RSSI	RX Signal Strength Indication
		RTB	Return to Base
HDOP	Horizontal Dilution of Position	RX	Receiver
IAS	Indicated Airspeed	TX	Transmitter
kts	Knots	VAC	Volts Alternating Current
		VDC	Volts Direct Current
m	Meter		
m/sec	Meters per Second		

RVOSD5 – JUMPER SETTINGS

8 APPENDIX B: RVOSD5 JUMPER SETTINGS

Main Batter = Enabled Camera = 12V Video TX = 12V	
Main Batter = Disabled Camera = 12V Video TX = 12V	
Main Batter = Enabled Camera = 5V Video TX = 12V	
Main Batter = Enabled Camera = 12V Video TX = 5V	
Main Batter = Enabled Camera = 5V Video TX = 5V	