# **Thunderbolt Product**

## ARC-8050

(Thunderbolt to 6Gb/s SAS RAID Storage)

# User Manual

Version: 1.1 Issue Date: April, 2013

### **Copyright and Trademarks**

The information of the products in this manual is subject to change without prior notice and does not represent a commitment on the part of the vendor, who assumes no liability or responsibility for any errors that may appear in this manual. All brands and trademarks are the properties of their respective owners. This manual contains materials protected under International Copyright Conventions. All rights reserved. No part of this manual may be reproduced in any form or by any means, electronic or mechanical, including photocopying, without the written permission of the manufacturer and the author.

#### **FCC Statement**

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

#### Manufacturer's Declaration for CE Certification

We confirm ARC-8050 has been tested and found comply with the requirements set up in the council directive on the approximation of the low of member state relating to the EMC Directive2004/108/EC. For the evaluation regarding to the electromagnetic compatibility, the following standards where applied:

EN 55022: 2006, Class B EN 61000-3-2: 2006 EN 61000-3-3: 1995+A1: 2001+A2: 2005 EN 55024:1998+A1:2001=A2:2003 IEC61000-4-2: 2001 IEC61000-4-3: 2006 IEC61000-4-4: 2004 IEC61000-4-5: 2005 IEC61000-4-6: 2006 IEC61000-4-8: 2001 IEC61000-4-11: 2004

# Contents

1.	Introduction	8
	1.1 Overview	
2.	Installation	
	2.1 Before You First Installing	
	2.2 RAID Storage View	
	2.3 Locations of the Storage Component	. 14
	2.3.1 Drive Tray LED Indicators	. 14
	2.3.2 LCD Panel LED Indicators	
	2.3.3 Thunderbolt Port LED Indicators	
	2.4 Setting Up RAID Storage	
	2.4.1 Software Installation	
	2.4.2 Hardware Installation	
	2.4.3 Volume Setup	
	2.4.3.1 Configure Volume Set	. 25
	2.4.3.2 Making Volume Sets Available to System	
	2.4.4 Unmounting the Storage Volume	
	<ul><li>2.5 Summary of the Installation</li><li>2.6 Hot-plug Drive Replacement</li></ul>	
	2.6.1 Recognizing a Drive Failure	
	2.6.2 Replacing a Failed Drive	
2	ArcHTTP Configuration	
	Web Browser-based Configuration	
4.	4.1 Start-up McRAID Storage Manager	
	Start-up McRAID Storage Manager from Local Administration	
	(In-of-Band)	
	4.2 RAID storage McRAID Storage Manager	39
	4.3 Main Menu	
	4.4 Quick Function	
	4.5 Raid Set Functions	
	4.5.1 Create Raid Set	
	4.5.2 Delete Raid Set	
	4.5.3 Expand Raid Set	. 43
	4.5.4 Offline Raid Set	
	4.5.5 Rename Raid Set	
	4.5.6 Activate Incomplete Raid Set	
	4.5.7 Create Hot Spare	
	4.5.8 Delete Hot Spare	. 46

4.5.9 Rescue Raid Set	46
4.6 Volume Set Functions	47
4.6.1 Create Volume Set (0/1/10/3/5/6)	47
Volume Name	
Volume Raid Level	
• Capacity	
Greater Two TB Volume Support	48
Initialization Mode	49
• Stripe Size	49
• Cache Mode	49
Tagged Command Queuing	50
SCSI Channel/SCSI ID/SCSI Lun	51
4.6.2 Create Raid30/50/60 (Volume Set 30/50/60)	51
4.6.3 Delete Volume Set	52
4.6.4 Modify Volume Set	52
4.6.4.1 Volume Growth	
4.6.4.2 Volume Set Migration	54
4.6.5 Check Volume Set	54
4.6.6 Schedule Volume Check	55
6.6.8 Download Volume Key File	56
4.7 Physical Drive	56
4.7.1 Create Pass-Through Disk	
4.7.2 Modify Pass-Through Disk	
4.7.3 Delete Pass-Through Disk	
6.7.4 Clone Disk	
6.7.4.1 Clone And Replace	
6.7.4.2 Clone Only	
6.7.5 Abort Cloning	
4.7.6 Set Disk To Be Failed	
4.7.7 Activate Failed Disk	
4.7.8 Identify Enclosure	
4.7.9 Identify Drive	
4.8 System Controls	
4.8.1 System Config	
System Beeper Setting	
Background Task Priority	
JBOD/RAID Configuration	62
SATA NCQ Support	
HDD Read Ahead Cache	
Volume Data Read Ahead	
HDD Queue Depth	
Empty HDD Slot LED	63

Max Command Length	63
Auto Activate Incomplete Raid	63
Disk Write Cache Mode	
Write Same For Initialization	63
Hot Plugged Disk For Rebuilding	
Disk Capacity Truncation Mode	
Smart Option For HDD	
Smart Polling Interval	
4.8.2 Advanced Configuration	65
• TLER Setting	
Timeout Setting	
Number of Retries	
Buffer Threshold	
Amount of Read Ahead	66
Number of AV Stream	
Optimize AV Recording	
Read Performance Margin	
Write Performance Margin	
Read And Discard Parity Data	
4.8.3 HDD Power Management	
Stagger Power On Control	
• Time to Hdd Low Power Idle	
• Time To Hdd Low RPM Mode	
SATA Power Up In Standby	70
4.8.4 Ethernet Configuration	70
DHCP Function	71
Local IP address	71
Gateway IP address	71
Subnet Mask	71
HTTP Port Number	71
Telnet Port Number	72
SMTP Port Number	
4.8.5 Alert By Mail Configuration	72
4.8.6 SNMP Configuration	
4.8.7 NTP Configuration	73
NTP Sever Address	73
• Time Zone	74
Automatic Daylight Saving	
4.8.8 View Events/Mute Beeper	
4.8.9 Generate Test Event	
4.8.10 Clear Events Buffer	
4.8.11 Modify Password	75

4.8.12 Update Firmware	76
4.9 Information	76
4.9.1 Raid Set Hierarchy	76
4.9.2 SAS Chip Information	77
4.9.3 System Information	77
4.9.4 Hardware Monitor	
Appendix A	79
Upgrading Flash ROM Update Process	
Appendix B	82
Battery Backup Module (ARC-6120BAT021)	82
B-1 BBM Connector and Components	
B-2 Status of BBM	
B-3 Installation	
Appendix C	86
SNMP Operation & Installation	
Appendix D	91
Event Notification Configurations	91
A. Device Event	91
B. Volume Event	
C. RAID Set Event	93
D. Hardware Monitor Event	93
Appendix E	95
RAID Concept	95
RAID Set	
Volume Set	
	95
Volume Set	95 96
Volume Set Ease of Use Features • Foreground Availability/Background Initialization	95 96 96
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion	95 96 96 96 96
Volume Set Ease of Use Features • Foreground Availability/Background Initialization	95 96 96 96 96
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion	95 96 96 96 96 98
<ul> <li>Volume Set</li> <li>Ease of Use Features</li> <li>Foreground Availability/Background Initialization</li> <li>Online Array Roaming</li> <li>Online Capacity Expansion</li> <li>Online RAID Level and Stripe Size Migration</li> <li>Online Volume Expansion</li> <li>High Availability</li> </ul>	95 96 96 96 96 98 99 99
<ul> <li>Volume Set</li> <li>Ease of Use Features</li> <li>Foreground Availability/Background Initialization</li> <li>Online Array Roaming</li> <li>Online Capacity Expansion</li> <li>Online RAID Level and Stripe Size Migration</li> <li>Online Volume Expansion</li> <li>High Availability</li> <li>Global/Local Hot Spares</li> </ul>	95 96 96 96 96 98 99 99 99
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion • Online RAID Level and Stripe Size Migration • Online Volume Expansion High Availability • Global/Local Hot Spares • Hot-Swap Disk Drive Support	95 96 96 96 96 98 99 99 99 99 . 100
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion • Online RAID Level and Stripe Size Migration • Online Volume Expansion High Availability • Global/Local Hot Spares • Hot-Swap Disk Drive Support • Auto Declare Hot-Spare	95 96 96 96 96 98 99 99 99 99 . 100 . 100
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion • Online RAID Level and Stripe Size Migration • Online Volume Expansion High Availability • Global/Local Hot Spares • Hot-Swap Disk Drive Support • Auto Declare Hot-Spare • Auto Rebuilding	95 96 96 96 96 98 99 99 99 . 100 . 100 . 101
<ul> <li>Volume Set</li> <li>Ease of Use Features</li> <li>Foreground Availability/Background Initialization</li> <li>Online Array Roaming</li> <li>Online Capacity Expansion</li> <li>Online RAID Level and Stripe Size Migration</li> <li>Online Volume Expansion</li> <li>High Availability</li> <li>Global/Local Hot Spares</li> <li>Hot-Swap Disk Drive Support</li> <li>Auto Declare Hot-Spare</li> <li>Auto Rebuilding</li> <li>Adjustable Rebuild Priority</li> </ul>	95 96 96 96 98 99 99 99 . 100 . 100 . 101 . 101
<ul> <li>Volume Set</li> <li>Ease of Use Features</li> <li>Foreground Availability/Background Initialization</li> <li>Online Array Roaming</li> <li>Online Capacity Expansion</li> <li>Online RAID Level and Stripe Size Migration</li> <li>Online Volume Expansion</li> <li>Online Volume Expansion</li> <li>High Availability</li> <li>Global/Local Hot Spares</li> <li>Hot-Swap Disk Drive Support</li> <li>Auto Declare Hot-Spare</li> <li>Auto Rebuilding</li> <li>Adjustable Rebuild Priority</li> </ul>	95 96 96 96 98 99 99 99 . 100 . 100 . 101 . 101 . 102
Volume Set Ease of Use Features • Foreground Availability/Background Initialization • Online Array Roaming • Online Capacity Expansion • Online RAID Level and Stripe Size Migration • Online Volume Expansion High Availability • Global/Local Hot Spares • Hot-Swap Disk Drive Support • Auto Declare Hot-Spare • Auto Rebuilding • Adjustable Rebuild Priority High Reliability	95 96 96 96 98 99 99 99 99 . 100 . 101 . 101 . 101 . 102 . 102
<ul> <li>Volume Set</li> <li>Ease of Use Features</li> <li>Foreground Availability/Background Initialization</li> <li>Online Array Roaming</li> <li>Online Capacity Expansion</li> <li>Online RAID Level and Stripe Size Migration</li> <li>Online Volume Expansion</li> <li>Online Volume Expansion</li> <li>High Availability</li> <li>Global/Local Hot Spares</li> <li>Hot-Swap Disk Drive Support</li> <li>Auto Declare Hot-Spare</li> <li>Auto Rebuilding</li> <li>Adjustable Rebuild Priority</li> </ul>	95 96 96 96 98 99 99 99 99 . 100 . 101 . 101 . 101 . 102 . 102 . 102

Data Protection	103
Battery Backup	103
Recovery ROM	
Appendix F	
Understanding RAID	
RAID 0	105
RAID 1	106
RAID 10(1E)	107
RAID 3	107
RAID 5	
RAID 6	
RAID x0	
Single Disk (Pass-Through Disk)	
Summary of RAID Levels	

## **1. Introduction**

This section presents a brief overview of the 6Gb/s SAS RAID storage, ARC-8050. (Thunderbolt to 6Gb/s SAS RAID storage)

### **1.1 Overview**

Thunderbolt technology is a revolutionary high-speed, dual protocol I/O technology designed for performance, simplicity and flexibility. Thunderbolt I/O technology lets you move data between high-resolution displays and high-performance data devices on a single, compact port. Both data and display signals can be sent and received at the same time through dual 10Gbps channels. A single cable attached to one of the ports provides 2 channels able to achieve the 10Gbps speeds flowing both ways simultaneously. A single Thunderbolt port supports hubs as well as a daisy chain of up to seven Thunderbolt devices. To improve bandwidth transmission, Thunderbolt has implemented two duplex (PCIe and Display-Port) channels into the controller and each channel can provide full bi-directional performance.

#### **Unparalleled Performance**

ARC-8050 is 8-bay 6Gb/s SAS Thunderbolt box with RAID control capabilities solution for both PC and Mac. Thunderbolt host interface make ARC-8050 RAID box well suited for SOHO group professional who work at home and or in the office. Thunderbolt technology developed for high speed data transfer at the speed of 10Gbps per channel. Thunderbolt port is shared by multiple devices and can transfer data equally distribute to all connected devices. ARC-8050 incorporated on-board high performance dual core 800Mhz ROC storage processor and with 1GB DDR3-1333 SDRAM memory on-board to deliver true high performance hardware RAID for the demands of serious HD media creators needs. For example, the benefit for video editor by using ARC-8050 to unleash their professional creativity work in real-time, with the high-bandwidth allow large amount of audio and video capture/mixing devices transferred faster with low latency and high-accurate synchronization at 10Gbps. Data can be backed up and restored more quickly, so there's less waiting for achieved content to transfer or copy.

### **Unsurpassed Data Availability**

Designed and leveraged with Areca's existing high performance solution, the RAID storage delivers high-capacity at the best of cost performance value. It supports the hardware RAID 6 engine to allow two HDDs failures without impact the existing data and performance. Its high data availability and protection derives from the many advance RAID features. ARC-8050 Thunderbolt RAID storage allows easy scalability from JBOD to RAID. It can be configured to RAID levels 0, 1, 1E, 3, 5, 6, 10, 30, 50, 60, Single Disk for JBOD. With innovative new ROC 6Gb/s SAS feature and support for SATA, SAS and SSDs, the ARC-8050 provides powerful small-workgroup server, power users and consumers with superior levels performance and enterprise level data protection for external storage. The world today, large amounts of arrays data needs by the Professional content creation application for - video editing, capturing or transferring video, managing 3D graphics design, producing video presentations and regularly data backup. ARC-8050 Thunderbolt RAID storage is the best solution.

#### **Easy RAID Management**

Configuration and monitoring can be managed either through the LCD control panel, Archttp utility or Ethernet port. Firmware-embedded web browser-based RAID manager allows local or remote to access it from any standard internet browser via a out-of-band 10/100Mbits LAN port or in-band Archttp utility. ARC-8050 Thunderbolt RAID storage also provides API library for customer to combine with its own monitor utility. The intelligent cooling continuously adapts to environmental conditions by automatically controlling the speed of the cooling fans. This super silent design, optimizing balance between noise reduction and necessary cooling, makes ARC-8050 well suited for audio/video application especially the rapidly growing demand from the video editing markets.

### **1.2 Features**

#### **Controller Architecture**

- 800MHz Dual Core ROC processor
- 1GB on-board DDR3-1333 SDRAM with ECC protection
- Write-through or write-back cache support
- Support 8 internal 6Gb/s SAS ports
- Multi-RAID storage support for large storage requirements
- Support EFI BIOS for bootable from RAID storage volume
- NVRAM for RAID event & transaction log
- Redundant flash image for controller availability
- Battery Backup Module (BBM) ready (Option)

#### **RAID Features**

- RAID level 0, 1, 10(1E), 3, 5, 6, 30, 50, 60, Single Disk or JBOD
- Multiple RAID selection
- Online array roaming
- Offline RAID set
- Online RAID level/stripe size migration
- Online capacity expansion and RAID level migration simultaneously
- Online volume set growth
- Instant availability and background initialization
- Support global and dedicated hot spare
- Automatic drive insertion/removal detection and rebuilding
- Greater than 2TB capacity per disk drive support
- Greater than 2TB per volume set (64-bit LBA support)
- Support intelligent power management to save energy and extend service life
- Support NTP protocol synchronize RAID controller clock over the onboard LAN port

#### Monitors/Notification

- System status indication through individual activity/fault LED, LCD panel and alarm buzzer
- SMTP support for email notification
- SNMP support for remote manager
- Enclosure management ready

#### **Drive Support**

• Up to 8 x 6Gb/s SAS/SATA/SSD

#### Host Connection

- Two Thunderbolt technology ports
- Simultaneous bi-directional, 10Gbps transfers over a single cable
- Dual-protocol support (PCI Express and DisplayPort)
- Compatible with existing DisplayPort devices
- Daisy-chaining devices

#### **RAID Management**

• Field-upgradeable firmware in flash ROM

#### In-Band Manager

- Firmware-embedded web browser-based McRAID storage manager, SMTP manager, SNMP agent and Telnet function via ArcHttp proxy server for all operating systems
- Support Command Line Interface (CLI)
- API library for customer to write monitor utility

#### **Out-of-Band Manager**

- Firmware-embedded web browser-based McRAID storage manager, SMTP manager, SNMP agent and Telnet function via onboard LAN port
- API library for customer to write monitor utility
- Support push button and LCD display panel

#### **Operating System**

- Mac OS X 10.6.x/10.7.x/10.8.x
- Windows 7/8

(For latest supported driver version visit http://www.areca.com.tw)

#### **Mechanical Specifications**

<ul> <li>Form Factor:</li> </ul>	Compact – 8 Disk Compact Tower
• Operation temperature:	0° ~ 40°C
<ul> <li>Operation humidity:</li> </ul>	5 ~ 95 %, Non-condensing
<ul> <li>Cooling Fan:</li> </ul>	2 x 2700rpm/0.135A Brushless Fan
<ul> <li>Power Supply/In/out:</li> </ul>	270W / 90-256V AC / +12V/26A,
	+5V/18A, +3.3V/16A
• Dimension (W x H x D):	146 x 302 x 290 mm
	(5.7 x11.8 x 11.4 in)
<ul> <li>Weight (Without Disk):</li> </ul>	14.9 lbs / 6.8Kg

## 2. Installation

This section describes how to install the ARC-8050 Thunderbolt RAID storage with host computer and disks.

### 2.1 Before You First Installing

Thanks for purchasing the ARC-8050 as your RAID data storage. The following manual gives simple step-by-step instructions for installing and configuring the ARC-8050 RAID storage.

#### Unpack

Unpack and install the hardware in a static-free environment. ARC-8050 RAID storage is packed inside an anti-static bag between two sponge sheets. Remove it and inspect it for damage. If the ARC-8050 RAID storage appears damaged, or if any items of the contents listed below are missing or damaged, please contact your dealer or distributor immediately.

#### Checklist

- 1 x ARC-8050 8-bays RAID storage unit
- 1 x Installation CD containing driver, relative software, an electronic version of this manual and other related manual
- 1 x RJ-45 LAN cable
- 1 x Power cord
- 32 x Drive mounting screws (4 per drive tray)
- 1 x Quick start guide

#### **System Requirements**

- Computer with Thunderbolt<sup>™</sup> connector
- Mac OS X 10.6.8 or higher
- Windows 7&8

"For Windows PC: the Thunderbolt<sup>™</sup> certified device driver must be installed before plugging in the device for it to function properly"

• Thunderbolt<sup>™</sup> cable (included)

### 2.2 RAID Storage View

The following diagram is the RAID storage front view and rear view.



Front View	Rear View
1. Disk Activity LED 2. Disk Fault/Link LED 3. LCD Panel with Keypad	<ul> <li>4. Thunderbolt Port1</li> <li>5. Thunderbolt Port2</li> <li>6. Thunderbolt Port1 Link LED</li> <li>7. Thunderbolt Port2 Link LED</li> <li>8. System Fan1</li> <li>9. LAN Port (For McRAID Web Manager)</li> <li>10. Reset Button</li> <li>11. System Fan2</li> <li>12. Power Connector</li> <li>13. Power Supply Fan</li> </ul>

### 2.3 Locations of the Storage Component

The following components come with LEDs that inform ARC-8050 RAID storage managers about the operational status.

#### **2.3.1** Drive Tray LED Indicators



Figure 2-1, Activity/Fault LED for ARC-8050 RAID Storage

The following table describes the RAID storage disk drive tray LED behavior.

Tray LED	Normal Status	Problem Indication
1. Activity LED (Blue)	When the activity LED is illumi- nated, there is I/O activity on that disk drive. When the LED is dark; there is no activity on that disk drive.	N/A
2. Fault/Link LED (Red/ Green)	When the fault LED is solid illuminated, there is no disk present. When the link LED is solid illuminated, there is a disk present.	When the fault LED is off, that disk is present and sta- tus is normal. When the fault LED is slow blinking (2 times/sec.), that disk drive has failed and should be hot-swapped im- mediately. When the activ- ity LED is illuminated and fault LED is fast blinking (10 times/sec.) there is rebuild- ing activity on that disk drive.

#### 2.3.2 LCD Panel LED Indicators

There are a variety of status conditions that cause the RAID storage panel monitoring LED to light. The front panel LCD comes with three (3) status-indicating LEDs. The LEDs on the front panel are defined, from top to bottom, Power, Busy, and Caution, as shown in Figure 2-2.



Figure 2-2, LCD Panel LED for ARC-8050 RAID Storage

The following table provides a summary of the front panel LED.

Panel LED	Normal Status	Problem Indication
1. Power LED (Green)	Solid green, when power on	Unlit, when power on
2. Busy LED (Amber)	Blinking amber during host ac- cesses RAID storage	Unlit or never flicker
3. Caution LED (Red)	Unlit indicates that the RAID storage and all its components are operating correctly.	Solid indicates that one or more component failure/Ur-gent events have occurred.

#### 2.3.3 Thunderbolt Port LED Indicators



Figure 2-3, Thunderbolt ports LED for ARC-8050 RAID storage

The following table describes the ARC-8050 SAS RAID storage Thunderbolt port link LED behavior.

Thunderbolt Ports Link LED	Status
Link LED (Green light)	<ol> <li>Solid illuminated that indicates RAID storage powered up and maintained the daisy chain with other Thunderbolt devices.</li> <li>Fast blinking (5 times/sec) that indicates RAID storage in sleep mode.</li> <li>Slow blinking (1 times/sec) that indicates RAID storage powered down and maintained the daisy chain with other Thunderbolt devices.</li> </ol>
Link LED (Amber light)	There is a proper DisplayPort connection on that Thun- derbolt port.
Link LED (Red light)	There is a proper DisplayPort to DVI connection on that Thunderbolt port.

### 2.4 Setting Up RAID Storage

Follow the instructions below to install ARC-8050 Thunderbolt to 6Gb/s SAS RAID storage.

#### 2.4.1 Software Installation

To install the ARC-8050 driver and software into the existing operating system. Driver is required for the operating system to be able to interact with the ARC-8050 RAID storage. Windows users must firstly install drivers on their computer in order to use the Thunderbolt connection. You can click the **"For Windows, Install Driver First" on the http://www.areca.com.tw/ proucts/thunderbolt.htm** web link to driver and set up instructions for Windows.

ArcHTTP has to be installed for GUI RAID console (McRAID storage manager) to run. ArcHttp proxy server is used to launch the web-browser McRAID storage manager. McRAID storage manager provides all of the creation, management and monitor ARC-8050 RAID storage status.

This chapter describes how to install the ARC-8050 RAID storage software to your operating system. The software installation includes device driver, ArcHTTP and CLI.

#### For PC Thunderbolt compatible system:

In this scenario, you are installing the RAID storage in an existing Windows system. This section describes detailed instructions for installing the Windows driver & utility for the ARC-8050. You can use the installer to install driver & Archttp at once or "Custom" to install special components.

To follow the following process to install driver & utility on Windows as below:

1. Insert the ARC-8050 software CD in the CD-ROM drive or download installer from http://www.areca.com.tw/support/s\_thunderbolt/thunderbolt.htm and unzip the file.

2. Run the setup.exe file that resides at: <CD-ROM>PACKAGES $\setminus$ Windows on CD-ROM or from the website to launch the installer.



3. The screen shows "Preparing to Install".

4. Follow the installer on-screen steps, responding as needed, to complete the driver, ArcHTTP and CLI utility installation.

• **Driver** is required for the operating system to be able to interact with the Areca RAID controller.

• **ArcHTTP** has to be installed for GUI RAID console (MRAID storage manager) to run. It also runs as a service or daemon in the background that allows capturing of events for mail and SNMP traps notification. Refer to the chapter 3 Archttp Configuration on ARC-8050 user manual, for details about the mail and SNMP traps configuration.

• **CLI (Command Line Interface)** lets you set up and manage RAID controller through a command line interface. Arc-cli per forms many tasks at the command line. You can download arc-cli manual from Areca website or software CD <CDROM>\ DOCS directory.



5. When you reach the installation page, click the "Install" button. A program bar appears that measures the progress of the driver installation. When this screen completes, you have completed the driver installation.

Installing	InstallShield Wizard MRAID gram features you selected a	are being installed.		
1 <del>7</del>	Please wait while the Insta several minutes. Status:	allShield Wizard Installs	MRAID. This may	take
InstallShield -		< Back	<u>N</u> ext >	Cancel

6. Normally ArcHTTP and CLI are installed at the same time on ARC-8050. Once ArcHTTP and CLI have been installed, the archttp background task automatically starts each time when you start your computer. There is one MRAID icon showing on your "Pro grams" folder. This icon is for you to start up the McRAID storage manager (by ArcHTTP) and CLI utility.

#### Note:

"For Windows, Install Driver First"

For Windows PC: the Thunderbolt<sup>m</sup> certified device driver must be installed before plugging in the device for it to function properly.

#### For Mac Thunderbolt capable system:

This section describes detailed instructions for installing the Areca Mac driver & utility for the ARC-8050 on your Apple Thunderbolt capable machine. You must have administrative level permissions to install Areca Mac driver & utility. You can use the installer to install Areca Mac driver & utility (MRAID) at once or "Custom" to install special components. To follow the following process to install driver & utility on Apple Mac Pro as below:

1. Insert the Areca Mac Driver & Software CD that came with your ARC-8050 storage unit.

2. Double-click on the "install\_mraid.zip" file that resides at <CD-ROM>\packages\MacOS to add the installer on the Finder.

3. Launch the installer by double-clicking the install\_mraid on the Finder.

4. Follow the installer on-screen steps, responding as needed, to complete the Areca driver and MRAID (ArcHTTP and CLI utility) installation.



• **Driver** is required for the operating system to be able to interact with the Areca RAID controller.

• **ArcHTTP** has to be installed for GUI RAID console (MRAID storage manager) to run. It also runs as a service or daemon in the background that allows capturing of events for mail and SNMP traps notification. Refer to the Chapter 5 Archttp Configuration on ARC-8050 user manual, for details about the mail and SNMP traps configuration.

• **CLI (Command Line Interface)** lets you set up and manage RAID controller through a command line interface. Arc-cli per forms many tasks at the command line. You can download arc-cli manual from Areca website or software CD <CDROM>\ DOCS directory.

5. When you reach the installation page, click the "Install" button. A program bar appears that measures the progress of the driver installation. When this screen completes, you have completed the driver installation.

6. A reboot is required to complete the installation (This will start the ArcHTTP so RAID Console can be used).

7. Normally archttp64 and arc\_cli are installed at the same time on ARC-8050. Once archttp and arc\_cli have been installed, the archttp background task automatically starts each time when you start your computer. There is one MRAID icon showing on your desktop. This icon is for you to start up the McRAID storage manager (by archttp) and arc\_cli utility.

#### 2.4.2 Hardware Installation

Please follow the steps below in order they are given to sesure that your ARC-8050 conndected on your Thunderbolt computer.

#### Step 1. Install the Drives in the ARC-8050 RAID Storage

1. Gently slide the drive tray out from the ARC-8050 RAID storage.

2. Install the drive into the drive tray and secure the drive to the drive tray by four of the mounting screws.



Figure 2-4, Secure the drive to the drive tray

3. After all drives are in the drive tray, slide all of them back into the ARC-8050 RAID storage and make sure you latch the drive trays.



Figure 2-5, Slide drive tray back into the ARC-8050 RAID storage

#### **Step 2. Connecting RAID Storage to Thunderbolt Ports**

Thunderbolt connectors are provided on the back of the ARC-8050 RAID storage for connecting the array to Thunderbolt host and next Thunderbolt devices. There are two Thunderbolt connectors on the rear of ARC-8050 RAID storage. You can plug-in two host ports.

1. Direct connection to a Thunderbolt technology capable computer.

2. Daisy chaining Thunderbolt capable devices and displays.

#### • Thunderbolt Computer Port Connection

By installing Thunderbolt technology capable computer and ARC-8050 Thunderbolt port using the Thunderbolt cable which is

included in your Thunderbolt capable computer. Then connect ARC-8050 RAID storage and Thunderbolt technology capable computer port as shown below:



Figure 2-6, Connect ARC-8050 RAID storage and Thunderbolt computer

#### • Daisy Chain Topologies

A single Thunderbolt technology daisy chain can have seven devices, including the computer. Connect the cable to one of the interface ports on the back of your ARC-8050 RAID storage and to your Thunderbolt capable computer. The additional port may be used to daisy chain compatible computer peripherals, such as hard drives, monitors, and much more. A single Thunderbolt port supports hubs as well as a daisy chain of up to seven Thunderbolt devices on, including the Thunderbolt capable computer.



Figure 2-7, Thunderbolt computer daisy chain

#### Step 3. Connecting Monitor Port

ARC-8050 RAID storage is normally delivered with LCD preinstalled. You can connect LAN port to the manager clinet system, if you want to configure and manage the RAID storage from the clinet system through out-of-band manager.

#### • LAN Port Connection

ARC-8050 RAID storage has embedded the TCP/IP & web browser-based RAID manager in the firmware (method 1). User can remote manage the RAID enclosure without adding any user specific software (platform independent) via standard web browsers directly connected to the 10/100Mbit RJ45 LAN port. Connect LAN port of the ARC-8050 using the included Ethernet cable and then to a LAN port or LAN switch.

#### Step 4. Connecting RAID Storage Power

To power the RAID storage:

1. Using the included power cord, connect this power cord to a grounded electronical outlet and to the ARC-8050 RAID storage.

2. ARC-8050 RAID storage will turn on automatically when host computer with the power on is received by the ARC-8050. It takes about 30 seconds to fully start up the RAID storage.



Figure 2-8, Connect the power cord to a grounded electrical outlet and to the ARC-8050 RAID storage.

3. ARC-8050 RAID storage automatically turns off when host computer power off is detected by the ARC-8050.

When you are finished installing the ARC-8050 RAID storage, you can set up the RAID volume using McRAID storage manager or LCD to set up RAID volumes.

#### Note:

1. User can press and hold the "Reset" button 3 seconds to turn on/off the RAID storage AC power.

2. RAID storage will maintain the daisy chain with other Thunderbolt devices even when the RAID storages have been powered down.

#### 2.4.3 Volume Setup

After hardware installation, the SAS/SATA disk drives connected to the ARC-8050 must be configured and the volume set units initialized by the controller before they are ready to use by the system. With MRAID software installed on your host computer and cables connected, you are ready to turn on your ARC-8050 storage unit and use the McRAID Storage Manager to setup RAID volumes.

#### 2.4.3.1 Configure Volume Set

ARC-8050 RAID storage is normally delivered with LCD pre-installed. Your ARC-8050 RAID storage can be configured by using McRAID storage manager (launched by ArcHttp proxy server and LAN port) or LCD with keypad (refer to ARC-8050\_LCD manual). Thunderbolt RAID storage default User Name is "admin" and the Password is "0000".

• Method 1: Thunderbolt Connection (McRAID Storage Manager) ARC-8050 RAID storage has embedded the TCP/IP & web browser-based RAID manager in the firmware. User can remote manage the RAID storage using Archttp proxy server installed via standard web browsers.

+ Http://localhost:81/		C Qr Google ) 19
	Maps YouTube Wikipedia News (555) * Popul	
т цц III Apple Tanooi Google	maps routube wikipedia News (555) * Popul	tar *
A ANT WAR		
affect the target	ArcHTTP Configura	ations
Structure and a state of the st		
en all close all		
rcHTTP - v2.2.3	General Configurations	
System Functions	Binding IP	(0.0.0.0 \$)
- General Configuration	HTTP Port#	81
ARC-8050 Web Management	SMTP Port#	
		25
	Display HTTP Connection Information To Console	●Yes_No
	Scanning PCI Device	es⊖No
	Scanning RS+232 Device	_Yes⊛No
	Scanning Inband Device	Yes⊛No
SATA RAID Controllers	Event Log File Name	
	Confirm The Operation	
	Submit Reset	

Start McRAID Storage Manager – Browser Edition

(1) In Windows, right-click on "Start" menu and choose "Programs". Clicking "MRAID" program icon starts the Archttp utility (From the Start menu, choose Programs > MRAID > ArcHTTP).

(2) On a Mac, there is one MARID icon showing on your desktop. This icon is for you to start up the McRAID storage manager (by ArcHTTP) and CLI utility.

When you click the archttp, it shows all RAID storages available on the system and create an individual RAID storage icon located on left column of the "Archttp Configurations" screen. This RAID storage icon is for user to launch the selected RAID storage web browser McRAID RAID Storage Manager.

If there is any RAID storage missed on the system start-up or plug-in on-lne, you can use the "Rescan Device" function. See chapter 4 on ARC-8050 user manual for information on customizing your RAID volumes using McRAID storage manager. Thunderbolt RAID storage default User Name is "admin" and the Password is "0000".

• Method 2: LAN Port Connection (McRAID Storage Manager) ARC-8050 RAID storage has embedded the TCP/IP & web browser-based RAID manager in the firmware. User can remote manage the RAID storage directly connected to the 10/100Mbits RJ45 LAN port via standard web browsers. For additional information on using the McRAID storage manager to configure the RAID storage see the Chapter 4 "Web Browser-Based Configuration" on ARC-8050 user manual.

• Method 3: LCD Panel with Keypad

You can use LCD front panel and keypad function to simply create the RAID volume. The LCD status panel also informs you of the disk array's current operating status at a glance. For additional information on using the LCD to configure the RAID storage see the ARC-8050\_LCD manual on the shipping CD. The LCD provides a system of screens with areas for information, status indication, or menus. The LCD screen displays up to two lines at a time of menu items or other information.

The LCD initial screen is shown as the following:



#### 2.4.3.2 Making Volume Sets Available to System

After the volume set is ready for system accesses, it needs to be partitioned, formatted, and mounted by the operating system. There are various steps, depending on what operating system you are using. Detailed steps for each operating system are provided on their disk utility.

#### For PC Thunderbolt compatible system:

The following steps show how to make any new disk arrays or independent disks accessible to Windows system. This procedure assumes that the ARC-8050 RAID storage hardware, driver, and Windows are installed and operational in your system.

1. Partition and format the new arrays or disks using "Disk Administrator":

a. Choose "Administrative Tools" from the "Start" menu.

b. Choose "Computer Management" from the "Administrative Tools" menu.

- c. Select "Storage".
- d. Select "Disk Management".

2. Follow the on-screen prompts to write a signature to the drive.

3. Right click on the drive and select "Create Volume" from the menu.

4. Follow the on-screen prompts to create a volume set and to assign a disk drive letter.

#### For Mac Thunderbolt capable system:

When you create a volume through McRAID storage manager, the Mac OS X recognizes that a new disk is avail, and displays a message asking what you next want to do. If the message does not show up, start the "Macintosh Disk Utility" manually from the "Finder", use the "Go" menu and open the "Utilities" folder. Double-click on the "Macintosh Disk Utility" program. Follow the on-screen prompts to create a volume set and to assign a disk drive letter.

#### 2.4.4 Unmounting the Storage Volume

#### For PC Thunderbolt compatible system:

Thunderbolt technology devices are plug and play, allowing you to connect and disconnect them while the host computer is running. In some cases, disconnect the volume without properly

unmounting the volume results in data corruption. To prevent the potential data corruption problems, it is important to properly Safely Remove the Thunderbolt storage volume(s).

This will show you how to use "Safely Remove Hardware and Eject Media" in Windows to safely shutdown and eject a storage device before just unplugging or disconnecting it to help prevent accidental data loss if data were still being copied or saved to or from the device. Windows provides a way to help you safely remove such devices.

If you see the "Safely Remove Hardware and Eject Media" icon in the notification area, at the far right of the taskbar, you can use this as an indication that your devices have finished all operations in progress and are ready to be removed. If you don't see the "Safely Remove Hardware and Eject Media" icon, click the Show hidden icons button to display all icons in the notification area.

The notification area, at the far right of the taskbar to safely remove a certain device, click the "Safely Remove Hardware and Eject Media" icon, and then, in the list of devices, click the Thunderbolt storage volume that you want to remove. Windows will display a notification telling you it's safe to remove the Thunderbolt storage volume. Now you can unplug the Thunderbolt cable or press and hold "Reset" button 3 seconds to save energy. The RAID storage will maintain the daisy chain with other Thunderbolt devices even when the RAID storages have been powered down.

#### Note:

You can also safely remove devices from the computer folder. Click the "Start" button, click "Computer", right-click the device you want to remove, and then click "Eject".

#### For Mac Thunderbolt capable system:

To avoid possible data corruption, Areca recommends that ARC-8050 RAID storages volume(s) be properly unmounted from the Mac OS X prior to turning off the RAID storage or safely removing the Thunderbolt interface cable. Thunderbolt technology devices are plug and play, allowing you to connect and disconnect them while the host computer is running. In some cases, disconnect the volume without properly unmounting the volume results in data corruption. To prevent the potential data corruption problems, it is important to properly eject the Thunderbolt storage volume(s).

1. Drag RAID storage volume(s) icon to the trash. The Trash will turn into an Eject arrow. This will assure that all data is properly cleared from the system memory before the volume is removed. 2. When the volume icon disappears from the desktop, RAID storage can be disconnected from the computer or you can press and hold "Reset" button 3 seconds to save energy. The RAID storage will maintain the daisy chain with other Thunderbolt devices even when the RAID storages have been powered down.

### 2.5 Summary of the Installation

The software components configure and monitor the ARC-8050 RAID storage as following table.

Configuration Utility	Operating System Supported
McRAID Storage Manager (Via Ethernet port)	OS-Independent
McRAID Storage Manager (Via Archttp proxy server)	Mac OS X 10.6.x/10.7.x/10.8.x Windows 7/8

The flow chart below describes the installation procedures for ARC-8050 Thunderbolt RAID storage.



These procedures include hardware installation, the creation and configuration of a RAID volume through the McRAID manager, OS installation and installation of storage software.

#### McRAID Storage Manager

Before launching the firmware-embedded web server, McRAID storage manager through the Thunderbolt port, you first need to install the ArcHttp proxy server on your server system. The RAID storage can also be configured through the McRAID storage manager through on-board LAN port. If you need additional information about installation and start-up of this function, see Chapter 4 "Web Browser-Based Configuration" on ARC-8050 user manual.

#### **SNMP Manager Console Integration**

There are two ways to transport SNMP data on the ARC-8050 RAID storage: Out-of-Band built-in LAN interface or In-Band Thunderbolt interface. Enter the "SNMP Tarp IP Address" option on the firm-ware-embedded SNMP configuration function for user to select the SNMP data agent-side communication from the Out-of-Band built-in LAN interface. To use In-Band Thunderbolt interface, keep blank on the "SNMP Tarp IP Address" option.

#### • Out of Band-Using Onboard LAN Port Interface

Out-of-band interface refers to transport SNMP data of ARC-8050 RAID storage from a remote station connected to the controller through a network cable. Before launching the SNMP manager on clinet, you first need to enable the firmware-embedded SNMP agent function and no additional agent software inquired on your server system. If you need additional information about installation and start-up this function, see the section 4.8.4 "SNMP Configuration" on ARC-8050 user manual.

#### • In Band-Using Thunderbolt Port Interface

In-band interface refers to management of the SNMP data of ARC-8050 RAID storage from a Thunderbolt port. In-band interface is simpler than out-of-band interface for it requiresless hardware in its configuration. To enable the RAID storage to send the SNMP traps to client SNMP manager using the IP address assigned to the operating system, such as Net-SNMP manager, you can simply use the SNMP function on the ArcHttp proxy server utility. The Archttp proxy server only provides one direction to send the trap to the SNMP manager without needing to install the SNMP extension agent on the host. If SNMP manager requests to query the SNMP information from RAID controller, please refer to Appendix C, C-3-2 section, "Using Onboard NIC Installation" on ARC-8050 user manual. If you need additional information about installation and start-up the function, see section chapter 3 "ArcHttp Configuration" of **SNMP Traps Configuration** on ARC-8050 user manual.

### 2.6 Hot-plug Drive Replacement

ARC-8050 RAID storage supports the ability of performing a hotswap drive replacement without powering down the system. A disk can be disconnected, removed, or replaced with a different disk without taking the system off-line. ARC-8050 RAID storage rebuilding will be processed automatically in the background. When a disk is hot swapped, ARC-8050 RAID storage may no longer be fault tolerant. Fault tolerance will be lost until the hot swap drive is subsequently replaced and the rebuild operation is completed.

### 2.6.1 Recognizing a Drive Failure

- A drive failure can be identified in one of the following ways:
- 1. An error status message lists failed drives in the event log.
- 2. Fault LED illuminates on the front of driver tray if failed drives are inside.

### 2.6.2 Replacing a Failed Drive

With our ARC-8050 RAID storage drive tray, you can replace a defective physical drive while your computer is still operating. When a new drive has been installed, data reconstruction will be automatically started to rebuild the contents of the disk drive. The capacity of the replacement drives must be at least as large as the capacity of the other drives in the RAID set.

## **3. ArcHTTP Configuration**

This chapter describes how to configure the "System Function" of ArcHTTP. The ArcHTTP proxy utility runs as a service or daemon, and has it automatically start the proxy for all RAID storages found. This way the RAID storage can be managed remotely without having to sign in the server.

Start ArcHTTP- Browser Edition:

(1) In Windows, right-click on "Start" menu and choose "Programs". Clicking "MRAID" program icon starts the ArcHTTP utility (From the Start menu, choose Programs > MRAID > ArcHTTP).

(2) On a Mac, there is one MARID icon showing on your desktop. This icon is for you to start up the ArcHTTP utility.

When you click the ArcHTTP, it shows all RAID storages available on the system and "System Function" on left column of the "Archttp Configurations" screen. The ArcHTTP has also integrated the email notification and SNMP function for user to send SNMP traps and e-mail notifications. ArcHTTP configuration setting will store on a file name "ArcHttpSrv.conf".

#### • General Configuration:

Binding IP: Restrict ArcHttp proxy server to bind only single interface (If more than one physical network in the server). HTTP Port#: Value 1~65535.

Display HTTP Connection Information To Console: Select "Yes" to show Http send bytes and receive bytes information in the console. Scanning PCI Device: Select "Yes" for ARC-8050 RAID storage unit. Scanning RS-232 Device: No.

Scanning Inband Device: No.

## **ArcHTTP Configuration**

000	ARCHTTP Configu				
A ttp://localhost:81/		C Qr Google			
😔 🛄 🏭 Apple Yahoo! Google	Maps YouTube Wikipedia News (555) 🔻 Popul	lar ▼			
the state when it					
S and the second	ArcHTTP Configura	tions			
along and a state of the second	Arching Connigura	10113			
open all close all					
ArcHTTP - v2.2.3	General Configurations				
- System Functions	Binding IP	0.0.0.0 \$			
General Configuration     Mail Configuration     ShiP Tray Configuration     Rescan Device     Collect Support Data     Collect Support Data     Goldect Support Data     ARC-8050 Web Management     ARC-8050 Web Management     SATA RAID Controllers	HTTP Port#	81			
	SMTP Port#	25			
	Display HTTP Connection Information To Console	●Yes No			
	Scanning PCI Device	●Yes No			
	Scanning RS-232 Device	Ves⊛No			
	Scanning Inband Device	Ves No			
	Event Log File Name				
	Confirm The Operation				
	Submit Reset				

#### • Mail (alert by Mail) Configuration:

To enable the controller to send the email function, you need to configure the SMTP function on the ArcHttp software. To enable the RAID storage email sending function, click on the "Mail Configuration" link. The "SMTP Server Configurations" menu will show as following:

When you open the mail configuration page, you will see the following settings:

	orporation
SMTP Server Configuration	
SMTP Server IP Address	0.00.0
Mail Address Configurations	
Sender Name :	Mail Address :
Account :	Password :
Event Notification Configurations	
MailTo Name1 :	Mail Address :
Disable Event Notification	No Event Notification Will Be Sent
C Urgent Error Notification	Send Only Urgent Event
C Serious Error Notification	Send Urgent And Serious Event
C Warning Error Notification	Send Urgent, Serious And Warning Event
C Information Notification	Send All Event
Notification For No Event	Notify User If No Event Occurs Within 24 Hours
MailTo Name2 :	Mail Address :
Disable Event Notification	No Event Notification Will Be Sent
C Urgent Error Notification	Send Only Urgent Event
C Serious Error Notification	Send Urgent And Serious Event
C Warning Error Notification	Send Urgent, Serious And Warning Event
Information Notification	Send All Event
Notification For No Event	Notify User If No Event Occurs Within 24 Hours
MailTo Name3 :	Mail Address :
<ul> <li>Disable Event Notification</li> </ul>	No Event Notification Will Be Sent
C Urgent Error Notification	Send Only Urgent Event
Serious Error Notification	Send Urgent And Serious Event
Warning Error Notification	Send Urgent, Serious And Warning Event
C Information Notification	Send All Event Notify User If No Event Occurs Within 24 Hours

#### (1). SMTP Server Configuration:

SMTP Server IP Address: Enter the SMTP server IP address which is not McRAID storage manager IP. Ex: 192.168.0.2.

#### (2). Mail Address Configurations:

Sender Name: Enter the sender name that will be shown in the outgoing mail.

Ex: RaidController\_1.

Mail address: Enter the sender email that will be shown in the outgoing mail, but don't type IP to replace domain name. Ex: RaidController 1@areca.com.tw.

Account: Enter the valid account if your SMTP mail server requires authentication.

Password: Enter the valid password if your SMTP mail server requires authentication.

#### (3). Event Notification Configurations:

MailTo Name: Enter the alert receiver name that will be shown in the outgoing mail.

Mail Address: Enter the alert receiver mail address.

Ex: admin@areca.com.tw.

According to your requirement, set the corresponding event level: Disable Event Notification: No event notification will be sent.

Urgent Error Notification: Send only urgent events.

Serious Error Notification: Send urgent and serious events.

Warning Error Notification: Send urgent, serious and warning events.

Information Notification: Send all events.

Notification For No Event: Notify user if no event occurs within 24 hours.

#### • SNMP Traps Configuration:

To enable the RAID storage to send the SNMP traps to client SNMP manager using the IP address assigned to the operating system, such as Net-SNMP manager, you can simply use the SNMP function on the ArcHttp proxy server software. To enable the RAID storage SNMP traps sending function, click on the "SNMP Configuration" link. The Archttp proxy only provide one direction to send the trap to the SNMP manager without needing to install the SNMP extension agent on the host. If SNMP manager requests to query the SNMP information from RAID storage, please refer the Appendix C "SNMP Operation & Installation". The "SNMP traps Configuration" menu will show as following:

When you open the SNMP traps configuration page, you will see the following settings:

n all close all									
ArcHTP - v2.00 General Configuration Mail Configuration State Trace Configuration State Trace Configuration Rescan Device Configuration ACR-8050 Web Management Configuration ACR-8050 Web Management	SNMP Trap Config	SNMP Trap Configurations							
	SNMP Trap IP Addres	ss #1	0.	0.0	. 0		Port#	162	
	SNMP Trap IP Addres	ss #2	0.	0.0	. 0		Port#	162	
	SNMP Trap IP Addres	SNMP Trap IP Address #3		0.0	. 0		Port#	162	
	SNMP System Co	SNMP System Configurations							
	Community	public		]					
	SNMP Trap Notifie	SNMP Trap Notification Configurations							
	<ul> <li>Disable Event Not</li> </ul>	Disable Event Notification		No Event Notification Will Be Sent					
	Urgent Error Notification		Send Only Urgent Event						
	Serious Error Not	Serious Error Notification		Send Urgent And Serious Event					
	Warning Error No	Warning Error Notification		Send Urgent, Serious And Warning Event					
	O Information Notif	O Information Notification		Send All Event					
		Confirm The Operation							
	Submit Reset								

#### (1). SNMP Trap Configurations

Enter the SNMP trap IP address.

#### (2). SNMP System Configurations

Community name acts as a password to screen accesses to the SNMP agent of a particular network device. Type the community names of the SNMP agent in this field. Before access is granted to a request station, this station must incorporate a valid community name into its request; otherwise, the SNMP agent will deny access to the system. Most network devices use "public" as default of their community names. This value is case-sensitive.

#### (3). SNMP Trap Notification Configurations

Before the client side SNMP manager application accepts the RAID storage traps, it is necessary to integrate the MIB into the management application's database of events and status indicator codes. This process is known as compiling the MIB into the application. This process is highly vendor-specific and should be well-covered in the User's Guide of your SNMP application. Ensure the compilation process successfully integrates the contents of the areca\_sas.mib file into the traps database. Please refer to Appendix C of "SNMP Operation & Installation". The MIBs file resides at: <CD-ROM>\packages\SNMP\_MIBs on the software CD.

#### Note:

Event Notification Table refer to Appendix D. After you confirm and submit configurations, you can use "Generate Test Event" feature to make sure these settings are correct.

#### • <u>Rescan Device Configuration:</u>

Let's assume you've put all Areca RAID storages to a system. The Archttp scans the RAID storages on the system and create an individual RAID storage icon located on left column of the "Archttp Configurations" screen. This adapter icon is for user to launch web browser RAID manager. If there is any RAID storage missed on the system start-up, you can use the "Rescan Device" function. The "Rescan Device" function is a procedure which forces the archttp to rescan the targets to allow a missed RAID storage to be added.

Time II COMPANY AND A COMPANY AND A SHOT AND A SHOT	ArcHTTP Configurations
open all close all	
ArcHTP - v2.00 Ceneral Configuration Mail Configuration Nail Configuration SNBP Trap Configuration Rescan Device Cancel Controllers Cancel Controllers SATA RAID Controllers	Do You Want To Rescan Device?  Confirm The Operation  Submit Reset

#### • Collect Support Data:

Areca has added the "Collect Support Data" option on the Archttp utility to download a support file (file name:ctlrxx-xxxx.log) with all necessary information (system information, configuration, disk information, eventlog). The "Collect Support Data" function will be automatically started when ERROR or SERIOUS event occurred."

Iopen alliclose alli	ArcHTTP Configurations
ArdriTIP - V2.2.0  ArdriTIP - V2.2.0  ArdriTIP - V2.2.0  ArdriTIP - V2.2.0  Configuration  Ardrid - V2.2.0  Configuration  Configuration  Configuration  Configuration  Configuration  Configuration  Ardrid - V2.2.0  Ardrid - V2	Do You Want To Collect Support Data? Confirm The Operation Submit Rest
## 4. Web Browser-based Configuration

If you need to use a RAID volume from ARC-8050 RAID storage unit, you must first create a RAID volume by using LCD or McRAID storage manager. This chapter shows you how to set up RAID volumes using the McRAID storage manager application on a computer with an ARC-8050 RAID storage.

The McRAID storage manager is firmware-based utility, which is accessible via the web browser installed on your operating system. The web browser-based McRAID storage manager is a HTML-based application, which utilizes the browser (Safari, IE and Mozilla etc) installed on your monitor station. It can be accessed through the in-band Thunderbolt bus or out-of-band onboard LAN port. The in-band-Thunderbolt bus method can launch the web browser-based McRAID storage manager via archttp proxy server.

The firmware-embedded web browser-based McRAID storage manager allows local or remote to access it from any standard internet browser. The firmware-embedded SMTP manager monitors all system events and user can select either single or multiple user notifications to be sent with "Plain English" e-mails. The firmware-embedded SNMP agent allows remote to monitor events with no SNMP agent required.

- Create RAID set
- Expand RAID set
- Define volume set
- Add physical drive
- Modify volume set
- Modify RAID level/stripe size
- Define pass-through disk drives
- Modify system function
- Update firmware
- Designate drives as hot spares

## 4.1 Start-up McRAID Storage Manager

With the McRAID storage manager, you can locally manage a system containing a Thunderbolt RAID storage that has Mac OS X or Windows and a supported browser. A locally managed system requires all of the following components:

- A supported web browser, which should already be installed on the Thunderbolt capable computer.
- Install ArcHTTP proxy server on the Thunderbolt capable computer. (Refer to section 2.4.1 Software Installation)
- Remote and managed systems must have a TCP/IP connection.

# • Start-up McRAID Storage Manager from Local Administration (In-of-Band)

Once ArcHTTP and CLI have been installed, the archttp back ground task automatically starts each time when you start your thunderbolt-capable computer. There is one MARID icon showing on your "Desktop" or "Start" menu. This icon is for you to start up the McRAID storage manager (by ArcHTTP) and CLI utility. When you click the ArcHTTP from MRAID icon, it shows all RAID stor ages available on the host system and create an individual RAID storage icon located on left column of the "Archttp Configurations" screen. This RAID storage icon is for user to launch the selected RAID storage web browser McRAID storage manager.

000	ARCHTTP Configu	iration	1	
Image: A transformed to the second secon		C Qr Google	1	
😔 🛄 🎹 Apple Yahoo! Google	Maps YouTube Wikipedia News (555) * Popul	lar 🔻		
たった 注意	ArcHTTP Configura	tions		
open all close all				
ArcHTTP - v2.2.3	General Configurations			
System Functions	Binding IP	0.0.0.0 \$		
	HTTP Port#	81		
SNMP Trap Configuration	SMTP Port#	25		
Rescan Device     Collect Support Data	Display HTTP Connection Information To Console	●Yes_No		
SAS RAID Controllers	Scanning PCI Device	●Yes No		
ARC-8050 Web Management	Scanning RS-232 Device	OYes⊙No		
SATA RAID Controllers	Scanning Inband Device	OYes⊛No		
	Event Log File Name			
	Confirm The Operation			
	Submit Reset			
	L			

The "Enter Network Password" dialog screen appears, type the User Name and Password. Thunderbolt RAID storage default User Name is "admin" and the Password is "0000".

# • Start-up McRAID Storage Manager Through LAN Port (Out-of-Band)

ARC-8050 RAID storage now offers an alternative means of communication for the Thunderbolt RAID storage – web browserbased McRAID storage manager program. User can access the

built-in configuration without needing system starting up running the ArcHttp proxy server. The web browser-based McRAID storage manager program is a HTML-based application, which utilizes the browser installed on your remote system. To ensure proper communications between the Thunderbolt RAID storage and web browser-based McRAID storage manager, please connect the Thunderbolt RAID storage LAN port to any LAN switch port.

The RAID storage has embedded the TCP/IP & web browserbased McRAID storage manager in the firmware. User can remote manage the Thunderbolt RAID storage without adding any user specific software (platform independent) via standard web browsers directly connected to the 10/100Mbit RJ45 LAN port.

To configure Thunderbolt RAID storage on a remote machine, you need to know its IP address. The IP address will default show in the LCD initial screen. Launch your firmware-embedded TCP/IP & web browser-based McRAID storage manager by entering http:// [IP Address] in the web browser.

## 4.2 RAID storage McRAID Storage Manager

McRAID storage manager initial start-up screen displays the current configuration of your RAID storage.

ensole R	RaidSet Hierarchy					
KA RA	AID Set Devices			Volume Set(Ch/Id/Lun)	Volume State	Capacity
	d Set # 000	E#1Slot#2		ARC-8050-VOL#000(0/0/0)	Normal	200.068
kons		E#1Slot#4		ARC-8050-VOL#001(0/0/1)	Normal	400.0G8
		Ex15kc#5				
		E#15lot#6				
		E#1Slot#7				
		E#15kct#B				
	vice	A SAS RAID AdapterV1.0 Usage	Capacity	Madel		
	(07)	N.A.	Capieca y	N.A.		
	LM(2(0))	Baid Set # 000	600.108	SEAGATE STREEDOS785		
	142					
	14#4(E)	Raid Set # 000	600.168	SEAGATE ST260005755		
	145(9)	Raid Set # 000	600.108	SEAGATE ST360005785		
	1.K6(A)	Raid Set # 000	1000.208	SEAGATE ST3100042455		
	147(8)	Raid Set # 000	1000.258	SEAGATE ST0100042455		
	t#R(C)	Raid Sat # 000	1001.268	SEAGATE ST2100042455		

It displays the "Raid Set List", "Volume Set List", and "Physical Disk List". The RAID set information, volume set information, and drive information can also be viewed by clicking on the "RAID Set Hierarchy" screen. The current configuration can also be viewed by clicking on "RAID Set Hierarchy" in the main menu.

To display RAID set information, move the mouse cursor to the desired RAID set number, then click it. The RAID set information will

be displayed. To display volume set information, move the mouse cursor to the desired volume set number, then click it. The volume set information will be displayed. To display drive information, move the mouse cursor to the desired physical drive number, then click it. The drive information will be displayed.

## 4.3 Main Menu

The main menu shows all available functions, accessible by clicking on the appropriate link.

Individual Category	Description
Quick Function	Create a default configuration, which is based on the number of physical disks installed; it can modify the volume set Capacity, Raid Level, and Stripe Size.
Raid Set Functions	Create a customized RAID set.
Volume Set Functions	Create customized volume sets and modify the existed volume sets parameter.
Physical Drives	Create pass through disks and modify the existing pass through drives parameters. Also provides the function to identify disk drives (blinking fault LED).
System Controls	Setting the RAID system configuration.
Information	Viewing the controller information. The Raid Set Hierarchy can be viewed through the "Raid Set Hierarchy" item.

## 4.4 Quick Function

The number of physical drives in the RAID storage determines the Raid Levels that can be implemented with the RAID set. You can create a RAID set associated with exactly one volume set. The user



can change the Raid Level, Capacity, Initialization Mode, and Stripe Size. A hot spare option is also created, depending on the exist configuration. Click the "Confirm The Operation" check box and click on the "Submit" button in the "Quick Create" screen, the RAID set and volume set will start to initialize.

### Note:

In "Quick Create", your volume set is automatically configured based on the number of disks in your system. Use the "Raid Set Functions" and "Volume Set Functions" if you prefer to customize your volume set, or RAID 30/50/60 volume set.

## 4.5 Raid Set Functions

Use the "Raid Set Function" and "Volume Set Function" if you prefer to customize your volume set. Manual configuration can provide full control of the RAID set settings, but it will take longer to complete than the "Quick Volume/Raid Setup" configuration. Select the "Raid Set Function" to manually configure the RAID set for the first time or delete and reconfigure existing RAID sets. (A RAID set is a group of disks containing one or more volume sets.)

## 4.5.1 Create Raid Set

To create a RAID set, click on the "Create Raid Set" link. A "Select The Drive For Raid Set" screen is displayed showing the drive(s) connected to the current controller and enclosures. Click on the selected physical drives within the current RAID set. Enter 1 to 15 alphanumeric characters to define a unique identifier for a RAID set. The default RAID set name will always appear as "Raid Set #".

Click the "Confirm The Operation" check box and click on the "Submit" button on the screen; the RAID set will start to initialize. If you have available disk member, you can repeat above procedures to define another RAID sets. The "Max 128 volumes" is the default mode for SAS RAID storage. The "Max 16 volumes" mode is used for support roaming this raidset to Areca SATA RAID controllers. The SATA RAID controller is designed to support up to 16 volumes only. You have to use "Max 16 volumes" on the raidset

mode if you plan to roam this raidset between SAS RAID controller and SATA RAID controller.

Select The	Drives For RAID S	et			
Enclosure#	#1 : ARECA SAS RA	ID AdapterV1.0			
Slot	t#2	600.1GB	SEAGATE ST36000	5799	
🔲 Slot	t#4	600.1GB	SEAGATE ST3600057SS		
Slot	t#5	600.1GB	SEAGATE ST36000	5755	
Slot	t#6	1000.2GB	SEAGATE ST31000	4245S	
Slot	t#7	1000.2GB	SEAGATE ST31000	424SS	
Slot	t#8	1000.2GB	SEAGATE ST31000	424SS	
Raid Set Nam	10		Ra	al Set# 000	
RaidSet Mode	9		М	lar 128 Volumes 💌	
				an 128 Volumes	
🔲 Confirm 1	The Operation		<u>Re</u>	ar 16 Volumes	
Submit Rese	et				

### Note:

To create RAID 30/50/60 volume, you need create multiple RAID sets firstly with the same disk numbers on each RAID set.

## 4.5.2 Delete Raid Set

To delete a RAID set, click on the "Deleted Raid Set" link. A "Select The Raid Set To Delete" screen is displayed showing all exist RAID sets in the current controller. Click the RAID set number which you want to delete in the select column on the delete screen. Then, click the "Confirm The Operation" check box and click on the "Submit" button in the screen to delete it. The volume sets included in the "Delete RAID Set". It will be deleted by this action. But for the Raid 30/50/60, you need to delete the volumes belonging to those RAID sets.

open all close all						
Raid System Console	Select 1	The Raid Set To Del	ete			
	Select	Raid Set Name	Member Disks	Raid State	Capacity	
RAID Set Functions	0	Raid Set # 000	1/1	Rebuilding	11000.0GB	
Delete RAID Set	0	Raid Set # 001	4/4	Rebuilding	20000.0GB	
Expand RAID Set	۰	Raid Set # 002	5/5	Normal	150.0GB	
Offline RAID Set     Activate Incomplete RAID S	C	Raid Set # 003	6/6	Normal	480.0GB	
Create Hot Spare	Confir Submit	m The Operation, V Reset	/olumeSet In This Ra	idSet Will Also Be I	Deleted	

## 4.5.3 Expand Raid Set

Instead of deleting a RAID set and recreating it with additional disk drives, the "Expand Raid Set" function allows the users to add disk drives to the RAID set that have already been created. To expand a RAID set:

Select the "Expand Raid Set" option. If there is an available disk, then the "Select SAS/SATA Drives For Raid Set Expansion" screen appears.

Select the target RAID set by clicking on the appropriate radio button. Select the target disk by clicking on the appropriate check box.

open all close all			logy Corp	oración		
Raid System Console	Select 1	The Raid Set For Ra	id Expansion			
	Select	Raid Set Name	Member Disks	Raid State	Capacity	
C RAID Set Functions	0	Raid Set # 000	1/1	Rebuilding	11000.0GB	
Create RAID Set     Delete RAID Set	0	Raid Set # 001	4/4	Rebuilding	20000.0GB	
Expand RAID Set	œ	Raid Set # 002	5/5	Normal	150.0GB	
Offline RAID Set     Activate Incomplete RAID 5	0	Raid Set # 003	6/6	Normal	480.0GB	
Create Hot Spare						
Delete Hot Spare	Submit	Reset				
Rescue Raid Set						
Volume Set Functions Physical Drives						
System Controls						
information						

Click on the "Submit" button to start the expansion on the RAID set.

The new additional capacity can be utilized by one or more volume sets. The volume sets associated with this RAID set appear for you to have chance to modify RAID level or stripe size. Follow the instruction presented in the "Modify Volume Set" to modify the volume sets; operation system specific utilities may be required to expand operating system partitions.

### Note:

1. Once the "Expand Raid Set" process has started, user can not stop it. The process must be completed.

2. If a disk drive fails during RAID set expansion and a hot spare is available, an auto rebuild operation will occur after the RAID set expansion completes.

RAID 30/50/60 does not support the "Expand Raid set".
 RAID set expansion is a quite critical process, we strongly recommend customer backup data before expand. Unexpected accident may cause serious data corruption.

## 4.5.4 Offline Raid Set

This function is for customer being able to unmount and remount a multi-disk volume. All Hdds of the selected RAID set will be put into offline state, spun down and fault LED in fast blinking mode. User can remove those Hdds and insert new Hdds on those empty slots without needing power down the controller.

Raid System Console	Select	The Raid Set To Offli	ine		
Quick Function	Select	Raid Set Name	Member Disks	Raid State	Capacity
RAID Set Functions	œ	Raid Set # 000	1/1	Rebuilding	11000.0GB
Create RAID Set     Delete RAID Set	0	Raid Set # 001	4/4	Rebuilding	20000.0GB
Expand RAID Set	0	Raid Set # 002	5/5	Normal	150.0GB
Offline RAID Set     Activate Incomplete RAID S	0	Raid Set # 003	6/6	Normal	36.7GB
Create Hot Spare	0	Raid Set # 003	8/8	Normal	480.0GB
Delete Hot Spare     Rescue Raid Set     Volume Set Functions     Physical Drives     System Controls     Information	Confin Submit	m The Operation, V Reset	olumeSet In This Ra	idSet Will Also Be (	Offlined

## 4.5.5 Rename Raid Set

The default RAID set name will always appear as "Raid Set #" when it is first created by the controller. The "Rename Raid Set" function is for customer to rename the default RAID set name. To rename a RAID set from a group of RAID sets:

(1). Click on the "Rename Raid Set" link.

(2). Click the RAID set check box from the list that you wish to rename. Click the "Submit" button. The following screen appears. Use this option to rename the RAID set name.

A ANT WHAT		
1 As I AT	Areca Technology Corporation	ז
open all close all		
💈 Raid System Console	Enter The RaidSet Name	
🖲 🛄 Quick Function	Raid Set Name	Raid Set # 000
Garden RAID Set Functions     Create RAID Set	Member Disks	2
Delete RAID Set	Min Member Disk Size	30.0GB
Expand RAID Set     Office RAID Set     Office RAID Set     Consult incomplete RAID Set     Create Hot Spare     Delete Hot Spare     Delete Hot Spare     Delete Horizes     System Controls     System Controls     Information	Confirm The Operation Submit Reset	

## 4.5.6 Activate Incomplete Raid Set

If one of the disk drives is removed in power off state, the RAID set state will change to "Incomplete State". If the user wants to continue to operate the controller without power-off the RAID storage, the user can use the "Activate Incomplete Raid Set" op-

tion to active the RAID set. After the user completes this function, the Raid State will change to "Degraded Mode" and start to work. To activate the incomplete the RAID set, click on the "Activate Raid Set" link. A "Select The Raid Set To Activate" screen is displayed showing all RAID sets existing on the current controller. Click the RAID set number to activate in the select column.

pen all close all		Techno	logy Corp	oration	
Raid System Console	Select	Raid Set Name	Member Disks	Raid State	Capacity
RAID Set Functions	c	Raid Set # 000	1/1	Rebuilding	11000.0GB
Create RAID Set	c	Raid Set # 001	4/4	Rebuilding	20000.0GB
Expand RAID Set	•	Raid Set # 002	5/5	Normal	150.0GB
Offline RAID Set     Activate Incomplete RAID 5	c	Raid Set # 003	6/6	Normal	480.0GB
Create Hot Spare	Submit	Reset			

Click on the "Submit" button on the screen to activate the RAID set that had a disk removed (or failed) in the power off state. The RAID storage will continue to work in degraded mode.

## 4.5.7 Create Hot Spare

When you choose the "Create Hot Spare" option in the "Raid Set Function", all unused physical devices connected to the current controller appear. Select the target disk by clicking on the appropriate check box. Click the "Confirm The Operation" check box and click the "Submit" button in the screen to create the hot spares.

en all close all  🥂						
id System Console	Select The Drive	es For Hot Spare				
Quick Function	Enclosure#4:	reca x28-05.75.1.37				
RAID Set Functions	SLOT 2	73.4GB	HITACHI HUS151473VLS300			
Create RAID Set	SLOT 3	73.4GB	SEAGATE ST373455SS			
Expand RAID Set Offline RAID Set Activate Incomplete RAID 5 Create Hot Spare	Select The Hot Sp		Global Hot Spare  Global Hot Spare Dedicated To RaidSet Dedicated To Enclosure			
<ul> <li>Delete Hot Spare</li> <li>Rescue Raid Set</li> <li>Volume Set Functions</li> </ul>	Submit Reset					
Physical Drives System Controls Information						

The "Create Hot Spare" gives you the ability to define a global or dedicated hot spare. Unlike "Global Hot Spare" which can be used with any RAID sets, "Dedicated Hot Spare" can only be used with

a specific RAID set or Enclosure. When a disk drive fails in the RAID set or enclosure with a dedicated hot spare is pre-set, data on the disk drive is rebuild automatically on the dedicated hot spare disk.

## 4.5.8 Delete Hot Spare

Select the target hot spare disk to delete by clicking on the appropriate check box. Click the "Confirm The Operation" check box and click the "Submit" button on the screen to delete the hot spares.

1 AL	Aı	reca Te	chnolo	ogy Corporation			
open all close all							
Raid System Console	• 5	Select The Hot S	pare Drive To	Delete			
🖻 🦳 Quick Function	• 6	nclosure#5 : Ar	eca x28-05.	75.1.37 000			
Generations     Generation     Generation	R	SLOT 02	73.4GB	SEAGATE ST373455SS			
Create RAID Set     Delete RAID Set	R	SLOT 03	73.4GB	SEAGATE ST373455SS			
- Expand RAID Set							
Offline RAID Set     Activate Incomplete RAID S	7	Confirm The Operation					
- Create Hot Spare	S	ubmit Reset					
Delete Hot Spare							
Rescue Raid Set     Volume Set Functions							
Physical Drives							
🗉 🚍 System Controls							
🖲 🦳 Information							

## 4.5.9 Rescue Raid Set

When the system is powered off in the RAID set update/creation period, the configuration possibly could disappear due to this abnormal condition. The "RESCUE" function can recover the missing RAID set information. The RAID storage uses the time as the RAID set signature. The RAID set may have different time after the RAID set is recovered. The "SIGANT" function can regenerate the signature for the RAID set.



### **Caution:**

Please contact us to make sure if you need to use rescue function. Improperly usage may cause configuration corruption.

## 4.6 Volume Set Functions

A volume set is seen by the host system as a single logical device. It is organized in a RAID level with one or more physical disks. RAID level refers to the level of data performance and protection of a volume set. A volume set capacity can consume all or a portion of the disk capacity available in a RAID set. Multiple volume sets can exist on a group of disks in a RAID set. Additional volume sets created in a specified RAID set will reside on all the physical disks in the RAID set. Thus each volume set on the RAID set will have its data spread evenly across all the disks in the RAID set.

The following is the volume set features for the RAID storage. 1. Volume sets of different RAID levels may coexist on the same RAID set and up to 128 volume sets per controller.

2. Up to 128 volume sets can be created in a RAID set.

3. The maximum addressable size of a single volume set is not limited to 2TB, because the controller is capable of 64-bit LBA mode. However the operating system itself may not be capable of addressing more than 2TB.

### See Areca website ftp://ftp.areca.com.tw/RaidCards/Documents/Manual\_Spec/ Over2TB\_050721.ZIP file for details.

## 4.6.1 Create Volume Set (0/1/10/3/5/6)

To create volume set from RAID set storage, move the cursor bar to the main menu and click on the "Create Volume Set" link. The "Select The Raid Set To Create On It" screen will show all RAID set number. Tick on a RAID set number that you want to create and then click on the "Submit" button.

The new create volume set attribute allows user to select the Volume Name, RAID Level, Capacity, Greater Two TB Volume Support, Initialization Mode, Strip Size, Cache Mode, Tagged Command Queuing, and SCSI Channel/SCSI ID/SCSI Lun.

pen all close all		
Raid System Console	Enter The Volume Attribute	
Quick Function	Volume Name	ARC-8050-VOL#002
Volume Set Functions Create Volume Set Create Raid30/50/60	Member Disks	16
	Volume Raid Level	Raid 6 🗸
	Max Capacity Allowed	285 GB
Delete Volume Set     Modify Volume Set	Select Volume Capacity	285 GB
Check Volume Set Schedule Volume Check Stop Volume Check Physical Drives	Volume Initialization Mode	Foreground Initialization
	Volume Stripe Size	64 🛩 KBytes
	Volume Cache Mode	Write Back
System Controls Information	Tagged Command Queuing	Enabled 💙
	SCSI Channel:SCSI ID:SCSI Lun	0 🗸 : 0 🖌 : 2 🗸
	Volumes To Be Created	1
	Confirm The Operation	

#### • Volume Name

The default volume name will always appear as "ARC-8050-VOL". You can rename the volume set providing it does not exceed the 15 characters limit.

#### • Volume Raid Level

Set the Raid Level for the volume set. Highlight the desired RAID level and from the available levels option.

#### • Capacity

The maximum volume size is the default initial setting. Enter the appropriate volume size to fit your application.

#### • Greater Two TB Volume Support

If volume capacity will exceed 2TB, controller will show the "Greater Two TB Volume Support" sub-menu. Greater Two TB Volume Support option: "No", "64bit LBA" and "4K Block".

#### -No

It keeps the volume size with max. 2TB limitation.

#### -64bit LBA

This option uses 16 bytes CDB instead of 10 bytes. The maximum volume capacity is up to 512TB. This option works on different OS which supports 16 bytes CDB.

#### -4K Block

It changes the sector size from default 512 bytes to 4k bytes. The maximum volume capacity is up to 16TB. This option works

under Windows platform only. And it can not be converted to "Dynamic Disk", because 4k sector size is not a standard format.

#### For more details please download PDF file from ftp:// ftp.areca.com.tw/RaidCards/Documents/Manual\_Spec/ Over2TB\_050721.zip

#### • Initialization Mode

This option is used to define "Background Initialization", "Foreground Initialization" or "No Init (To Rescue Volume)". When "Background Initialization", the initialization proceeds as a background task, the volume set is fully accessible for system reads and writes. The operating system can instantly access to the newly created arrays without requiring a reboot and waiting the initialization complete. When "Foreground Initialization", the initialization proceeds must be completed before the volume set ready for system accesses. There is no initialization happened when you select "No Init" option. "No Init" is for customer to rescue volume without losing data in the disk.

### • Stripe Size

This parameter sets the size of the stripe written to each disk in a RAID 0, 1, 10, 5, 6, 50 or 60 logical drive. You can set the stripe size to 4 KB, 8 KB, 16 KB, 32 KB, 64 KB, 128 KB, 256 KB, 512KB or 1M. A larger stripe size produces better read performance, especially if your computer does mostly sequential reads. However, if you are sure that your computer does random reads more often, select a smaller stripe size.

### Note:

RAID level 3 can't modify the cache stripe size.

#### • Cache Mode

The RAID storage supports "Write Through" and "Write Back" cache.

#### • Full Volume Encryption

ARC-8050 have featured with controller based hardware encryption function. Controller based hardware encryption describes the encryption of data occurring at the disk array controller

before being sent to the disk drives. Since RAID controller is a natural central point of all data therefore encryption at this level is inherent and also reduces deployment complexity. ARC-8050 RAID controller has dedicated electronic circuitry for the cryptographic engine embedded in the ROC and operating at full channel speeds. The hardware encryption does not impact the performance of ARC-8050 RAID controller and can implement on any kinds of HDD that is transparent to the user, the OS, and applications.

Encrypting your volume can give your data an extra layer of protection beyond setting up a controller password. Encryption will conceal your volume's data and make accessing the files almost impossible for anyone who does not know your encryption key. Data saved in the volume will be hidden by Algorithm developed by Areca Technology. With this scramble process, no one can see and access into the hidden volume data without access key, ARC-8050 support 128- and 256-bit encryption keys using AES(a key size of 128, or 256 bits), or password (a variable key size). Each encryption key size causes the algorithm to behave slightly differently, so the increasing key sizes not only offer a larger number of bits with which you can scramble the data, but also increase the complexity of the cipher algorithm. ARC-1882 adapters provide five new key options in the 'Full Volume Encryption: "Disable', "256Bit key, Password", "256Bit key, AES", "128Bit key, Password", "128Bit key, AES". You can generate the new key by CLI utility or API code function.

This volume encryption function can only work with ARC-1882 series with any kinds of HDD. You can follow below steps to enable the function.

1. Create volume set with "Full Volume Encryption" capability in the web management.

2. Use CLI "vsf genkey" command or API code to generate key file.

3. Use "Download Volume Key File" in the web management or use CLI "vsf dlkey" command to download volume key file into firmware and unlock the volume.

4. Follow step 4. to unlock volume if volume locked.

#### • Tagged Command Queuing

The "Enabled" option is useful for enhancing overall system

performance under multi-tasking operating systems. The Command Tag (Drive Channel) function controls the SAS command tag queuing support for each drive channel. This function should normally remain "Enabled". "Disabled" this function only when using SAS drives that do not support command tag queuing.

#### • SCSI Channel/SCSI ID/SCSI Lun

SCSI Channel: The RAID storage function is simulated as an external SCSI RAID controller. The host bus is represented as a SCSI channel. Choose the SCSI Channel.

SCSI ID: Each SCSI device attached to the SCSI card, as well as the card itself, must be assigned a unique SCSI ID number. A SCSI channel can connect up to 15 devices. The RAID storage is a large SCSI device. Assign an ID from a list of SCSI IDs. SCSI LUN: Each SCSI ID can support up to 8 LUNs. Most 6Gb/s SAS controllers treat each LUN like a SAS disk.

# 4.6.2 Create Raid30/50/60 (Volume Set 30/50/60)

To create 30/50/60 volume set from RAID set group, move the cursor bar to the main menu and click on the "Create Raid30/50/60" link. The "Select The Raid Set To Create Volume On It" screen will show all RAID set number. Tick on the RAID set numbers (same disk numbers per RAID set) that you want to create and then click on the "Submit" button.

I close all		
stem Console	Enter The Volume Attribute	
Function	Volume Name	ARC-8050-VOL#002
Set Functions ne Set Functions	Member Disks	2x4
eate Volume Set	Volume Raid Level	60 🛩
eate Raid30/50/60	Max Capacity Allowed	30 GB
elete Volume Set odify Volume Set	Select Volume Capacity	60 GB
eck Volume Set	Greater Two TB Volume Support	No 🛩
chedule Volume Check op Volume Check	Volume Initialization Mode	Foreground Initialization
ical Drives	Volume Stripe Size	64 🛩 KBytes
em Controls mation	Volume Cache Mode	Write Back
	Tagged Command Queuing	Enabled 💌
	SCSI Channel:SCSI ID:SCSI Lun	0 🛩 : 0 🛩 : 0 💌
	Confirm The Operation	
	Submit Reset	

The new create volume set attribute allows user to select the Volume Name, Raid Level, Capacity, Greater Two TB Volume Support, Initialization Mode, Stripe Size, Cache Mode, Tagged Command Queuing, and SCSI Channel/SCSI ID/SCSI Lun. Please refer to above section for details description of each item.

### Note:

RAID level 30 50 and 60 can support up to two RAID set (two pairs), but it can not support expansion and migration.

## 4.6.3 Delete Volume Set

To delete a volume from RAID set, move the cursor bar to the main menu and click on the "Delete Volume Set" link. The "Select The Raid Set To Delete" screen will show all RAID set numbers. Click a RAID set number and the "Confirm The Operation" check box and then click the "Submit" button to show all volume set items in the selected RAID set.



Click a volume set number and the "Confirm The Operation" check box and then click the "Submit" button to delete the volume set.

## 4.6.4 Modify Volume Set

To modify a volume set from a RAID set:

(1). Click on the "Modify Volume Set" link.

(2). Click the volume set check box from the list that you wish to modify. Click the "Submit" button. The following screen appears. Use this option to modify the volume set configuration. To modify volume set attributes, move the cursor bar to the volume set attribute menu and click it. The "Enter The Volume Attribute" screen appears. Move the cursor to an attribute item and then click the attribute to modify the value. After you complete the modification,

click the "Confirm The Operation" check box and click the "Submit" button to complete the action. The user can only modify the last volume set capacity.

68-VOL#000	Enter The Volume Attribute	
		Raid System Console
c0	Volume Name	Quick Function
60	Max Capacity Allowed	RAID Set Functions
GB	Volume Capacity	Volume Set Functions
nd Initialization 🥣	Volume Initialization Mode	Create Volume Set     Create Raid30/50/60     Delete Volume Set     Modify Volume Set
×	Volume Raid Level	
KBytes	Volume Stripe Size	Check Volume Set
ck 💌	k Volume Cache Mode	Schedule Volume Check     Stop Volume Check
v	File Volume Write Protection	Download Volume Key File
v	Tagged Command Queuing	
0 🛩 : 0 🛩	SCSI Channel:SCSI ID:SCSI Lun	
	Confirm The Operation	
×	Tagged Command Queuing SCSI Channel:SCSI ID:SCSI Lun	

### 4.6.4.1 Volume Growth

Use "Expand Raid Set" function to add disk to a RAID set. The additional capacity can be used to enlarge the last volume set size or to create another volume set. The "Modify Volume Set" function can support the "Volume Modification" function. To expand the last volume set capacity, move the cursor bar to the "Capacity" item and entry the capacity size. When finished the above action, click on the "Submit" button to complete the action. The last volume set starts to expand its capacity.

#### To expand an existing volume noticed:

- Only the last volume can expand capacity.
- When expand volume capacity, you can't modify stripe size or modify RAID level simultaneously.
- You can expand volume capacity, but can't reduce volume capacity size.
- After volume expansion, the volume capacity can't be decreased.

#### For greater 2TB expansion:

- If your system installed in the volume, don't expand the volume capacity greater 2TB, except your OS and controller can support boot up from a greater 2TB capacity device.
- Expand over 2TB used LBA64 mode. Please make sure your OS supports LBA64 before expand it.

### 4.6.4.2 Volume Set Migration

Migrating occurs when a volume set is migrating from one RAID level to another, when a volume set strip size changes, or when a disk is added to a RAID set. Migration state is displayed in the volume state area of the "RAID Set Hierachy" screen.

Des					
<ul> <li>Stop Auto Re</li> <li>RaidSet Hierar</li> </ul>					
RAID Set	Devices		Volume Set(Ch/Id/Lun)	Volume State	Cap
Raid Set # 000	E#15io1#1		ARC-8050-V0L#000(0/0/0)	Migrating(33.9%)	100.
	E#15iot#2				
	E#1Slot#3 E#1Slot#4				
	E#1Slot#5				
	E#15io1#6				
	E#1Stot#7 E#1Stot#8				
Enclosure#1:     Device	ARECA SAS RAID AdapterV1.0		Model		
Slot#1(C)	Usage Raid Set # 000	400.168	Model HITACHE HUSML4040ASS600		
Slot#2(D)	Raid Set # 000	400.168	HITACHI HUSML4040ASS600		
Slot#3(E)	Raid Set # 000	400.1GB	HITACHI HUSML4040ASS600		
Slot#4(10) Slot#5(9)	Raid Set # 000 Raid Set # 000	300.168	HITACHI HUS156030VLS500 HITACHI HUS151436VLS300		
Slot#5(9) Slot#6(E)	Raid Set # 000	300.058	SEAGATE ST330065755		
Siot#7(A)	Raid Set # 000	73.4GB	SEAGATE ST37345455		
Slot#8(8)	Raid Set # 000	36.7GB	HITACHI HUS151496VI S900		
			MILLON ROSSINGRUSSOU		
ote:					

## 4.6.5 Check Volume Set

To check a volume set from a RAID set:

- (1). Click on the "Check Volume Set" link.
- (2). Click on the volume set from the list that you wish to check.

Click on "Confirm The Operation" and click on the "Submit" button. Use this option to verify the correctness of the redundant data in a volume set. For example, in a system with dedicated parity, volume set check means computing the parity of the data disk drives and comparing the results to the contents of the dedicated parity disk drive. The checking percentage can also be viewed by clicking on "RAID Set Hierarchy" in the main menu.

* ***********************************			
- Select The	Volume Set To Be Checked		
Select	Volume Set Name	On Raid Set	Capacity
	ARC-8050-VOL#000	Raid Set # 000	50.0GB
	ARC-8050-VOL#001	Raid Set # 000	100.0GB
Re-comp	d Block If Bad Block Is Found, Assume Pa ute Parity If Parity Error Is Found, Assum The Operation #		

## 4.6.6 Schedule Volume Check

A volume check is a process that verifies the integrity of redundant data. To verify RAID 3, 5, 6, 30, 50 or 60 redundancy, a volume check reads all associated data blocks, computes parity, reads parity, and verifies that the computed parity matches the read parity.

Volume checks are very important because they detect and correct parity errors or bad disk blocks in the drive. A consistency check forces every block on a volume to be read, and any bad blocks are marked; those blocks are not used again. This is critical and important because a bad disk block can prevent a disk rebuild from completing. We strongly recommend that you run consistency checks on a regular basis—at least once per week (set on "Scheduler"). Volume checks degrade performance, so you can also run them when the system is idle (set on "Checking After System Idle").



## 4.6.7 Stop Volume Set Check

Use this option to stop the "Check Volume Set" function.

## 6.6.8 Download Volume Key File

Get the key file which was generated by CLI "vsf genkey" command or API code for your ARC-8050. You can follow below steps to download volume key file.

1. To download volume key file into the firmware, move the mouse cursor to "Download Volume Key file" link and click it. The "Download Volume Encryption Key File" screen appears.

2. Click "Browse". Look in the location to which the key file was generated. Select the file name and click "Open".

3. Click "Confirm The Operation" and press the "Submit" button.

4. After the key file download is completed, a bar indicator will show "Key File Has Been Downloaded Successfully".



## 4.7 Physical Drive

Choose this option to select a physical disk from the main menu and then perform the operations listed below.

## 4.7.1 Create Pass-Through Disk

To create pass-through disk, move the mouse cursor to the main menu and click on the "Create Pass-Through" link. The relative setting function screen appears. A pass-through disk is not controlled by the RAID storage firmware; it can't be a part of a volume set. The disk is available to the operating system as an individual disk. It is typically used on a system where the operating system is on a disk not controlled by the RAID firmware. The user can also select the Cache Mode, Tagged Command Queuing, and SCSI Channel/SCSI\_ID/SCSI\_LUN for this pass-through disk.

pen all[close all]	Are	ca Techno	ology Corpora	tion		
taid System Console	. Selec	ct the IDE drive For P	ass Through			
Quick Function	<ul> <li>Enclo</li> </ul>	sure#1 : ARECA SAS	RAID AdapterV1.0			
Quick Create	۲	Slot#2	600.1GB	SEAGATE ST36000575S		
RAID Set Functions     Yolume Set Functions     Physical Drives     Create Pass-Through Disk     Modify Pass-Through Disk	0	Slot#4	600.1GB	SEAGATE ST36000575S		
	0	Slot#5	600.1G8	SEAGATE ST36000575S		
	0	Slot#6	1000.2GB	SEAGATE ST31000424SS		
	0	Slot#7	1000.2GB	SEAGATE ST31000424SS		
Delete Pass-Through Disk Set Disk To Be Failed	0	Slot#8	1000.2GB	SEAGATE ST310004245S		
Activate Failed Disk	. Enter	Enter Pass Through Disk Attribute				
Identify Enclosure     Identify Drive     System Controls		Volume Cache Mode			Write Back	
	Write P	Protection	Disabled ~			
Information	Tagged	Command Queuing			Enabled M	
		hannel:SCSI_ID:SCSI_I	un		0 - : 0 - : 0 -	
		nfirm The Operation				
		Reset				

## 4.7.2 Modify Pass-Through Disk

Use this option to modify the pass-through disk attribute. The user can modify the Cache Mode, Tagged Command Queuing, and SCSI Channel/ID/LUN on an existing pass-through disk. To modify the pass-through drive attribute from the pass-through drive pool, move the mouse cursor bar and click on the "Modify Pass-Through" link. The "Select The Pass Through Disk For Modification" screen appears mark the check box for the pass-through disk from the pass-through drive pool and click on the "Submit" button to select drive.



When the "Enter Pass-Through Disk Attribute" screen appears, modify the drive attribute values, as you want. After you complete the selection, mark the check box for "Confirm The Operation" and click on the "Submit" button to complete the selection action.

## 4.7.3 Delete Pass-Through Disk

To delete a pass-through drive from the pass-through drive pool, move the mouse cursor bar to the main menus and click the "Delete Pass Through" link. After you complete the selection, mark the check box for "Confirm The Operation" and click the "Submit" button to complete the delete action.

* · · · · · · · · · · · · · · · · · · ·	Areca Technology Corporation
open all close all	
Raid System Console	Select The Pass Through Disk To Delete     Enclosure#5 : Areca x28-05.75.1.37 000
P → RAID Set Functions     P → Volume Set Functions     P → Volume Set Functions     P → Volume Paras-Through Disk     → Identify Paras-Through Disk     → Identify Enclosure     → Identify Drive     ⊕ System Controls	
🗄 🤖 Information	

## 6.7.4 Clone Disk

Instead of deleting a RAID set and recreating it with larger disk drives, the "Clone Disk" function allows the users to replace larger disk drives to the RAID set that have already been created. Click the "Clone Disk" option on the "Physical Drives" link to enable the clone function. If there is an available disk, then the "Select The Drives For Cloning" screen appears. There are two "Clone Disk" function options: "Clone And Replace " and "Clone Only."

### **Clone Disk Procedure**

- (a) Select one of the members as the "Clone Source" (status indi cated as Raid Set # ) by clicking on the appropriate check box.
- (b) Select a "Clone Target" (status indicated as Free or Hot Spare) by clicking on the appropriate check box.
- (c) If you have available disk member, you can repeat above pro cedures to define another clone pair.
- (d) Select Clone Type.

The pair number for both the "Clone Source" and the "Clone Target" will be indicated in the screen. Click the "Confirm The Operation" check box and click on the "Submit" button on the screen; the controller will automatically start the cloning process using the existing "stand-by" (Free or Hot Spare drive) to clone the source drive (the Raid Set member drive). The cloning process percentage will be indicated in the "Volume State" area of the "Volume Set Information" screen. Completion of the Clone function process will be indicated by a notification message on the event log.

## 6.7.4.1 Clone And Replace

You can enlarge your logical drives by copying and replacing all member drives with drives of higher capacity. The existing data in the logical drives is copied onto the new drives, and then the original members are marked as "Offlined".

### 6.7.4.2 Clone Only

The stand-by disk will clone the logical drives without substituting it. The status of the stand-by drive will be marked as "Offlined" after the cloning process. The source drive will remain a member of the logical drive.

pen all(close all)	1					
taid System Console		ct The Drives For Cloni				
Quick Function	• Enc	losure#1 : ARECA SAT/	A RAID V1.0			
RAID Set Functions		Slot#1	Raid Set # 000	500.1GB	HDS725050KLA360	Clone Source#1
Volume Set Functions Physical Drives		Slot#2	Raid Set # 000	2000.4GB	WDC WD2003FYYS-02W080	Clone Source#2
🔄 Create Pass-Through Disk		Slot#3	Raid Set # 000	500.1GB	WDC WDS000YS-01MPB0	Clone Source#3
Modify Pass-Through Disk     Delete Pass-Through Disk		Slot#4	Free	2000.4G8	WDC WD2003FYYS-02W080	Clone Target#1
- Clone Disk		Slot#5	Free	2000.4G8	WDC WD2003FYYS-02W0B0	Clone Target#2
Abort Cloning     Set Disk To Be Failed		Slot#6	Free	2000.4G8	WDC WD2002FYP5-02W380	Clone Target#3
Activate Failed Disk		Slot#7	Free	2000.4G8	WDC WD2003FYYS-02W080	
Identify Enclosure     Identify Drive		Slot#8	Free	1000.2G8	WDC WD1001FALS+00J780	
System Controls						
Information	Select	t Clone Type Close And R Close And R				

## 6.7.5 Abort Cloning

Use this function to stop the ongoing clone disk action.



## 4.7.6 Set Disk To Be Failed

It sets a normal working disk as "failed" so that users can test some of the features and functions.

T AT MA	Are	ca Technolo	ogy Corpora	tion
open all close all  🦉				
Raid System Console	<ul> <li>Select</li> </ul>	t The Device To Set To Fa	ail	
E Ca Quick Function	Enclo	sure#1 : ARECA SAS RAI	D AdapterV1.0	
🖲 🦳 RAID Set Functions	۲	Slot#2	600.1GB	SEAGATE ST3600057SS
Generations     Generation     House Set Functions     Generation	0	Slot#4	600.1GB	SEAGATE ST3600057SS
Create Pass-Through Disk	0	Slot#5	600.1GB	SEAGATE ST3600057SS
- Modify Pass-Through Disk	0	Slot#6	1000.2GB	SEAGATE ST31000424SS
- Delete Pass-Through Disk	0	Slot#7	1000.2GB	SEAGATE ST31000424S5
Set Disk To Be Failed     Activate Failed Disk	0	Slot#8	1000.2GB	SEAGATE ST31000424SS
Identify Enclosure				
Identify Drive	Cor	firm The Operation		
🖹 🧰 System Controls	Submit	Reset		
🗄 🦲 Information				

## 4.7.7 Activate Failed Disk

It forces the current "failed" disk in the system to be back online. "Activate Failed Disk" function has no effect on the removed disks, because a "removed" disk does not give the controller a chance to mark it as "failure".

Followings are considered as "Removed-Disk":

(1). Manually removed by user

(2). Losing PHY connection due to bad connector, cable, backplane

(3). Losing PHY connection due to disk fail

Basically, in the eyes of the controller, the disk suddenly disappears due to whatever reason.

## 4.7.8 Identify Enclosure

To prevent removing the wrong enclosure, the selected Areca expander enclosure all disks fault LED indicator will light for physically locating the selected enclosure when the "Identify Enclosure" is selected. This function will also light the enclosure LED indicator, if it is existed.



## 4.7.9 Identify Drive

To prevent removing the wrong drive, the selected disk fault LED indicator will light for physically locating the selected disk when the "Identify Selected Device" is selected.

* ** +**				
1 The A Latte	Are	ca Techno	logy Corpora	tion
open all close all				
👰 Raid System Console	• Selec	t The Device For Ident	ification	
🕀 🗀 Quick Function	<ul> <li>Enclo</li> </ul>	sure#1 : ARECA SAS R	AID Adapter¥1.0	
Carlo Set Functions	۲	Slot#2	600.1GB	SEAGATE ST3600057SS
Output Set Functions Output	0	Slot#4	600.1GB	SEAGATE ST360005755
Create Pass-Through Disk	0	Slot#5	600.1GB	SEAGATE ST3600057SS
- Modify Pass-Through Disk	0	Slot#6	1000.2GB	SEAGATE ST31000424SS
Delete Pass-Through Disk	0	Slot#7	1000.2GB	SEAGATE ST31000424SS
Set Disk To Be Failed     Activate Failed Disk	0	Slot#8	1000.2G8	SEAGATE ST31000424SS
Identify Enclosure				
Identify Drive	Submit	Reset		
System Controls     Information				

## 4.8 System Controls

## 4.8.1 System Config

To set the RAID system function, move the cursor to the main menu and click the "System Controls" link. The "Raid System Function" menu will show all items, and then select the desired function.

System Configurations ystem Beeper Setting	Easting
/stem Beeper Setting	The ball of the second s
	LEAKORD M
ackground Task Priority	Low(20%)
OD/RAID Configuration	RAD
ATA NCQ Support	Eastled V
00 Read Ahead Cache	Eabled
olume Data Read Ahead	Normal
DD Queue Depth	32 💌
npty HDD Slot LED	ON M
PU Fan Detection	Disolated V
ES2 Support	Eastied V
ax Command Length	414 💌
uto Activate Incomplete Raid	Disolated V
sk Write Cache Mode	Auto 💌
	20RABD Configuration TA NCQ Support Galak Ahada Cache Umin Data Bead Ahada O Quante Beght Phy NCB Quante Caght I An Detection 52 Support in Command Longth in Command Longth

#### • System Beeper Setting

The "System Beeper Setting" function is used to "Disabled" or "Enabled" the RAID storage alarm tone generator.

#### • Background Task Priority

The "Background Task Priority" is a relative indication of how much time the controller devotes to a rebuild operation. The RAID storage allows the user to choose the rebuild priority (UltraLow, Low, Medium and High) to balance volume set access and rebuild tasks appropriately. For high array performance, specify a "Low" value.

### • JBOD/RAID Configuration

JBOD is an acronym for "Just a Bunch Of Disk". A group of hard disks in a RAID box are not set up as any type of RAID configuration. All drives are available to the operating system as an individual disk. JBOD does not provide data redundancy. User needs to delete the RAID set, when you want to change the option from the RAID to the JBOD function.

### • SATA NCQ Support

The controller supports both SAS and SATA disk drives. The SATA NCQ allows multiple commands to be outstanding within a drive at the same time. Drives that support NCQ have an internal queue where outstanding commands can be dynamically rescheduled or re-ordered, along with the necessary tracking mechanisms for outstanding and completed portions of the workload. The RAID storage allows the user to select the SATA NCQ support: "Enabled" or "Disabled".

### • HDD Read Ahead Cache

Allow Read Ahead (Default: Enabled)—When Enabled, the drive's read ahead cache algorithm is used, providing maximum performance under most circumstances.

### • Volume Data Read Ahead

The volume read data ahead parameter specifies the controller firmware algorithms which process the Read Ahead data blocks from the disk. The read ahead parameter is normal by default. To modify the value, you must set it from the command line using the Read Ahead option. The normal option satisfies the performance requirements for a typical volume. The disabled value implies no read ahead. The most efficient value for the controllers depends on your application. Aggressive read ahead is optimal for sequential access but it degrades random access.

### • HDD Queue Depth

This parameter is adjusted the queue depth capacity of NCQ (SATA HDD) or Tagged Command Queuing (SAS HDD) which transmits multiple commands to a single target without waiting for the initial command to complete.

### • Empty HDD Slot LED

The firmware has added the "Empty HDD Slot LED" option to setup the fault LED light "ON "or "OFF" when there is no HDD installed. When each slot has a power LED for the HDD installed identify, user can set this option to "OFF". Choose option "ON", the RAID storage will light the fault LED; if no HDD installed.

### • Max Command Length

Max Command Length is used to set a "best" IO size for the RAID storage.

### • Auto Activate Incomplete Raid

When some of the disk drives are removed in power off state or boot up stage, the RAID set state will change to "Incomplete State". But if a user wants to automatically continue to work while the RAID storage is powered on, the user can set the "Auto Activate Incomplete Raid" option to enable. The RAID state will change to "Degraded Mode" while it powers on.

#### • Disk Write Cache Mode

User can set the "Disk Write Cache Mode" to Auto, Enabled, or Disabled. "Enabled" increases speed, "Disabled" increases reliability.

### • Write Same For Initialization

Drives that support the Write Same feature (SCT) can write to multiple drive sectors at once, improving initialization time. To take advantage of this feature, all the drives in the unit must support "Write Same" command. User can set the "SAS And SATA", "SAS Only", "SATA Only or "Disabled" for the controller initialization.

### • Hot Plugged Disk For Rebuilding

It defines if the RAID array volume should start rebuilding or not when detects a disk is inserted/re-inserted during online. The options are: "Blank Disk Only", "Always", and "Disable". The default is "Blank Disk Only".

"Blank Disk Only"-it will trigger the rebuilding if and only if the inserted disk has not been in the RAID array before, which has no RAID signature on it. So when a previously removed disk is

self re-inserted, it won't trigger the degraded RAID array to rebuild, and so that the administrator has a chance to identify this miss-behaving disk and replace it.

"Always" – it is what it was before. Whenever a disk is inserted/ re-inserted whether new or previously existed, it always triggers a rebuilding for the Degraded RAID set/Volume.

"Disable" – it will not trigger rebuilding regardless what sort of disk plugging in. When "Disable" and/or "Blank Disk Only" is selected, the re-inserted/previously removed disk will be identified as a disk in a separate RAID set with duplicated RAIDset# and with all the rest of RAID members missing.

#### • Disk Capacity Truncation Mode

RAID storage uses drive truncation so that drives from differing vendors are more likely to be able to be used as spares for each other. Drive truncation slightly decreases the usable capacity of a drive that is used in redundant units. The controller provides three truncation modes in the system configuration: "**Multiples Of 10G**", "**Multiples Of 1G**", and "**Disabled**".

**Multiples Of 10G:** If you have 120 GB drives from different vendors; chances are that the capacity varies slightly. For example, one drive might be 123.5 GB, and the other 120 GB. Multiples Of 10G truncates the number under tens. This makes same capacity for both of these drives so that one could replace the other.

**Multiples Of 1G:** If you have 123 GB drives from different vendors; chances are that the capacity varies slightly. For example, one drive might be 123.5 GB, and the other 123.4 GB. Multiples Of 1G truncates the fractional part. This makes capacity for both of these drives so that one could replace the other. **Disabled:** It does not truncate the capacity.

#### • Smart Option For HDD

This option is used to increase the reliability of SSDs/HDDs by automatically copying data from a drive with potential to fail to a designated hot spare or newly inserted drive. The options are: "Failed The Drive", "Failed The Drive If Hot Sapre Exist", and "Alert Only". The default is "Alert Only" "Failed The Drive"- controllers kill off the SMART fail drive immediately.

"Failed The Drive If Hot Sapre Exist" – controllers kill off the SMART fail disk if hot sapre dive is existed.

"Alert" – it will trigger alert when there happens a SMART fail drive.

### • Smart Polling Interval

Besides the scheduled volume check, user can define the Smart Pulling Interval to pull the SMART status of each disk. The default is "on demand". User can schedule every certain period of time interval to pull the SMART status of each disk. When SMART pulling is executed, disk activity will be temporally halted until the SMART parameter reading is finished. That is why you don't want to set the "Smart Polling Interval" too frequent. What to use is up to the users to decide based on their applications and experimental results.

## 4.8.2 Advanced Configuration

To set the RAID storage advanced system function, move the cursor to the main menu and click the "Advanced Configuration" link. The "Advanced Configuration" menu will show all items, and then select the desired function.

en all close all	S				
Raid System Console	Advanced Configurations				
Quick Function Quick Functions Volume Set Functions Outputs of Functions Outputs of Functions System Controls System Configuration Advanced Configuration	TLER Setting	Default Y			
	Timeout Setting	8 V Seconds			
	Number Of Retries	2 🛩			
	Buffer Threshold Setting	25% 🛩			
	Amount Of Read Ahead	Auto 🛩			
Hdd Power Management EtherNet Configuration	Number Of AV Streams	6 🗸			
Alert By Mail Configuration	Optimize AV Recording	Disabled V			
SNMP Configuration	Read Performance Margin	0% ¥			
NTP Configuration View Events/Mute Beeper	Write Performance Margin	0% 🛩			
Generate Test Event	Read And Discard Parity Data	Disabled V			
Modify Password					
Upgrade Firmware	Confirm The Operation				

### • TLER Setting

TLER (time-limited error recovery) functions provide support for WD Caviar RE (RAID) series disks. This is a new option from WD to support RAID features that were traditionally missing from standard desktop drives. TLER is a method of signaling the system RAID controller in the event that an error recovery process

is taking longer than time-out specifications allow. This prevents the RAID controller from dropping the drive from the array during this period. Default value is manufacture setting. You can select between 5, 6 and 7 second. This feature is used to setup the HDD internal timeout value.

#### • Timeout Setting

Disk time-out is a registry setting that defines the time that RAID controller will wait for a hard disk to respond to a command. You can modify the retry value by entering a new value in the edit box beside this button and then selecting the button. Normally you should not need to modify this value. Default value is 8 seconds: You can select between 3~8 second.

#### • Number of Retries

This setting determines the number of access that will be attempted before the current command from the RAID controller to the disk drive is aborted. You can modify the retry value by entering a new value in the edit box beside this button and then selecting the button. Normally you should not need to modify this value. There are two selections, either 2 retry or 3 retry.

#### Buffer Threshold

This new feature there are 3 options; 25%, 50%, 75%. The percentage represents how much data should be kept in resident cache memory (how full cache should get) before controller starts to flush data onto the hard drives. If the buffer is set for 25%, then all 25% will be cached and is used for writing data. The remaining cache memory will be used for reading and other system overhead. Write buffer threshold for 5% is added for video recording. This option will push data to disk early.

This feature gives controller extra buffer time in case of slow response from the hard drives within a given time. Consequently, this can prevent a pause in data flow and there will be continued data access and stream. This feature is very useful for the video streaming applications where there is high demand for constant non-stop data flow with no interruption due to lower performance of specific hardware.

#### Amount of Read Ahead

Read-Ahead data is buffered in the RAID controller cache,

however, thereby cutting down on the amount of I/O traffic to the disk. The Amount of Read Ahead defines how many data of reading at a time, making more efficient use of the RAID storage. This makes it possible to locate and re-issue the data without repetitive hard parsing activities.

The Amount of Read Ahead parameter is used to allocate an amount of memory in the cache memory the frequently executed queries and return the result set back to the host without real disk read execution. Default value is Auto: Controller will base on the HDD number to set the amount of Read Ahead value. You can select between 512KB  $\sim 16$ MB.

#### • Number of AV Stream

RAID controllers are required to have not only the function of processing ordinary data but also the function of dealing with AV (audio/video) stream data needing real-time processing. Since the bus cycle used in RAID controller was designed to transfer the computer data exactly, it was unsuitable for the transfer of AV stream needing great band widths. They are required to do some setting for the handshaking during the processing of stream data. This setting is an object of transferring stream data efficiently on an existing RAID controller. Normally you should not need to modify this value. Default value is 6. You can select between 6~256.

To decide how to set AV stream play out parameter, you need to check the Number of Stream, Amount of Read Ahead, and Total Cache Memory during runtime. You can try to adjust the three numbers to get the best performance as your requirement. Number of Stream shows the number of stream added to the system, Amount of Read Ahead shows the amount of Read Ahead data taken from the cache without real disk execution, and Total Cache Memory shows the total available memory being installed in the RAID controller.

#### • Optimize AV Recording

AV recording option is for video recording (no time limit), but if used in normal operation, performance may be degraded. This new feature there are 4 options; Disabled, Mode1, Mode2 and Mode 3. Default value is "Disabled". Our controller cache uses LRU method; there have no special memory capacity reserved

for read or write. The Mode 1, 2 and 3 are used to define the command sorting method. The default sorting method is helpful for normal applications, but not useful for AV applications, so we have defined three different sorting methods for these special applications. To decide how to optimize AV stream recording parameter, you need to adjust the Optimize AV Recording, and Write Buffer Threshold during runtime.

#### • Read Performance Margin

The "Read Performance Margin" is for controller to reserve n% read margin during AV stream recording. It is designed to eliminate the frame drop and ensure to provide the smooth and stable performance on the application.

#### • Write Performance Margin

The "Write Performance Margin" is for controller to reserve n% write margin AV stream recording. It is designed to eliminate the frame drop and ensure to provide the smooth and stable performance on the application.

#### • Read And Discard Parity Data

This function is used to determine if parity data is to be read and discarded. It is designed to eliminate the frame drop and ensure to provide the smooth and stable performance on the application.

### 4.8.3 HDD Power Management

Areca has automated the ability to manage HDD power based on usage patterns. The "HDD Power Management" allows you to choose a "Stagger Power On Control", "Low Power Idle", "Low RPM" and completely "Spins Down Idle HDD". It is designed to reduce power consumption and heat generation on idle drives. To set the HDD power management function, move the cursor to the main menu and click the "HDD Power Management" link. The "HDD Power Management" menu will show all items, and then select the desired function.

			_
* 21 1/4+	Areca Technology Corpo	ration	
the water and the fin	Areca recimology corpo	Tation	
open all close all  🛛 🛛			
Raid System Console	Hdd Power Management		
Cuick Function	Stagger Power On Control	0.7 🛩	
Galactions     Galaction     Galaction	Time To Hdd Low Power Idle	Disabled 💌	
🖲 🗀 Physical Drives	Time To Hdd Low RPM Mode	Disabled V	
System Controls System Configuration	Time To Spin Down Idle HDD	1(For Testing)	
Advanced Configuration	SATA Power Up In Standby	Default 🔽	
Hdd Power Management     EtherNet Configuration		Default	
Alert By Mail Configuration	Confirm The Operation	Disabled Enabled	
SNMP Configuration	Submit Reset		
NTP Configuration			
View Events/Mute Beeper	2		
Generate Test Event			
Clear Event Buffer			
Modify Password			
Upgrade Firmware			
🗄 🧰 Information			

#### • Stagger Power On Control

In a PC system with only one or two drives, the power can sup ply enough power to spin up both drives simultaneously. But in systems with more than two drives, the startup current from spinning up the drives all at once can overload the power supply, causing damage to the power supply, disk drives and other system components. This damage can be avoided by allowing the host to stagger the spin-up of the drives. The SAS/SATA drives have supported the staggered spin-up capabilities to boost reliability. The staggered drive spin-up is a very useful feature for managing multiple disk drives in a storage. It gives the host the ability to spin up the disk drives sequentially or in groups, allowing the drives to come ready at the optimum time without straining the system power supply. The staggered drive spin-up in a multiple drive environment also avoids the extra cost of a power supply designed to meet short-term startup power demand as well as steady state conditions.

With this option it gives the RAID storage the ability to spin up the disk drives sequentially staggered power up value. The values can be selected from 0.4 to 6 seconds per step which powers up one drive.

#### • Time to Hdd Low Power Idle

This option delivers lower power consumption by automatically unloading recording heads during the setting idle time. The values can be selected "Disabled" or within the range 2 to 7 minutes.

#### • Time To Hdd Low RPM Mode

This function can automatically spin disks at lower RPM if there have not been used during the setting idle time. The values can be selected "Disabled" or within the range 10 to 60 minutes.

### • Time To Spin Down Idle HDD

This function can automatically spin down the drive if it hasn't been accessed for a certain amount of time. This value is used by the drive to determine how long to wait (with no disk activity, before turning off the spindle motor to save power). The values can be selected "Disabled" or within the range 1 to 60 minutes.

### • SATA Power Up In Standby

SATA Power Up In Standby (power management 2 mode, PM2) is a SATA disk drive configuration which prevents the drive from automatic spinup when power is applied. "Enabled" option allows the drive to be powered-up into the Standby power management state to minimize inrush current at power-up and to allow the controller to sequence the spinup of devices. It is mainly for server/workstation environments operating in multiple-drive configurations.

## 4.8.4 Ethernet Configuration

Use this feature to set the controller Ethernet port configuration. A customer doesn't need to create a reserved space on the arrays before the Ethernet port and HTTP service are working. The firmware-embedded web browser-based RAID manager can access it from any standard internet browser or from any host computer either directly connected or via a LAN or WAN with no software or patches required. To configure the RAID controller Ethernet port, move the cursor bar to the main menu and click on the "System Controls" link. The "System Controls" menu will show all items. Move the cursor bar to the "Ethernet Configuration" item, and then select the desired function.

II close all			
stem Console	Ether Net Configurations		
k Function	DHCP Function	Enabled V	
ALID Set Functions     Volume Set Functions     Physical Drives     System Configuration     Advancd Configuration     Advancd Configuration     Heff By Mail Configuration     SIMP Configuration     SIMP Configuration     View Events/Mute Beeper	Local IP Address (Used If DHCP Disabled)	192 . 168 . 1 . 100	
	Gateway IP Address (Used If DHCP Disabled)	192 . 168 . 1 1	
	Subnet Mask (Used If DHCP Disabled)	255 ,255 ,0	
	HTTP Port Number (71688191 Is Reserved)	80	
	Telnet Port Number (71688191 Is Reserved)	23	
	SMTP Port Number (71688191 Is Reserved)	25	
	Current IP Address	192.168.0.103	
	Current Gateway IP Address	192.168.0.1	
enerate Test Event	Current Subnet Mask	255.255.255.0	
Clear Event Buffer Modify Password Upgrade Firmware formation	Ether Net MAC Address	00.18.40.40.00.51	
	Confirm The Operation		
	Submit Reset		
	Submit Reset		

### • DHCP Function

DHCP (Dynamic Host Configuration Protocol) is a protocol that lets network administrators manage centrally and automate the assignment of IP (Internet Protocol) configurations on a computer network. When using the internet's set of protocols (TCP/ IP), in order for a computer system to communicate to another computer system, it needs a unique IP address. Without DHCP, the IP address must be entered manually at each computer system. DHCP lets a network administrator supervise and distribute IP addresses from a central point. The purpose of DHCP is to provide the automatic (dynamic) allocation of IP client configurations for a specific time period (called a lease period) and to eliminate the work necessary to administer a large IP network.

### • Local IP address

If you intend to set up your client computers manually (no DHCP), make sure that the assigned IP address is in the same range as the default router address and that it is unique to your private network. However, it is highly recommend to use DHCP if that option is available on your network. An IP address allocation scheme will reduce the time it takes to set-up client computers and eliminate the possibilities of administrative errors and duplicate addresses. To manually configure the IP address of the controller, move the cursor bar to Local IP address item, then reassign the static IP address of the controller.

### • Gateway IP address

A gateway is a node (a router) on a TCP/IP network that serves as an access point to another network. A default gateway is the node on the computer network that the network software uses when an IP address does not match any other routes in the routing table.

#### • Subnet Mask

A Subnet mask is a 32-bit number that masks an IP address, and divides the IP address into network address and host address.

#### • HTTP Port Number

To manually configure the "HTTP Port Number" of the controller, move the cursor bar to "HTTP Port Number" item, then reassign

the default "HTTP Port Number" of the controller.

#### • Telnet Port Number

To manually configure the "Telnet Port Number" of the controller, move the cursor bar to "Telnet Port Number" item, then reassign the default "Telnet Port Number" of the controller.

#### • SMTP Port Number

To manually configure the "SMTP Port Number" of the controller, Move the cursor bar to "SMTP Port Number" item, then reassign the default "SMTP Port Number" of the controller.

### Note:

If you configure the HTTP Port Number to 0, the HTTP console will be closed.

## 4.8.5 Alert By Mail Configuration

To configure the RAID storage e-mail function, move the cursor bar to the main menu and click on the "System Controls" link. The "System Controls" menu will show all items. Move the cursor bar to the "Alert By Mail Configuration" item, and then select the desired function. This function can only be set via web-based configuration.

The firmware contains a SMTP manager monitoring all system events. Single or multiple user notifications can be sent via "Plain English" e-mails with no software required. (Please refer to section 3.2 ArcHttp Configuration of SMTP Sever Configuration, Mail Address Configuration and Event Notification Configuration).

Areca Technology Corporation			
open all close all			
Add System Console  Curk Function  ADJ Set Function  Add Set Functions  Physical Drwss  System Controls  Advance Configuration  Advance Configuration  Advance Configuration  Charter Management  Charter Vent Swife  Configuration  Midd Possword  Upgrade Filmware  D  Information	SMTP Server Configuration		
	SMTP Server IP Address	0 0 0	
	Mail Address Configurations		
	Sender Name :	Mail Address :	
	Account :	Password :	
	Event Notification Configurations		
	MailTo Name1 :	Mail Address :	
	Disable Event Notification	No Event Notification Will Be Sent	
	C Urgent Error Notification	Send Only Urgent Event	
	C Serious Error Notification	Send Urgent And Serious Event	
	O Warning Error Notification	Send Urgent, Serious And Warning Event	
	C Information Notification	Send All Event	
	Notification For No Event	Notify User If No Event Occurs Within 24 Hours	
	MailTo Name2 :	Mail Address :	
	Disable Event Notification	No Event Notification Will Be Sent	
## 4.8.6 SNMP Configuration

Please refer to Appendix C of SNMP Operation & Installation.

## 4.8.7 NTP Configuration

The Network Time Protocol (NTP) is used to synchronize the time of a computer client or server to another server or reference time source, such as a radio or satellite receiver or modem. It provides accuracies typically within a millisecond on LANs and up to a few tens of milliseconds on WANs relative to Coordinated Universal Time (UTC) via a Global Positioning Service (GPS) receiver, for example:

The State of a state of the sta	Areca Technology Corpo	ration			
Iopen all Ilclose all     Faid System Console     Guck Function     Guck Function     Model	HTP Server Configurations     HTP Server IP Address #1     HTP Server IP Address #1     HTP Server IP Address #2     Time Zone (GMI-12 Objectmational Date Line West     Automatic Day/ght Saving (Chalder V     Current Time 2011/g/16 16/31/4     HTP Server Not Set     Confirm The Operation     Submit Rest	0 . 0 0 . 0	0 0	. 0	
	•				

### Note:

NTP feature works through onboard Ethernet port. So you must make sure that you have connected onboard Ethernet port.

### • NTP Sever Address

The most important factor in providing accurate, reliable time is the selection of NTP servers to be used in the configuration file. Typical NTP configurations utilize multiple redundant servers and diverse network paths in order to achieve high accuracy and reliability. Our NTP configuration supports two existing public NTP synchronization subnets.

#### • Time Zone

Time Zone conveniently runs in the system tray and allows you to easily view the date and time in various locations around the world. You can also quickly and easily add your own personal locations to customize time zone the way you want.

### • Automatic Daylight Saving

Automatic Daylight Saving will normally attempt to automatically adjust the system clock for daylight saving changes based on the computer time zone. This tweak allows you to disable the automatic adjustment.

## 4.8.8 View Events/Mute Beeper

To view the RAID storage's event information, click on the "View Event/Mute Beeper" link. The RAID storage "System events Information" screen appears. The mute beeper function automatically enable by clicking on "View Events/Mute Beeper".

pen all close all					
Raid System Console	System Event	s Information			
Quick Function	Time	Device	Event Type	Elapse Time	Errors
RAID Set Functions Volume Set Functions	2010-03-25 10:27:08	Proxy Or Inband	HTTP Log In		
Physical Drives System Controls	2010-03-25 10:10:28	192.168.000.148	HTTP Log In		
<ul> <li>System Configuration</li> <li>Advancd Configuration</li> </ul>	2010-03-25 10:07:33	ARC-1880-VOL#003	Complete Rebuild	000:07:32	
Hdd Power Management EtherNet Configuration	2010-03-25 10:02:50	192.168.000.148	HTTP Log In		
Alert By Mail Configuration	2010-03-25 10:01:27	192.168.000.145	HTTP Log In		
NTP Configuration	2010-03-25 09:59:30	ARC-1880-VOL#003	Start Rebuilding		
Generate Test Event	2010-03-25 09:59:30	ARC-1880-VOL#000	Start Rebuilding		
Modify Password     Upgrade Firmware     Information	2010-03-25 09:59:30	ARC-1880-VOL#001	Start Rebuilding		
Information	2010-03-25	000.000000555000	protect patrolid up a point		

Select this option to view the system events information: Time, Device, Event Type, Elapse Time and Errors. The RAID storage does not have a built-in real time clock. The time information is the relative time from the system time setting. The maximum event no. is 256 per controller.

## 4.8.9 Generate Test Event

Use this feature to generate events for testing purposes.

Areca Technology Corporation
Do You Want To Generate Test Event?
Confirm The Operation
Commining operation
Submit Reset
J

### 4.8.10 Clear Events Buffer

Use this feature to clear the entire events buffer information.

CALL STREET, SALES AND AND ADDRESS OF A DESCRIPTION OF A	Areca Technology Corporation
Image: System Console       Image: System Console       Image: Console	Oo You Want To Clear The Event Buffer?      Confirm The Operation      Sobnt Reset

### 4.8.11 Modify Password

To set or change the RAID storage password, select "System Controls" from the menu and click on the "Modify Password" link. The "Modify System Password" screen appears.

The password option allows user to set or clear the RAID storage's password protection feature. Once the password has been set, the user can only monitor and configure the RAID storage by providing the correct password. The password is used to protect the RAID storage from unauthorized entry. The controller will check the password only when entering the main menu from the initial screen. The RAID storage will automatically go back to the initial screen when it does not receive any command in 5 minutes. Do not use spaces when you enter the password. If spaces are used, it will lock out the user.

To disable the password, leave the fields blank. Once the user confirms the operation and clicks the "Submit" button, the exist-

ing password will be cleared. Then, no password checking will occur when entering the main menu from the starting screen.

en all close all			
Raid System Console  Modify System Password			
Quick Function Enter Original Password	••••		
RAID Set Functions     Volume Set Functions     Enter New Password			
Physical Drives     System Controls	••••		
System Configuration     Advancd Configuration     Confirm The Operation		 	 
Hdd Power Management     Submit Reset			
EtherNet Configuration     Alert By Mail Configuration		 	 
Alert By Mail Configuration     SNMP Configuration			
NTP Configuration			
View Events/Mute Beeper     Generate Test Event			
Clear Event Buffer			
Modify Password			
Upgrade Firmware			
information			
Note:			

### 4.8.12 Update Firmware

Please refer to the appendix A "Upgrading Flash ROM Update Process".

the state of the second			
the office of the first	Areca Technology Corpora	tion	
open all close all			
Raid System Console	• Upgrade The Raid System Firmware Or Boot Rom		
🖲 🛄 Quick Function	Enter The BootRom Or Firmware File Name		孝[證
General Content Functions     General Content Con			
B D Physical Drives	Confirm The Operation		
🖻 🗃 System Controls	Submit Reset		
System Configuration			
Advancd Configuration     Hdd Power Management			
EtherNet Configuration			
Alert By Mail Configuration			
SNMP Configuration     NTP Configuration			
View Events/Mute Beeper			
Generate Test Event			
- Clear Event Buffer			
Modify Password     Upgrade Firmware			
Opgrade Prinware     Information			
_			

## 4.9 Information

## 4.9.1 Raid Set Hierarchy

Use this feature to view the RAID storage current RAID set, current volume set and physical disk information. The volume state and capacity are also shown in this screen.

RaidSet Hierar     RAID Set	chy Devices		Volume Set(Ch/Id/Lun)	Volume State	Capacity
Raid Set # 000	C#1Slot#2		ARC-0050-VOL#000(0/0/0)	Volume state	200.053
NB0.091.0.000	E#15ict#4		ARC-8050-VOL#001(0/0/1)	Normal	400.0GB
	Existent.		Inc. Total Contraction of the		
	E#15lot#6				
	E#15lot#7				
	F#15kct#R				
	ARE CA BAS RAID AdoptorV1.0				
Device	Usage	Cepacity	Model		
Slot#1					
Sht#2001	Raid Sot # 000	600.168	SEAGATE ST39000575S		
Slot#3 Slot#4(E)	N.A. Raid Set # 000	N.A. 600.1GB	N.A. SEAGATE ST360005755		
Slot#4(E) Slot#5(9)	Raid Set # 000 Raid Set # 000	600.1GB	SEAGATE ST360005755 SEAGATE ST360005755		
Shot#6(A)	Raid Set # 000	1000.208	SEAGATE 51 300005755		
Slot#7(B)	Raid Set # 000	1000.258	SE4GATE ST3100042455		
Slat#B(C)	Raid Set # 000	1000.268	SEAGATE ST21000424RS		

### 4.9.2 SAS Chip Information

To view the RAID storage's 6Gb/s SAS ROC chip information, move the mouse cursor to the main menu and click on the "SAS Chip Information" link. The RAID storage "SAS Chip Information" screen appears.

User can click on "controller: Areca ARC-8050" item on the "SAS Chip Information" screen. It will show statistic page for ports on the ROC controller. Click on the "Clear Error Log" to refresh the fully statistic page.

* 2 14	Areca Technolog	v Corporation	
open alliclose alli		, corporation	
👰 Raid System Console	Controller: Areca ARC-8050 1.51		
B Cal Quick Function	SAS Address	50004D939977E000	
🖻 🦕 RAID Set Functions	Enclosure	ENC#1	
Generations     Generation     Set Functions     Generation	Number Of Phys	8	
System Controls     Sufference     System Controls     System Information     System Information     Hardware Monitor			

### 4.9.3 System Information

To view the RAID storage's system information, move the mouse cursor to the main menu and click on the "System Information" link. The RAID storage "RAID Subsystem Information" screen appears.

Use this feature to view the RAID storage's system information. The controller name, controller firmware version, Boot ROM version, SAS firmware version, serial number, main processor, CPU instruction/data cache size, system memory size/speed, and current IP address appear in this screen.

close all	<u>^</u>	
em Console	Raid Subsystem Information	
unction	Controller Name	ARC-8050
at Functions	Firmware Version	V1.51 2012-07-27
Set Functions Il Drives	BOOT ROM Version	V1.51 2012-07-27
Controls	PL Firmware Version	13.0.59.0
ition Set Hierarchy	Serial Number	1100-2116-6633
AS Chip Information ystem Information	Unit Serial #	
	Main Processor	800MHz PPC440 RevD1
ware Monitor	CPU ICache Size	32KBytes
	CPU DCache Size	32KBytes/Write Back
	CPU SCache Size	1024KBytes/Write Through
	System Memory	1024MB/1333MH#/ECC
	PCI-E Link Status	4305G
	Current IP Address	192.168.0.183

### 4.9.4 Hardware Monitor

The hardware monitor information of the enclosure attached in this controller is also shown on this screen.

terminal and the statement the bar	Areca Technology Corpor	ation			
pen all close all	<u></u>				
Raid System Console	Stop Auto Refresh Controller H/W Monitor				
Quick Function					
RAID Set Functions	CPU Temperature	55 °C			
Volume Set Functions Physical Drives	Controller Temp.	40 °C			
Arysta Drives     System Controls     Anote Controls     And Set Hierarchy     SAS Chip Information     System Information     Hardware Monitor	12V	12.281 V			
	5V	5.080 V			
	3.3V	3.360 V			
	IO Voltage +1.8V	1.808 V			
	DDR3 +1.5V	1.504 V			
	CPU VCore +1.0V	1.040 V			
	Analog +1.0V	0.992 V			
	DDR3 +0.75V	0.736 V			
	Battery Status	Not Installed			
	Enclosure#1 : ARECA SAS RAID AdapterV1.0				
	Fan#1	1670 RPM			
	Fan#2	1739 RPM			

# **Appendix A**

# **Upgrading Flash ROM Update Process**

### A-1 Overview

Since the ARC-8050 Thunderbolt RAID storage features flash ROM firmware, it is not necessary to change the hardware flash chip in order to upgrade the RAID firmware. The user can simply reprogram the old firmware through the In-Band Thunderbolt port or Out-of-Band Ethernet port McRAID Storage manager. ARC-8050 Thunderbolt RAID storage uses the same firmware package of ARC-1882 series RAID adapters. New releases of the firmware are available in the form of a DOS file on the shipped CD or Areca website. The files available at the FTP site for each model contain the following files in each version:

ARC8050NNNN.BIN: Software binary code ("NNNN" refers to the software code type)

ARC8050UEFI.BIN:→ PCIe 2.0 UEFI BIOS for system board using ARC8050BOOT.BIN:→ RAID controller hardware initialization ARC8050FIRM.BIN:→ RAID kernel program ARC8050MBR0.BIN:→ Master Boot Record for supporting Dual Flash Image in the ARC-8050 6Gb/s SAS RAID storage

README.TXT contains the history information of the software code change in the main directory. Read this file first to make sure you are upgrading to the proper binary file. Select the right file for the upgrade. Normally, user upgrades ARC8050FIRM.BIN for RAID function. All these files in the firmware package are a part of the firmware. You should update all files in the package, no special update order needed. New firmware works after a system restart not instant available, so you can update all files before restart the system. The controller firmware is independent of the array; update firmware does not touch anything you stored in the array.

### Note:

Please update all binary code (UEFI, BOOT, FIRM and MBR0) before you reboot system. Otherwise, a mixed firmware package may hang the controller.

#### A-2 Upgrading Firmware Through McRAID Storage Manager

Get the new version firmware for your RAID storage. For example, download the bin file from your OEM's web site onto the C: drive.

jopen alliclose alli	Areca Technology Corporat	ion	
Ald System Console     Add Set Function     Add Set Function	Lipgrade The Raid System Firmware Or Boot Rom Enter The BootStom Or Firmware File Name      Condim The Operation      Submt Reset		

1. To upgrade the RAID storage firmware, move the mouse cursor to "Upgrade Firmware" link. The "Upgrade The Raid System Firmware or Boot Rom" screen appears.

2. Click "Browse". Look in the location to which the Firmware upgrade software was downloaded. Select the file name and click "Open".

3. Click "Confirm The Operation" and press the "Submit" button.

4. The web browser begins to download the firmware binary to the controller and start to update the flash ROM.

5. After the firmware upgrade is complete, a bar indicator will show "Firmware Has Been Updated Successfully".

6. After the new firmware completes downloading, find a chance to restart the controller/computer for the new firmware to take effect.

The web browser-based McRAID storage manager can be accessed through the in-band Thunderbolt port or out-of-band LAN port. The in-band method uses the ArcHttp proxy server to launch the McRAID storage manager. The out-of-band method allows local or remote to access the McRAID storage manager from any standard internet browser via a LAN or WAN with no software or patches required. Controller with onboard LAN port, you can directly plug an Ethernet cable to the controller LAN port. After network connected, you can find the current IP address in the LCD panel.

From a remote pc, you can directly open a web browser and enter the IP address. Then enter user name and password to login and start your management. You can find the firmware update feature from the "Upgrade Firmware" option on the "System Controls".

### A-3 Upgrading Firmware Through CLI

This Command Line Interface (CLI) provides you to configure and manage the RAID storage components in Mac environment. The CLI is useful in environments where a graphical user interface (GUI) is not available. Through the CLI, you perform firmware upgrade that you can perform with the McRAID storage manager GUI. The controller has added protocol on the firmware for user to update the controller firmware package (UEFI,BOOT, FIRM and MBR0) through the CLI utility.

To update the controller firmware, follow the procedure below:

Parameter:<path=<PATH\_OF\_FIRMWARE\_FILE>> Fn: Firmware Updating. Ex: Update Firmware And File Path Is In [C:\FW\ARC8050FIRM.BIN.] Command: sys updatefw path=c:\fw\arc8050firm.bin [Enter]

# **Appendix B**

## Battery Backup Module (ARC-6120BAT021)

ARC-8050 RAID storage operates using cache memory. The Battery Backup Module is an add-on module that provides power to the RAID storage cache memory in the event of a power failure. The BBM monitors the write back cache on the RAID storage, and provides power to the cache memory if it contains data not yet written to the hard drives when power failure occurs.

#### **B-1 BBM Connector and Components**

This section provides the board layout and connector/jumper for the BBM.

- D13 (Green): light when BBM activated
- D14 (Red): light when BBM charging
- D15 (Green): light when BBM normal



### **B-2 Status of BBM**

The BBM status will be shown on the web browser of "Hardware Monitor Information" screen.

ALCONT MANAGER	Areca Technology Corporat	011			
all[close all]	<u> </u>				
System Console	Stop Auto Refresh				
ick Function	Controller H/W Monitor				
ID Set Functions lume Set Functions	CPU Temperature	74 °C			
vsical Drives	Controller Temp.	41 °C			
stem Controls	12V	12.099 V			
ormation	SV	4.072 V			
RAID Set Hierarchy	3.3V	3.360 V			
System Information Hardware Monitor	DDR-II +1.8V	1.760 V			
Hardware Monitor	CPU +1.8V	1.760 V			
	CPU +1.2V	1.200 V			
	CPU +1.0V	0.992 V			
	DDR-II +0.9V	0.864 V			
	RTC 3.0V	3.344 V			
	Battery Status	Not Installed			
	Enclosure#1 : ARECA RAID Subsystem V1.0				
	Fan#1	1339 RPM			
	Fan#2	1318 RPM			
	<ul> <li>Enclosure#2 : Areca x28-05.75.1.37 000 (26)</li> </ul>				
	1.2V	1.170 V			
	01				

### **B-3 Installation**

1. Make sure all power to the RAID storage is disconnected. 2. Install the "six eaves copper pillars" on the three mounting position (NH1, NH2 and NH3) and secures it using round head screws.



3. Connector J2 is available for the optional battery backup module. Connect the BBM cable to the 12-pin (J6) battery connector on the controller.

4. Integrators provide pre-drilled holes in their cabinet for securing the three "six eaves copper pillars" on the BBM using round head screws.



### **B-4 Battery Backup Capacity**

Battery backup capacity is defined as the maximum duration of a power failure for which data in the cache memory can be maintained by the battery. The BBM's backup capacity varied with the memory chips that installed on the RAID storage.

### **B-5 Operation**

1. Battery conditioning is automatic. There are no manual procedures for battery conditioning or preconditioning to be performed by the user.

2. In order to make sure of all the capacity is available for your battery cells; allow the battery cell to be fully charged when installed for the first time. The first time charge of a battery cell takes about 24 hours to complete.

3. Set the "Disk Write Cache Mode": Auto, if "Disk Write Cache" option does not set on the "Auto".

4. Set the volume set "Cache Mode": Write-Back Cache.

#### **B-6 Battery Functionality Test Procedure**

1. Write amount of data into controller volume, about 5GB or bigger.

2. Waiting for few seconds, power failed system by remove the power cable

3. Check the battery status, battery beeps every few seconds.

4. Power on system, and login in the RAID storage.

5. Check the controller event log; make sure the event shows controller boot up with power recovered.

### B-7 Changing the Battery Backup Module

At some point, the LI-ION battery will no longer accept a charge properly. LI-ION battery life expectancy is anywhere from approximately 1 to 5 years.

1. Power down the RAID storage properly. Make sure that cache memory has been flushed.

2. Remove all "Round head screws" from the cabinet.

3. Disconnect the BBM cable from J5 on the RAID storage controller.

4. Disconnect the battery pack cable from JP2 on the BBM.

5. Install a new battery pack and connect the new battery pack to JP2.

6. Connect the BBM to J6 on the RAID storage controller.

7. Secure the "Round head screws" into the BBM.

8. Disable the write-back function from the LCD or McRAID storage manager.

#### **B-8 BBM Specifications**

Mechanical • Module Dimension (W x H x D) 37.3 x 13 x 81.6 mm

Environmental • Operating Temperature Temperature: 0° C to +40° C Humidity: 45-85%, non-condensing

• Storage Temperature Temperature: -40° C to 60° C Humidity: 45-85%, non-condensing

• Electrical Input Voltage +3.6VDC

• On Board Battery Capacity 1880mAH (1 \* 1880mAH) for ARC-8050 RAID storage

# Appendix C

## **SNMP** Operation & Installation

#### **C-1 Overview**

McRAID storage manager includes a firmware-embedded Simple Network Management Protocol (SNMP) agent and SNMP Extension Agent for the Areca RAID controller. An SNMP-based management application (also known as an SNMP manager) can monitor the disk array. An example of a SNMP management application is Hewlett-Packard's Open View, Net-SNMP or SNMPc. The SNMP extension agent can be used to augment the Areca RAID controller if you are already running an SNMP management application at your site.

#### **C-2 SNMP Definition**

SNMP, an IP-based protocol, has a set of commands for getting the status of target devices. The SNMP management platform is called the SNMP manager, and the managed devices have the SNMP agent loaded. Management data is organized in a hierarchical data structure called the Management Information Base (MIB). These MIBs are defined and sanctioned by various industry associations. Each type of device on your network has its own specific MIB file. The MIB file defines the device as a set of managed objects - values that can be read or changed by the SNMP manager. The MIB file enables the SNMP manager to interpret trap messages from devices. To make sense out of a trap that's sent by a device, the SNMP manager needs to have access to the MIB that describes the format and content of the possible traps that the device can send. The objective is for all vendors to create products in compliance with these MIBs so that inter-vendor interoperability can be achieved. To be available for the SNMP manager, a command adds the MIB file for each of devices to the MIB database. This enables the devices to be managed via the SNMP manager.

The following figure illustrates the various components of an SNMPbased management architecture.



### **C-3 SNMP Installation**

Perform the following steps to install the Areca RAID controller SNMP function into the SNMP manager. The installation of the SNMP manager is accomplished in several phases:

#### Step 1. Installing the SNMP manager software on the client

Installing the SNMP manager software on the client. This installation process is well-covered in the User's Guide of your SNMP manager application.

# **Step 2. Compiling the MIB description file with the management**

Placing a copy of the RAID controller's MIBs file in a directory which is accessible to the management application and compile the MIB description file with the SNMP management application database. Before the manager application accesses the Areca RAID controller, it is necessary to integrate the MIB into the management application's database of events and status indicator codes. This process is known as "compiling" the MIB into the application. This process is highly vendor-specific and should be well-covered in the User's Guide of your SNMP manager application. Ensure the compilation process successfully integrates the contents of the areca\_sas.mib file into the traps database. The MIBs file resides at: <CD-ROM> packages\SNMP\_MIBs on the software CD or download from http:// www.areca.com.tw.

Each RAID storage needs to have its own MIBs file. Areca provides 4 RAID storage MIBs file for users. User can request it if more controllers install on one system.

### Note:

1. The MIB compiler may be not installed by default with SNMP manager.

2. Some SNMP managers have unique rule on the format of MIB files, you may need to refer the error message to modify the mib file to be able to met the software requirement.

### Step 3. SNMP Service Method

With Areca series RAID controllers, there are 2 service methods to get SNMP: in-band Thunderbolt port and onboard NIC.

(1). Service Method-1: Using in-band Thunderbolt port (ArcHttp proxy server)

Pay attention to these:

- Do not check mark the option: "SNMP Through PCI".
- Make sure you have the latest driver and ArcHttp, from this URL http://www.areca.com.tw/support/

• ArcHttp supports sending "traps" only, do not support the "get" command.

(2). Service Method-2: Using onboard LAN port.

Pay attention to these:

- Do not check mark the option: "SNMP Through PCI".
- Do need to fill out the "SNMP Trap Config".

### C-3-1 Using ArcHttp

The HTTP management software (Archttp) runs as a service or daemon, and has it automatically start the proxy for all controllers found. This way the controller can be managed remotely without having to sign in the server. The Archttp has also integrated the ability of sending SNMP trap. Please reference the manual Chapter 3 "ArcHttp Proxy Server Installation" section to install and setup its configuration.

To enable the controller to send the SNMP traps to client SNMP

manager using the IP address assigned to the operating system, such as Net-SNMP manager, you can simply use the SNMP function on the ArcHttp proxy server utility. To enable the RAID controller SNMP traps sending function, configure the "SNMP Traps Configuration" options on the "ArcHTTP Configurations". The Archttp proxy only provides one direction to send the trap to the SNMP manager without needing to install the SNMP extension agent on the host. For detailed information on using Archttp proxy server utility to send the SNMP traps, please see "SNMP Traps Configuration" section on 3.2 "Archttp Configuration".

If SNMP manager requests to query the SNMP information from RAID controller, please refer the C-3-2 section "Using Onboard NIC".

### C-3-2 Using Onboard NIC Installation

With the built-in LAN port, you can add SNMP function onto your the RAID storage. You can use the browser-based manager to setup the firmware-based SNMP configuration. To launch the browser-based RAID controller SNMP function, click on the "System Controls" link. The "System Controls" menu will show available items. Select the "SNMP Configuration" item. The following screen is the firmware-embedded SNMP configuration setup screen using browser-based manager:

close all 🖉								
em Console	SNMP Trap Configurations							
unction	SNMP Trap IP Address #1	0	. 0	. 0	. 0	Port#	162	
et Functions Set Functions	SNMP Trap IP Address #2	0	. 0	. 0	. 0	Port#	162	
al Drives	SNMP Trap IP Address #3	0	. 0	. 0	. 0	Port#	162	
Controls em Configuration	SNMP System Configurations							
Power Management	Community							
Net Configuration By Mail Configuration	sysContact.0							
Configuration	svsName.0							
	sysLocation.0							
ate Test Event	<ul> <li>SNMP Trap Notification Configuratio</li> </ul>	ne						
Event Buffer y Password	Disable SNMP Trap		No St	MD Trou	p Will Be Sent			
de Firmware				Send Only Urgent Event				
n	C Urgent Error Notification							
	Serious Error Notification		Send	Send Urgent And Serious Event				
	C Warning Error Notification		Send	Send Urgent, Serious And Warning Event				
	C Information Notification		Send	All Even	nt			

The firmware-embedded SNMP agent manager monitors all system events and the SNMP function becomes functional with no agent software required. When you open the "SNMP Configuration" link, you will see the following settings:

#### (1). SNMP Trap Configurations

Enter the SNMP Trap IP Address.

#### (2). SNMP System Configurations

Community name acts as a password to screen accesses to the SNMP agent of a particular network device. Type in the community names of the SNMP agent. Before access is granted to a request station, this station must incorporate a valid community name into its request; otherwise, the SNMP agent will deny access to the system. Most network devices use "public" as default of their community names. This value is case-sensitive. The system Contact, Name and Location that will be shown in the outgoing SNMP trap.

#### (3). SNMP Trap Notification Configurations

Please refer to Appendix D of Event Notification Configurations.

# **Appendix D**

## **Event Notification Configurations**

The controller classifies disk array events into four levels depending on their severity. These include level 1: Urgent, level 2: Serious, level 3: Warning and level 4: Information. The level 4 covers notification events such as initialization of the controller and initiation of the rebuilding process; Level 2 covers notification events which once have happen; Level 3 includes events which require the issuance of warning messages; Level 1 is the highest level, and covers events that need immediate attention (and action) from the administrator. The following lists sample events for each level:

### A. Device Event

Event	Level	Meaning	Action	
Device Inserted	Warning	HDD inserted		
Device Removed	Warning	HDD removed		
Reading Error	Warning	HDD reading error	Keep Watching HDD status, may be it caused by noise or HDD unstable.	
Writing Error	Warning	HDD writing error	Keep Watching HDD status, may be it caused by noise or HDD unstable.	
ATA Ecc Error	Warning	HDD ECC error	Keep Watching HDD status, may be it caused by noise or HDD unstable.	
Change ATA Mode	Warning	HDD change ATA mode	Check HDD connection	
Time Out Error	Warning	HDD time out	Keep Watching HDD status, may be it caused by noise or HDD unstable.	
Device Failed	Urgent	HDD failure	Replace HDD	
PCI Parity Error	Serious	PCI parity error	If only happen once, it may be caused by noise. If always happen, please check power supply or contact to us.	
Device Failed(SMART)	Urgent	HDD SMART failure	Replace HDD	

PassThrough Disk Created	Inform	Pass Through Disk created	
PassThrough Disk Modified	Inform	Pass Through Disk modified	
PassThrough Disk Deleted	Inform	Pass Through Disk deleted	

### **B. Volume Event**

Event	Level	Meaning	Action
Start Initialize	Warning	Volume initialization has started	
Start Rebuilding	Warning	Volume rebuilding has started	
Start Migrating	Warning	Volume migration has started	
Start Checking	Warning	Volume parity checking has started	
Complete Init	Warning	Volume initialization completed	
Complete Rebuild	Warning	Volume rebuilding completed	-
Complete Migrate	Warning	Volume migration completed	
Complete Check	Warning	Volume parity checking completed	
Create Volume	Warning	New volume created	
Delete Volume	Warning	Volume deleted	
Modify Volume	Warning	Volume modified	-
Volume Degraded	Urgent	Volume degraded	Replace HDD
Volume Failed	Urgent	Volume failure	
Failed Volume Revived	Urgent	Failed volume revived	
Abort Initialization	Warning	Initialization been abort	
Abort Rebuilding	Warning	Rebuilding aborted	
Abort Migration	Warning	Migration aborted	
Abort Checking	Warning	Parity check aborted	
Stop Initialization	Warning	Initialization stopped	
Stop Rebuilding	Warning	Rebuilding stopped	
Stop Migration	Warning	Migration stopped	
Stop Checking	Warning	Parity check stopped	

### C. RAID Set Event

Event	Level	Meaning	Action
Create RaidSet	Warning	New RAID set created	
Delete RaidSet	Warning	Raidset deleted	
Expand RaidSet	Warning	Raidset expanded	
Rebuild RaidSet	Warning	Raidset rebuilding	
RaidSet Degraded	Urgent	Raidset degraded	Replace HDD

### **D. Hardware Monitor Event**

Event	Level	Meaning	Action
DRAM 1-Bit ECC	Urgent	DRAM 1-Bit ECC error	Check DRAM
DRAM Fatal Error	Urgent	DRAM fatal error encountered	Check the DRAM module and replace with new one if required.
Controller Over Temperature	Urgent	Abnormally high temperature detected on controller (over 60 degree)	Check air flow and cooling fan of the enclosure, and contact us.
Hdd Over Temperature	Urgent	Abnormally high temperature detected on Hdd (over 55 degree)	Check air flow and cooling fan of theenclosure.
Fan Failed	Urgent	Cooling Fan # failure or speed below 1700RPM	Check cooling fan of the enclosure and replace with a new one if required.
Controller Temp. Recovered	Serious	Controller temperature back tonormal level	
Hdd Temp. Recovered	Serious	Hdd temperature back tonormal level	
Raid Powered On	Warning	RAID power on	
Test Event	Urgent	Test event	
Power On With Battery Backup	Warning	RAID power on with battery backuped	
Incomplete RAID Discovered	Serious	Some RAID set member disks missing before power on	Check disk information to find out which channel missing.
HTTP Log In	Serious	a HTTP login detected	

Telnet Log	Serious	a Telnet login detected	
InVT100 Log In	Serious	a VT100 login detected	
API Log In	Serious	a API login detected	
Lost Rebuilding/ MigrationLBA	Urgent	Some rebuilding/ migration raidset member disks missing before power on.	Reinserted the missing member disk back, controller will continued the incompleted rebuilding/migration.

# **Appendix E**

# **RAID Concept**

## **RAID Set**

A RAID set is a group of disks connected to a RAID controller. A RAID set contains one or more volume sets. The RAID set itself does not define the RAID level (0, 1, 1E, 3, 5, 6, 10, 30, 50 60, etc); the RAID level is defined within each volume set. Therefore, volume sets are contained within RAID sets and RAID Level is defined within the volume set. If physical disks of different capacities are grouped together in a RAID set, then the capacity of the smallest disk will become the effective capacity of all the disks in the RAID set.

## Volume Set

Each volume set is seen by the host system as a single logical device (in other words, a single large virtual hard disk). A volume set will use a specific RAID level, which will require one or more physical disks (depending on the RAID level used). RAID level refers to the level of performance and data protection of a volume set. The capacity of a volume set can consume all or a portion of the available disk capacity in a RAID set. Multiple volume sets can exist in a RAID set. For the RAID controller, a volume set must be created either on an existing RAID set or on a group of available individual disks (disks that are about to become part of a RAID set). If there are pre-existing RAID sets with available capacity and enough disks for the desired RAID level, then the volume set can be created in the existing RAID set of the user's choice.



In the illustration, volume 1 can be assigned a RAID level 5 of operation while volume 0 might be assigned a RAID level 1E of operation. Alternatively, the free space can be used to create volume 2, which could then be set to use RAID level 5.

### **Ease of Use Features**

### • Foreground Availability/Background Initialization

RAID 0 and RAID 1 volume sets can be used immediately after creation because they do not create parity data. However, RAID 3, 5, 6, 30, 50 or 60 volume sets must be initialized to generate parity information. In Background Initialization, the initialization proceeds as a background task, and the volume set is fully accessible for system reads and writes. The operating system can instantly access the newly created arrays without requiring a reboot and without waiting for initialization to complete. Furthermore, the volume set is protected against disk failures while initialing. If using Foreground Initialization, the initialization process must be completed before the volume set is ready for system accesses.

### Online Array Roaming

RAID controllers store RAID configuration information on the disk drives. The controller therefore protects the configuration settings in the event of controller failure. Online array roaming allows the administrators the ability to move a complete RAID set to another system without losing RAID configuration information or data on that RAID set. Therefore, if a server fails, the RAID set disk drives can be moved to another server with an Areca RAID controllers and the disks can be inserted in any order.

### • Online Capacity Expansion

Online Capacity Expansion makes it possible to add one or more physical drives to a volume set without interrupting server operation, eliminating the need to backup and restore after reconfiguration of the RAID set. When disks are added to a RAID set, unused capacity is added to the end of the RAID set. Then, data on the existing volume sets (residing on the newly expanded RAID set) is redistributed evenly across all the disks. A contiguous block of unused capacity is made available on the RAID set. The unused capacity can be used to create additional volume sets.

A disk, to be added to a RAID set, must be in normal mode (not failed), free (not spare, in a RAID set, or passed through to host) and must have at least the same capacity as the smallest disk capacity already in the RAID set.

Capacity expansion is only permitted to proceed if all volumes on the RAID set are in the normal status. During the expansion process, the volume sets being expanded can be accessed by the host system. In addition, the volume sets with RAID level 1, 10, 3, 5 or 6 are protected against data loss in the event of disk failure(s). In the case of disk failure, the volume set changes from "migrating" state to "migrating+degraded" state. When the expansion is completed, the volume set would then transition to "degraded" mode. If a global hot spare is present, then it further changes to the "rebuilding" state.



The expansion process is illustrated as following figure.

RAID controller redistributes the original volume set over the original and newly added disks, using the same fault-tolerance configuration. The unused capacity on the expand RAID set can then be used to create an additional volume set, with a different fault tolerance setting (if required by the user.)



### • Online RAID Level and Stripe Size Migration

For those who wish to later upgrade to any RAID capabilities, a system with online RAID level/stripe size migration allows a simplified upgrade to any supported RAID level without having to reinstall the operating system.

The RAID controllers can migrate both the RAID level and stripe size of an existing volume set, while the server is online and the volume set is in use. Online RAID level/stripe size migration can prove helpful during performance tuning activities as well as when additional physical disks are added to the RAID controller. For example, in a system using two drives in RAID level 1, it is possible to add a single drive and add capacity and retain fault tolerance. (Normally, expanding a RAID level 1 array would require the addition of two disks). A third disk can be added to the existing RAID logical drive and the volume set can then be migrated from RAID level 1 to 5. The result would be parity fault tolerance and double the available capacity without taking the system down. A forth disk could be added to migrate to RAID level 6. It is only possible to migrate to a higher RAID level by adding a disk; disks in an existing array can't be reconfigured for a higher RAID level without adding a disk. Online migration is only permitted to begin, if all volumes to be migrated are in the normal mode. During the migration process, the volume sets being migrated are accessed by the host system. In addition, the volume sets with RAID level 1, 1E, 10, 3, 5 or 6 are protected against data loss in the event of disk failure(s). In the case of disk failure, the volume set transitions from migrating state to (migrating+degraded) state. When the

migration is completed, the volume set transitions to degraded mode. If a global hot spare is present, then it further transitions to rebuilding state.

### • Online Volume Expansion

Performing a volume expansion on the controller is the process of growing only the size of the latest volume. A more flexible option is for the array to concatenate an additional drive into the RAID set and then expand the volumes on the fly. This happens transparently while the volumes are online, but, at the end of the process, the operating system will detect free space at after the existing volume.

Windows, NetWare and other advanced operating systems support volume expansion, which enables you to incorporate the additional free space within the volume into the operating system partition. The operating system partition is extended to incorporate the free space so it can be used by the operating system without creating a new operating system partition.

You can use the Diskpart.exe command line utility, included with Windows Server 2003 or the Windows 2000 Resource Kit, to extend an existing partition into free space in the dynamic disk.

Third-party software vendors have created utilities that can be used to repartition disks without data loss. Most of these utilities work offline. Partition Magic is one such utility.

## **High Availability**

### • Global/Local Hot Spares

A hot spare is an unused online available drive, which is ready for replacing the failure disk. The hot spare is one of the most important features that RAID controllers provide to deliver a high degree of fault-tolerance. A hot spare is a spare physical drive that has been marked as a hot spare and therefore is not a member of any RAID set. If a disk drive used in a volume set fails, then the hot spare will automatically take its place and he

data previously located on the failed drive is reconstructed on the hot spare.

Dedicated hot spare is assigned to serve one specified RAID set. Global hot spare is assigned to serve all RAID set on the RAID controller. Dedicated hot spare has higher priority than the global hot spare. For this feature to work properly, the hot spare must have at least the same capacity as the drive it replaces. The host spare function only works with RAID level 1, 1E, 3, 5, 6, 10, 30, 50, or 60 volume set.

The "Create Hot Spare" option gives you the ability to define a global/dedicated hot spare disk drive. To effectively use the hot spare feature, you must always maintain at least one drive that is marked as a global hot spare.

#### **Important:**

The hot spare must have at least the same capacity as the drive it replaces.

### • Hot-Swap Disk Drive Support

The RAID controller chip includes a protection circuit that supports the replacement of SAS/SATA hard disk drives without having to shut down or reboot the system. A removable hard drive tray can deliver "hot swappable" fault-tolerant RAID solutions. This feature provides advanced fault tolerant RAID protection and "online" drive replacement.

### • Auto Declare Hot-Spare

If a disk drive is brought online into a system operating in degraded mode, the RAID controllers will automatically declare the new disk as a spare and begin rebuilding the degraded volume. The Auto Declare Hot-Spare function requires that the smallest drive contained within the volume set in which the failure occurred.

In the normal status, the newly installed drive will be reconfigured an online free disk. But, the newly-installed drive is automatically assigned as a hot spare if any hot spare disk was used to rebuild and without new installed drive replaced it. In this condition, the Auto Declare Hot-Spare status will be disappeared if the RAID storage has since powered off/on.

The Hot-Swap function can be used to rebuild disk drives in arrays with data redundancy such as RAID level 1, 1E, 3, 5, 6, 10, 30, 50 and 60.

### • Auto Rebuilding

If a hot spare is available, the rebuild starts automatically when a drive fails. The RAID controllers automatically and transparently rebuild failed drives in the background at user-definable rebuild rates. If a hot spare is not available, the failed disk drive must be replaced with a new disk drive so that the data on the failed drive can be automatically rebuilt and so that fault tolerance can be maintained.

RAID controllers will automatically restart the system and rebuilding process if the system is shut down or powered off abnormally during a reconstruction procedure condition. When a disk is hot swapped, although the system is functionally operational, the system may no longer be fault tolerant. Fault tolerance will be lost until the removed drive is replaced and the rebuild operation is completed.

During the automatic rebuild process, system activity will continue as normal, however, the system performance and fault tolerance will be affected.

### • Adjustable Rebuild Priority

Rebuilding a degraded volume incurs a load on the RAID storage. The RAID controllers allow the user to select the rebuild priority to balance volume access and rebuild tasks appropriately. The Background Task Priority is a relative indication of how much time the controller devotes to a background operation, such as rebuilding or migrating.

RAID controller allows user to choose the task priority (Ultra Low (5%), Low (20%), Medium (50%), High (80%)) to balance volume set access and background tasks appropriately. For high array performance, specify an Ultra Low value. Like volume initialization, after a volume rebuilds, it does not require a system reboot.

## **High Reliability**

### • Hard Drive Failure Prediction

In an effort to help users avoid data loss, disk manufacturers are now incorporating logic into their drives that acts as an "early warning system" for pending drive problems. This system is called SMART. The disk integrated controller works with multiple sensors to monitor various aspects of the drive's performance, determines from this information if the drive is behaving normally or not, and makes available status information to RAID storage firmware that probes the drive and look at it.

The SMART can often predict a problem before failure occurs. The controllers will recognize a SMART error code and notify the administer of an impending hard drive failure.

### • Auto Reassign Sector

Under normal operation, even initially defect-free drive media can develop defects. This is a common phenomenon. The bit density and rotational speed of disks is increasing every year, and so are the potential of problems. Usually a drive can internally remap bad sectors without external help using cyclic redundancy check (CRC) checksums stored at the end of each sector.

The RAID controller drives perform automatic defect re-assignment for both read and write errors. Writes are always completed - if a location to be written is found to be defective, the drive will automatically relocate that write command to a new location and map out the defective location. If there is a recoverable read error, the correct data will be transferred to the host and that location will be tested by the drive to be certain the location is not defective. If it is found to have a defect, data will be automatically relocated, and the defective location is mapped out to prevent future write attempts.

In the event of an unrecoverable read error, the error will be reported to the host and the location will be flagged as being potentially defective. A subsequent write to that location will initiate a sector test and relocation should that location prove to have a defect. Auto Reassign Sector does not affect disk storage performance because it runs as a background task. Auto Reassign Sector discontinues when the operating system makes a request.

### • Consistency Check

A consistency check is a process that verifies the integrity of redundant data. To verify RAID 3, 5, 6, 30, 50 or 60 redundancy, a consistency check reads all associated data blocks, computes parity, reads parity, and verifies that the computed parity matches the read parity.

Consistency checks are very important because they detect and correct parity errors or bad disk blocks in the drive. A consistency check forces every block on a volume to be read, and any bad blocks are marked; those blocks are not used again. This is critical and important because a bad disk block can prevent a disk rebuild from completing. We strongly recommend that you run consistency checks on a regular basis—at least once per week. Note that consistency checks degrade performance, so you should run them when the system load can tolerate it.

### **Data Protection**

### • Battery Backup

The RAID controllers are armed with a Battery Backup Module (BBM). While a Uninterruptible Power Supply (UPS) protects most servers from power fluctuations or failures, a BBM provides an additional level of protection. In the event of a power failure, a BBM supplies power to retain data in the RAID controller's

cache, thereby permitting any potentially dirty data in the cache to be flushed out to secondary storage when power is restored. The batteries in the BBM are recharged continuously through a trickle-charging process whenever the system power is on. The batteries protect data in a failed server for up to three or four days, depending on the size of the memory module. Under normal operating conditions, the batteries last for three years before replacement is necessary.

### Recovery ROM

RAID controller firmware is stored on the flash ROM and is executed by the I/O processor. The firmware can also be updated through the RAID controllers Thunderbolt port or Ethernet port without the need to replace any hardware chips. During the controller firmware upgrade flash process, it is possible for a problem to occur resulting in corruption of the controller firmware. With our Redundant Flash Image feature, the controller will revert back to the last known version of firmware and continue operating. This reduces the risk of system failure due to firmware crash.

# **Appendix F**

# **Understanding RAID**

RAID is an acronym for Redundant Array of Independent Disks. It is an array of multiple independent hard disk drives that provides high performance and fault tolerance. The RAID controller implements several levels of the Berkeley RAID technology. An appropriate RAID level is selected when the volume sets are defined or created. This decision should be based on the desired disk capacity, data availability (fault tolerance or redundancy), and disk performance. The following section discusses the RAID levels supported by the RAID controllers.

The RAID controllers makes the RAID implementation and the disks' physical configuration transparent to the host operating system. This means that the host operating system drivers and software utilities are not affected, regardless of the RAID level selected. Correct installation of the disk array and the controller requires a proper understanding of RAID technology and the concepts.

## RAID 0

RAID 0, also referred to as striping, writes stripes of data across multiple disk drives instead of just one disk drive. RAID 0 does not provide any data redundancy, but does offer the best Highspeed data throughput. RAID 0 breaks up data into smaller blocks and then writes a block to each drive in the array. Disk striping enhances performance because multiple drives are accessed simultaneously; the reliability of RAID level 0 is less because the entire array will fail if any one disk drive fails.



### RAID 1

RAID 1 is also known as "disk mirroring"; data written on one disk drive is simultaneously written to another disk drive. Read performance will be enhanced if the array controller can, in parallel, access both members of a mirrored pair. During writes, there will be a minor performance penalty when compared to writing to a single disk. If one drive fails, all data (and software applications) are preserved on the other drive. RAID 1 offers extremely high data reliability, but at the cost of doubling the required data storage capacity.



## RAID 10(1E)

RAID 10(1E) is a combination of RAID 0 and RAID 1, combining stripping with disk mirroring. RAID Level 10 combines the fast performance of Level 0 with the data redundancy of level 1. In this configuration, data is distributed across several disk drives, similar to Level 0, which are then duplicated to another set of drive for data protection. RAID 10 has been traditionally implemented using an even number of disks, some hybrids can use an odd number of disks as well. Illustration is an example of a hybrid RAID 10(1E) array comprised of five disks; A, B, C, D and E. In this configuration, each strip is mirrored on an adjacent disk with wrap-around. Areca RAID 10 offers a little more flexibility in choosing the number of disks that can be used to constitute an array. The number can be even or odd.



## RAID 3

RAID 3 provides disk striping and complete data redundancy though a dedicated parity drive. RAID 3 breaks up data into smaller blocks, calculates parity by performing an exclusive-or on the blocks, and then writes the blocks to all but one drive in the array. The parity data created during the exclusive-or is then written to the last drive in the array. If a single drive fails, data is still available by computing the exclusive-or of the contents corresponding strips of the surviving member disk. RAID 3 is best for applications that require very fast data- transfer rates or long data blocks.



### RAID 5

RAID 5 is sometimes called striping with parity at byte level. In RAID 5, the parity information is written to all of the drives in the controllers rather than being concentrated on a dedicated parity disk. If one drive in the system fails, the parity information can be used to reconstruct the data from that drive. All drives in the array system can be used for seek operations at the same time, greatly increasing the performance of the RAID system. This relieves the write bottleneck that characterizes RAID 4, and is the primary reason that RAID 5 is more often implemented in RAID arrays.



## RAID 6

RAID 6 provides the highest reliability. It is similar to RAID 5, but it performs two different parity computations or the same computation on overlapping subsets of the data. RAID 6 can offer fault tolerance greater than RAID 1 or RAID 5 but only consumes the capacity of 2 disk drives for distributed parity data. RAID 6 is an extension of RAID 5 but uses a second, independent distributed parity scheme. Data is striped on a block level across a set of drives, and then a second set of parity is calculated and written across all of the drives.



## RAID x0

RAID level-x0 refers to RAID level 00, 100, 30, 50 and 60. RAID x0 is a combination multiple RAID x volume sets with RAID 0 (striping). Striping helps to increase capacity and performance without adding disks to each RAID x array. The operating system uses the spanned volume in the same way as a regular volume. Up to one drive in each sub-volume (RAID 3 or 5) may fail without loss of data. Up to two drives in each sub-volume (RAID 6) may fail without loss of data. RAID level x0 allows more physical drives in an array. The benefits of doing so are larger volume sets, increased performance, and increased reliability.

The following illustration is an example of a RAID level x0 logical drive.



#### **Important:**

RAID level 00, 100, 30, 50 and 60 can support up to eight RAID set. If volume is RAID level 00, 100, 30, 50, or 60, you can't change the volume to another RAID level. If volume is RAID level 0, 1, 10(1E), 3, 5, or 6, you can't change the volume to RAID level 00, 100, 30, 50, or 60.

### JBOD

(Just a Bunch Of Disks) A group of hard disks in a RAID box are not set up as any type of RAID configuration. All drives are available to the operating system as an individual disk. JBOD does not provide data redundancy.

### Single Disk (Pass-Through Disk)

Pass through disk refers to a drive that is not controlled by the RAID firmware and thus can not be a part of a RAID volume. The drive is available to the operating system as an individual disk.

## Summary of RAID Levels

ARC-8050 Thunderbolt RAID storage supports RAID Level 0, 1, 10(1E), 3, 5, 6, 30, 50 and 60. The following table provides a summary of RAID levels.

	RAID Level Comparision						
RAID Level	Description	Disks Requirement (Minimum)	Data Availability				
0	Also known as striping. Data distributed across multiple drives in the array. There is no data protection.	1	No data Protection				
1	Also known as mirroring. All data replicated on 2 separated disks. N is almost always 2. Due to this is a 100 % duplication, so is a high costly solution.	2	Up to one disk failure				
10(1E)	Also known as mirroring and striping. Data is written to two disks simultaneously, and allows an odd number or disk. Read request can be satisfied by data read from wither one disk or both disks.	3	Up to one disk failure in each sub-volume				
3	Also known Bit-Interleaved Parity. Data and parity information is subdivided and distributed across all data disks. Parity information normally stored on a dedicated parity disk.	3	Up to one disk failure				
5	Also known Block-Interleaved Distributed Parity. Data and parity information is subdivided and distributed across all disk. Parity information normally is interspersed with user data.	3	Up to one disk failure				
6	RAID 6 provides highest reliability, but not widely used. Similar to RAID 5, but does two different parity computations or the same computation on overlapping subsets of the data. The RAID 6 can offer fault tolerance greater that RAID 1 or RAID 5 but only consumes the capacity of 2 disk drives for distributed parity data.	4	Up to two disk failure				

30	RAID 30 is a combination multiple RAID 3 volume sets with RAID 0 (striping)	6	Up to one disk failure in each sub-volume
50	RAID 50 is a combination multiple RAID 5 volume sets with RAID 0 (striping)	6	Up to one disk failure in each sub-volume
60	RAID 60 is a combination multiple RAID 6 volume sets with RAID 0 (striping)	8	Up to two disk failure in each sub-volume