



FSM-640 Field strength meter USER'S MANUAL



FSM-640

FIELD STRENGTH METERS

USER'S MANUAL

This product contains one or more programs protected under international and US copyright laws as unpublished works. They are confidential and proprietary to Dolby laboratories. Their reproduction or disclosure, in whole or in part, or the production of derivative works there from without the express permission of Dolby Laboratories is prohibited. Copyright 2003-2005 by Dolby Laboratories. All rights reserved.

TABLE OF CONTENTS

1	Important information.....	6
1.1	Particular precautions	6
1.2	Security instructions.....	6
1.3	Symbols and definitions	6
1.4	Conformity and restrictions of the appliance	7
2	Quick start-up.....	8
2.1	Presentation of the appliance	8
2.2	Signal spotting	9
2.2.1	Checking a terrestrial antenna	10
2.2.2	Installation of a terrestrial antenna	12
2.2.3	Installation of a satellite dish	14
3	Presentation.....	16
3.1	General	16
3.2	Description of the appliance.....	17
4	Power-up.....	19
4.1	Battery	19
4.2	Loading of the battery	20
4.3	External power supply.....	20
4.4	Turning the appliance on and off	20
5	Man-machine interface	21
5.1	Content of the screen	21
5.2	Changing a name or a value	23
5.2.1	Change inside a table.....	23
5.2.2	Change with selection.....	24
5.2.3	Change with virtual keyboard	24
5.3	Lists of measurements and setup library.....	25
6	AUTOSET mode	28
6.1	Terrestrial mode.....	29
6.2	Satellite mode	29
6.3	Cable mode.....	30
6.4	«START » menu key	30
7	Measurement lists	32
7.1	The List page.....	32
7.2	Modification of a list	33
8	Setup library.....	36
8.1	The Library page.....	36

8.2	Creation or modification of setups in the library	36
9	Check Sat	39
9.1	Updating satellites.....	40
9.2	Check Sat function	41
9.3	Checking the aligned satellite	43
9.4	Double Check Sat	43
9.5	Alignment of the satellite dish	44
9.5.1	Electronic compass	45
9.5.2	Recall	46
10	The Measures-TV-Spectrum page	47
11	Measures	48
11.1	Autolock function.....	48
11.2	Modification of parameters	49
11.3	Level measurements	50
11.4	Satellite band	50
11.5	Terrestrial band.....	51
11.6	Thresholds.....	52
11.7	Digital measurements	52
11.8	DVB-T/H.....	53
11.9	DVB-T2	54
11.10	DVB-C.....	55
11.11	DVB-S and DSS.....	56
11.12	DVB-S2	57
12	Spectrum analyser	58
12.1	Simplified Spectrum.....	58
12.2	Additional functions for satellite:	59
12.3	LTE mode:	59
12.4	Fill mode	59
12.5	NIT/TV mode	60
13	Image and Sound	61
13.1	Digital TV.....	61
13.2	Full screen mode	61
13.3	Audio.....	62
13.4	Table of services	62
13.5	Rights of access / Access card.....	63
14	Remote power supply / LNB – DiSEqC	64
14.1	Terrestrial band.....	64
14.2	Satellite band	65

14.2.1	Launching.....	65
14.2.2	Switches	66
14.2.3	Positioner	67
14.2.4	SatCR mode	68
14.2.4.1	Automatic research of the slot frequencies.....	69
14.2.4.2	Influence of the SatCR mode on the spectrum analyzer.....	70
15	Constellation.....	71
16	Echo / Guard interval.....	72
17	Measurement map.....	75
17.1	Values beyond tolerance	76
17.2	Graphics.....	77
18	MER/Carrier	79
19	Configuration	80
19.1	Language.....	80
19.2	Measurement unit.....	80
19.3	Frequency map	81
19.4	Saves	81
19.4.1	View.....	82
19.4.2	Save.....	82
19.4.3	Delete.....	83
19.5	Adjustment.....	84
19.5.1	Beep.....	84
19.5.2	Password.....	84
19.5.3	Background	85
19.5.4	Active USB port	85
19.5.5	Configuration	86
19.5.6	Update	87
19.6	LCD.....	87
19.7	Factory recovery.....	88
20	Software update.....	89
21	Save	90
22	Connection of the appliance to a PC.....	91
22.1	Required configuration	91
22.2	USB mini B interface.....	91
22.3	Ethernet interface	92
23	Optical Power Measurement option	94
24	HDMI Connection.....	95

25 Displayed messages	96
25.1 Alert messages	96
25.2 Error messages.....	97
26 Maintenance.....	98
27 Technical specifications	100
27.1 Common specifications.....	100
27.2 V, dB μ V, dBmV et dBm conversion	102
27.3 Typical values for measurements.....	103
28 CE Declaration	104

1 Important information

Please read carefully the following instructions before using your appliance.

1.1 Particular precautions

- Do not use the product for any other use than specified.
- Use the provided charger unit to prevent any deterioration of the appliance and guarantee its measurement characteristics.
- Do not use in a wet environment.
- Do not use in an explosive environment.
- In case of failure or for the maintenance of the appliance, only a qualified personal shall be entitled to work on it. In such a case, it is required to use Alcad spare parts.
- Do not open the appliance: risk of electric shock.
- You should use the F/F or BNC/F adaptor provided with your measuring instrument. Any other adaptor could damage your appliance and jeopardizes the guarantee.
- Do not use gloves, stylus or any other object on to the touchscreen. Handle the screen carefully.

1.2 Security instructions

For a correct use of the appliance, it is necessary that users abide by the security and use instructions described in this manual.

Specific warnings appear all along this manual.

In case of need, warning symbols are displayed on the appliance:



1.3 Symbols and definitions

Symbols in this manual:



Remark: Shows important information



Key or press zone



Window or display zone showing up after the operation achieved

Symbols on the appliance:



Attention: Refer to the manual. Shows a risk of damage for the material connected to the instrument or to the instrument itself.



Ground: Grounded accessible parts.




Product for recycling.

1.4 Conformity and restrictions of the appliance

See chapter [EC Declaration of conformity](#).

2 Quick start-up

2.1 Presentation of the appliance

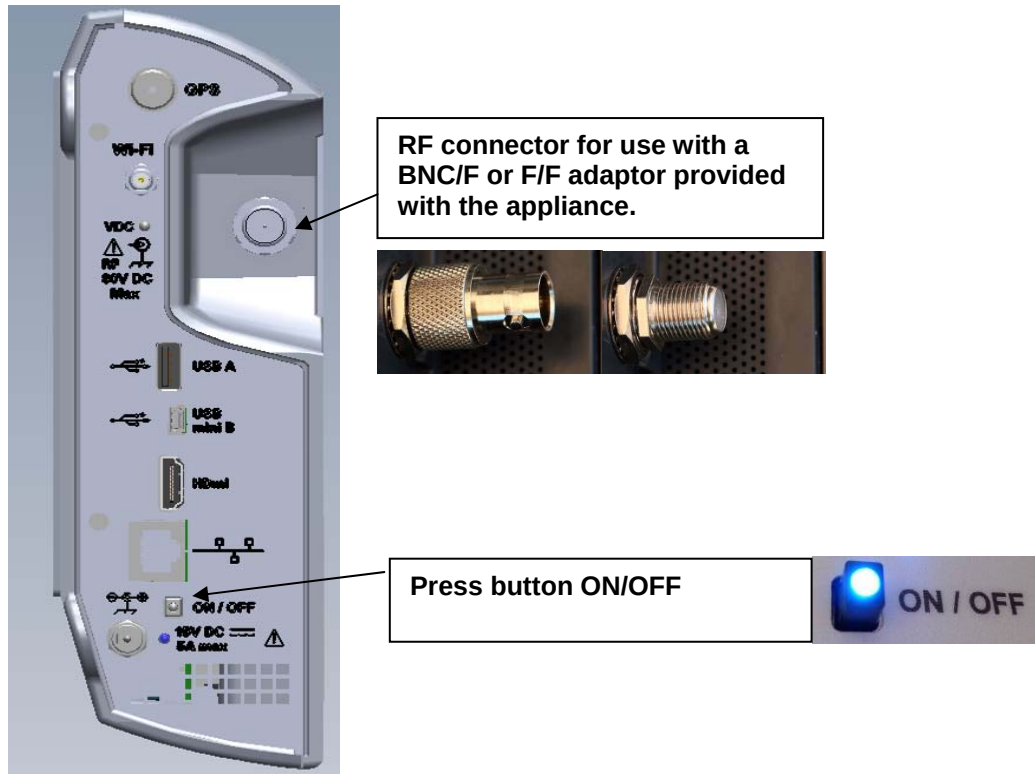

Important keys:

FSM-640 is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.

You will recognize the « keys » by their dark grey color (example: the home key:




You may also access tables by pressing lines (on white or yellow)

375	TNT-HD	
-	---	
377	FR INTER	
378	EUROPE 1	
---	---	

The Measurements/TV/Spectrum page is divided in four zones (TV with current service, Spectrum and Measurements). Pressing a zone displays this zone « full screen » or a selection among the services of the displayed channel.

Welcoming page:

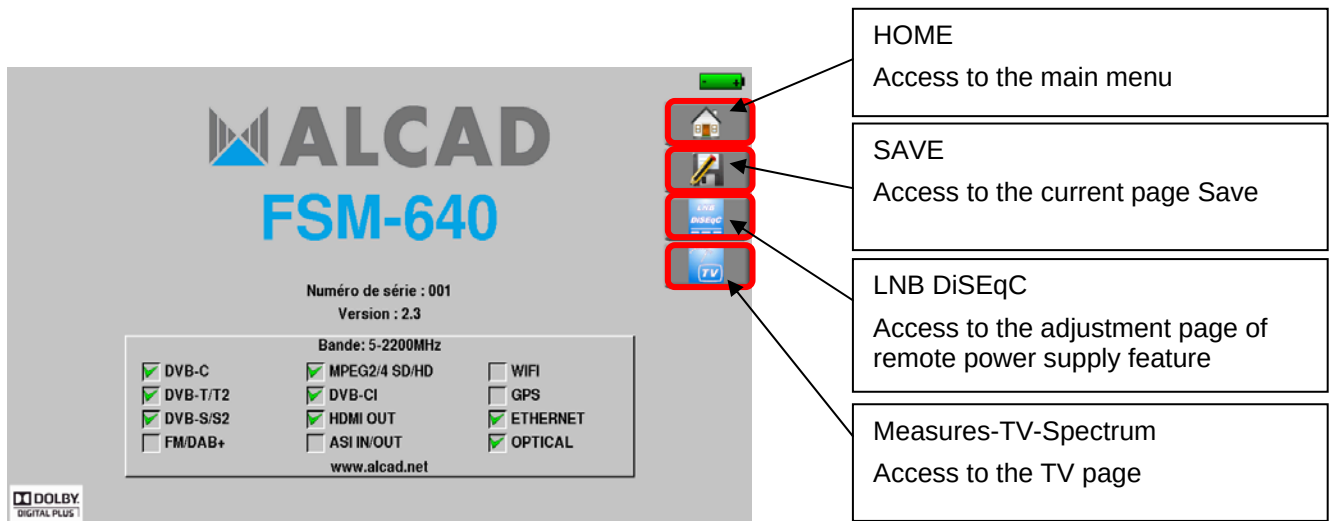



Attention: To exit a window like in this example below, press the key:





2.2 Signal spotting

The FSM-640 allows spotting signals in ground or very quick satellite mode.

In the following chapter, we will see how to spot a signal on three types of installation:

- Checking of a terrestrial antenna (the installation has already been made).
- Installation of a terrestrial antenna.
- Installation of a satellite dish.

2.2.1 Checking a terrestrial antenna

In this case, the AutoSet function allows a scan of the channels that the antenna detects.

Plug the cable of your antenna to the FSM-640 (take care to use an adequate adaptor)


Turn your appliance on. Press the Home key

The Home page appears on screen. Press AutoSet




On this page, press Mode, Terrestrial, then select DVB-T and 8MHz (as here below)

The scan should range from the E2 to the E69 channels, frequency range Europe (you may reduce the number of channels to scan if you know the range of the emitter where the antenna points at: the scan will be faster)


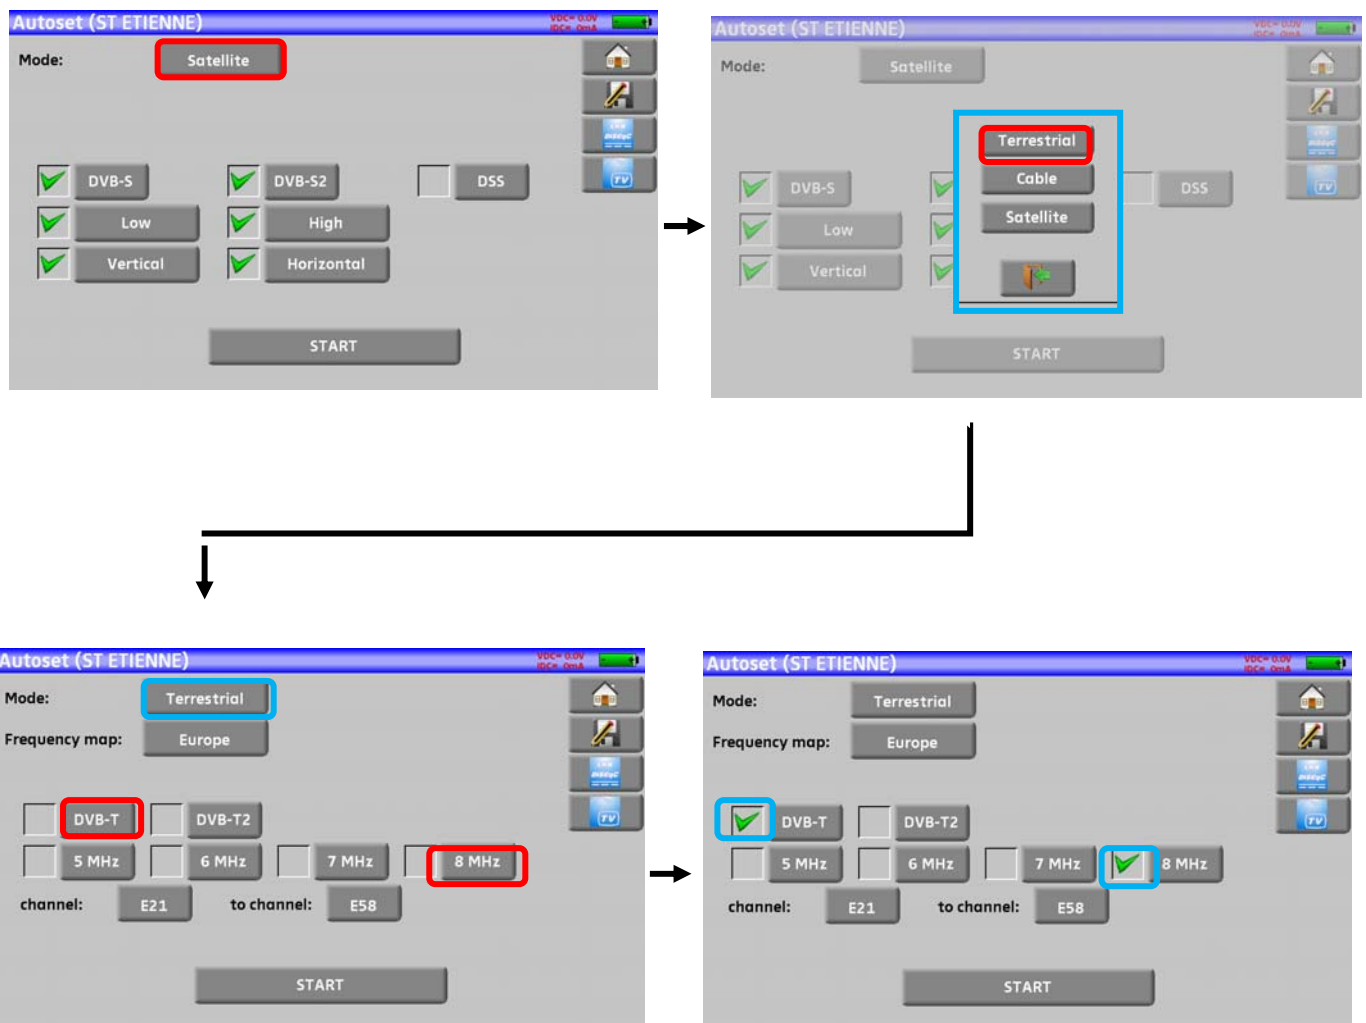


Press START. The appliance searches until the end of the scan and turns directly to the Measurement plan mode. If channels were found, the appliance makes measurements continuously (C/N-level, then BER/MER) on the detected channels. If no channel has been found, see the next chapter.

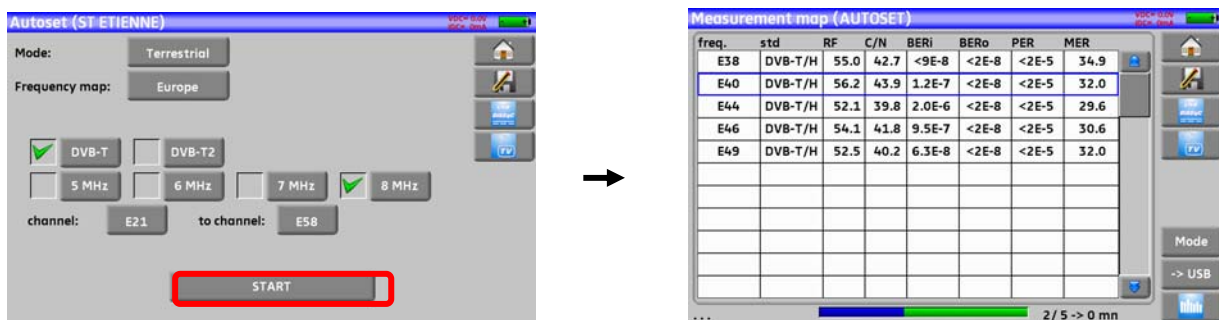

Eventually, press the TV measurement key. On this new page, press Prog, select the channel that you want to display.

Check the level, the BER/MER, the TV detection and the spectrum of the signal on this page...

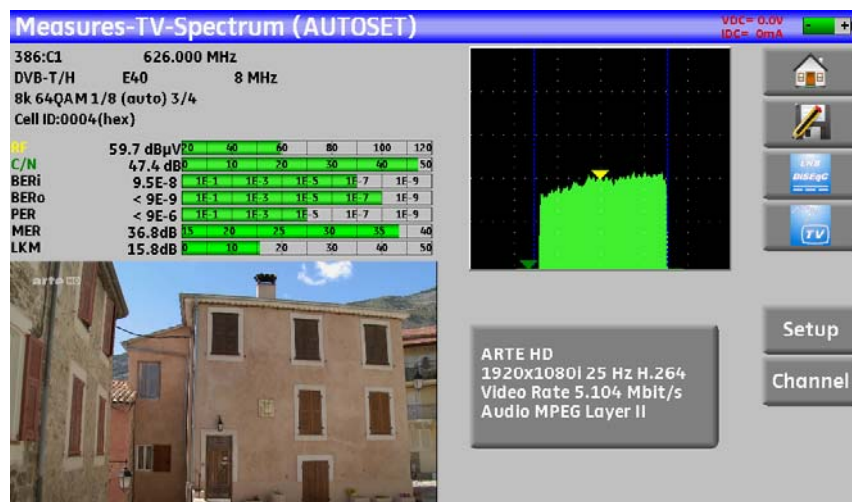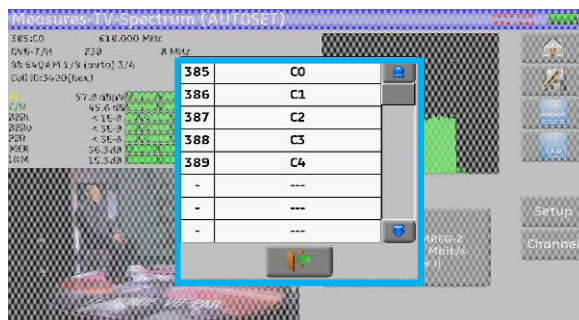

2.2.2 Installation of a terrestrial antenna


Plug the cable of your antenna to the FSM-640 (take care to use an adequate adaptor)

Turn your appliance on. Press the Measures-TV-Spectrum key




Press the Spectrum zone

Access to terrestrial mode if needed

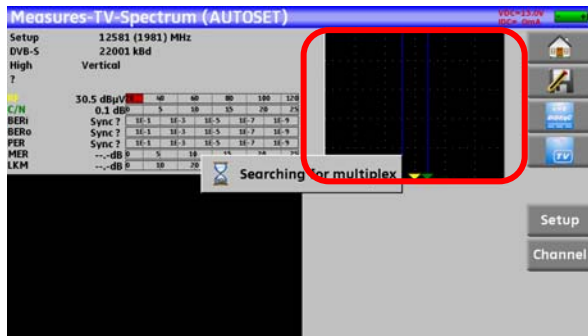


Access to full SPAN mode

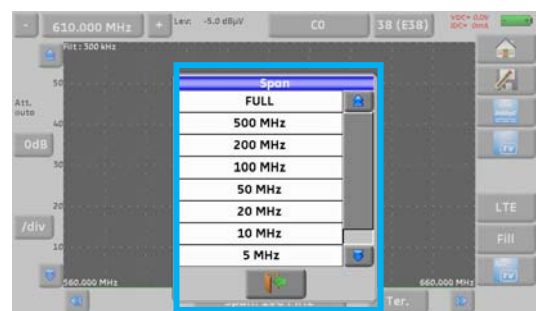

Adjust the antenna to get the most powerful signal possible




Press directly the signal you want in the spectrum (the cursor moves to where you press)

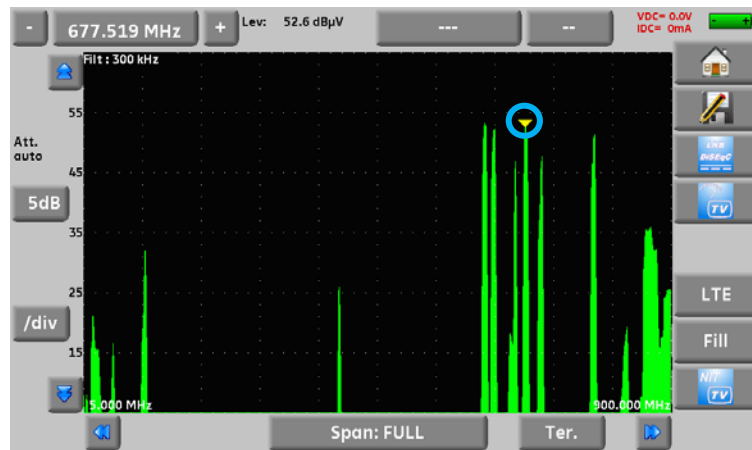


Press the NIT/TV key  the device find automatically all the parameters of the signal.

Once the search ended, the device display TV picture, TV name, "Network Name" and "Network ID".

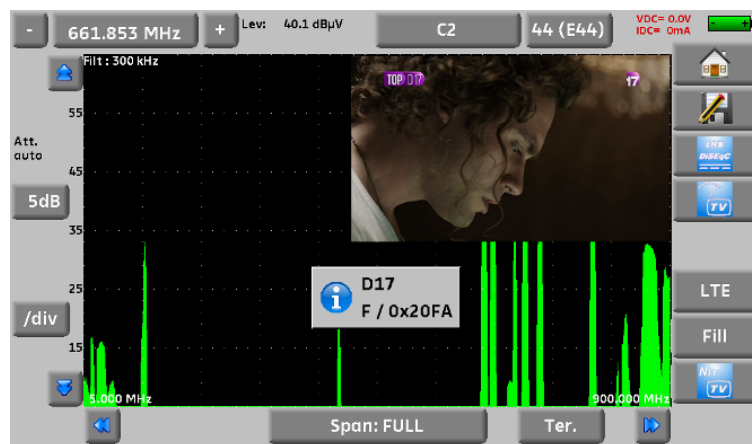

Press the Measures-TV-Spectrum key. You can now display the level, the BER/MER, the TV detection (with information about the current service) and the spectrum of the signal selected on the same page...

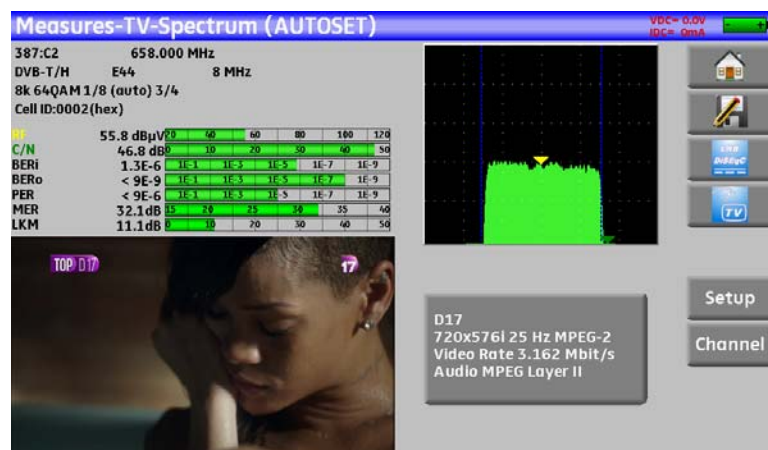

2.2.3 Installation of a satellite dish

Connect the satellite dish to the appliance.


Activate the remote power supply

To access to the Remote power supply page, press

To launch the remote power supply en route, press to launch the remote power supply:





then select **ON** in the page

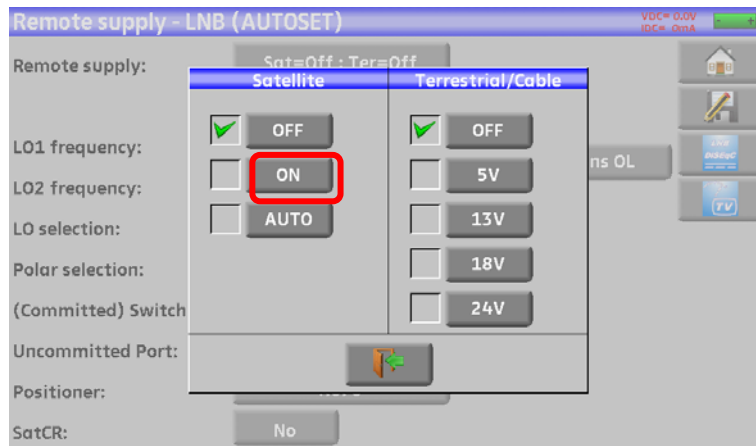


A green check appears in front of what you validated

Press and to access the Check Sat mode (the appliance already includes a list of satellites).

Select a satellite like in the example below (here Astra1):

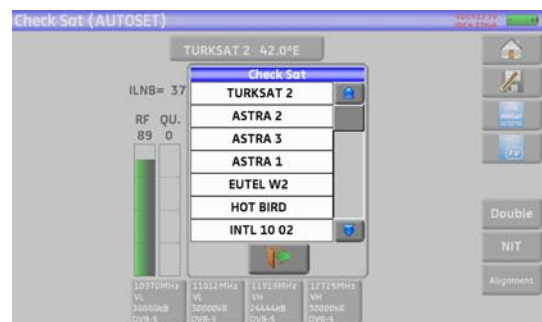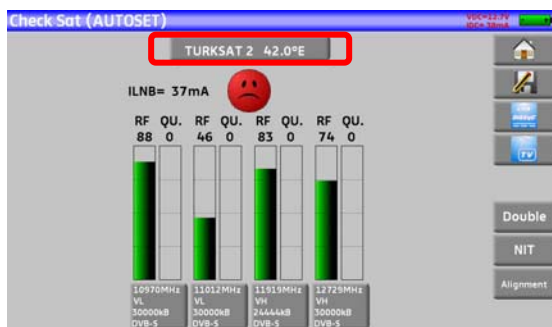

Slowly orientate the satellite dish until hearing the locking melody and getting the best quality

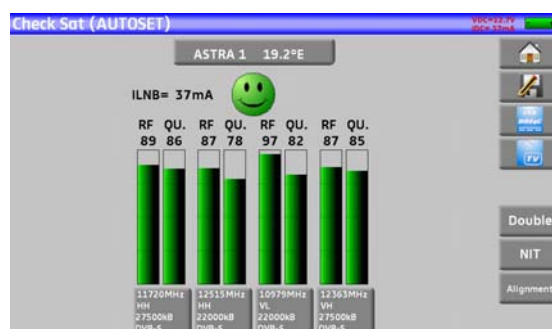



No found transponder • red smiley



Average reception quality (< 50%) • orange smiley




Good reception quality (> 50%) • green smiley

Reminder: transponder = satellite channel

To check if the aimed satellite is the right one: press the NIT key

The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

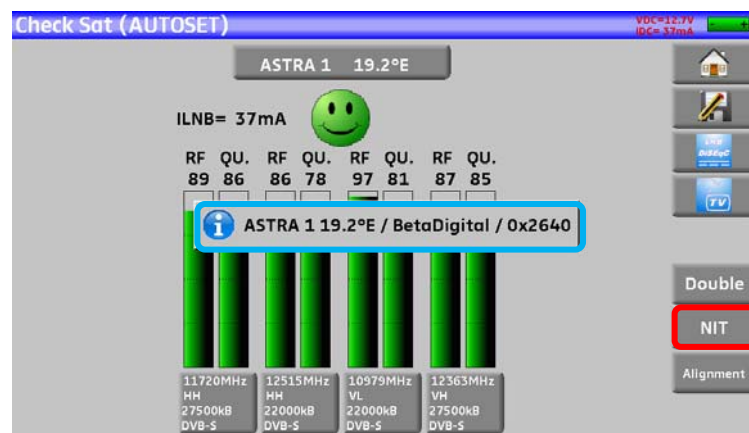

Attention: The displayed name depends on the content of the MPEG NIT table.
Some distributors provide no (or poor) such table.
The displayed information may be wrong.



Attention:
To identify a satellite, you must be « hooked » on all 4 transponders. (Quality > 0)
However, some transponders are regularly modified. See the frequency range of the satellite when a transponder does not seem to work.
Some switches or LNB work only with DiSEqC commands. In this case, position the band (OL) and the polarization on DiSEqC at the Configuration page LNB-DiSEqC.
(Attention: the Check Sat is slower when using the DiSEqC command).

3 Presentation

3.1 General

The field strength measurers **FSM-640** are handy appliances designed for the installation and maintenance of any broadcasting and reception installations of analogical and digital terrestrial television channels, satellites or cable networks.

The band ranges between **5 MHz and 2200 MHz**; this allows accurate measurements on all analogical television standards, FM carrier waves and the various digital standards DVB-C, DVB-T/H, DVB-T2, DVB-S, DSS and DVB-S2.

They do **Level** measurements in average, peak and power according to the selected standard.

In **Measurement Plan** mode, they scan up to 50 setups at the same time and compare them to decision levels (min / max).

Equipped with an efficient **Error level** measurement (various BER, MER), they allow the full validation of digital transmissions DVB-T/H, DVB-T2, DVB-C, DVB-S, DSS and DVB-S2.

Providing a **Constellation** diagram for DVB-T/H, DVB-T2, DVB-C, DVB-S, DSS and DVB-S2, and the measurement and display of **Echoes and pre-echoes** in DVB-T/H et DVB-T2 to have a complete analysis of the digital signal.

You can measure and display of **MER per carrier** .

You can display the **digital terrestrial or satellite TV** under SD or HD.

The Measures-TV-Spectrum mode allows the simultaneous display of the spectrum measurement and of the video of the one same signal.

A HDMI socket allows the transmission from HD video to TV.


You can hear digital sound through integrated loudspeakers.

Designed for use on field, they are compact (less than 3 kg, battery included), autonomous (battery pack and quick charger), equipped with a LCD 10'' touchscreen (capacitive).

The high memory content allows the storage of many configurations, measurements and spectrum curves.

Each appliance is fully remote-controlled through USB and ETHERNET connections via a computer.

3.2 Description of the appliance

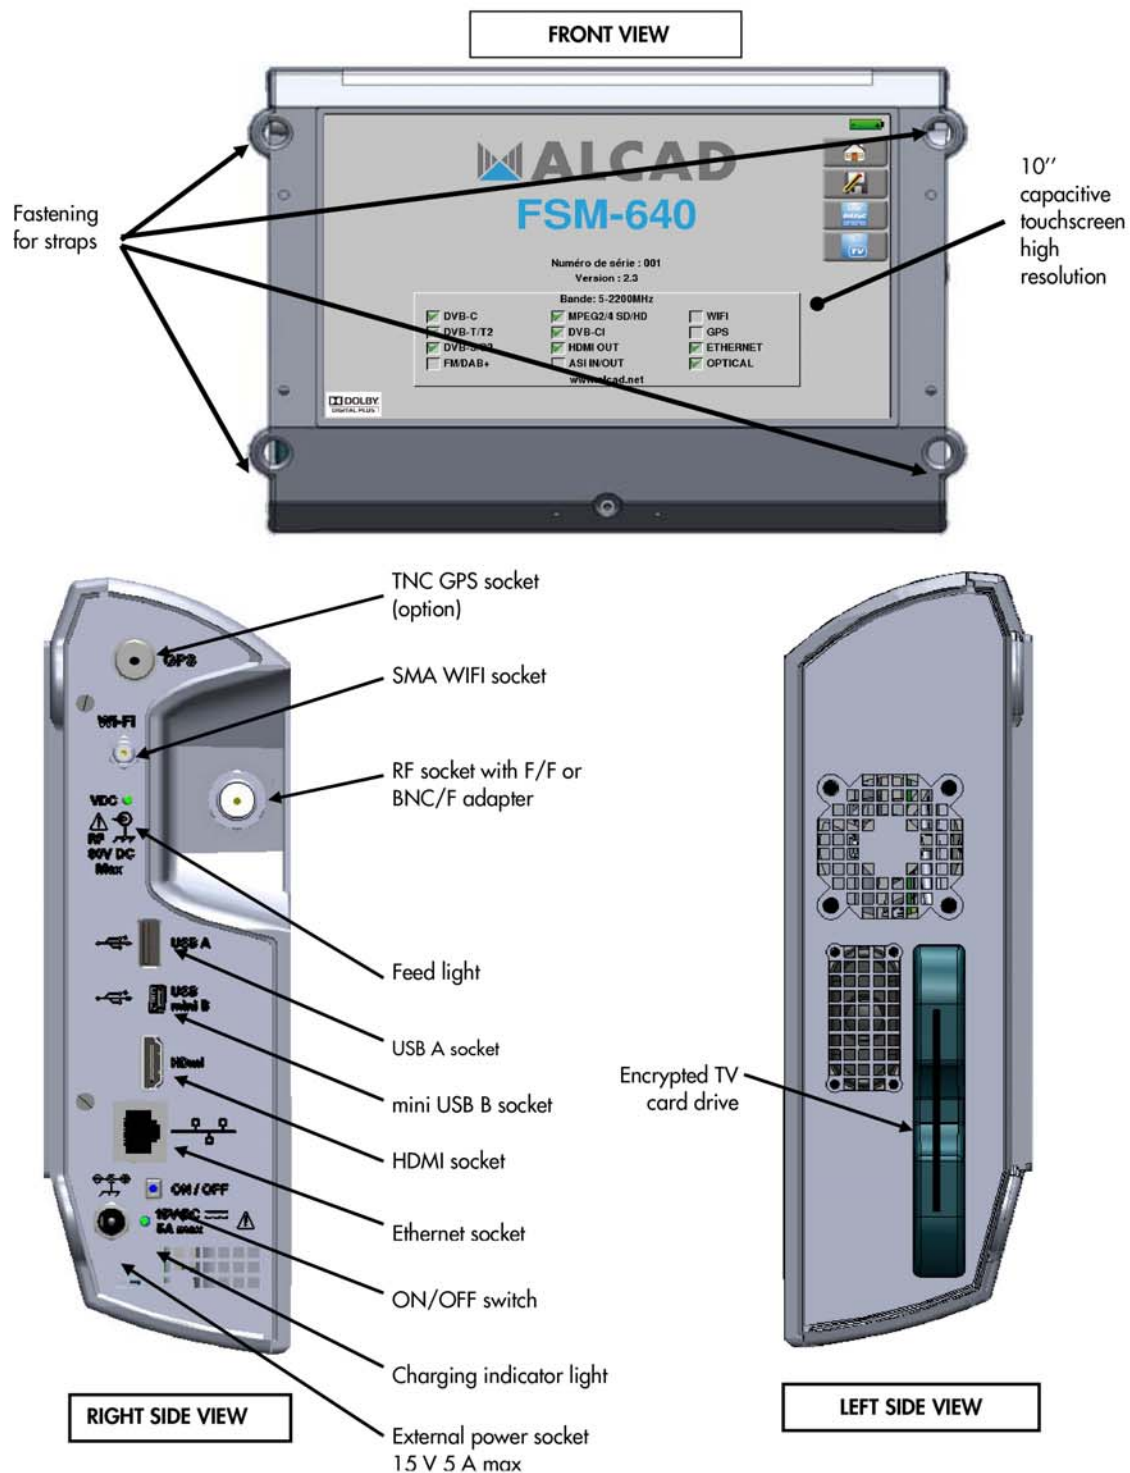

How to use the belts

For carrying properly your instrument, we suggest to set the belts as shown on the picture below (upside on the left and bottom on the right)



How to carry your instrument. A very convenient system to have your hands free.



4 Power-up

All the material is checked before shipment and delivered in an adapted packaging. There is no particular unpacking instruction.

The appliance is equipped with a Lithium-Ion (Li-ion) battery. It is shipped with the battery loaded.

However, if the appliance has remained idle more than one month long, check its charge state and reload if required.

4.1 Battery



Attention: Any intervention on the battery requires the disassembly of the appliance and should be made by a ALCAD technician.

Use only batteries provided by ALCAD.

Security advice:

- Do not throw into the fire or heat up the battery pack
- Do not shunt the parts of the battery: risk of explosion!
- Do not drill
- Do not disassemble the battery pack
- Do not reverse the polarities of the battery
- This battery pack includes a protective item that should not be damaged or removed
- Protect the pack from the heat while storing
- Do not damage the protective sheath of the pack
- Do not store the appliance in a vehicle under sunlight
- Used batteries are not for domestic waste; lithium batteries should be recycled.

The battery has a 200-charge-discharge cycle life or 2 years.

Advice to extend the life of your battery:

- Avoid deep discharges
- Do not store the batteries too long without using them
- Store the battery around 40% loading
- Do not fully charge or fully discharge the battery before storage.

When the battery is almost fully discharged, the appliance will warn "Low battery", then will shut off after a few minutes.

4.2 Loading of the battery

To load the battery inside the appliance:

- Connect the external power supply provided through the jack plug of the appliance (on the right side)
- Connect the power supply on the mains
- The internal charger starts loading the battery; the green lamp lights up.



Loading will be faster if the **appliance is off** but will work if the appliance is on. Once the battery loaded, the lamp will shut off automatically.

Discharge the appliance only with the provided power supply block.

The battery is 80%-loaded after 1 hour 30 minutes. The total charge is reached after 2 hours 10 minutes.

4.3 External power supply

The appliance works under 15V (4.6 A) power supply. The power supply block provided is an external power supply too. Only use the power supply block provided with the appliance.

4.4 Turning the appliance on and off

Press the button on the right side of the appliance:

The entry page appears on screen.

The message "**Autotest: running**" is shortly displayed, then disappears.

Pressing this button turns the appliance off.



The ON/OFF button lights up when the appliance is working.

Pressing the ON/OFF button for a long time forces the shut-off of the appliance; proceed this way only in case of necessity.

5 Man-machine interface

5.1 Content of the screen


FSM-640 is an appliance with a capacitive touchscreen. This requires a soft handling. No glove and no stylus should be used, so that the triggering should be taken into account.

You will recognize the « keys » by their dark grey color (example: the home key:


You can also select lines in tables.



In every pages (except the Home page), the appliance has four keys on top right of the screen: Home, Save, LNB DiSEqC and Measures-TV-Spectrum.

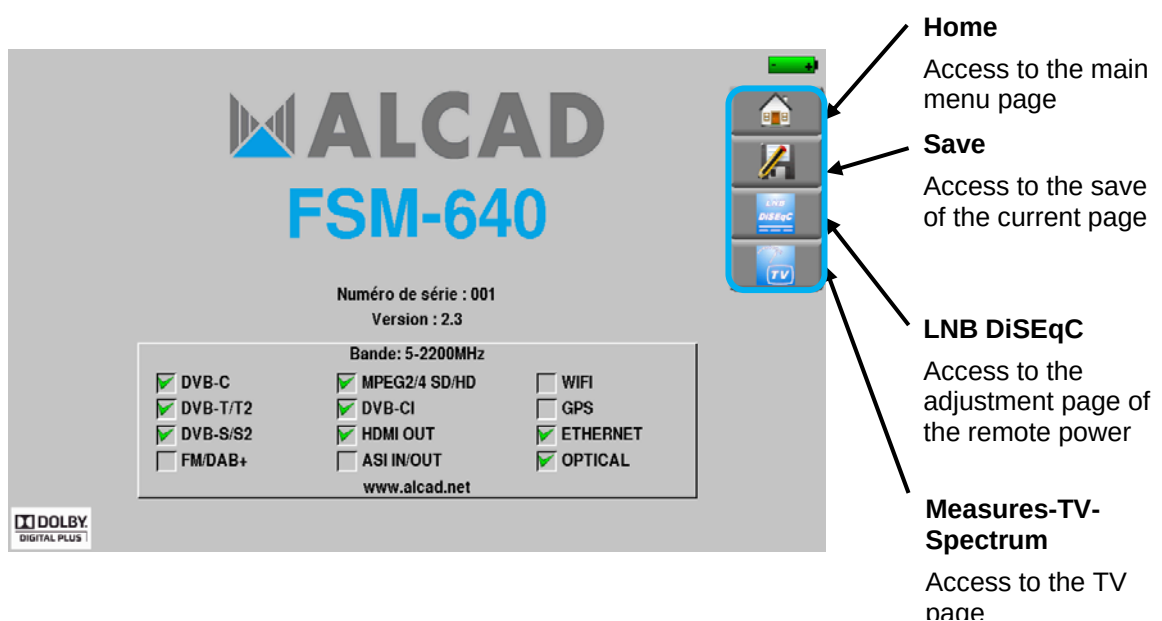

The Home page allows the navigation through all functions of the appliance. You will also find there the [LNB – DiSEqC](#) and [Measures-TV-Spectrum](#) functions, the [AUTOSET](#), [Lists](#), [Library](#), [Check Sat](#), [Configuration](#), [Constellation](#), [Echo Guard Interval](#), [Measurement map](#) and [MER/Carrier](#) keys, and the [GPS](#), [WIFI](#) and [Measure of optical power](#) option.

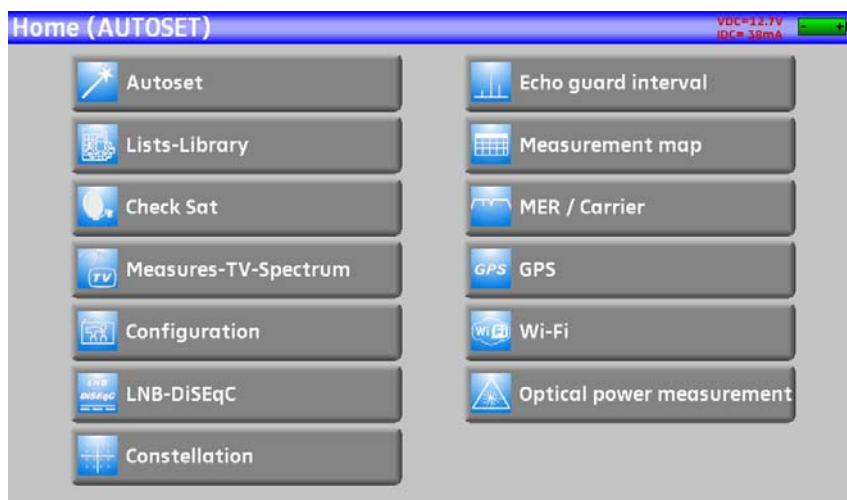

On all pages is displayed the following information:

Page title Site name Indication of the position of the switch or of the SatCR (position of the slot) Indication of the values Tension and Current of the remote power supply Indication of the state of the battery

 **Attention:** To display a window like this one below, you have to press the key 

To navigate through a table inside a page or a window, a vertical slide appears with arrows to move up and down the table.

To move faster, you can slide a cursor with your fingers.

Lists (AST+ST-ET)

List #: 9 AST+ST-ET Library

#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
---	---	---	---	---
0	DIGITAL+	ASTRA 1	10729 VL	---
1	ARD	ASTRA 1	10743 HL	---

Annotations:

- Move up through the table (points to the up arrow)
- Cursor to navigate up or down (points to the vertical slider)
- Move down through the table (points to the down arrow)

5.2 Changing a name or a value

5.2.1 Change inside a table

You can select a setup in the table. In this case, you can validate a setup by pressing the line you want to display

In this example, you change from the TNT-R3 setup to the TNT-R4 in the Measure page:

Measures (AST+ST-ET)

371:TNT-R1 610.000 MHz

DVB-T/H E38 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:3420(hex)

RF 58.1 dBμV

C/N 45.9 dB

BERi < 3E-8

BERo < 9E-9

PER < 9E-6

MER 35.9dB

LKM 14.9dB

Measures (AST+ST-ET)

371:TNT-R1 610.000 MHz

DVB-T/H E38 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:3420(hex)

RF 58.1 dBμV

C/N 45.9 dB

BERi < 5E-8

BERo < 2E-9

PER < 2E-6

MER 35.9dB

LKM 14.9dB

Measures (AST+ST-ET)

374:TNT-R4 626.000 MHz

DVB-T/H E40 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:0004(hex)

RF 59.8 dBμV

C/N 47.9 dB

BERi < 3E-8

BERo < 9E-9

PER < 9E-6



MER 33.6dB

LKM 12.6dB

5.2.2 Change with selection

When pressing a key, you may have a window with multiple choice. You only have to press the value you want to validate it. The  key allows you to cancel and exit this window, like in the example below.


In this example, the bandwidth changes from 5 to 8 MHz:

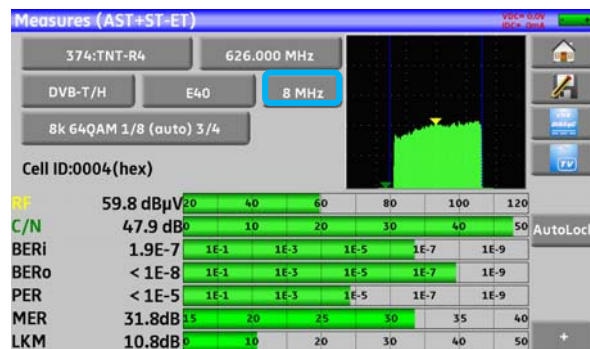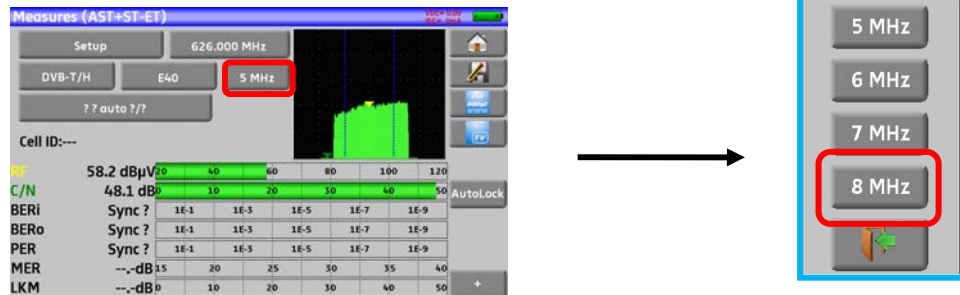

5.2.3 Change with virtual keyboard

If you want to enter a name of a number, a window appears with a numeric keypad or a virtual AZERTY keypad:

AZERTY keypad:

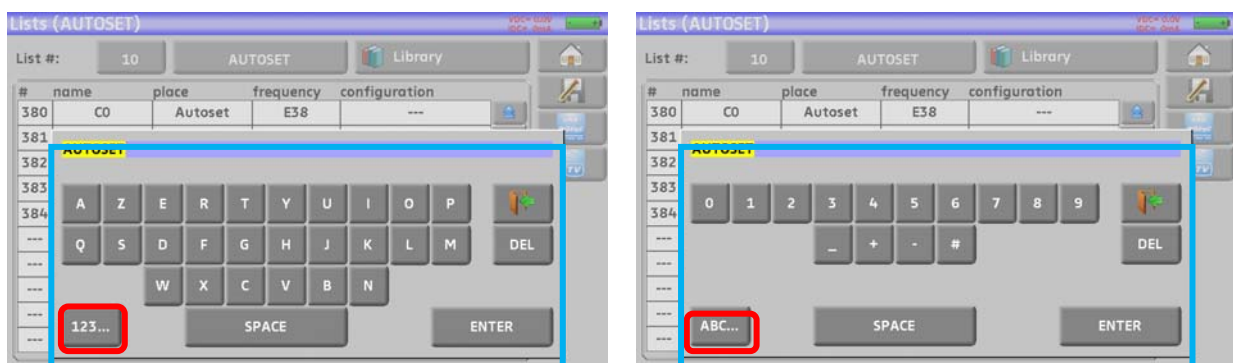

To alternate between modes: Digital/AZERTY or AZERTY/Digital

ZDF SatCR slot 3...

If a parameter of a setup changes, for example a modification of rate or change from DVB-S to DVB-S2, only the setup inside the library should be updated.



These lists and setups may be created on a computer thanks to a spreadsheet and loaded to the appliance through a USB stick.

A list of measurements is made of:

- a list name in 10 characters
- the lowest frequency of the LNB (OL1)
- the highest frequency of the LNB (OL2)
- the selection mode low band / high band of the LNB
- the selection mode of the polarization
- the presence of the position number of the positioner (motorized satellite dish)
- 50 lines including each:
 - a setup number corresponding to the setup list
 - the presence and the functioning mode of the switch, committed type
 - the position of the switch, committed type
 - the presence and the functioning mode of the switch, uncommitted type
 - the position of the switch, uncommitted type
 - the presence of SatCR equipment
 - the SatCR slot number
 - the position of the SatCR switch

A few of these parameters are specific to the waveband of the satellite and have no influence in terrestrial and cable modes.

Presentation of a measurement list in a spreadsheet:

	A	B	C	D	E	F	G	H	I
1	Nom de la liste / List name	ASTRA1+HOT							
2	Fréquence OL1 / LO1 frequency	9750							
3	Fréquence OL2 / LO2 frequency	10600							
4	Sélection OL / LO setup	DiSEqC							
5	Sélection polarisation / Polarization setup	DiSEqC							
6	Positionneur / Positioner								
7									
8		Número de programa Setup number	Switch committed Committed switch	Position Switch committed Committed switch position	Switch uncommitted Uncommitted switch	Position switch uncommitted Uncommitted switch position	Activation SatCR SatCR enabled	Número de slot Slot number	Switch SatCR SatCR switch
9	0								
10	1	1	DiSEqC	Pos A					
11	2	2	DiSEqC	Pos A					
12	3	3	DiSEqC	Pos A					
13	4	4	DiSEqC	Pos A					
14	5	5	DiSEqC	Pos A					
15	6	6	DiSEqC	Pos A					
16	7	7	DiSEqC	Pos A					
17	8	8	DiSEqC	Pos A					
18	9	9	DiSEqC	Pos A					
19	10	10	DiSEqC	Pos A					
20	11	11	DiSEqC	Pos A					
21	12								
22	13	18	DiSEqC	Pos B					
23	14	19	DiSEqC	Pos B					
24	15	20	DiSEqC	Pos B					
25	16	21	DiSEqC	Pos B					
26	17	22	DiSEqC	Pos B					
27	18	23	DiSEqC	Pos B					
28	19	24	DiSEqC	Pos B					
29	20	25	DiSEqC	Pos B					

A setup is made of:

- a setup name in 8 characters

- a place name in 10 characters
- a frequency
- a channel number in terrestrial or cable mode
- a frequency map in terrestrial or cable mode
- a vertical or horizontal polarization in satellite mode
- a low or high LNB band in satellite mode
- a standard
- an analogical mono stereo or NICAM mode in terrestrial or cable mode
- a constellation type 64QAM 256QAM under DVB-C
- a bandwidth 5, 6, 7 or 8 MHz under DVB-T and DVB-T2
- a symbol rate under DVB-C, DVB-S, DVB-S2 or DSS
- a value for the guard interval under DVB-T and DVB-T2
- the inversion or not of the spectrum under DVB-T

According to the terrestrial, cable or satellite band mode and to the standard, some parameters have no influence.

The place name may distinguish two distinct emitters, example TF1 Fourvière and TF1 Chambéry.

Frequency and channel number are equivalent: a valid channel number has priority over a frequency.

The frequency map parameter associated with the setup allows frontiersmen to keep on using channel numbers.



Selecting a list in the **Lists** page automatically recalls all information associated with this list.

Selecting a **Setup** on a measurement page automatically recalls all information associated with this setup.

Presentation of a setup library in a spreadsheet:

A	B	C	D	E	F	G	H	I	J	K	L	M	N	O
	Nom du programme Setup name	Nom du site Place name	Fréquence Frequency	N° de canal Channel #	Plan de Fréquence Frequencies map	Polarisation Polarization	Bande LNB LNB band	Standard	Mode audio Audio mode	Constellation	Largeur de bande Bandwidth	Débit symbole Symbol rate	Intervalle de garde Guard interval	Inversion du spectre Spectrum inversion
2	0	DIGITAL+	ASTRA 1	10729 000		V		DVB-S2				22000		
3	1	ARD	ASTRA 1	10743 000		H		DVB-S				22000		
4	2	SKY D	ASTRA 1	10773 000		H		DVB-S2				22000		
5	3	DIGITAL+	ASTRA 1	10788 000		V		DVB-S				22000		
6	4	DIGITAL+	ASTRA 1	10817 000		V		DVB-S2				22000		
7	5	AMRE HD	ASTRA 1	10832 000		H		DVB-S2				22000		
8	6	DIGITAL+	ASTRA 1	10847 000		V		DVB-S				22000		
9	7	TVP HD	ASTRA 1	10861 000		H		DVB-S				22000		
10	8	DIGITAL+	ASTRA 1	10876 000		V		DVB-S				22000		
11	9	UPC	ASTRA 1	10920 000		H		DVB-S				22000		
12	10	DIGITAL+	ASTRA 1	10979 000		V		DVB-S				22000		
13	11	SKY D	ASTRA 1	11023 000		H		DVB-S2				22000		
14	12	DIGITAL+	ASTRA 1	11038 000		V		DVB-S				22000		
15	13	DIGITAL+	ASTRA 1	11097 000		V		DVB-S				22000		
16	14	DIGITAL+	ASTRA 1	11156 000		V		DVB-S				22000		
17	15	ORANGE	ASTRA 1	11170 000		H		DVB-S2				22000		
18	16	GRF	ASTRA 1	11302 000		H		DVB-S2				22000		
19	17	DIGITAL+	ASTRA 1	11317 000		V		DVB-S				22000		
20	18	DASERSTE	ASTRA 1	11361 000		H		DVB-S2				22000		
21	19	DIGITAL+	ASTRA 1	11436 000		V		DVB-S2				22000		
22	20	HD+	ASTRA 1	11464 000		H		DVB-S2				22000		
23	21	CANALSAT	ASTRA 1	11479 000		V		DVB-S				22000		
24	22	GLOBECAS	ASTRA 1	11508 000		V		DVB-S				22000		
25	23	GLOBECAS	ASTRA 1	11538 000		V		DVB-S				22000		
26	24	CANALSAT	ASTRA 1	11587 000		V		DVB-S2				22000		
27	25	ASTRA	ASTRA 1	11597 000		V		DVB-S				22000		
28	26	DIGITAL+	ASTRA 1	11626 000		V		DVB-S2				22000		
29	27	UPC	ASTRA 1	11670 000		H		DVB-S				22000		
30	28	DIGITAL+	ASTRA 1	11685 000		V		DVB-S				22000		
31	29	SKY D	ASTRA 1	11719 000		H		DVB-S				27500		
32	30	VIACOM	ASTRA 1	11739 000		V		DVB-S				27500		
33	31	SKY D	ASTRA 1	11758 000		H		DVB-S				27500		
34	32	CANALSAT	ASTRA 1	11778 000		V		DVB-S				27500		
35	33	SKY D	ASTRA 1	11797 000		H		DVB-S				27500		
36	34	CANALSAT	ASTRA 1	11817 000		V		DVB-S				27500		
37	35	ARD	ASTRA 1	11836 000		H		DVB-S				27500		
38	36	CANALSAT	ASTRA 1	11856 000		V		DVB-S				27500		
39	37	SKY D	ASTRA 1	11875 000		H		DVB-S				27500		
40	38	CANALSAT	ASTRA 1	11895 000		V		DVB-S				27500		
41	39	SKY D	ASTRA 1	11914 000		H		DVB-S2				27500		
42	40	CANALSAT	ASTRA 1	11934 000		V		DVB-S				27500		


6 AUTOSET mode



Attention: The Autoset channel research is only possible when at least one list is empty with enough place in the library

This mode allows an **automatic research of setups** and to provide information about the current place. You can access it through the key  Autoset on page Home.

The displayed lines on this page depend on the selected **Frequency band**. The key before the Mode line allows you to select between terrestrial, cable or satellite mode:

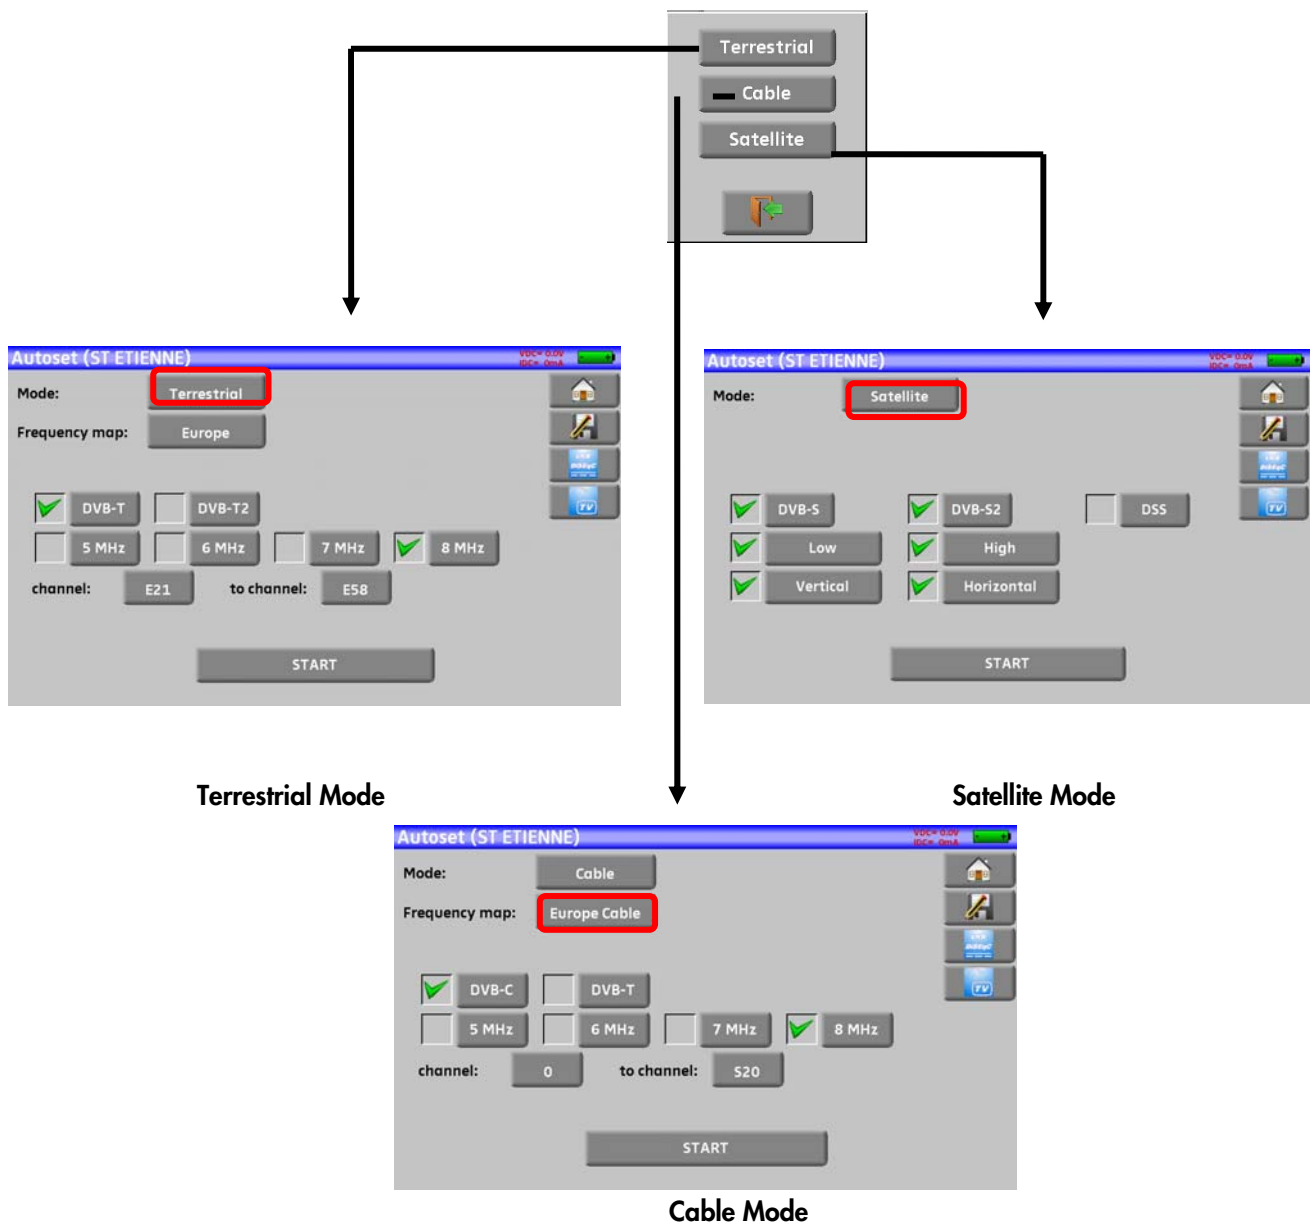

Once the mode selected, the keys of the various parameters activate or deactivate each option.

A green check shows that the parameter is included in the research. If there is no green check, the parameter will not be taken into account for the research.



Inactive research parameter



Active research parameter



Attention: The more you select options, the longer the research.


6.1 Terrestrial mode

This mode allows automatic research on the **terrestrial** frequency band.

The table allows the selection of:

- Standards
- Channel widths
- The channel range of the research (i.e. 21 to 58).

The goal is to make researches shorter.

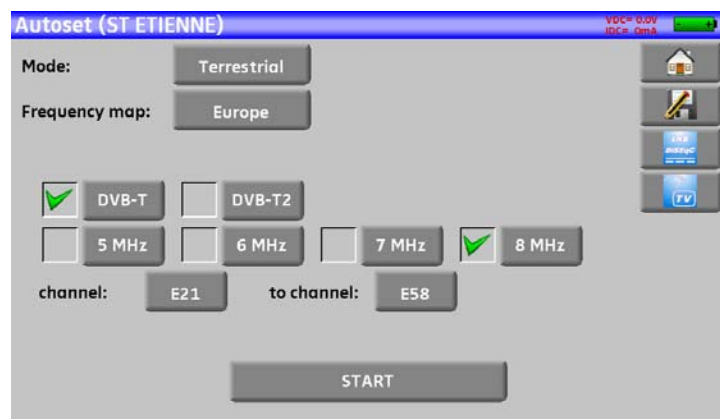


6.2 Satellite mode

This mode allows automatic research on the **satellite** frequency band.


The table allows the selection of:

- Standards
- LNB bands
- LNB polarizations.

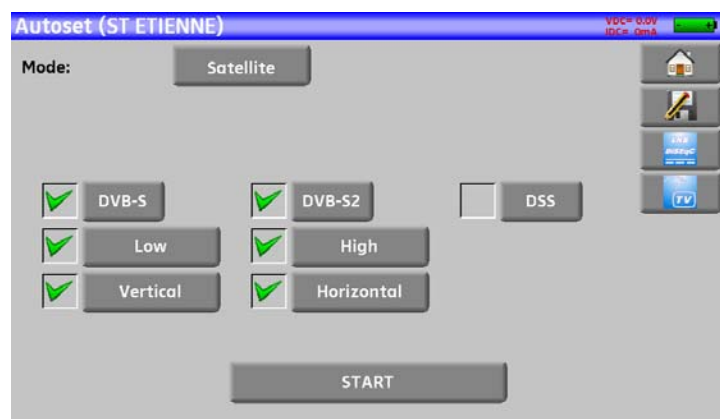

6.3 Cable mode

This mode allows automatic research on the **cable** frequency band.

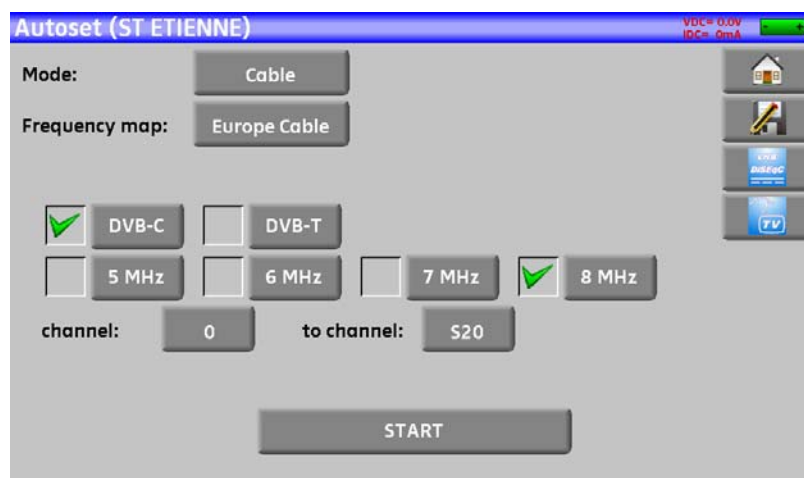

6.4 «START » menu key

No matter which mode is selected, press the “**START**” key when the table is filled to launch the research.

Pressing **"Stop"** will abort the research.

When the research is done or if the user aborted it, the appliance turns automatically to the **Measurement map** function.

Measurement map (AUTOSET) VDC= 0.0V
IDC= 0mA

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	58.6	46.7	<9E-8	<2E-8	<2E-5	36.0
E40	DVB-T/H	59.5	47.6	6.3E-8	<2E-8	<2E-5	31.8
E44	DVB-T/H	0.0	> 0.0				--,-
E46	DVB-T/H	0.0	> 0.0				--,-
E49	DVB-T/H	0.0	> 0.0				--,-

Mode
-> USB

3 / 5 -> 0 mn

Any detected channel will be registered into the first empty list (automatically renamed AUTOSET) **and** into the first available setups of the library, starting from the end of the table.

Lists (AUTOSET)

List #: 10 AUTOSET Library

#	name	place	frequency	standard
380	C0	Autoset	E38	---
381	C1	Autoset	E40	---
382	C2	Autoset	E44	---
383	C3	Autoset	E46	---
384	C4	Autoset	E49	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

Lists (AUTOSET)

List #: 10 AUTOSET Library

#	name	place	frequency	standard
380	C0	Autoset	E38	---
381	C1	Autoset	E40	---
382	C2	Autoset	E44	---
383	C3	Autoset	E46	---
384	C4	Autoset	E49	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---
---	---	---	---	---

Lists

4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR
8	ST ETIENNE
9	AST+ST-ET
10	AUTOSET
11	

Library setups (AUTOSET)

Lists

#	name	place	frequency	standard
390	C0	Autoset	E38	DVB-T/H 8M GI auto
391	C1	Autoset	E40	DVB-T/H 8M GI auto
392	C2	Autoset	E44	DVB-T/H 8M GI auto
393	C3	Autoset	E46	DVB-T/H 8M GI auto
394	C4	Autoset	E49	DVB-T/H 8M GI auto
395	---	---	---	---
396	---	---	---	---
397	---	---	---	---
398	---	---	---	---
399	---	---	---	---

The new list is created in the first available list

The default name of the new list is AUTOSET

New found channels are added one by one into the new list


New found channels are added one by one into the first available setups of the library, starting from the end of the table

7 Measurement lists

7.1 The List page


In this page, you can select the list where you will work on measurements.

Pressing Home  then Lists-Library  gives you access to the **Lists** function:

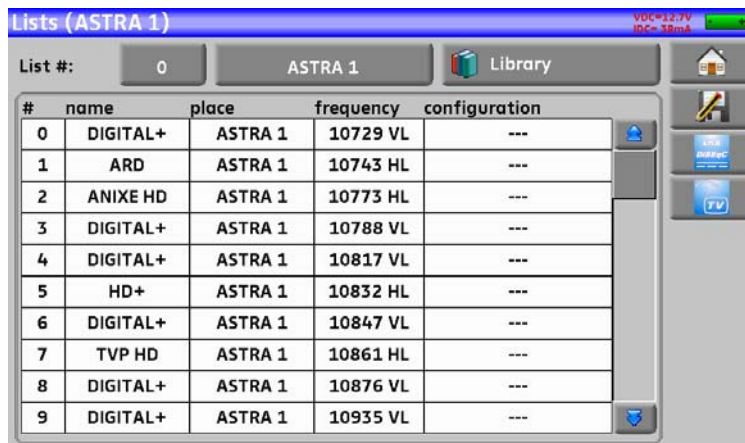

#	name	place	frequency	configuration
0	DIGITAL+	ASTRA 1	10729 VL	---
1	ARD	ASTRA 1	10743 HL	---
2	ANIXE HD	ASTRA 1	10773 HL	---
3	DIGITAL+	ASTRA 1	10788 VL	---
4	DIGITAL+	ASTRA 1	10817 VL	---
5	HD+	ASTRA 1	10832 HL	---
6	DIGITAL+	ASTRA 1	10847 VL	---
7	TVP HD	ASTRA 1	10861 HL	---
8	DIGITAL+	ASTRA 1	10876 VL	---
9	DIGITAL+	ASTRA 1	10935 VL	---


Lists are ranked from 0 to 19. To select the one you want, press the following key. Lists are displayed. Press the one you want:

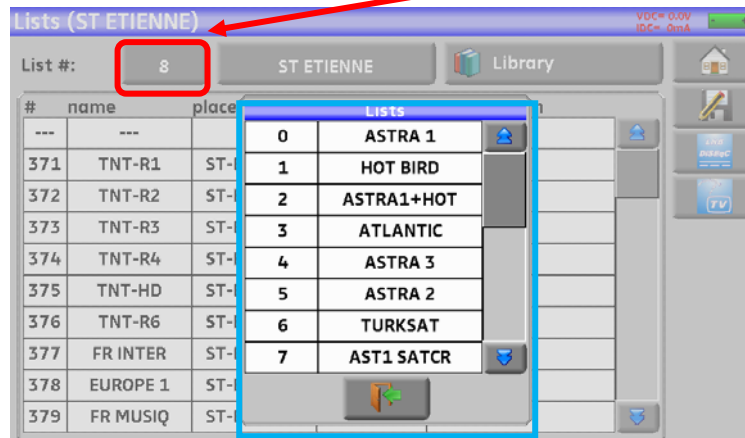

#	name	place
---	---	---
371	TNT-R1	ST-ETIENNE
372	TNT-R2	ST-ETIENNE
373	TNT-R3	ST-ETIENNE
374	TNT-R4	ST-ETIENNE
375	TNT-HD	ST-ETIENNE
376	TNT-R6	ST-ETIENNE
377	FR INTER	ST-ETIENNE
378	EUROPE 1	ST-ETIENNE
379	FR MUSIQ	ST-ETIENNE


	Lists
0	ASTRA 1
1	HOT BIRD
2	ASTRA1+HOT
3	ATLANTIC
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR

In this example, we selected ST ETIENNE.

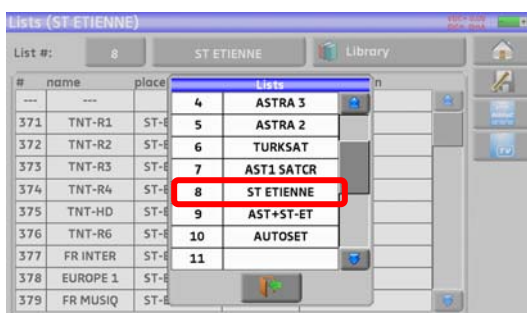

#	name	place
---	---	---
371	TNT-R1	ST-ETIENNE
372	TNT-R2	ST-ETIENNE
373	TNT-R3	ST-ETIENNE
374	TNT-R4	ST-ETIENNE
375	TNT-HD	ST-ETIENNE
376	TNT-R6	ST-ETIENNE
377	FR INTER	ST-ETIENNE
378	EUROPE 1	ST-ETIENNE
379	FR MUSIQ	ST-ETIENNE

	Lists
4	ASTRA 3
5	ASTRA 2
6	TURKSAT
7	AST1 SATCR
8	ST ETIENNE
9	AST+ST-ET
10	AUTOSET
11	

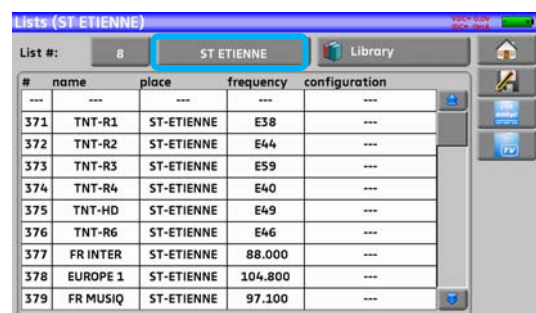
#	name	place	frequency	configuration
---	---	---	---	---
371	TNT-R1	ST-ETIENNE	E38	---
372	TNT-R2	ST-ETIENNE	E44	---
373	TNT-R3	ST-ETIENNE	E59	---
374	TNT-R4	ST-ETIENNE	E40	---
375	TNT-HD	ST-ETIENNE	E49	---
376	TNT-R6	ST-ETIENNE	E46	---
377	FR INTER	ST-ETIENNE	88.000	---
378	EUROPE 1	ST-ETIENNE	104.800	---
379	FR MUSIQ	ST-ETIENNE	97.100	---




Attention: A list may contain a Satellite and a Terrestrial setup.

7.2 Modification of a list

To change the name of a list, you must trigger its name. A virtual keypad shows up. Type the new name (ALCAD in our example).

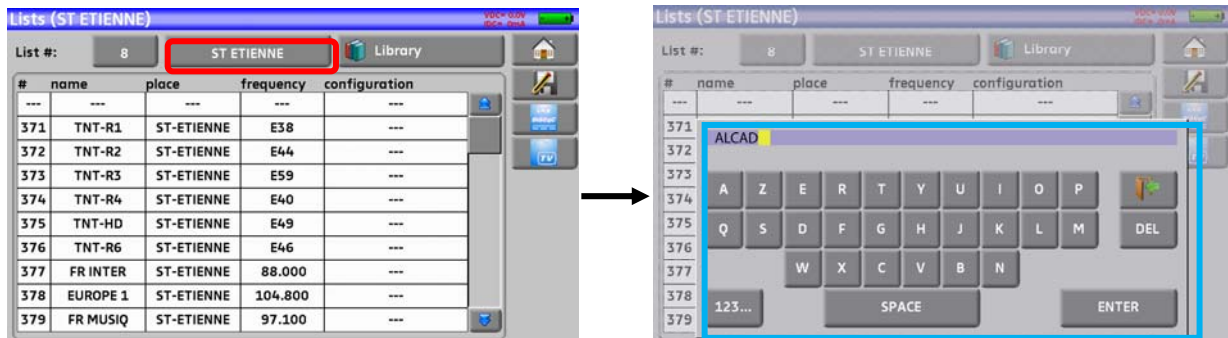


To add a setup to the list, select the line. A window shows up:

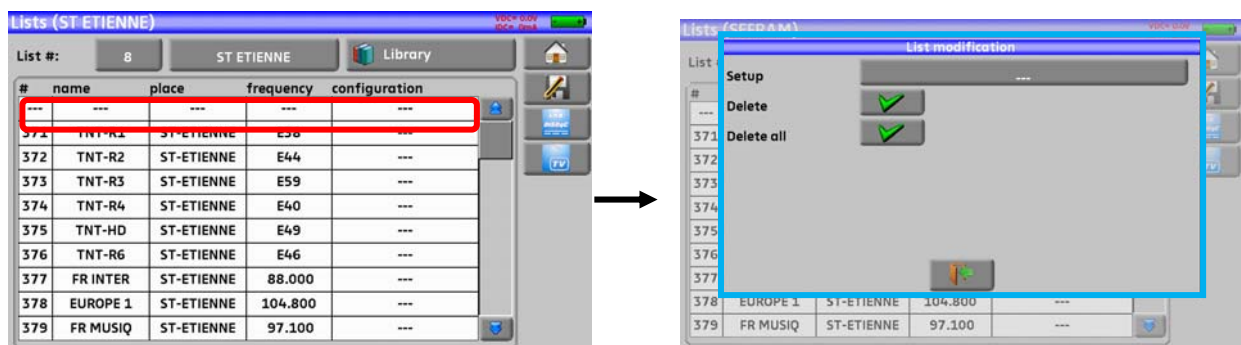


Attention: If the line contains a setup, it shall be erased. To cancel, press:




By pressing the key before Setup, you disclose the available setups from the library (you cannot create a setup from a list; to create a setup, see [Setup creation or modification in the library](#)):

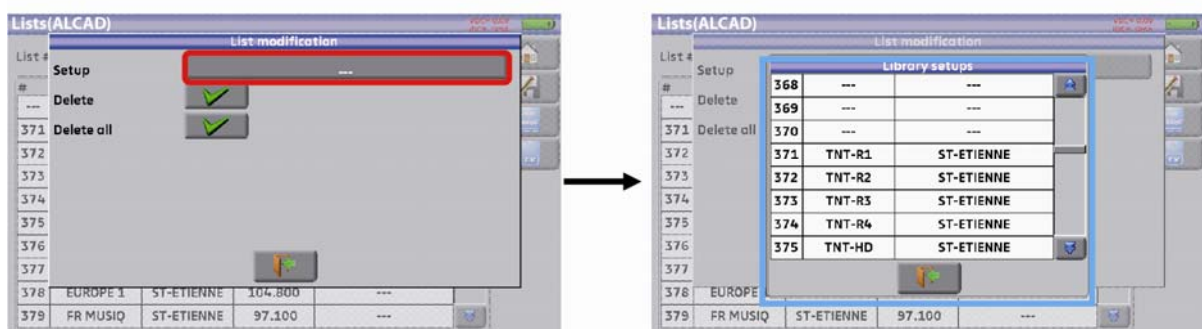

Scroll the list up or down to find the setup you want to add to your list. Press the line you want:

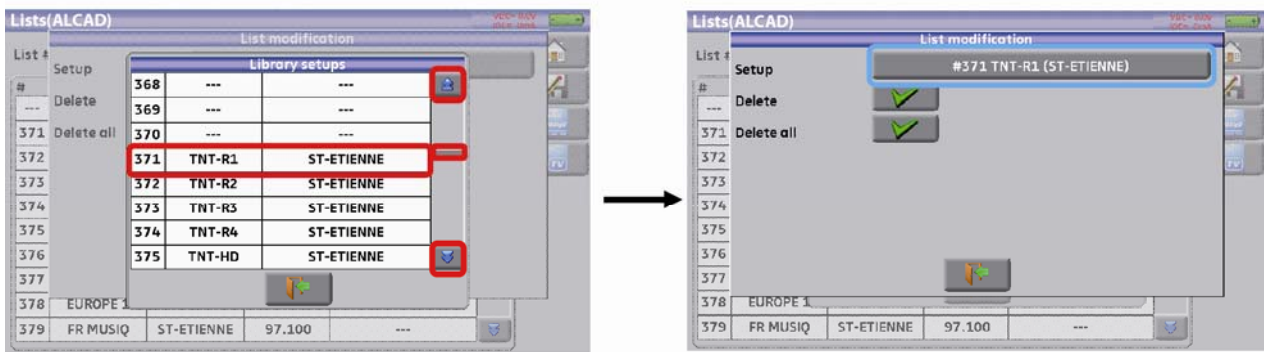


The setup is now in the list:

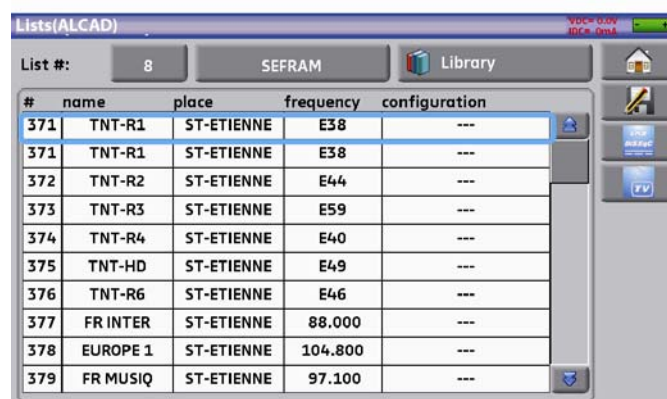

You may erase the setup from the list by pressing the check before Erase when the setup is selected. You can also erase all setups from the list by pressing the check before Erase all.

In both cases, a confirmation box will pop up:

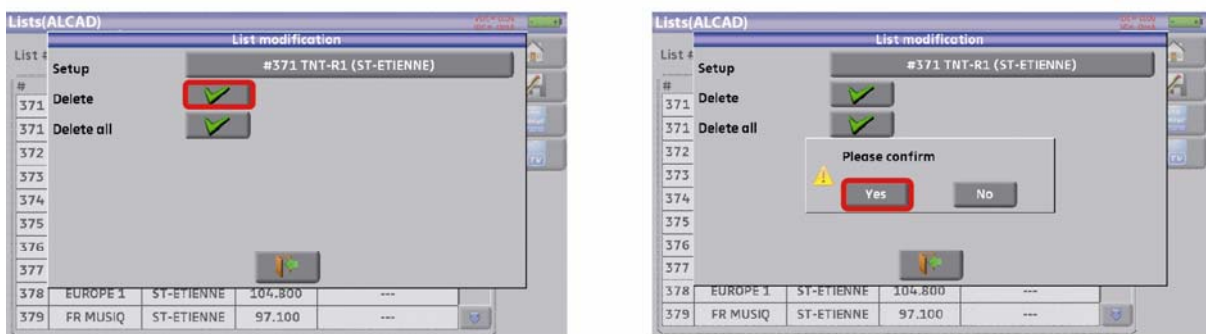

In a satellite setup, you can change the switch, the Uncommitted Port and the SatCR by activating any of these keys (this change will affect only the setup in this list, not in the library):



8 Setup library

8.1 The Library page

By pressing Home  then Lists-Library , you can access the Lists function. From there, you can access the Library by pressing the key: 

Library setups (ALCAD)

#	name	place	frequency	standard
376	TNT-R6	ST-ETIENNE	E46	DVB-T/H 8M GI auto
377	FR INTER	ST-ETIENNE	88.000	FM
378	EUROPE 1	ST-ETIENNE	104.800	FM
379	FR MUSIQ	ST-ETIENNE	97.100	FM
380	---	---		
381	---	---		
382	---	---		
383	---	---		
384	---	---		
385	---	---		

8.2 Creation or modification of setups in the library

To create or change a setup in the library, you have to select a line in the table. A window pops up:



Attention: If the line contains a setup, it will be erased. To cancel, press:



You can also erase the setup in the library by pressing the  key.

You can also erase all setups from the library by pressing the  key.

From this window, you can create a terrestrial, satellite KU, L or C setup.

To proceed, see chapter 5 [Man-machine interface](#)

Terrestrial setup:

Under standard DVB-T/H (DVB-T2 identical, except modulation)

To enter the name you want for the setup

To enter the frequency you want for the setup

To enter the standard you want for the setup (DVB -T/H in this case)

To enter the type of modulation you want for the setup

To enter the placename you want for the setup

To enter the channel you want for the setup

To enter the frequency band you want for the setup

Under standard DVB-C

To enter the symbol rate you want for the setup

In terrestrial analogical standard (L, BG, DK, I and MN)

To enter the type of audio configuration you want for the setup

➤ **Setup Satellite KU, L or C:**

Ku L or C corresponds to the selected band

To enter the type of polarity you want for the setup (high or low, vertical or horizontal)

To enter the symbol rate you want for the setup

Library setup (SEEPROM) VDC= 0.0V IDC= 0mA

Setup modification

Band:	Satellite KU
Name:	380
Place:	Autoset
Frequency:	10729 (979) MHz
Standard:	DVB-S
Polar./Band:	Low Vertical
Symbol rate:	22000 kbd

✓ Delete ✓ Delete all


9 Check Sat



Only for satellite band.

The Check Sat mode allows you to quickly align the satellite dish by initial selection of the satellite.

Press  and  to access the Check Sat mode.

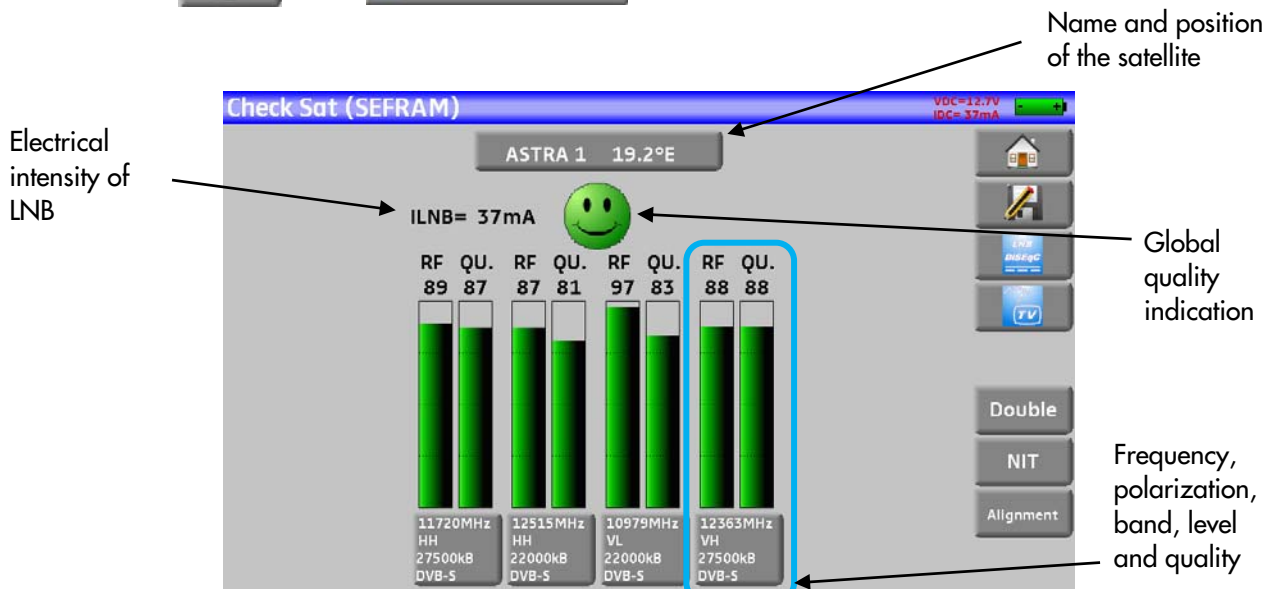


The appliance has 32 possible orbital positions for satellites. It is provided with circa ten satellites registered.

4 transponders are appended to each satellite.

You can select the satellite by pressing several times « Name and position of the satellite ».

To modify a transponder, you must press the corresponding key.

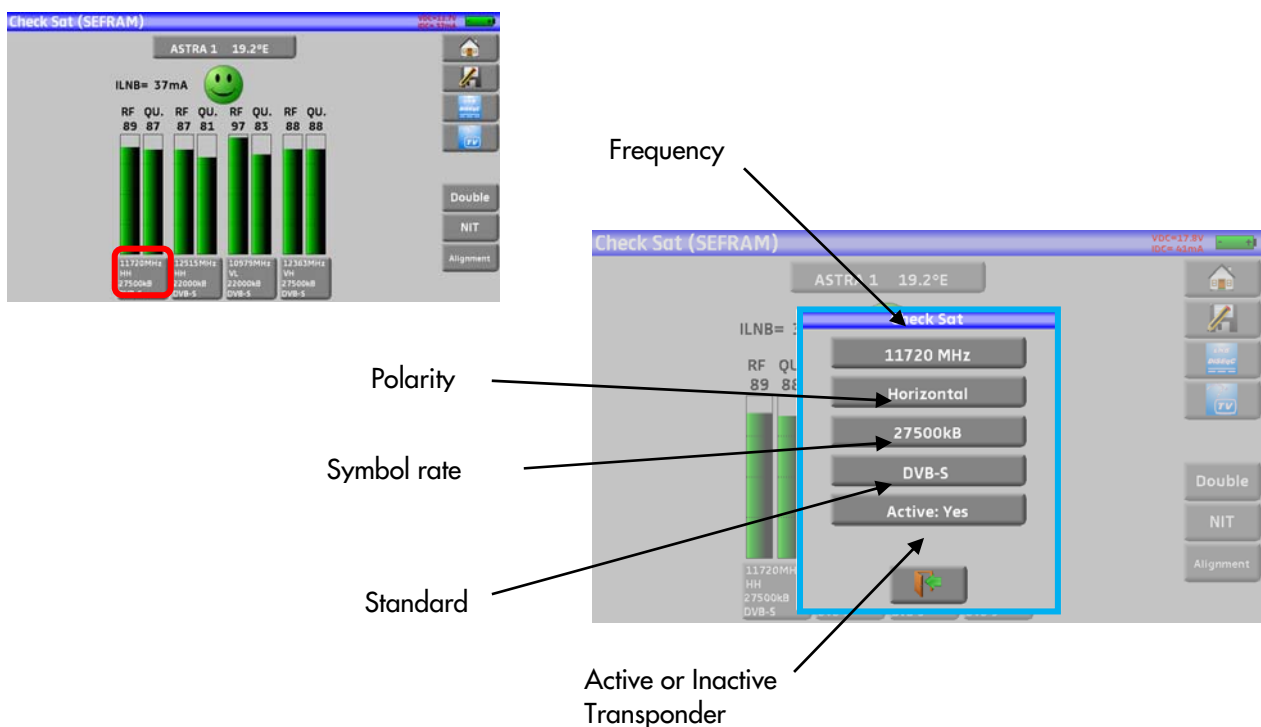

9.1 Updating satellites

You may add new satellites and update or suppress old ones thanks to a computer and an USB memory stick.

You can use of free PC software SWR-003: download it from our website.
Embedded Help will be useful for each work.

The screenshot shows the 'Sat.csv - Checksat' software window. It contains a table with columns for satellite name, orbital position, elevation, and four sets of transponder data (T1, T2, T3, T4). Each set includes frequency, polarization, standard, and symbol rate. The table is color-coded by column: Satellite name (blue), Orbital position (yellow), Elevation (green), T1 (yellow), T2 (orange), T3 (green), and T4 (blue). A tooltip is visible over the 'T1 symbol rate' column, stating: 'In this table, fill in informations about satellites and transponders choose preferably high symbol rate to decrease locking time.'

Satellite name	Orbital position	Elevation	T1 frequency	T1 polarization	T1 standard	T1 symbol rate	T2 frequency	T2 polarization	T2 standard	T2 symbol rate	T3 frequency	T3 polarization	T3 standard	T3 symbol rate	T4 frequency	T4 polarization	T4 standard	T4 symbol rate
TURKSA 1.2	42.0	E	10970	V	DVB-S	30000	11012	V	DVB-S	30000	11919	V	DVB-S	24444	12729	V	DVB-S	30000
ASTRA 2	28.2	E	10803	H	DVB-S	22000	10714	H	DVB-S	22000	10818	V	DVB-S	22000	12402	V	DVB-S	27500
ASTRA 3	23.5	E	11475	V	DVB-S	27500	11796	H	DVB-S	27500	11875	H	DVB-S	27500	11914	H	DVB-S	27500
ASTRA 1	19.2	E	11720	H	DVB-S	27500	12615	H	DVB-S	22000	10879	V	DVB-S	22000	12363	V	DVB-S	27500
EUTELW2	16.0	E	11011	V	DVB-S	27500	11055	H	DVB-S	27300	11554	V	DVB-S	30000	12650	H	DVB-S	15000
HOT Bird	13.0	E	10723	H	DVB-S	28000	12721	H	DVB-S	28000	10719	V	DVB-S	27500	12713	V	DVB-S	28000
RTL 10.02	1.0	W	11952	H	DVB-S	28000	11727	V	DVB-S	28000	11591	V	DVB-S	20000	10970	V	DVB-S	28900
ATLANTIC 3	5.0	W	11955	V	DVB-S	28000	11591	V	DVB-S	20000	10970	V	DVB-S	28900	11176	H	DVB-S	27500
ATLANTIC 2	8.0	W	11133	H	DVB-S	28000	11098	H	DVB-S	2100	11176	H	DVB-S	27500	11176	H	DVB-S	27500
HISPASAT	30.0	W	11577	V	DVB-S	27500	11301	V	DVB-S	27500	11816	V	DVB-S	28875	12226	V	DVB-S	27500

Change the values as you wish.

After changes, you only need to record a file SAT.CSV on an USB memory stick and Import inside your instrument.

(see chapter Import/Export 19.6.5)




The setting time depends on the rate of the transponder. The lower the rate, the longer the setting time.

Hence you'd better select high rate transponders to align a satellite dish.

9.2 Check Sat function

Procedure:

1/ Connect the satellite dish to the appliance and start it up.

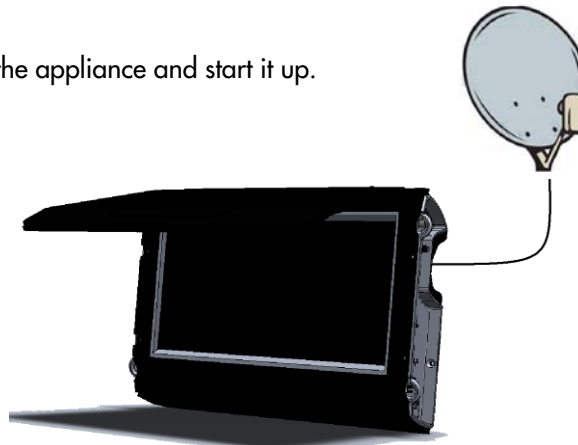

2/ Validate the remote power supply:

- VDC lights up.
- Check the power supply current of the LNB (IDC at the top right corner of the screen should be between ca. 50 and 200 mA).

See chapter [Remote power supply / LNB – DiSEqC](#)

3/ On the Home page, go to the Check Sat mode.


Select the satellite to aim at in the list (example ASTRA1)



4/ Slowly orientate the satellite dish until hearing the locking melody and getting the best quality.

5/ Slightly turn the LNB to get the best quality (counter-polarization).

You will hear a melody as soon as a first transponder is detected; then, you will hear beeps. These beeps are closer and closer as the quality increases.

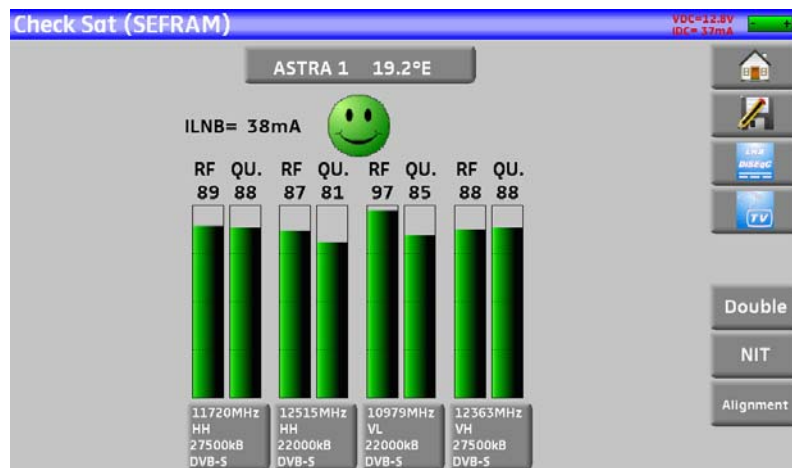

If the appliance is not synchronized on all four transponders, the quality indication is **red**.



If the appliance is synchronized on all four transponders but the reception quality is average, the quality indication is **orange**.



If the appliance is synchronized on all four transponders and the reception quality is good, the quality indication is **green**.



Attention:

To identify a satellite, it must be synchronized on all **4 transponders**.

However, some transponders are regularly modified.

See the frequency map of the satellite if a transponder does not seem to work.

Some switches or LNB work only with DiSEqC commands. In this case, position the OL and the polarization on DiSEqC in the Configuration page LNB-DiSEqC.


(Attention: the Check Sat is slower with DiSEqC commands).



9.3 Checking the aligned satellite

To check if you have aimed the right satellite, press the NIT key.

The appliance searches the MPEG NIT table on one of the 4 transponders and displays the name of the satellite:

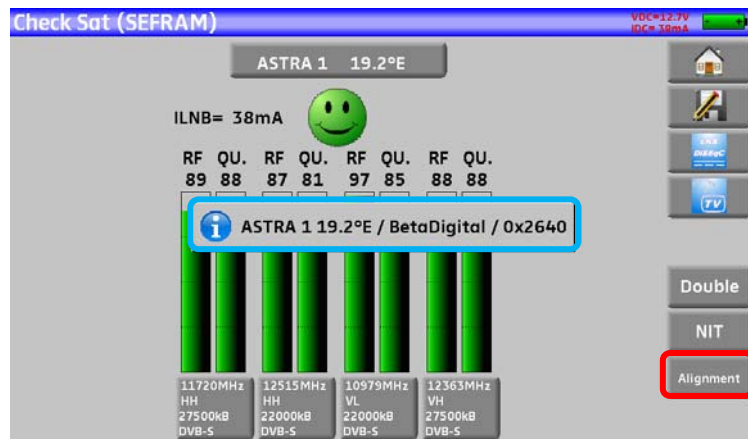


Attention: The displayed name depends on the content of the MPEG NIT table. Some distributors provide no (or poor) such table. The displayed information may be wrong.

9.4 Double Check Sat

This mode allows you to orientate a double LNB by checking 4 transponders on 2 selected satellites. This mode is identical to the simple Check Sat mode.

To access the double Check Sat mode, you have to trigger the Double key.

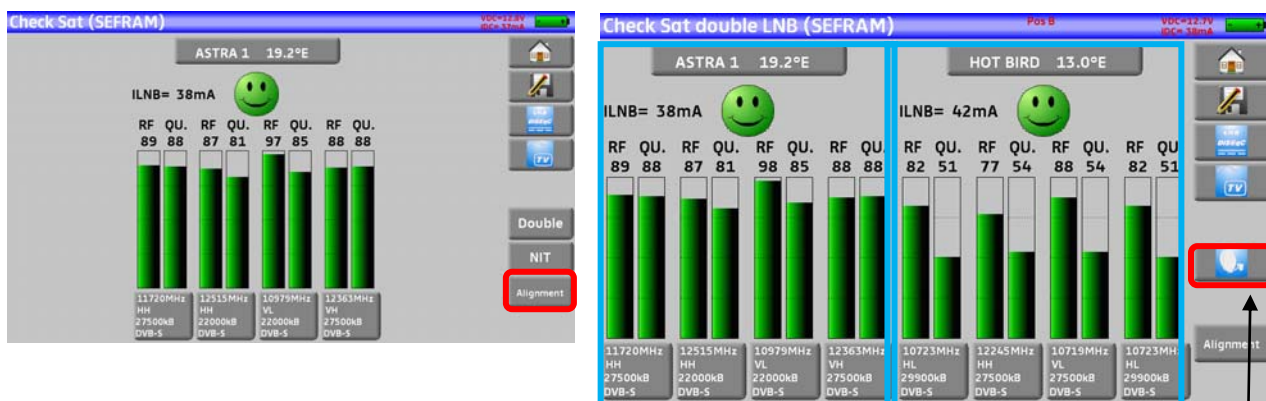


Sat. A

Sat. B

To return to the simple mode

9.5 Alignment of the satellite dish

Pressing the « **Alignment** » key enables the calculation of the Altitude, Azimuth and Polarization values of your satellite dish:

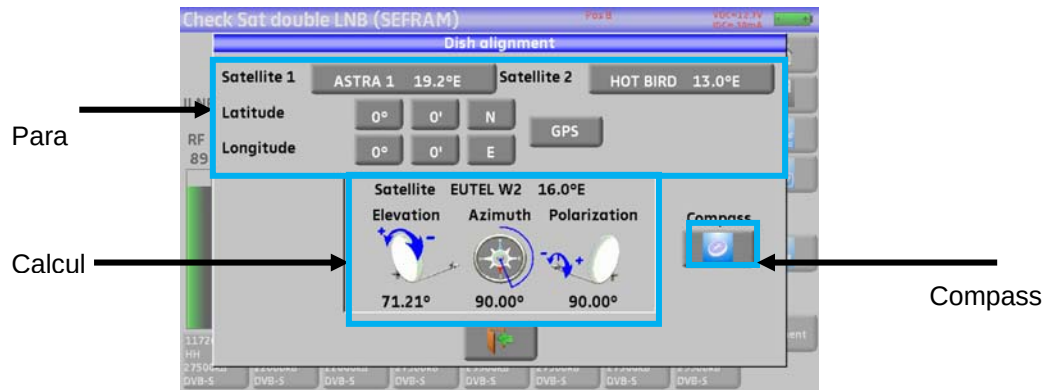

Parameters:

- Satellite 1: satellite to aim; or 1st satellite in case of multi-headed satellite dish
- Satellite 2: 2nd satellite in case of multi-headed satellite dish (else, input the same value as satellite 1)
- Latitude: latitude of your current geographical place
- Longitude: longitude of your current geographical place
- GPS: the GPS key inputs automatically the latitude and longitude fields (if the GPS option is available in the appliance)

Calculations:

- Satellite: satellite to aim, the closest to the median position between Satellite1 and Satellite2
- Elevation: tilting angle of the satellite dish
- Azimuth: horizontal angle of the satellite dish with reference to the north
- Polarization: rotation of LNB with reference to a vertical line.

9.5.1 Electronic compass


This function returns the orientation of the satellite dish in comparison with the appliance.



The compass measurements are based on previous parameters : satellite to align, current latitude and longitude.


Please, fill these parameters before using the electronic compass.

When triggering this key, the appliance calls for calibration of the (internal) compass.

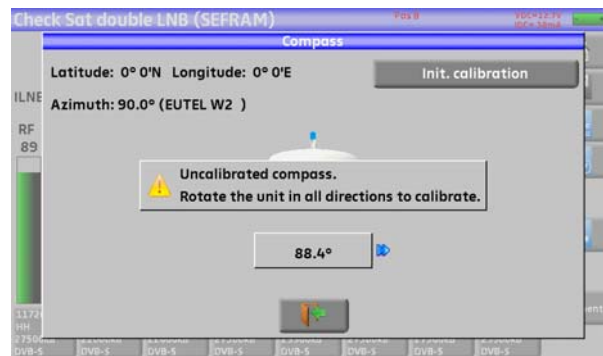

To do so, you must turn the appliance in all directions until the message disappears.

The appliance displays your azimuth **and** if you have to turn to the left or to the right to face the satellite :

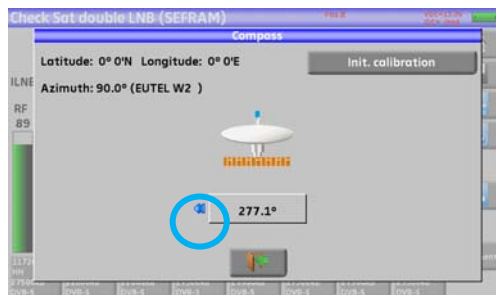

or



When the satellite is in front of you, the appliance displays your position on a green background like here:



The « **init.calibration** » key relaunches the calibration of the compass.

9.5.2 Recall




Azimuth

Position of the satellite dish on the horizontal plane with reference to the north. Measured in degrees.


Elevation

Tilt angle under which the beam from the satellite reaches your antenna. Measured in degrees using what is specified on the stand of the satellite dish.

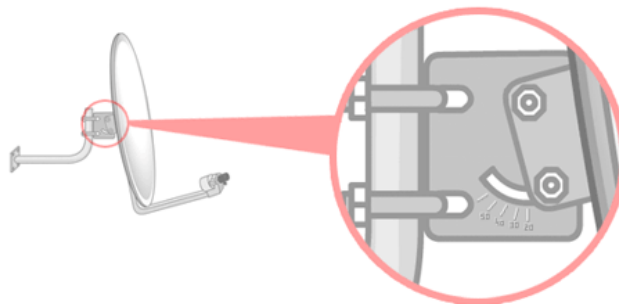

Polarization

Rotation required for the LNB from a vertical line. Measured in degrees.

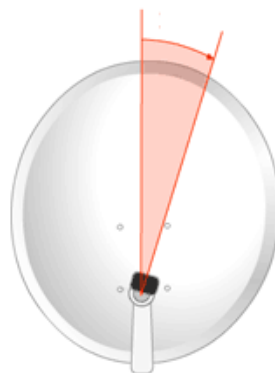

To calculate the parameters of a single-headed satellite dish, enter the same satellite for Check Sat on both parameters '**Satellite 1**' and '**Satellite 2**'.





Note: The list of the available satellites for this calculation is the same as for Check Sat.

10 The Measures-TV-Spectrum page

The Measures-TV-Spectrum page is divided in three zones that can each be displayed full screen by pressing it (the spectrum, the TV or the measurement).


It also includes a service list zone where you can watch the services of the channel and change of selection if required.

So, pressing the red-circled zones will result in:

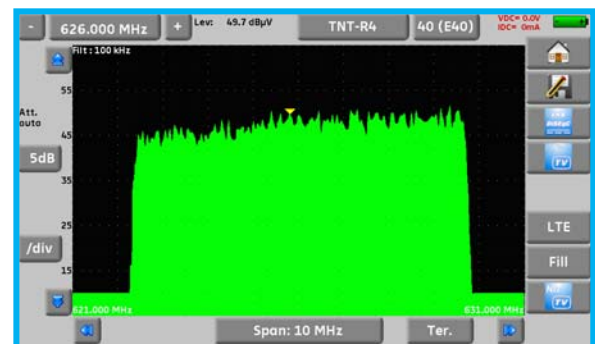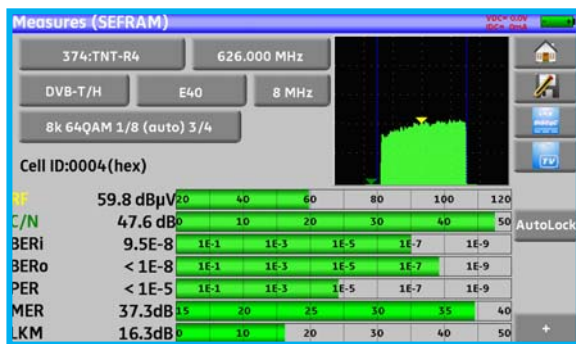


MEASURES
mode full screen

SPECTRUM
mode full screen

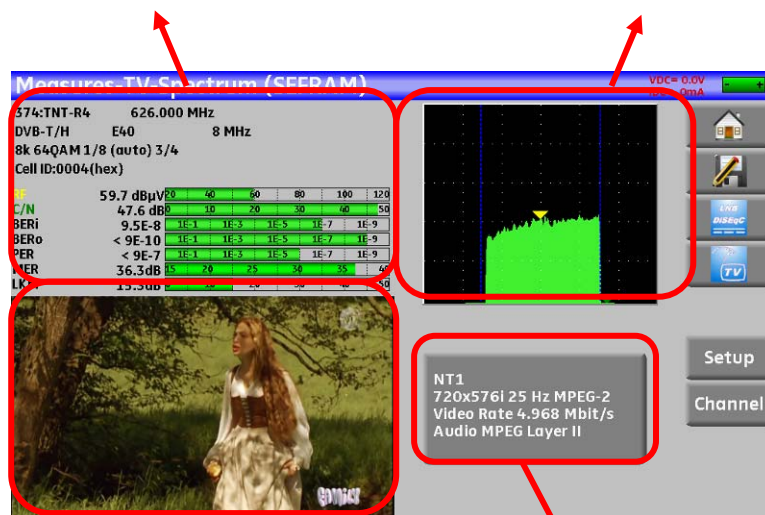

TV mode full screen

List of services

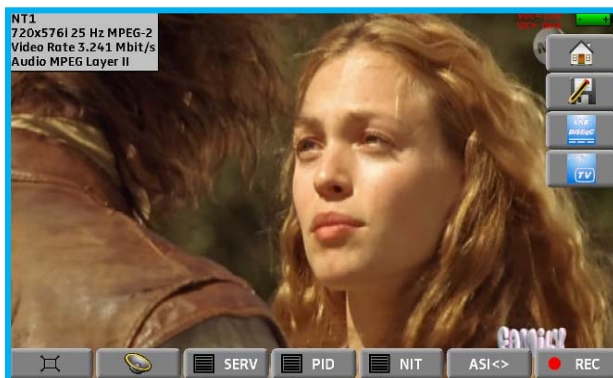

Measures-TV-Spectrum (SEFRAM)

374:TNT-R4 626.000 MHz

DVB-T/H E40 8 MHz

8k 64QAM 1/8 (auto) 3/4

Cell ID:0004(hex)

Service	Provider	SID	LCN A	Type
ARTE HD	Multi 4	1031	57	Digital TV
PARIS PREMIERE	MULTI4	1028	41	Digital TV
M6	MULTI4	1025	6	Digital TV
W9	MULTI4	1026	9	Digital TV
NT1	MULTI4	1027	11	Digital TV

Setup
Channel

11 Measures

Pressing the MEASURE zone gives access to the **MEASURES** function.


In this page, you can either perform measurements on a memorized program in the current list (see chapter « Measurement list »), or change parameters manually, or use the AutoLock function

11.1 Autolock function


This function is design to lock on a digital signal (terrestrial, cable or satellite)

You just have to enter the frequency or the channel (for terrestrial), then press AutoLock, The instrument will find automatically in few seconds the digital standard, the modulation type and all other parameters of the signal.

Example for terrestrial, channel 38 (frequency 610MHz):

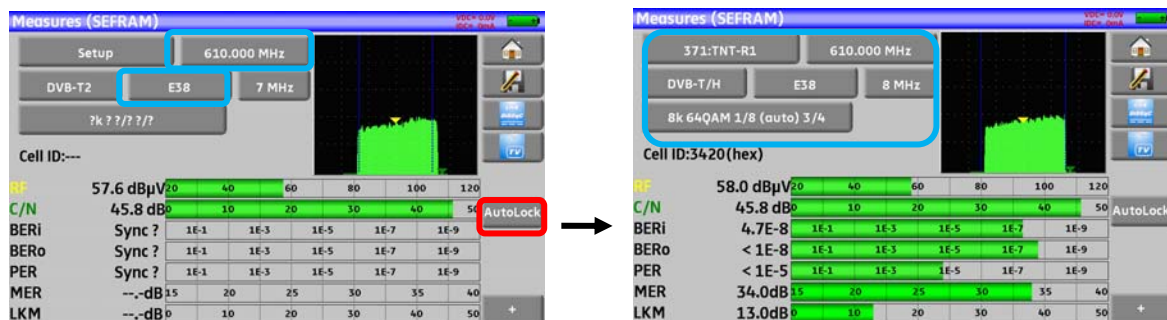


Example for satellite low vertical polarization, frequency 12581MHz:

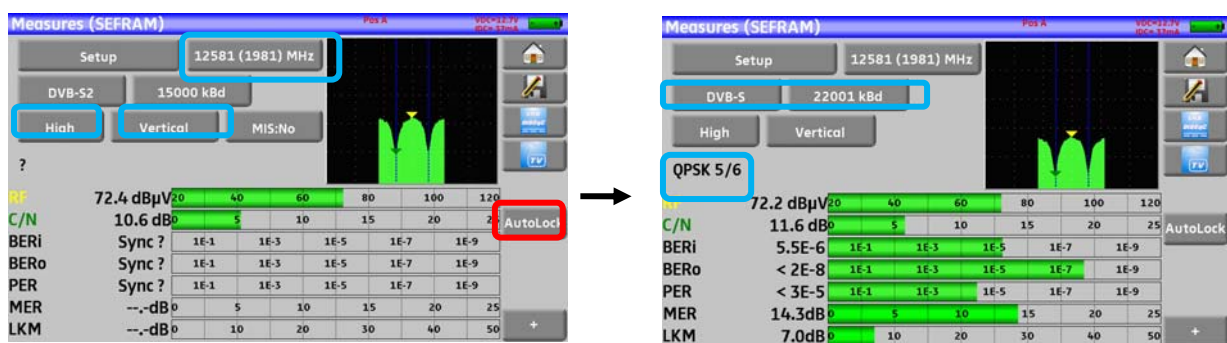

11.2 Modification of parameters

You can either do measures on a saved setup in the current list (see chapter « [Setting the parameters of the Measurement Lists](#) »), or modify manually each parameter.

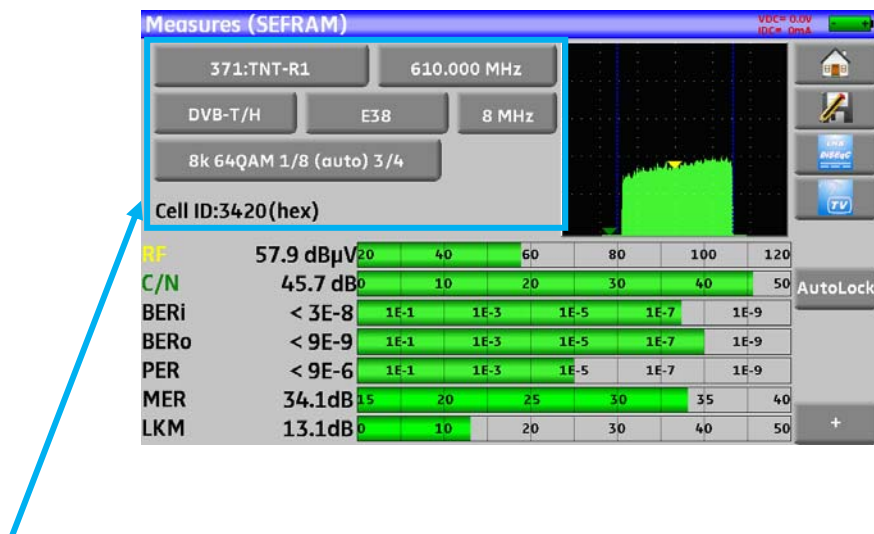

The various parameters are:

- The name of the setup (selection on the active list)
- The frequency of the emitter or transponder (and the true frequency of satellite)
- The standard and bandwidth for DVB-T/H and DVB-T2
- The corresponding channel number for terrestrial and cable mode
- The symbol rate for the satellite
- The polarization and the band for the satellite
- The audio mode for the analogical TV

The + key in the lower right corner displays (under DVB-T/H, DVB-T2, DVB-S and DVB-S2) the following information:

- The spectral inversion of the signal
- The frequency offset
- The Viterbi rate of the HP flow
- The Viterbi rate of the LP flow
- The level of the hierarchical mode
- The cell identification


See chapter [Man-machine interface](#) to make any change.

11.3 Level measurements

You can measure levels at a specific frequency with a detection matching the standard.

	In terrestrial band, for an user socket, the level should be: - between 50 and 66 dBμV under FM - between 35 and 70 dBμV under DVB-T/H and DVB-T2 - between 57 and 74 dBμV in any other case.
	In satellite band, for an user socket, the level should be: - between 47 and 77 dBμV.

Example in terrestrial mode:

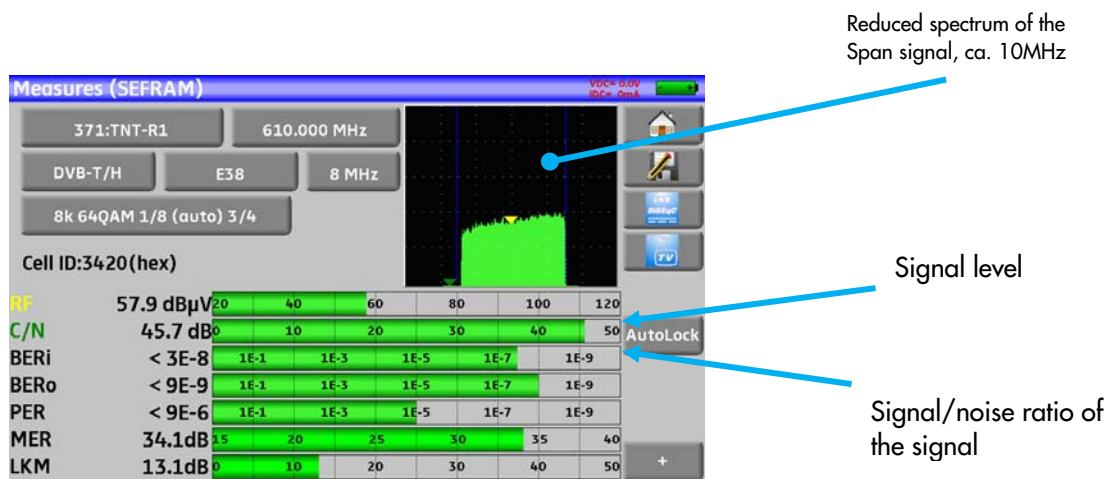

The appliance makes different measurements according to the current **standard**.

The other possible measurements are:

- **Average** measurement
- **Peak** measurement
- **Power** measurement.

11.4 Satellite band

	You can shift from terrestrial to satellite mode by: - Changing the setup frequency - Changing of standard - Changing of setup (from a terrestrial to a satellite setup)
---	---

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure
PAL	FM	Peak
SECAM	FM	Peak
NTSC	FM	Peak
DVB-S	Digital	Power
DSS	Digital	Power
DVB-S2	Digital	Power

11.5 Terrestrial band

The appliance automatically makes level measurements on the **Video carrier wave**.

The following table sums up the measurement types and the frequencies of the audio carrier waves for each standard:

Standard	Video carrier	Measure	Sound carrier		
			Mono	Stereo	NICAM
BG	negative, AM	peak	FM 5.5 MHz	FM 5.74 MHz	DQPSK 5.85 MHz
DK	negative, AM	peak	FM 6.5 MHz	FM 6.258 MHz	DQPSK 5.85 MHz
I	positive, AM	peak	FM 6.0 MHz		DQPSK 6.552 MHz
L	positive, AM	peak	AM 6.5 MHz		DQPSK 5.85 MHz
MN	negative, AM	peak	FM 4.5 MHz	FM 4.72 MHz	
DVB-C	digital	power			
DVB-T/H	digital	power			
DVB-T2	digital	power			
FM	FM	average			
Carrier	not modulated	average			


The appliance displays the level of the **Video** carrier wave and the **C/N** ratio.

11.6 Thresholds

Predefined thresholds are used to assess if the measurement is pertinent.

Standard	Min	Max
Analogical terrestrial TV	57	74
DVB-C	57	74
DVB-T/H, DVB-T2	35	70
FM, carrier	50	66
Analogical satellite TV	47	77
DVB-S, DSS	47	77
DVB-S2	47	77

Decision thresholds are used to display the measures « Power Level » and « Measurement Map »:

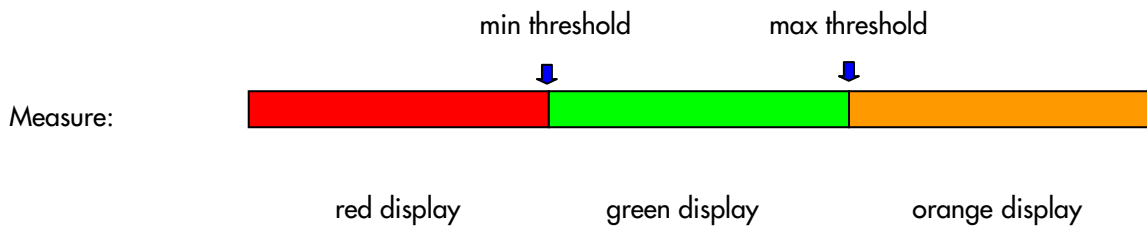

11.7 Digital measurements

In digital measurement mode, in addition to the **RF** level and to the **C/N** hereabove, the appliance also displays the various **BER** (Bit Error Rate), the **PER** (Packet Error Rate) and the **MER** (Modulation Error Ratio) under **DVB-T/H, DVB-T2, DVB-C, DVB-S, DVB-S2** or **DSS**.

You also get the **LKM:x.xdB** (Link Margin) specification.

This expression in dB is the difference between the measured MER and the limit MER before disconnection of the image: **it's the security available before disconnection**.



The bargraphs are displayed with colors depending on the measured error rates:

- GREEN: good error rates
- ORANGE: $BER_o > 10^{-4}$ (QEF : Quasi Error Free) without lost packet
- RED: lost packets (PER).

An automatic frequency check (AFC) is automatically activated in error rate measurement mode.



"Sync ?" displayed on screen means that the signal is absent or unlocked; check its presence, the modulation parameters, the presence of remote power supply and the LNB and DiSEqC parameters under satellite band.





The sign < before a value or error rate shows that there is no error but that 10^x bits have been tested (i.e. $<10^{-8}$ means that 10^8 bits have been tested).



You can shift from terrestrial to satellite mode by:

- Changing the setup frequency
- Changing of standard
- Changing of setup (from a terrestrial to a satellite setup)

11.8 DVB-T/H

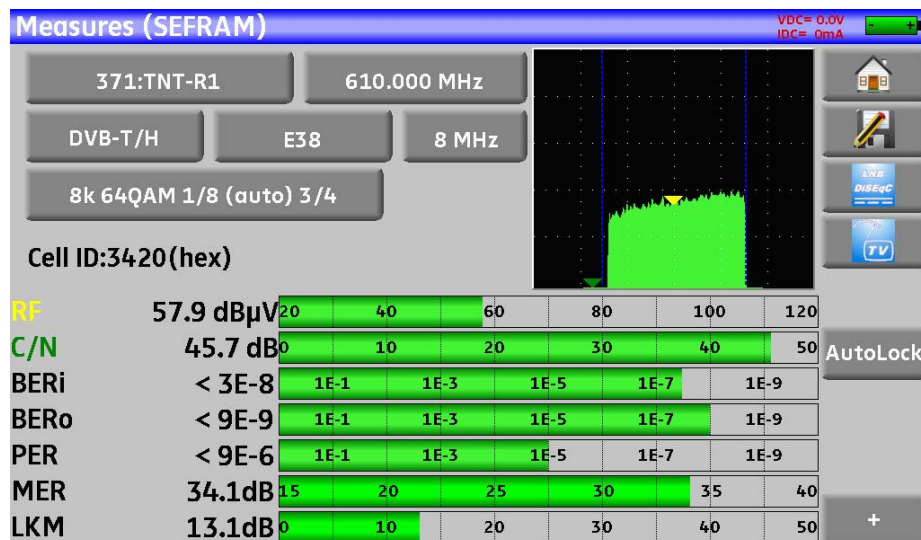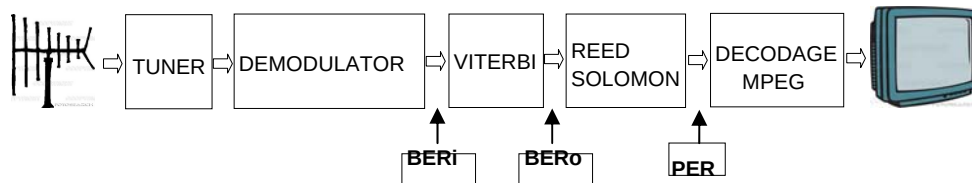

Display of the measures of:

- **BERi**: error rate before Viterbi
- **BERo**: error rate after Viterbi

- **PER:** error rate after Reed Solomon (error rate packet)
- **MER:** modulation error rate
- **LKM:** noise margin (Link Margin)

BERx: 'bits' error rate

Ratio between the number of false bits / number of transmitted bits during the measurement time

PER: 'paquets' error rate

Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-T/H, a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).


Display of the type of **Modulation** detected:

- number of carriers (8 K)
- constellation (64QAM)
- guard interval (1/32 auto)
- Viterbi rate (2/3)
- spectrum inversion

In case of poor signal quality or co-frequent analogical signal, it is wise to switch to the manual guard interval mode. To do so, you have to select the « Modulation » line and set the guard interval parameter to the right value.

Display of the value of Cell ID from the diffuser and specific to the emitter.

11.9 DVB-T2

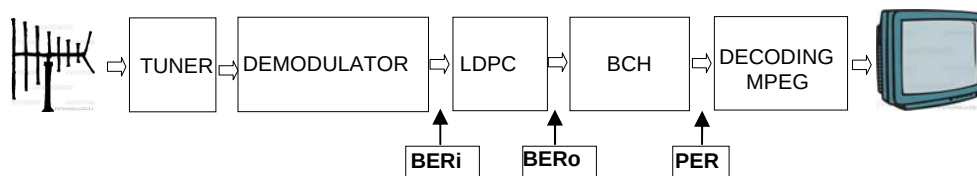

Display of the measures of:

- **BERi:** error rate before LDPC
- **BERo:** error rate after LDPC
- **PER:** error rate after BCH (lost packets)
- **MER:** modulation error rate
- **LKM:** noise margin (Link Margin)

Recall:

LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenohem



The concatenation Viterbi + Reed Solomon of the correction of DVB-T/H has been replaced by the concatenation LDPC + BCH under DVB-T2.

Display of the type of **Modulation** detected:

- number of carriers (32 K)
- constellation (256QAM R)
- guard interval (1/8)
- Viterbi rate (3/5)

Display of the values of Network_ID, System_ID, Cell_ID from the diffuser and specific to the emitter.

11.10 DVB-C

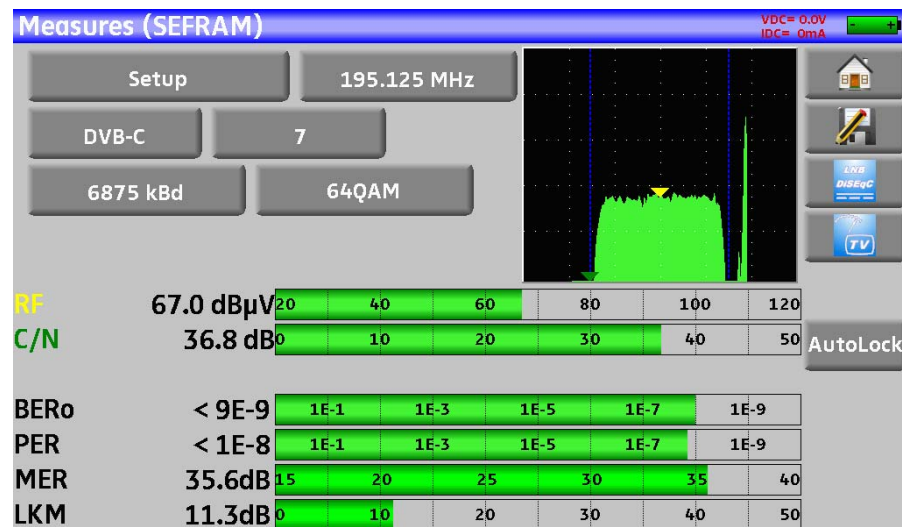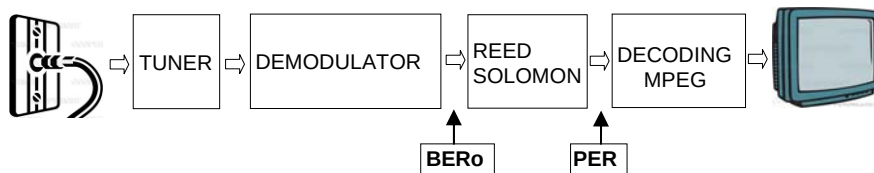



Display of the measures of:

- **BERo**: error rate before Reed Solomon
- **PER**: error rate after Reed Solomon (error rate packet)
- **MER**: modulation error rate
- **LKM**: Noise margin (Link Margin)
- **BERo**: error rate 'bits'
Ratio between the number of false bits / number of transmitted bits during the measurement time

- **PER:** error rate 'packets'
Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under DVB-C, a packet is made of 204 bites; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding).

11.11 DVB-S and DSS

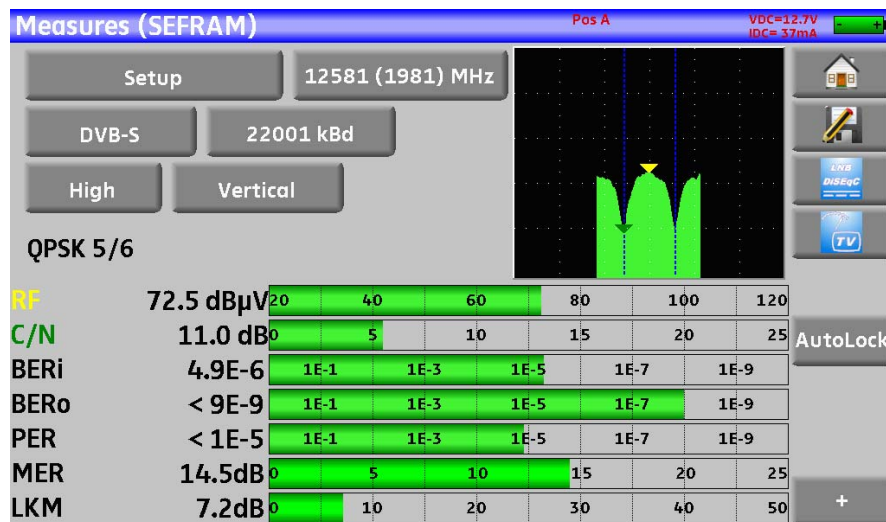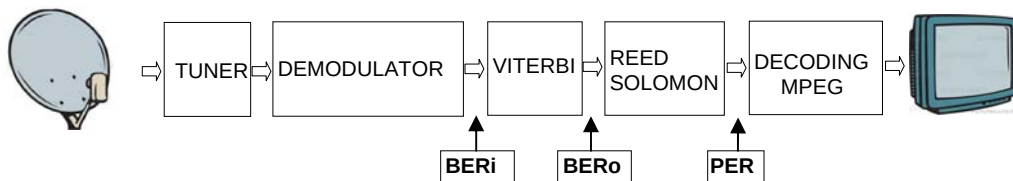

Display of the measures of:



- **BERi :** error rate before Viterbi
- **BERo :** error rate after Viterbi
- **PER :** error rate after Reed Solomon (error rate paquet)
- **MER :** modulation error rate
- **LKM :** Noise margin (Link Margin)
- **BERx :** error rate 'bits'
Ratio between the number of false bits / number of transmitted bits during the measurement time
- **PER :** error rate 'paquets'
Ratio between the number of false packets / number of transmitted packets during the measurement time

Recall: Under QPSK (DVB-S) a packet is made of 204 octets; a packet is "false" if it includes more than 8 wrong octets (correction by Reed Solomon coding). Under DSS, a packet is made of 146 octets.

Display of the type of **Modulation** detected:

- constellation (QPSK)
- Viterbi rate (3/4)

11.12 DVB-S2

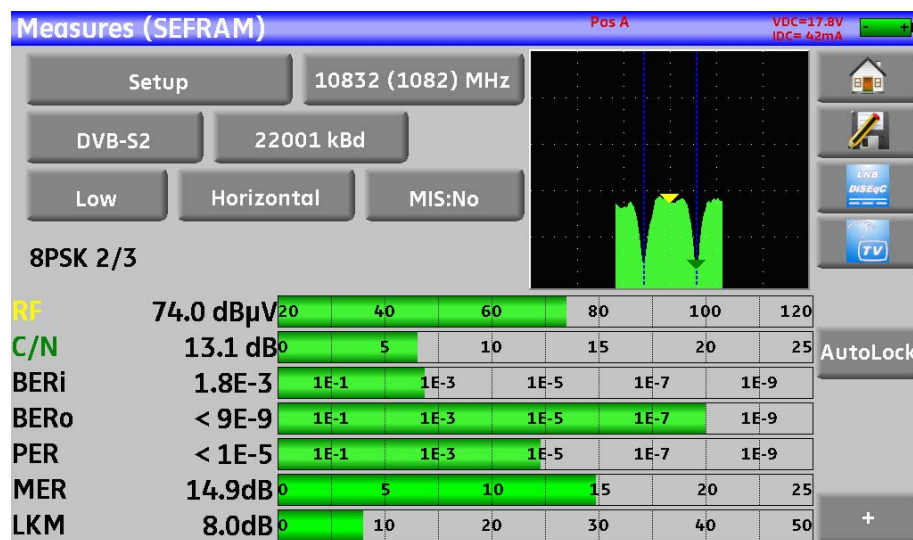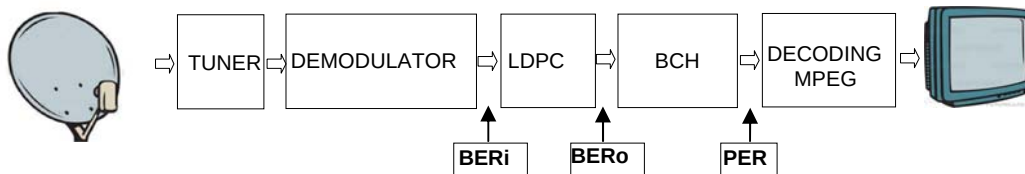

Display of the measures of:

- **BERi** : error rate before LDPC
- **BERo** : error rate after LDPC
- **PER** : error rate after BCH (lost packets)
- **MER** : modulation error rate
- **LKM** : Noise margin (Link Margin)

Recall:

LDPC: Low Density Parity Check

BCH: Bose Chauhuri Houquenohem

The concatenation Viterbi + Reed Solomon of the correction of DVB-S has been replaced by the concatenation LDPC + BCH under DVB-S2.

Display of the type of **Modulation** detected:

- constellation (8PSK)
- Viterbi rate (2/3)

12 Spectrum analyser

Pressing SPECTRUM gives access to the **SPECTRUM ANALYSER** function.

2 modes are available: **expert mode** and simplified mode. This selection is made at **Configuration** page.

12.1 Simplified Spectrum

Satellite



Terrestrial



2 predefined bandwidth are available: terrestrial and satellite. To swap from satellite to terrestrial, press the key, as shown on the bottom side of the screen.

The input attenuator is automatically setup according to the level of the signals measured.

Filters are automatically selected according to the « Span ».

The filter use dis displayed on the upper left corner.

Parameters of the spectrum are :

Frequency: value of the frequency where the cursor is, user can enter a frequency value, or increase – decrease the frequency with +/- keys

Cursor : simply press the area where you want to move or set the cursor

List: you can select a Program (in the current list)


Channel:

use a channel for the spectrum (in terrestrial mode).

Reference level: can be modified with up-down arrows

X dB : attenuator choice (auto, 5, 10, 15dB,...)


/div : amplitude vertical scale 2dB, 5dB or 10dB

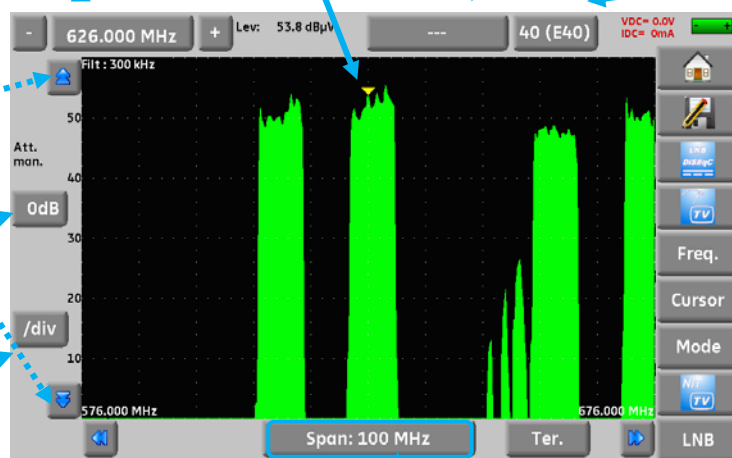

Span : frequency span around the center frequency

Frequency range: can be changed using the arrows

12.2 Additional functions for satellite:

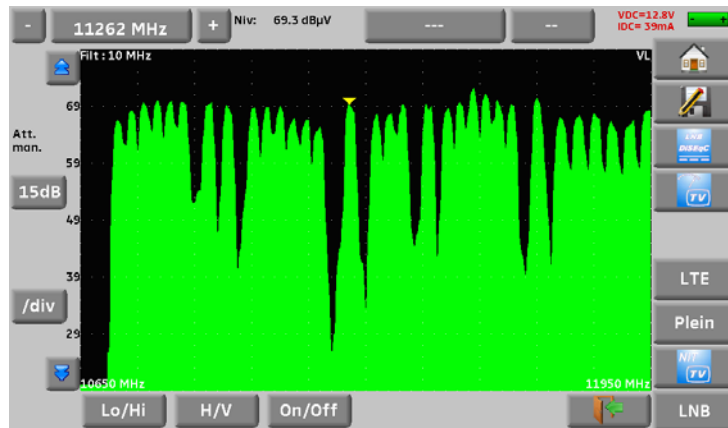

LNB function: to change the polarization (Hi/Low, horizontal/vertical, and On/Off)

12.3 LTE mode:

The LTE function simulates the effect of a filter for LTE (4G) signal. It will display the simulated signal with filter (it is used mostly for the high band, channels 61 to 69).

The red curve is the simulated spectrum using a LTE filter (you can see on the picture below that channel 59 is attenuated by the filter).



12.4 Fill mode


The Fill key changes the spectrum display as shown on the picture :




12.5 NIT/TV mode

This function will display the TV program in the upper right corner of the spectrum, for the selected channel.

The message displays « Network Name » and « Network id » informations.

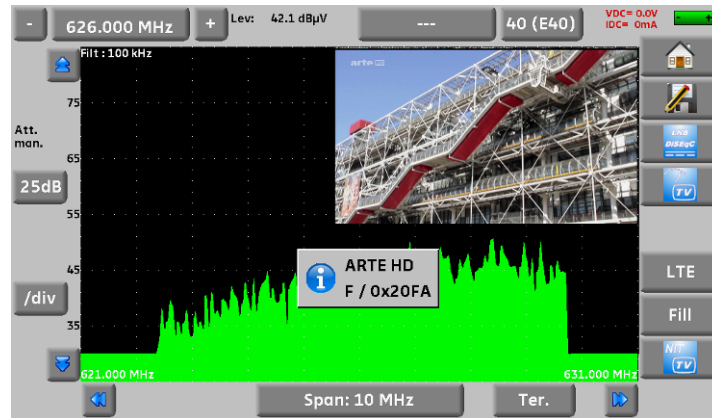

In satellite, the instrument displays the satellite information (name and position)

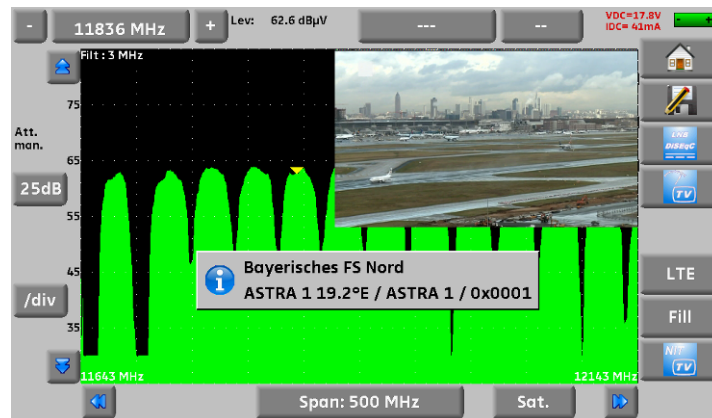

The display of a TV program is possible only for non-encrypted channels. For encrypted channels, the instrument will display « conditional access ».

Displaying TV program can take several seconds because the instrument is looking for standard and modulation of the channel before being able to decode and display the program.

Some broadcasters did not fill the MPEG NIT information.

Instrument can display only the information supplied by broadcasters in the digital signals.

13 Image and Sound


Pressing the TV zone gives access to the **TV** function.

13.1 Digital TV

The name of the service and its main characteristics are displayed on top right of the screen.

- 720x576i: picture resolution 720 pixels / line, 576 lines, interlace
- 25 Hz: frame frequency
- MPEG-2: picture compression
- Video Rate 2.034 Mbits/s: instantaneous binary rate of the service
- Audio MPEG Layer II: sound compression

On this page, there are 7 keys at the bottom of the screen; they will be described in the next chapters

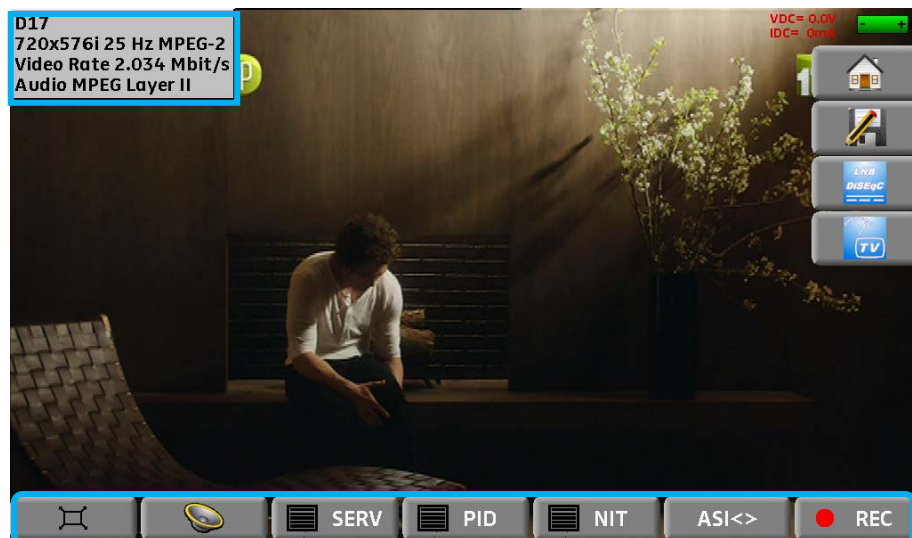

13.2 Full screen mode

Pressing the key  displays the image full screen; only remain the battery level and the intensity and tension of the remote power supply:



To exit, you only have to touch the screen anywhere.

13.3 Audio

To set the volume, press  an adjustment bar shows up:

The instrument can decode the following digital sound formats:

MPEG-1 L1/L2

AAC Advanced Audio Coding License Via Licensing

HE-AAC High Efficiency AAC License Via Licensing

Dolby Digital License Dolby®


Dolby Digital Plus License Dolby®

Made under **licence** by **Dolby** laboratories.

Dolby and the double-D symbol are trademarks of **Dolby Laboratories**

13.4 Table of services

Pressing  gives access to the list of services:

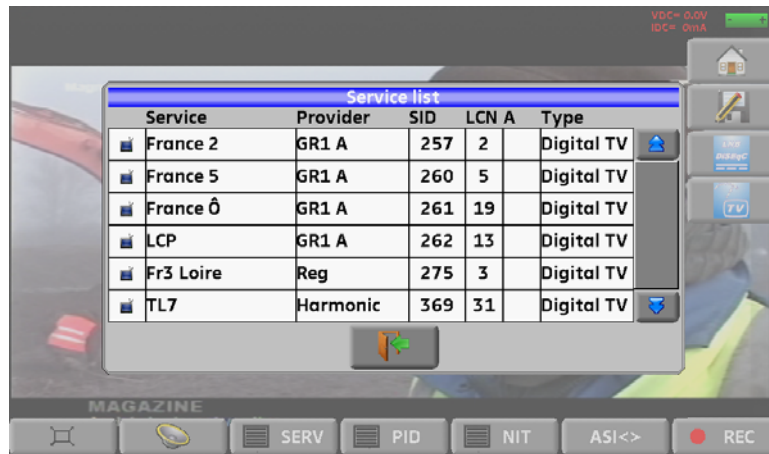


Service	Provider	SID	LCN A	Type
France 2	GR1 A	257	2	Digital TV
France 5	GR1 A	260	5	Digital TV
France Ô	GR1 A	261	19	Digital TV
LCP	GR1 A	262	13	Digital TV
Fr3 Loire	Reg	275	3	Digital TV
TL7	Harmonic	369	31	Digital TV

This function also allows you to select the channel you want to display TV. You only have to press the line you want.

13.5 Rights of access / Access card

The port for an access card (subscription card) is on the left of the appliance (option according to the model).

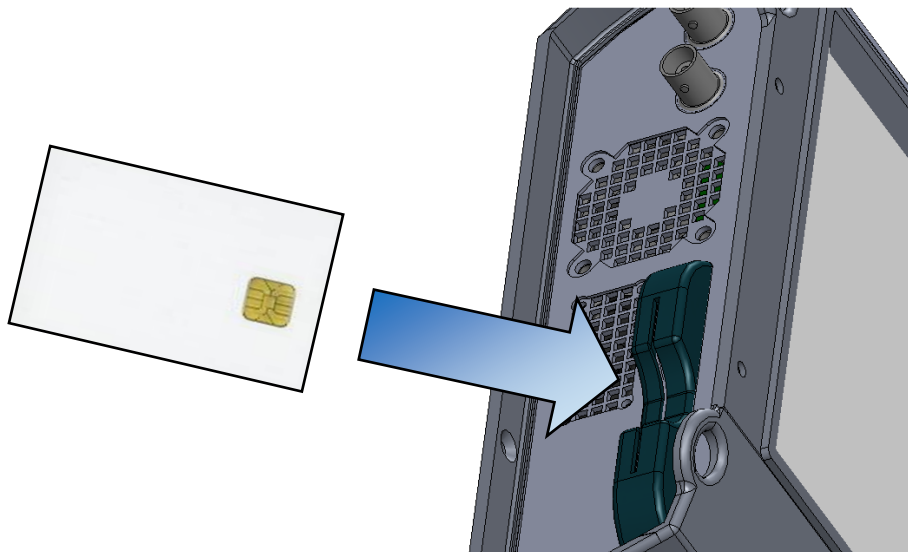


If the displayed TV channel is encrypted, the appliance automatically checks on the card interface whether a subscription card is present and whether the encryption key is compatible.

14 Remote power supply / LNB – DiSEqC

The  key gives you access to the remote power supply / LNB-DiSEqC.


To start the remote power supply, press the key before Remote power supply:

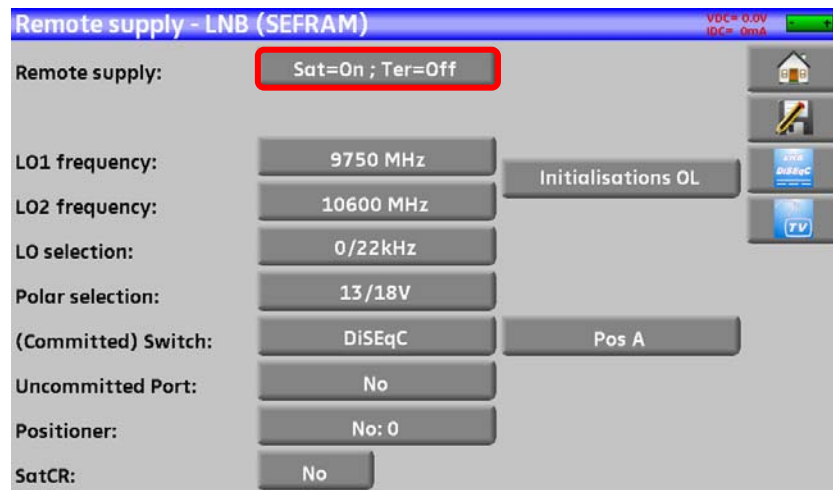

The window allows you to select the remote power supply on terrestrial and/or satellite mode.

14.1 Terrestrial band

In terrestrial mode, you can select:

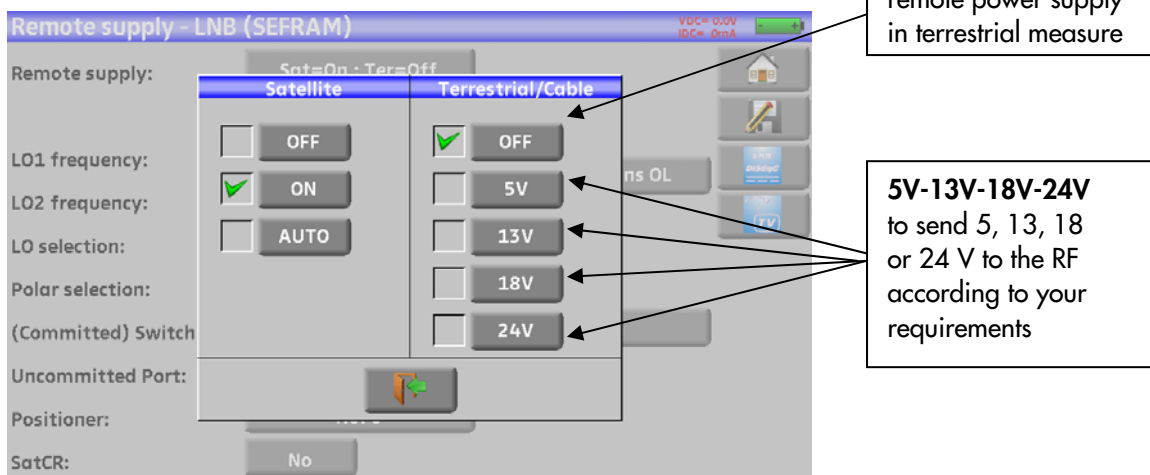

A green check shows up where you validated.

14.2 Satellite band


14.2.1 Launching

Setting the remote power supply to satellite:

OFF to turn off the remote power supply under satellite measure

ON to turn on the remote power supply under satellite measure

AUTO to launch automatically the remote power supply in satellite measure mode even after shutting off

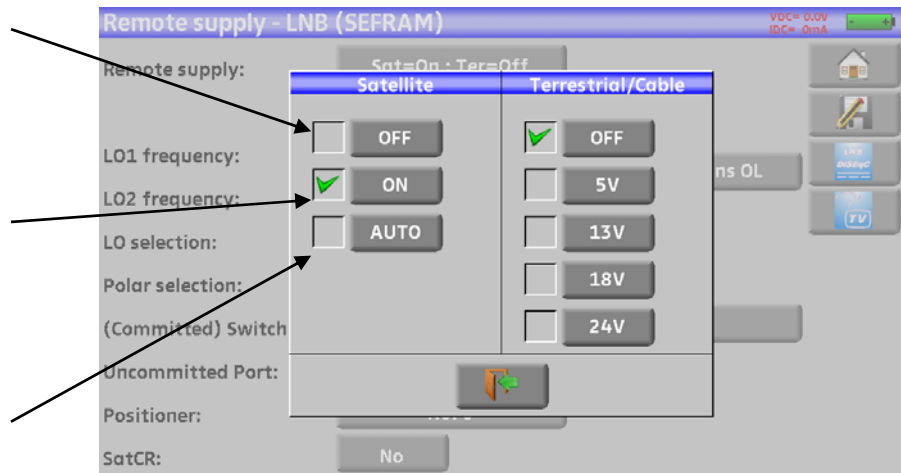

Configuration lines:

- **OL1 frequency:** OL frequency low band of LNB

- **OL2 frequency:** OL frequency high band of LNB

- **OL selection:** band commutation on the LNB (22kHz, ToneBurst or DiSEqC)


- **Selection polar :** polarization commutation on the LNB (13/18V or DiSEqC)

- **Switch:** switch type and position (No, ToneBurst, 22kHz, DiSEqC, Pos A, B, C or D)

- **Uncommitted:** "Uncommitted" switch type and position (No, DiSEqC, Pos 1 to 16)

- **Positioner:** presence of a positioner (Yes / No)


- **SatCR:** SatCR mode (single cable distribution)

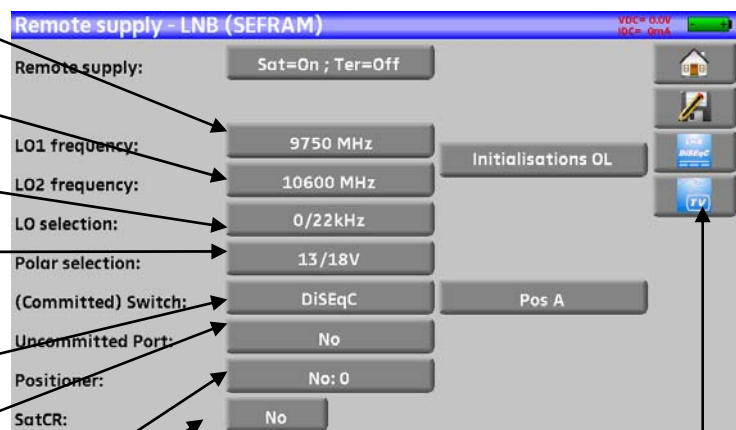

- **Initialization:** sets up the OL1 and OL2 frequencies under KU band

See chapter [Man-machine interface](#) for any change.


14.2.2 Switches

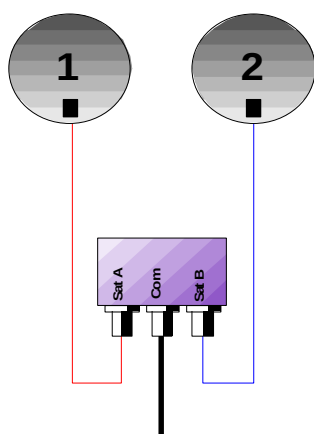

2-satellite switch


* 22 kHz

* ToneBurst (MiniDiSEqC)

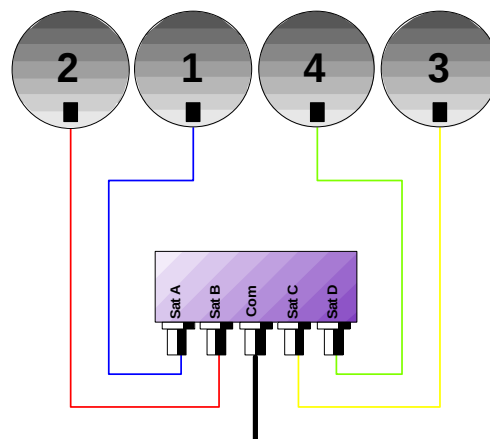

4-satellite switch

* DiSEqC Committed or Uncommitted

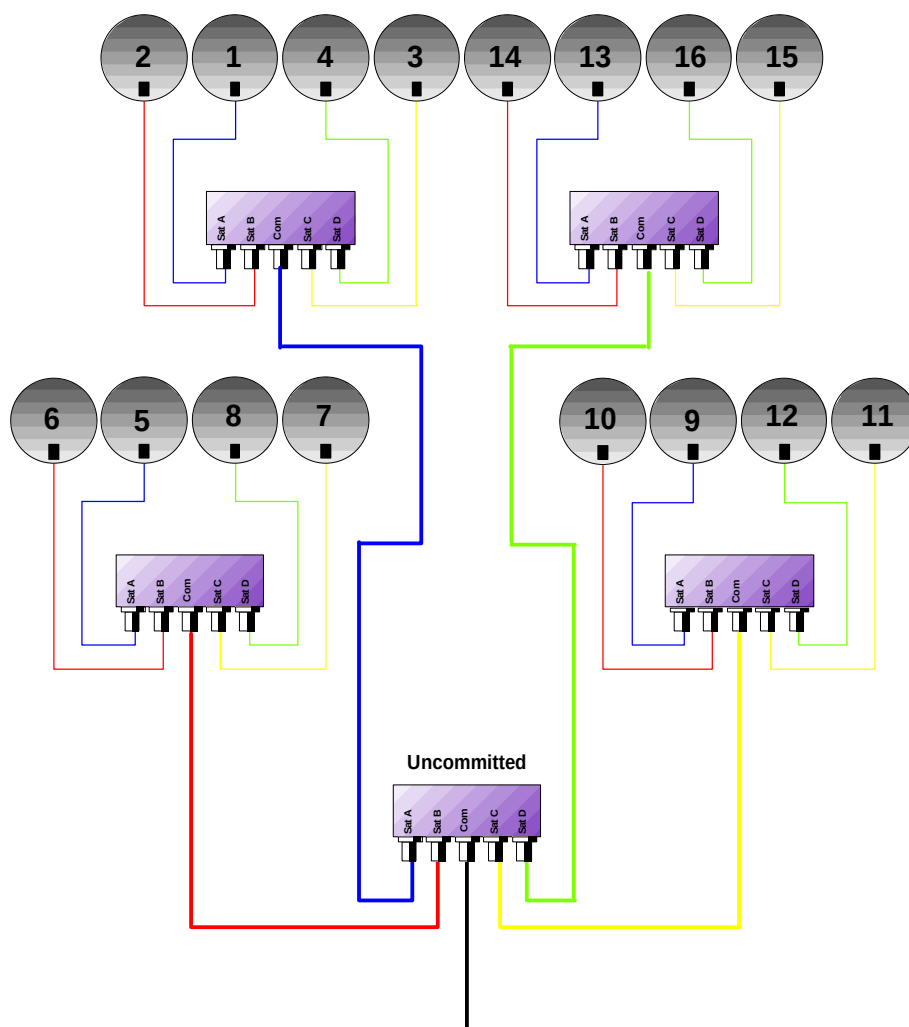

*DiSEqC Committed or Uncommitted

16-satellite switch

* DiSEqC Committed + Uncommitted

Satellite	Switch line		Uncommitted line	
	Position	Commande DiSEqC	Position	Commande DiSEqC
1	Pos A	Option A + Position A	Pos 1	Input 1
2	Pos B	Option A + Position B	Pos 1	Input 1
3	Pos C	Option B + Position A	Pos 1	Input 1
4	Pos D	Option B + Position B	Pos 1	Input 1
5	Pos A	Option A + Position A	Pos 2	Input 2
6	Pos B	Option A + Position B	Pos 2	Input 2
7	Pos C	Option B + Position A	Pos 2	Input 2
8	Pos D	Option B + Position B	Pos 2	Input 2
9	Pos A	Option A + Position A	Pos 3	Input 3
10	Pos B	Option A + Position B	Pos 3	Input 3
11	Pos C	Option B + Position A	Pos 3	Input 3
12	Pos D	Option B + Position B	Pos 3	Input 3
13	Pos A	Option A + Position A	Pos 4	Input 4
14	Pos B	Option A + Position B	Pos 4	Input 4
15	Pos C	Option B + Position A	Pos 4	Input 4
16	Pos D	Option B + Position B	Pos 4	Input 4

14.2.3 Positioner

The appliance sends a DiSEqC command that triggers the rotation of a motorized satellite dish.

Remote supply - LNB (SEFRAM)

VDC= 0.0V
IDC= 0mA

Remote supply:

Sat=On ; Ter=Off

L01 frequency:

9750 MHz

L02 frequency:

10600 MHz

LO selection:

0/22kHz

Polar selection:

13/18V

(Committed) Switch:

DiSEqC

Uncommitted Port:

No

Positioner:

Yes: 2

SatCR:

No

Initialisations OL

Pos A

Home

Back

DiSEqC

TV

In this example, the position is 2 (1 to 127 pre-loaded positions in the positioner)

If the positioner is on No, it is deactivated

See chapter [Man-machine interface](#) for any change.

14.2.4 SatCR mode

Description:

SatCR: Satellite Channel Router or Single Cable Distribution

Distribution of the satellite signal with only one coaxial cable in single-family dwelling to 2, 4 or 8 different receptors.

To give several receptors access to the whole spectrum and all polarizations, you need **one coaxial cable per receptor** and a suitable installation (multiple LNB, Quattro and multi-commuters).

The SatCR mode is an extension of the DiSEqC protocol that allows the connection of several receptors on **only one coaxial cable**, no matter the band (H/L) and the polarization (H/V).


A European industrial standard has been developed for delivering satellite signals on only one coaxial cable - **EN50494**.

Functioning:

Each satellite receptor uses a fix frequency band (**Slot** or **Port**), whose width is (more or less) equal to the width of the transponder.

The receptor requires a specific transponder frequency (frequency Ku) via a DiSEqC command.

Some equipment on the satellite dish (LNB or switch SatCR) moves the requested signal to the center of the selected band (**Slot**). Then, the mixing equipment adds each user band (**Slot**) to only one output (up to 8 user bands).

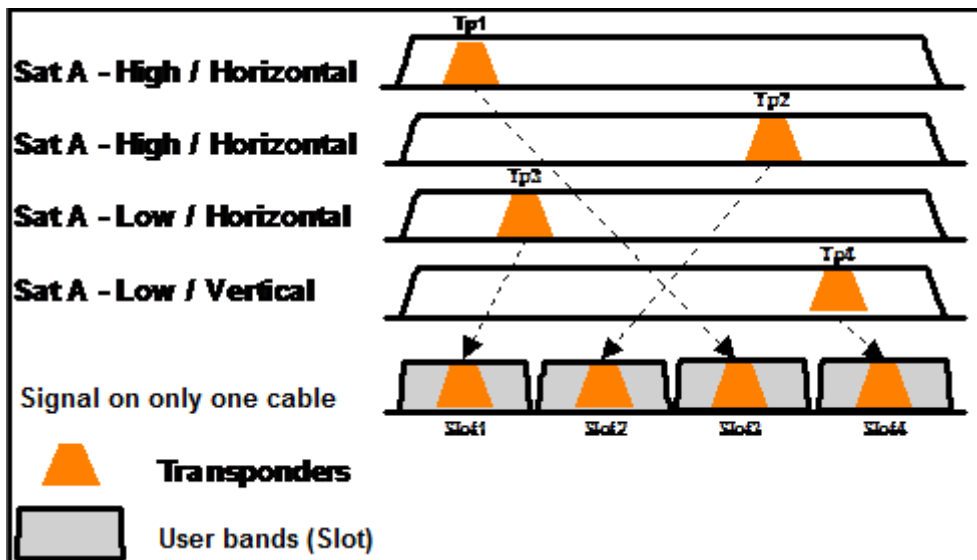

The SatCR mode has priority on all other modes: selection polarization, selection OL, switches committed and uncommitted and positioner.

Use:

SatCR line:

- Slot 1: selection of the SatCR slot; if this key is marked No, the SatCR mode is deactivated
- Freq. SatCR.: access to the setting of the slot frequency
- Pos A: selection of switch Pos A / Pos B

See chapter [Man-machine interface](#) for any change.

14.2.4.1 Automatic research of the slot frequencies

Set-up: 8-user band set-up (slots), predefined frequencies

Italy: Specific set-up for users in Italy, predefined frequencies

Detect: Automatic detection of the slots (order and frequencies)

Suppress: Suppression of a slot (on the selected line)


You can also manually settle each slot frequency by pressing the corresponding key.

14.2.4.2 Influence of the SatCR mode on the spectrum analyzer

Frequency of the transponder visible at the center of the active

SatCR mode and active slot

Current polarization and band in the active slot

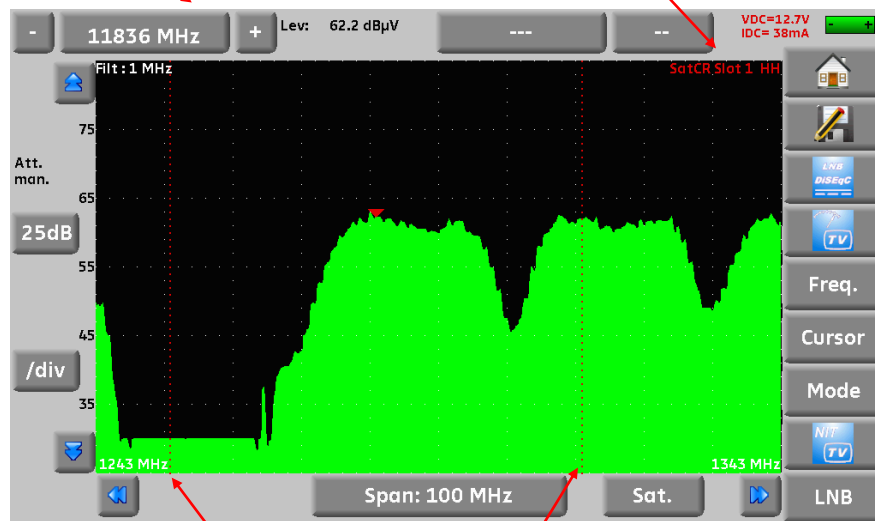

Landmarks of the user band (slot)


15 Constellation

The  Constellation key gives you access to the **CONSTELLATION** function.

These measures are available if one of these standards is running in the **LEVEL MEASUREMENT** page.

- DVB-T/H
- DVB-T2
- DVB-C
- DVB-S, DSS, DVB-S2

The appliance displays the **Constellation** of the current signal.

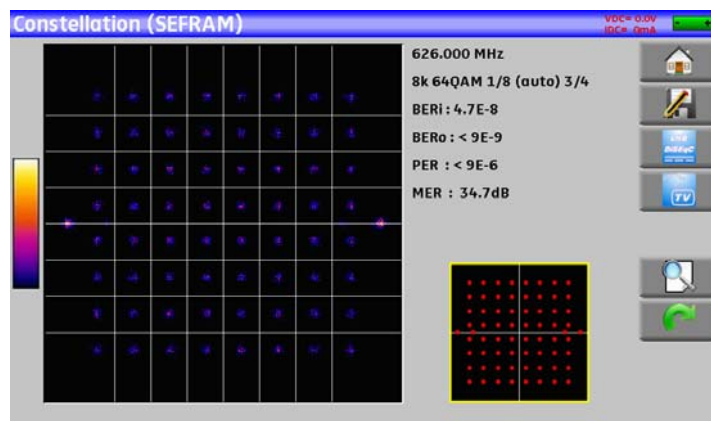


On this page, you can "zoom" on one of these quadrants by pressing

You can change the display of the quadrant by pressing



On this page, there is a template (with ideal constellation spots).

On this template, there is a yellow frame that shows where to zoom on the constellation.

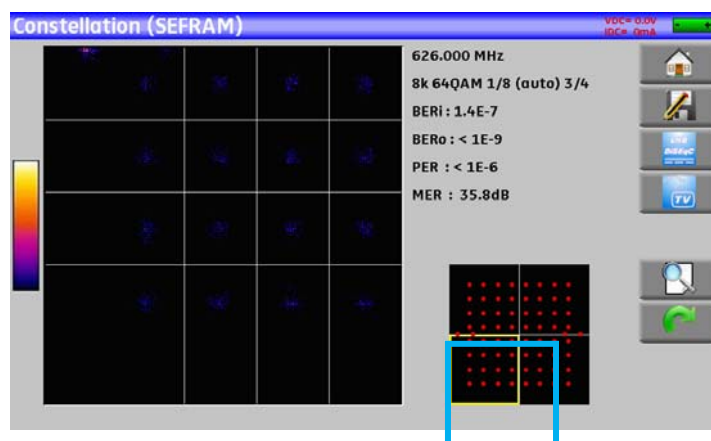

The information displayed on the right of the **Constellation diagram** is:

- current frequency
- modulation
- constellation
- symbol rate
- error rate and MER

16 Echo / Guard interval




Available only for DVBT/H or DVB-T2 standards.

Pressing




allows you to access to **Echo Guard interval measurement**.

Signal without echo

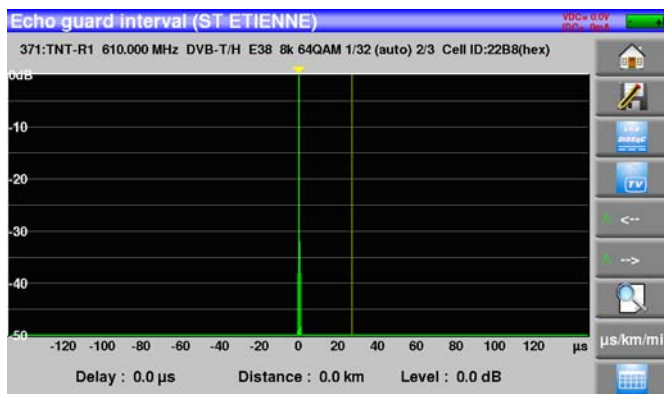

Signal with echoes and pre-echoes

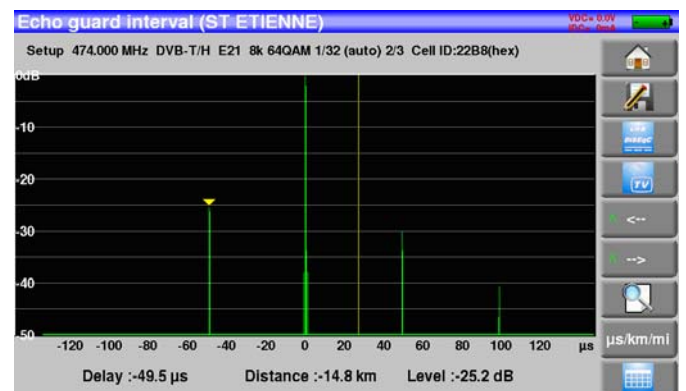

Pressing changes the horizontal scale (distance).


Horizontal scale can be set in μ s, km or miles by pressing

μ s/km/mi

Moving measurement arrow can be done by screen touch, or by automatic search keys


The end of the guard interval is displayed with a **yellow line**.

Pressing displays simultaneously echoes graphic and array of the highest echoes detected (first 10th) :

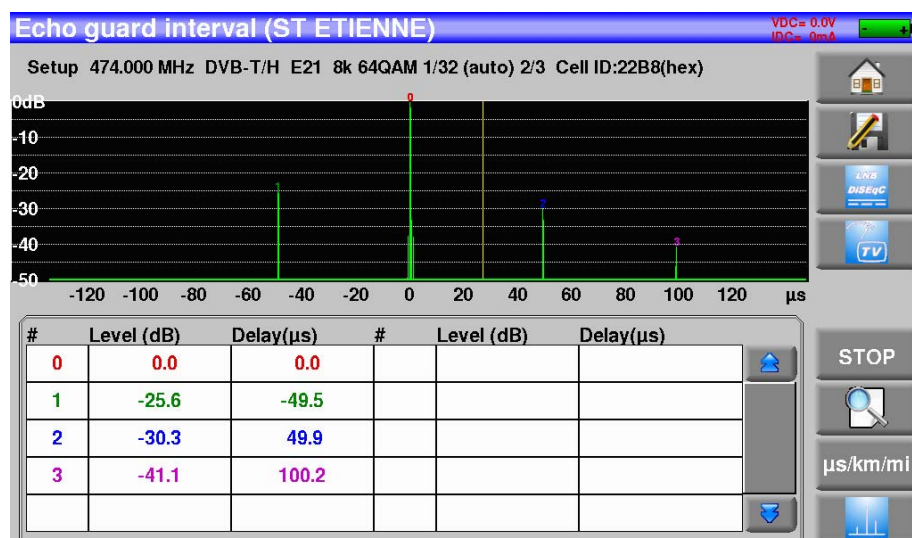

Reminder :

Remember: In terrestrial TV broadcasting, the received signal on the antenna comes from several possible ways: the **echoes**.

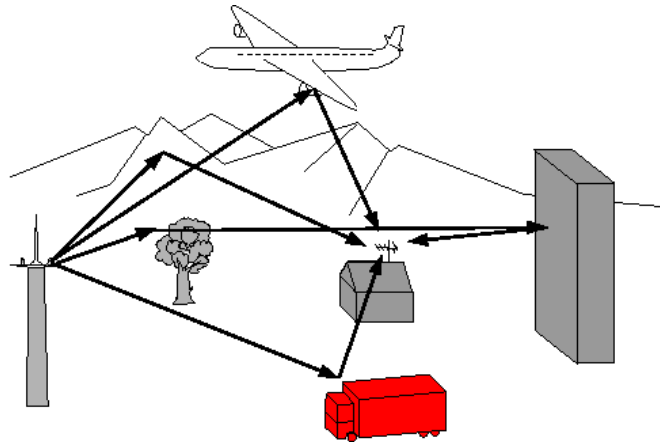


In digital TV DVB-T/H and DVB-T2, these echoes may help or degrade the image according to the time delay between the various signals that reach the antenna.

The broadcasting norms DVB-T and DVB-T2 define a modulation parameter called "**guard interval**" where echoes won't disturb the reception.

The transmission of digital data (**Symbol**) is interrupted during the **guard interval**.


A delayed (or advanced) symbol of any **shorter** duration than the guard interval will not disturb the reception.

A delayed (or advanced) symbol of any **longer** duration than the guard interval will disturb the reception.

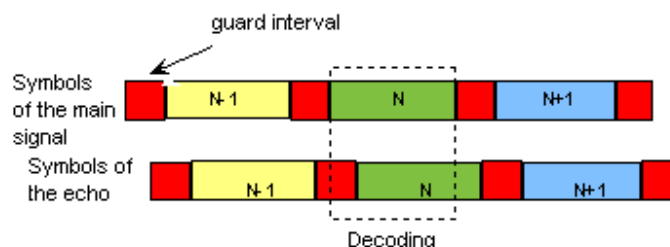

You have to reduce the level of reception of the echoes by orienting the antenna or by selecting a more directive antenna.

The **Echo** function of the appliance enables you to display possible **echoes** that disturb the received signal.

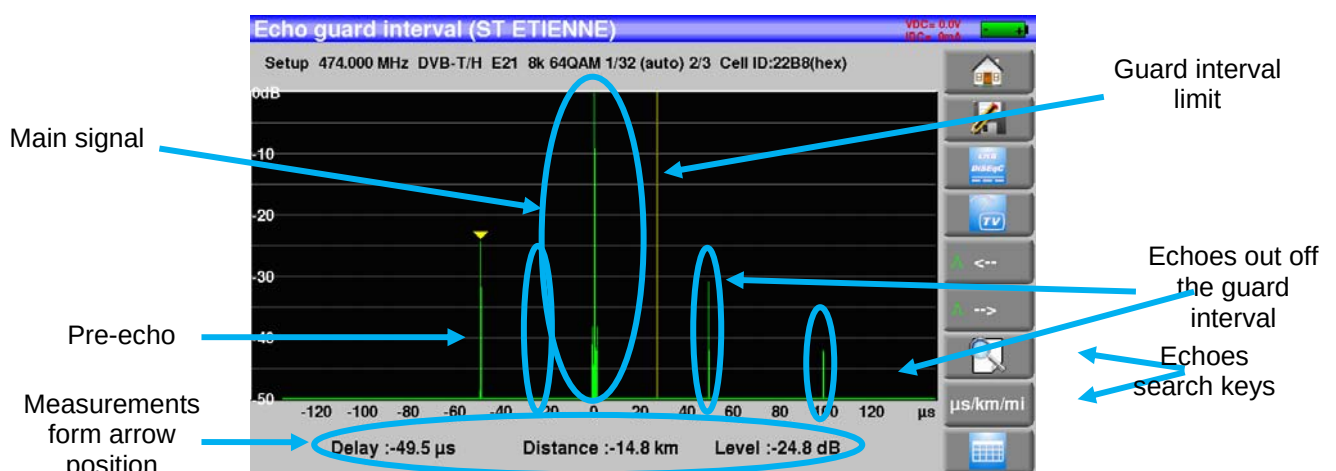

Relative amplitude in dB and delay in μs (distance in km) from the main signal (0 pulse) can be measured.

The **yellow line** represents the end of the guard interval.

Echoes and pre-echoes (pulses) above the yellow line disturb the signal and must be reduced as much as possible.


The echoes (pulses) beyond this line disturb the reception and must be as weak as possible.



Attention: a high amplitude echo pulse within the guard interval will also disturb the signal quality.

17 Measurement map

To access the **MEASUREMENT MAP** function, press Home then Measurement map:

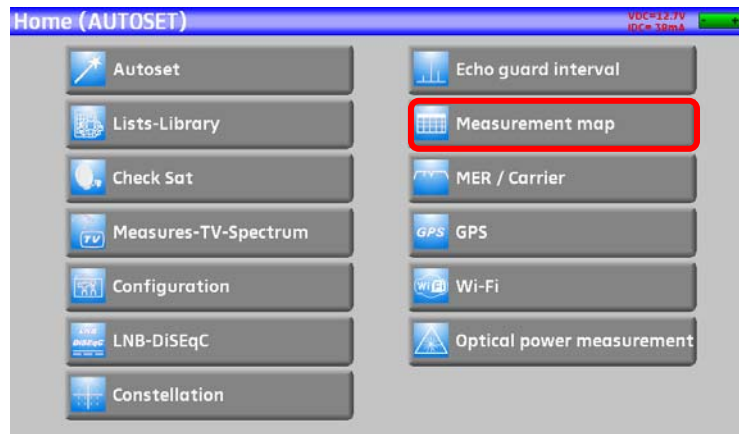

It is an automatic level and error rate measurement of the setups in the measurement list with labeling of the levels beyond tolerance.

Measurement result for channel 38 under DVB-T/H →

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9
E59	DVB-T/H	0.0	> 0.0				--.
E40	DVB-T/H	0.0	> 0.0				--.
E49	DVB-T/H	0.0	> 0.0				--.
E46	DVB-T/H	0.0	> 0.0				--.
88.000	FM	0.0	> 0.0				
104.800	FM	0.0	> 0.0				
97.100	FM	0.0	> 0.0				

3 / 9 -> 0 mn

You can save these measures on an USB stick

Pressing the key  opens a CSV file

The name of the file comes from the launching time of the recording

The save starts after browsing of all setups

This is when the date and time are recorded

The « mode » key allows you to select the duration between two measurements in the list

You can choose: mono (only one measurement made), 0mn (the measurement starts again as soon as it is finished), 1mn (the measurement starts every minute), 10mn (the measurement starts every 10 minutes), 1h (the measurement starts every hour), 8h (the measurement starts every 8 hours), 24h (the measurement starts every 24 hours)



	BERi, BERo et PER are generic terms (frequently used) BERi = BER in = inner BER first BER treated by the demodulator (BER channel, CBER, LDPC) BERo = BER out = outer BER last BER treated by the demodulator (BER Viterbi, VBER, BCH) PER = packet error rate non-proofread packet, lost packet, wrong packet (UNC, PER)
	Important: A bargraph under the Measurement map allows you to track the evolution of the scan. The background color of this bargraph shows you that a complete scan has been made (for a save, for example): - red: the measurement map has not been totally scanned yet - green: the measurement map has been totally scanned
	In case of mixed measurement map (terrestrial+satellite), the satellite remote power supply has priority (the terrestrial remote power supply is ignored).

17.1 Values beyond tolerance

The digital values are colored according to the **Thresholds** before decision

- **red** for values less than **Threshold min**
- **orange** for values more than **Threshold max**

Measurement map (SEFRAM)							
freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	34.8
E44	DVB-T/H	58.2	46.0	4.6E-7	<2E-8	<2E-5	30.2
E59	DVB-T/H	58.8	46.6	6.5E-8	<2E-8	<2E-5	32.7
E40	DVB-T/H	59.8	47.6	1.9E-7	<2E-8	<2E-5	32.5
E49	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--.
E46	DVB-T/H	56.8	44.6	Sync?	Sync?	Sync?	--.
88.000	FM	10.8	>18.4				
104.800	FM	0.0	> 7.6				
97.100	FM	17.5	>25.1				

2 / 9 -> 0 mn

17.2 Graphics

To switch to graphic mode, press Graph.

Measurement map (SEFRAM) VDC= 0.0V
IDC= 0mA

freq.	std	RF	C/N	BERi	BERo	PER	MER
E38	DVB-T/H	59.0	46.8	<9E-8	<2E-8	<2E-5	35.9
E44	DVB-T/H	58.2	46.0	2.6E-7	<2E-8	<2E-5	29.9
E59	DVB-T/H	0.0	> 0.0				--,-
E40	DVB-T/H	0.0	> 0.0				--,-
E49	DVB-T/H	0.0	> 0.0				--,-
E46	DVB-T/H	0.0	> 0.0				--,-
88.000	FM	0.0	> 0.0				
104.800	FM	0.0	> 0.0				
97.100	FM	0.0	> 0.0				

3/9 -> 0 mn

Mode
-> USB

Graph

In graphic mode, you can see levels.


The measurement is made like for the measurement map.

The graph is:


- **red** for values less than **Threshold min**
- **orange** for values higher than **Threshold max**
- **green** for values **between both thresholds**

You can measurement the discrepancy between the levels of two setups thanks to the Ref and Curs dots that you can « move » inside the graph, to the left or to the right, with the four keys under the graph.

In this case, the Curs and Ref dots are cyan dots links by a line. The reference value between these two dots is called Tilt.

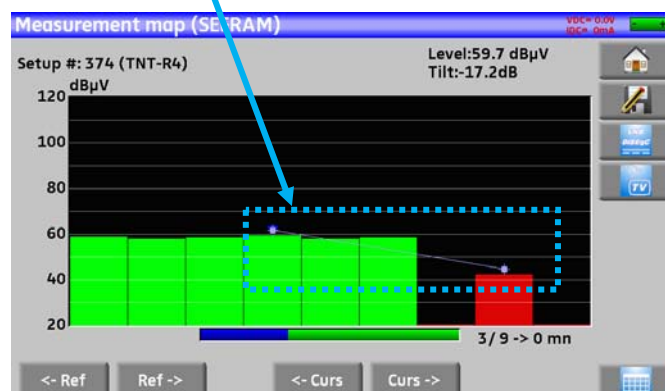

You may know the name of the setup by pressing directly on the graphic bar you want:

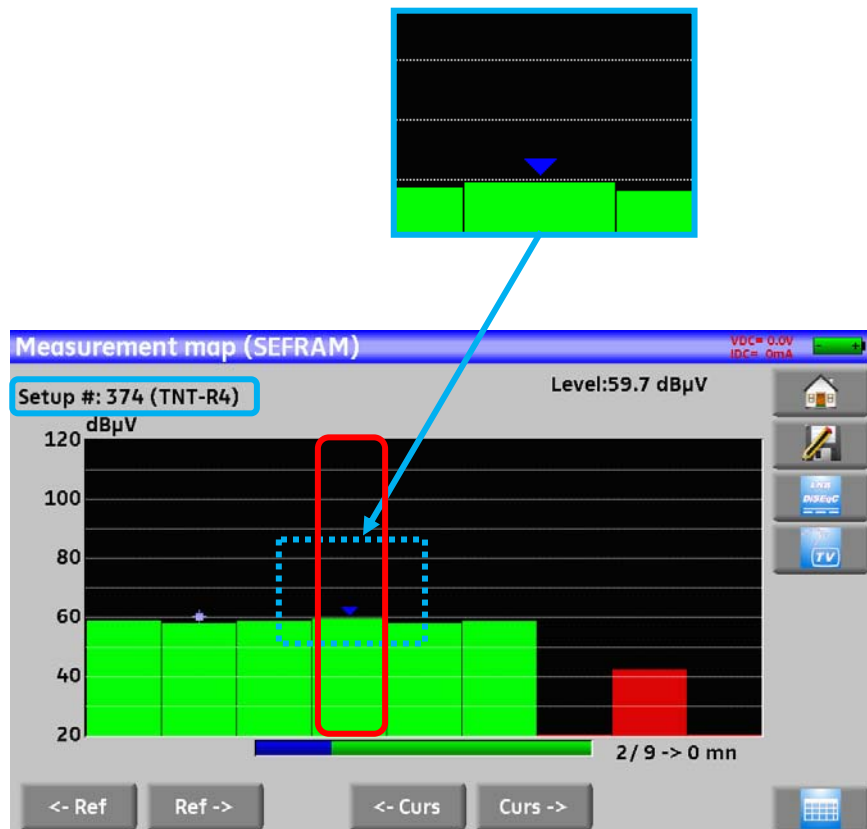


18 MER/Carrier

This function is available only for DVB-T/H and DVB-T2 standards.


Pressing  allows you to measure and display MER/ Carrier.

The instrument will display MER per carrier and the MER of the whole signal

For a perfect signal, the MER will be displayed:

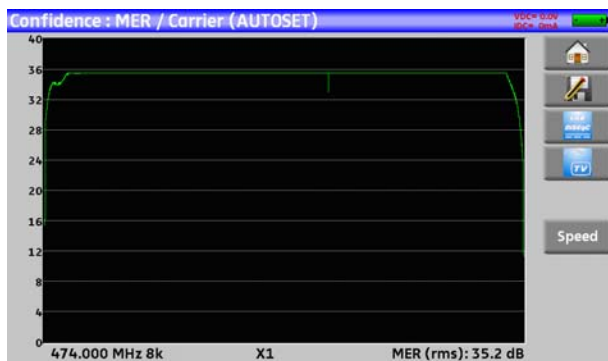


Perfect signal

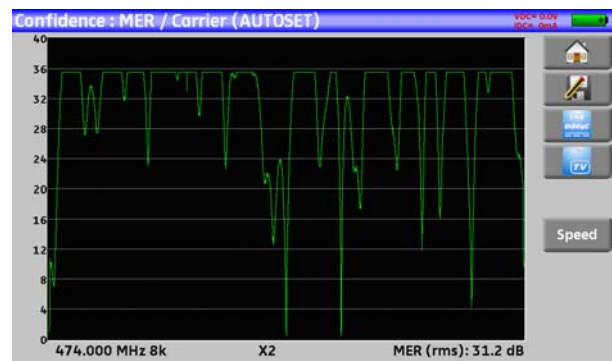


Highly disturbed signal

The MER of each carrier is displayed, and each « hole » represents a potential problem on the signal or a spurious.

A real signal is fluctuating a little bit. This must be taken into account during analysis:

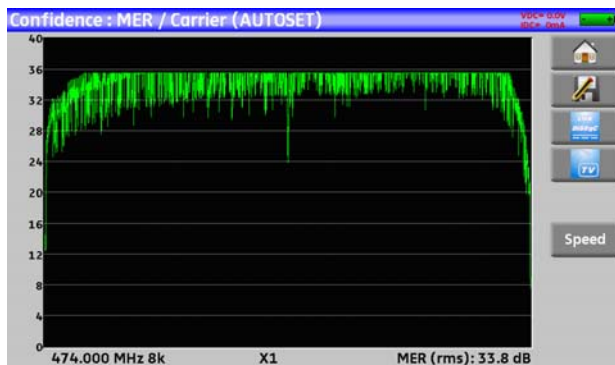

Low level disturbance

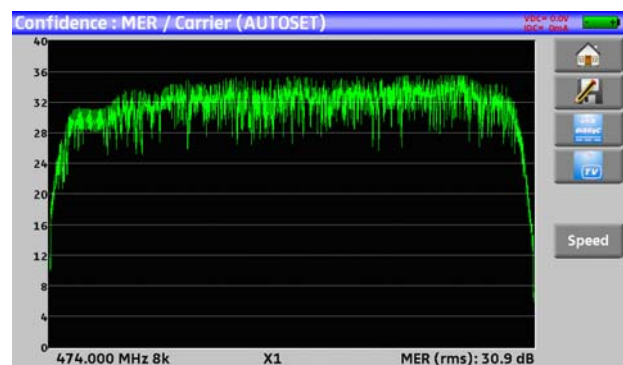

High level disturbance



In this page the Vitesse (speed) key defines the sampling of displayed carriers and MER:



- : all carriers are sampled and used
- : one over two
- : one over four
- : one over eight
- : one over 16
- : max speed : 624 carriers are measured


19 Configuration

For configuration, go to the Home page, then Configuration

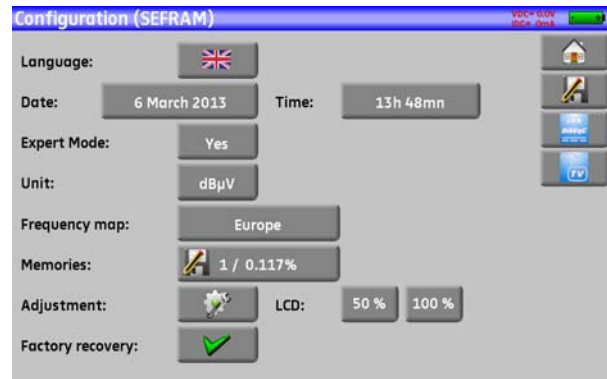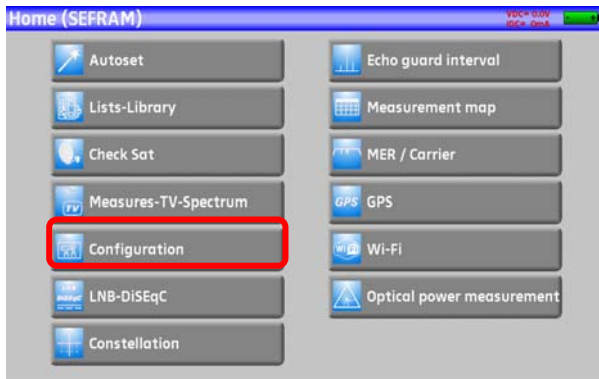


19.1 Language

You can select your language by pressing the « flag » (below). Press the flag corresponding to your language:

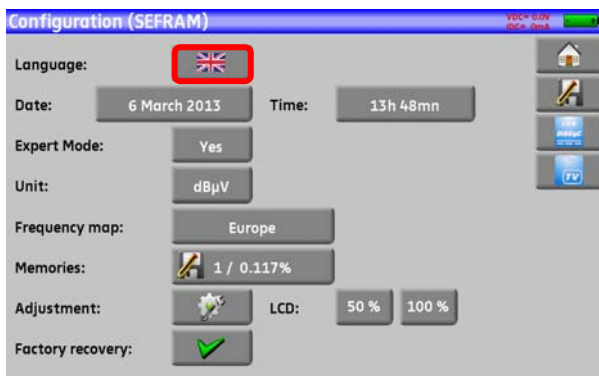

19.2 Measurement unit


This key allows you to select the measurement unit of the appliance:

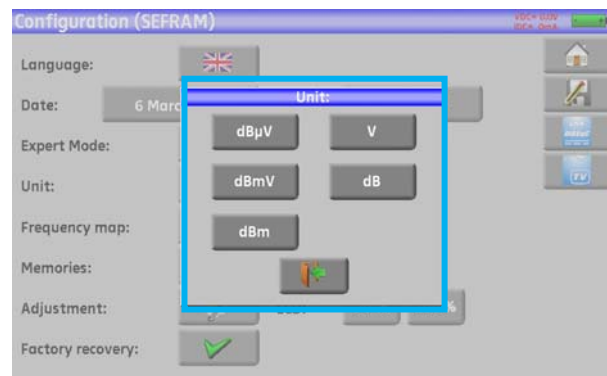

- **dB μ V:** 0 dB μ V corresponds to 1 μ V
- **dBmV:** 0 dBmV corresponds to 1 mV
- **dBm:** 0 dBm corresponds to 274 mV: 1 mW with a 75 Ω impedance.
- **V:** measure in V, mV and μ V according to the level.

19.3 Frequency map

This key allows you to select the terrestrial frequency map of the appliance:

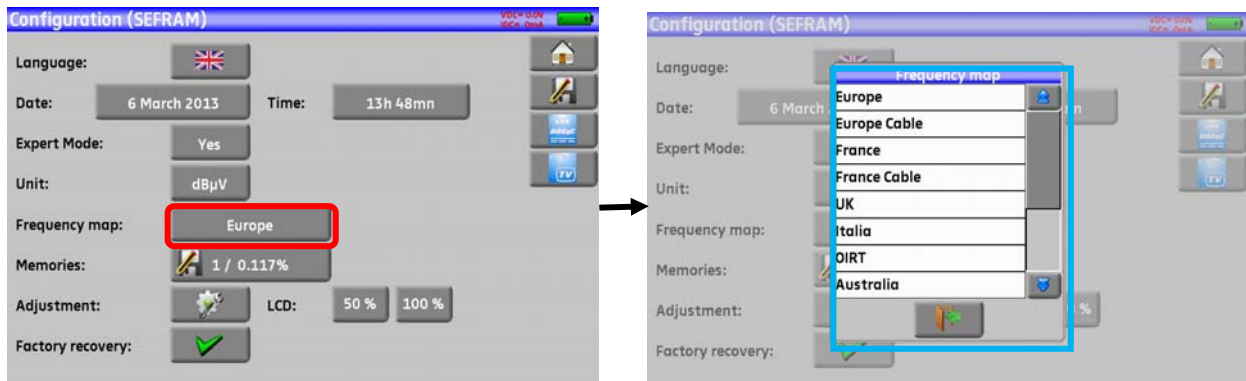

19.4 Saves


To save a picture or any other feature, see chapter [Save](#)

The number of saved files and their memory size are displayed.




When pressing this key, a pull-down menu lists the previously saved files.

The first column contains the order number of the file; the second column contains the name of the file; the last column contains the type of file: Measure, Spectrum, Measurement map...

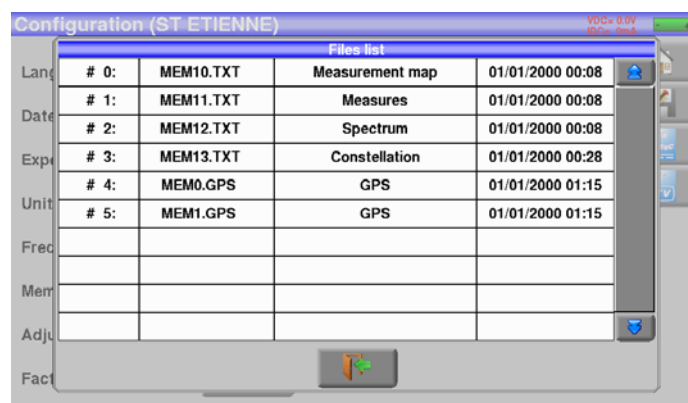

By pressing a line of the table, you open a window:

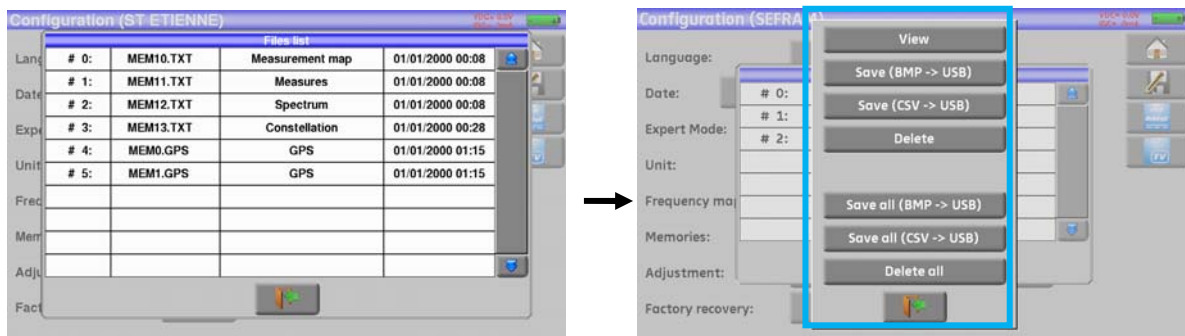

19.4.1 View


This key allows the display of the content of the file:



19.4.2 Save


- **Save (BMP -> USB)** allows you to export the file to the USB stick under BMP format (non-compressed graph); it is useful to transfer graphs to a report in a PC computer.

Here is the BMP file of the previously displayed DVB-T/H channel, edited on PC to have the spectrum full screen.

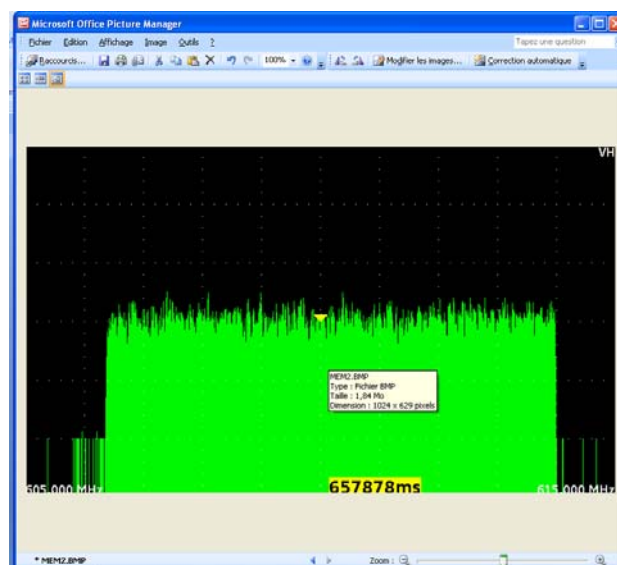

- **Save (CSV -> USB)** allows you to export the file to the USB stick under CSV format (text file by columns separated with semicolons); it is useful to analyze values in a spreadsheet.


Here is the spectrum here above with a curve under EXCEL™.

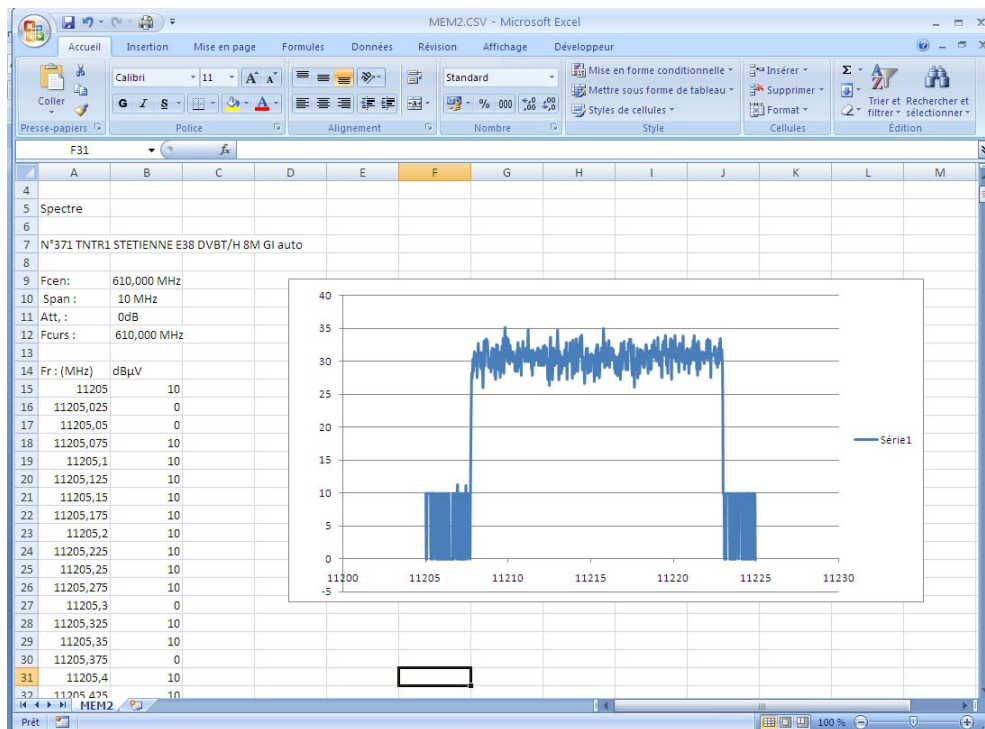

- **Save all (BMP -> USB)** records all files from the appliance under BMP format into separated registers:
 - LEVEL for the level measurements
 - MAP for the measurement maps
 - SPECTRUM for the spectrum measurements
 - BER-MER for the error rate measurements
 - CONST for the constellations
 - ECHO for the echoes.
- **Save all (CSV -> USB)** also records all files from the appliance into separated registers, but under CSV format.

19.4.3 Delete

- **Delete** erases the selected file, with confirmation
- **Delete all** cleans the whole memory, with confirmation

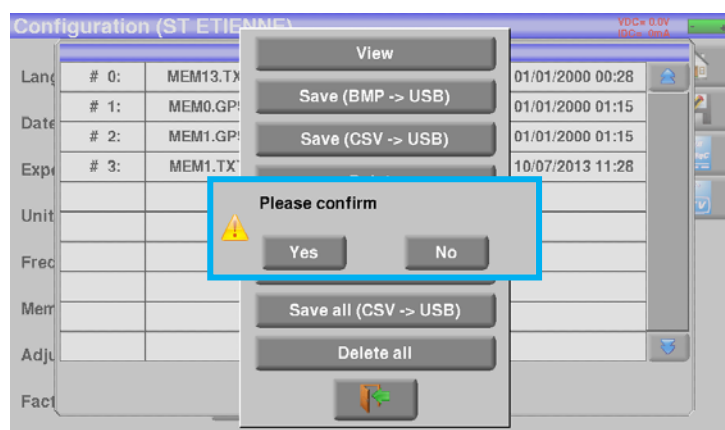

19.5 Adjustment

To access the Adjustment page, press



19.5.1 Beep

This key allows you to change the volume of the sound after pressing keys and under the Check Sat mode. You change by pressing the percentage you want:


0% (= no sound) to 100% (=maximum level).



19.5.2 Password


With the FSM-640, you can create a password that will be required at each start-up.

It is a security feature in case someone stole your material.

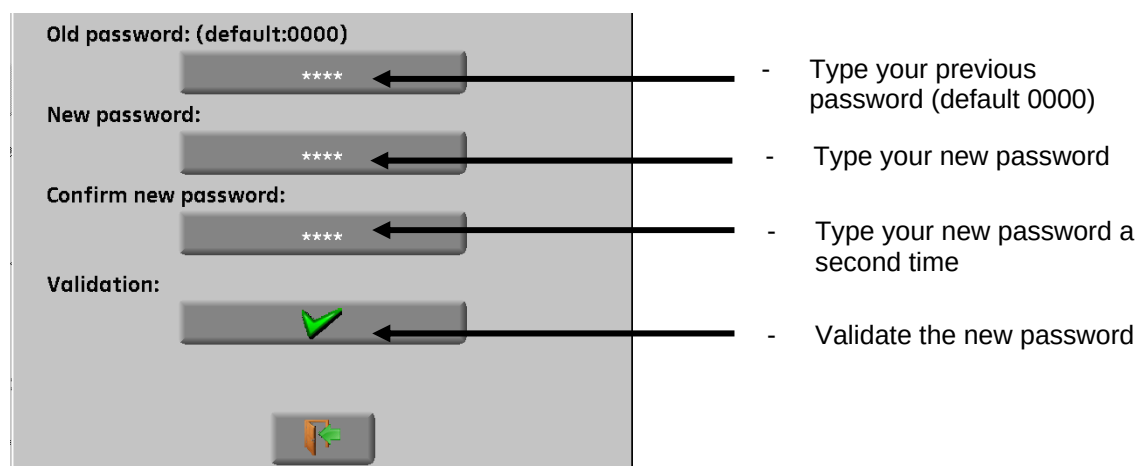

Quit, then select Yes in front of Password.

At each start-up, a buttons shall show up on the welcoming page; press it and enter your new password:

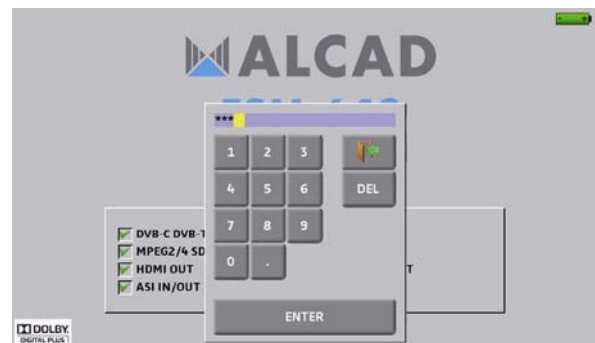

If the code is right, the appliance will start (there is no limit to the number of trials).

It is mandatory to register your instrument and the password to recover a lost password from ALCAD (please use the template supplied on the CD-ROM)



Attention : if you have lost your password please contact the technical support


19.5.3 Background

This key allows you to change the background of graphs between **black**, **white** and **grey** (spectrum, constellation...)

This function is useful to spare ink when printing reports with a printer.

19.5.4 Active USB port

Change it by pressing the key in front of Active USB port:

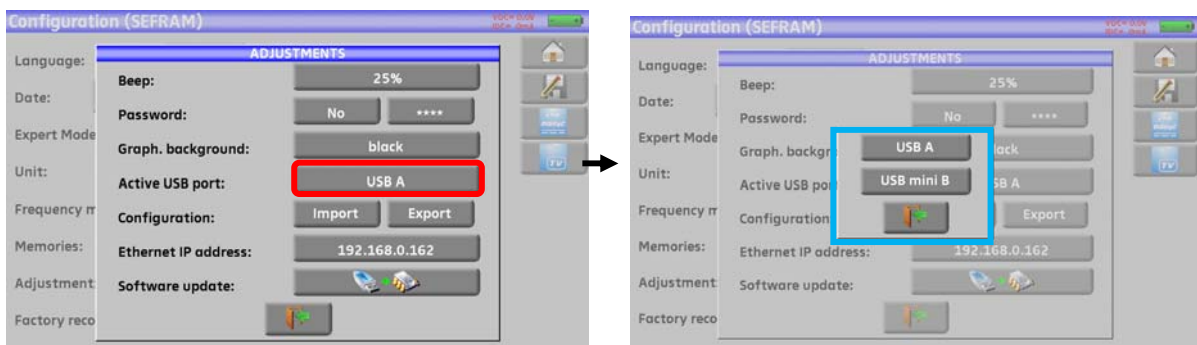


USB A: link to an USB stick (for updating, change of configuration or file output) or to a PC mouse.

USB mini B: link to a computer thanks to a suitable cable; see chapter [Connection of the appliance to a PC](#).

19.5.5 Configuration


You can update all or a part of the configuration of the appliance thanks to the software PC SWR-003; you can download it free of charge from our website. Embedded Help will be useful for each work.

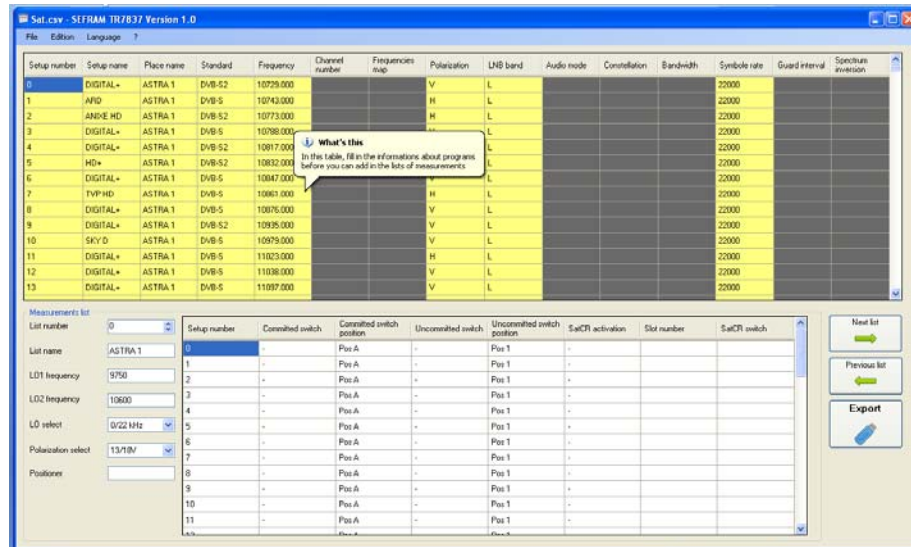

The configuration of the appliance results from files of two different types:

- One satellite file SAT.CSV for Check Sat (see [Check Sat](#))
- One setup file CONF.CSV including up to 1000 setups and 20 measurement lists, 50 lines each (see [Setup library](#) and [Measurement lists](#))

You only need to exchange these files between your appliance and the software SWR-003 to update your measurement configurations.

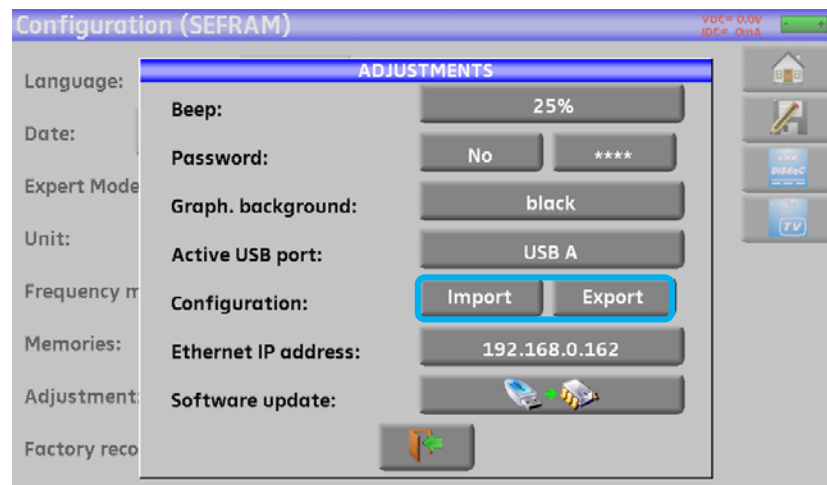

You can copy these files to the root of an USB memory stick.
Then, the USB memory stick must be connected to the appliance.

You finish by validating the transfer with the VALIDATION key on the **Config.<-> USB** line.

During the transfer, the previous configuration will be saved into a CONF directory :

- One file **SAT.CSV** for Check Sat
- One file **CONF.CSV** for setups

	If no CSV file is present on the USB memory stick, only the older configuration of the appliance will be saved.
---	--

	You don't have to copy all files to the USB memory stick; i.e. if only the Check Sat must be changed, you only have to copy SAT.CSV on your stick.
---	---

	You can move the older CSV files from the CONF directory to the root of the USB stick to transfer the configuration of an appliance to another.
---	--


19.5.6 Update

See chapter [Software update](#) for more details.

19.6 LCD


This key allows you to settle the brightness of the screen. You have two possibilities: 50% and 100% (max. brightness).

50% brightness will spare the battery life of the appliance.

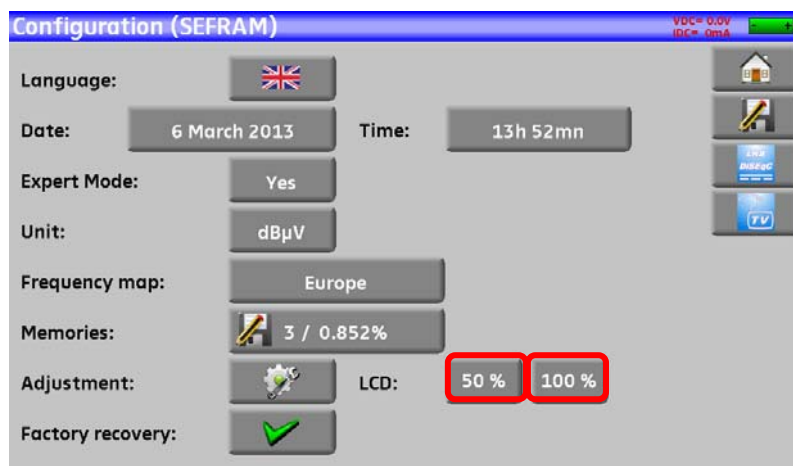

19.7 Factory recovery

A complete set-up of the appliance under its FACTORY configuration, with confirmation.

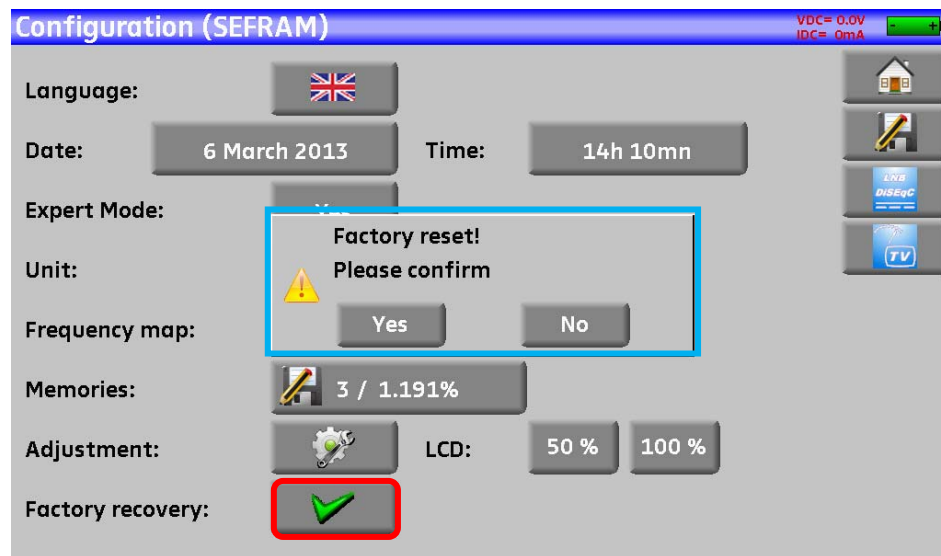

Attention: In case of factory recovery, you **lose**:

- the setup library
- the measurement lists.

20 Software update



Attention: Take care that the remaining battery life is sufficient (> 30%), else plug the appliance on the mains with the provided adapter.

You can easily update the software to get new functionalities.

The update requires an USB stick.

To achieve the update:

- Download the update file **FSM-640_VX.X zip file** on our website (www.alcad.net)
- Insert a USB stick on your PC
- Unzip the file onto the root of the memory stick
- Pull the USB stick off from your computer
- Turn your appliance on
- Go to the Home page,  press Configuration  then press Adjustment 
- Check that the active USB port is the USB port A and that nothing is connected on the USB port mini B.
- Insert the USB stick into the connector of the appliance.



Select Update:




Attention: Do not turn the appliance off while updating

The updating process lasts ca. 10 minutes. At the end of the update, the appliance asks you to restart the appliance. The software is then loaded into your appliance.

Error messages may show up: **Do not take them into account.**

21 Save

Pressing  opens a window (here, on the Measurement page):

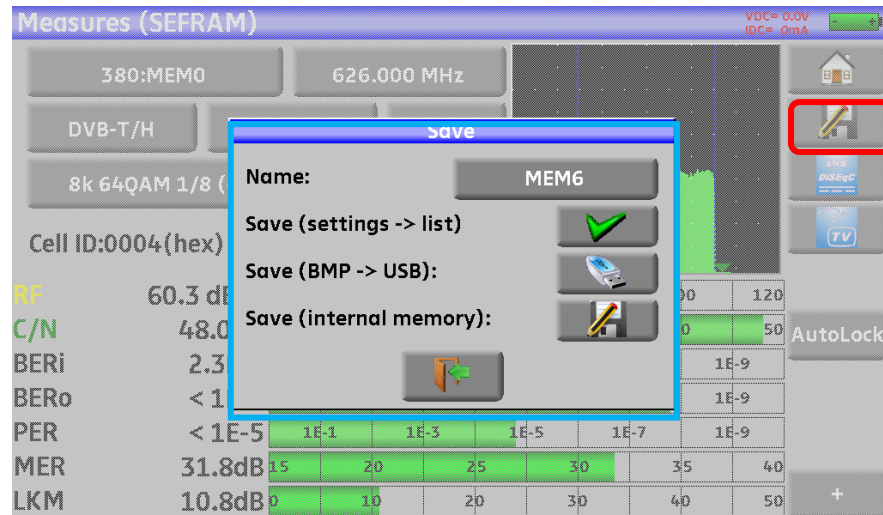

In this window, you can save the current measurement parameters from the active list, make a screen shot to a USB stick under BMP format or make a save into internal memory.

You can rename the save file (see chapter [Man-machine interface](#)).

The default name of the save is MEM(X+1) (X is the number of saves in the appliance).

You will be suggested a save into internal memory only in the **Spectrum**, **Measurements**, **Constellation**, **Guard interval**, **MER/Carrier** and **Measurement map** pages.



After transfer, you will be able to use the saved measures to create measurement reports on your computer (see paragraph [Saves](#) for more details).



When you stop the appliance, it may need a few seconds to stop completely because of the save to the USB stick.

22 Connection of the appliance to a PC

The appliance has a **USB** interface and an **ETHERNET** interface that make it possible to connect directly to a PC.

22.1 Required configuration

These drivers are compatible with the following operating systems: Windows Vista TM, Windows XP TM, Windows Seven TM.


For any other operating system, please contact the technical support ALCAD. Your PC should also have a free USB port.

22.2 USB mini B interface

To use the mini B USB:

Configure your appliance under USB mini B by pressing Home , Configuration  then Setting

Select the active USB port: USB mini B

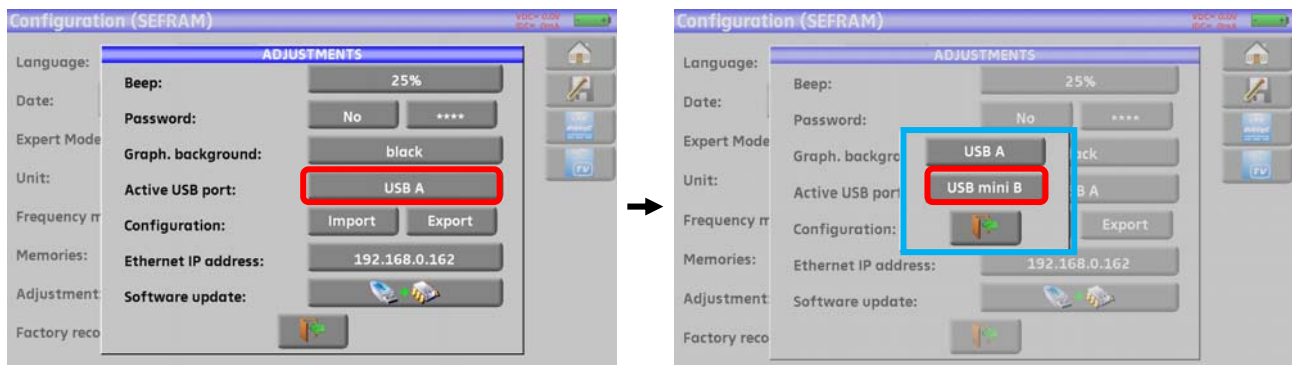

You can use the mini B USB port linked to a computer with a suitable cable. The computer will recognize the appliance as a USB stick. No driver is necessary.

22.3 Ethernet interface

For this kind of connection, no driver installation is required.

Connect the appliance to the PC with a crossover ethernet cable (available in option, ref. 298504246 by ALCAD).



- Configuration of the connection:

Ethernet connection of your appliance to the PC

To change the IP address of your appliance, press




and then Adjustment

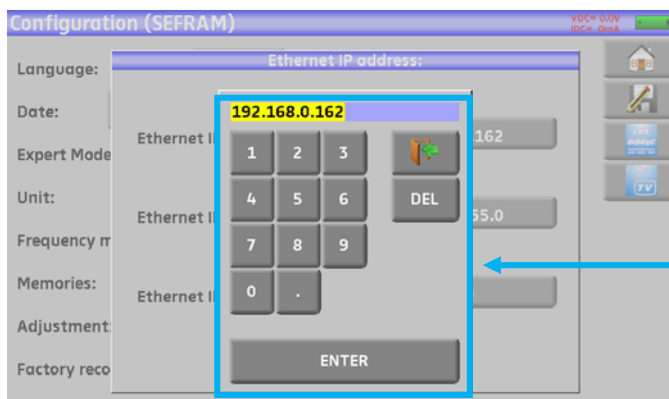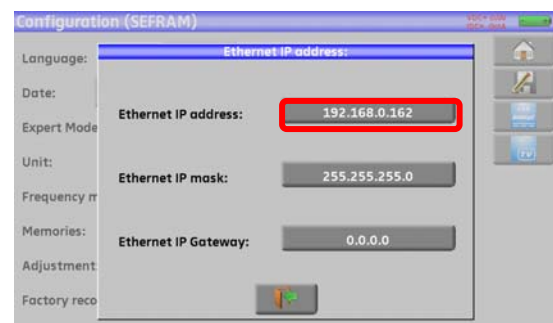

With the virtual digital keypad, type the IP address you want, then validate with ENTER


The PC software in communication with the appliance must have the same IP address as the appliance, just like in the example below:

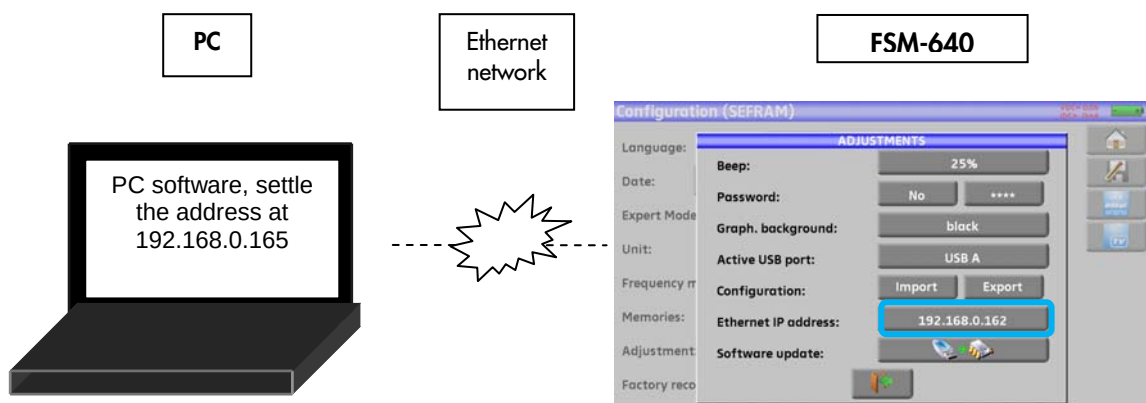



Attention: If the PC has already been connected to Ethernet (network, modem...), it is necessary to reboot the PC before connecting your appliance.

For the **Ethernet** connection of your appliance to a computer network, see the following scheme:

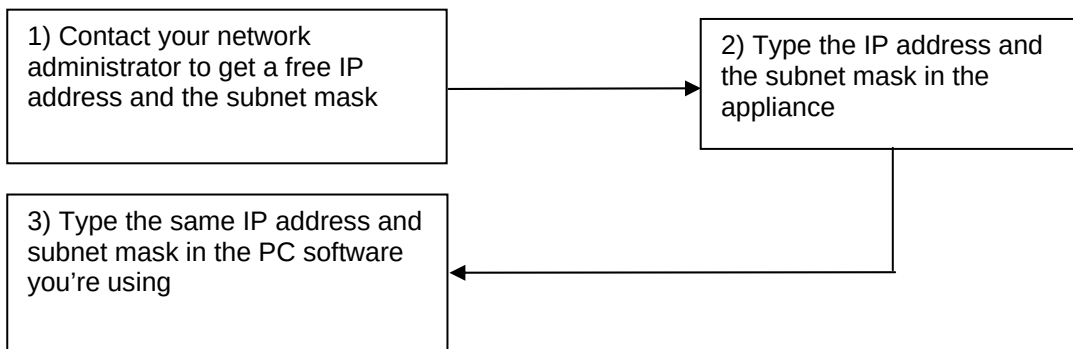

23 Optical Power Measurement option

To access the Optical Measurement function, press Home




then




Insert the Optical-USB accessory on the USB connector of the instrument. The configuration must be « USB A » (see chapter Configuration 19.6.4.)

Plug the output optical fiber of your equipment on the accessory : the instrument display the optical power currently received.

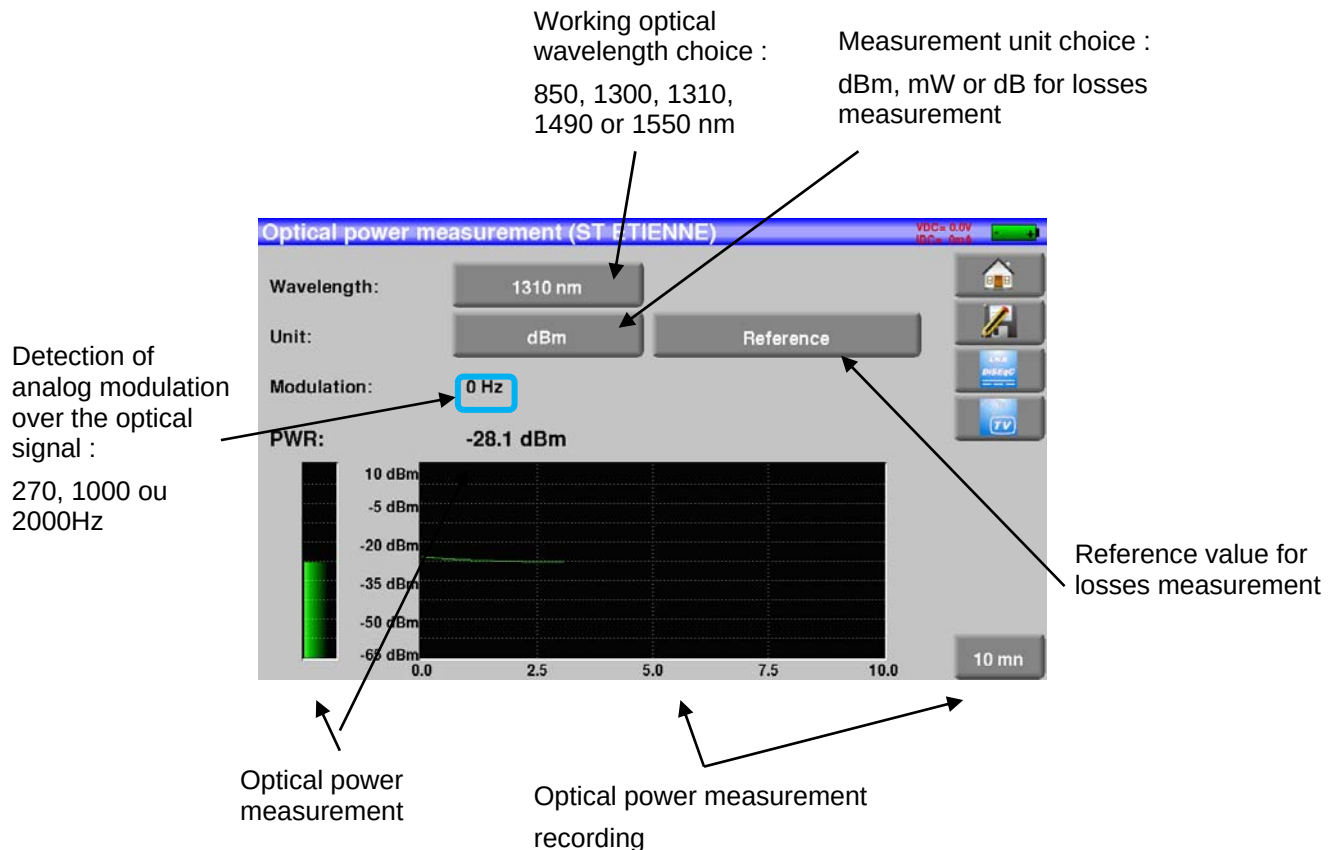

Insertion losses measurement :

- make a first measurement on top of your network : press ; the instrument keep this measurement as Reference and automatically change unit to dB
- make all other measurement you need to check the losses over the optical signal

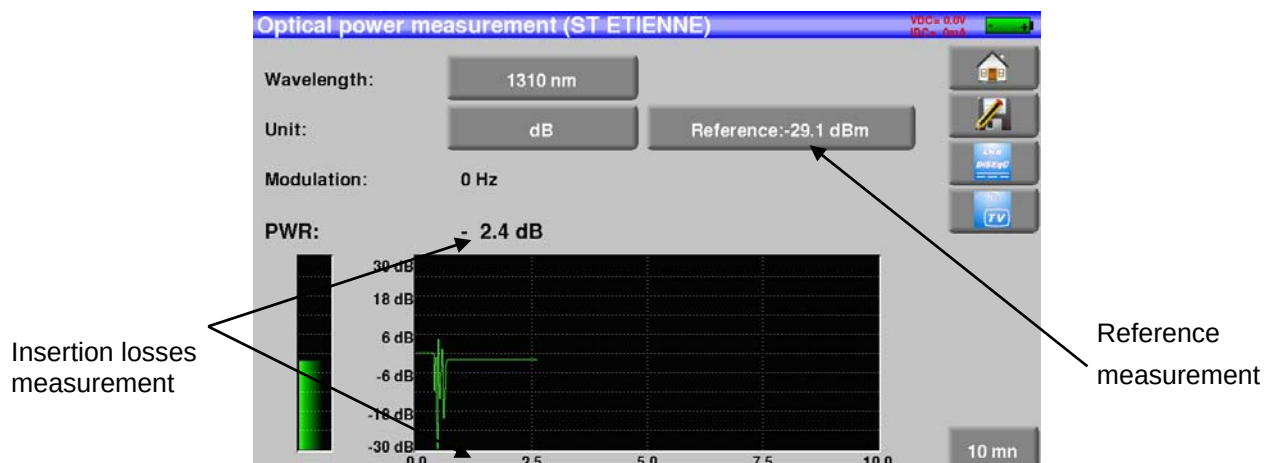

24 HDMI Connection

The appliance includes a HDMI "output" connector;




Attention: When a HDMI cable is linked to the appliance, the touchscreen is inactive and the screen shuts off.

It is advisable to plug a mouse to the USB-A port of the appliance (the USB-A port must be active; see chapter [Active USB port](#)) to keep on working on the appliance.

This function allows you to visualize the screen of the appliance on a television (or any screen with a HDMI input); you can still manage the functions of the appliance (with the mouse); you can do measurements, display spectra or TV; the sound of TV is also transmitted to the television through HDMI.

Example of connection:

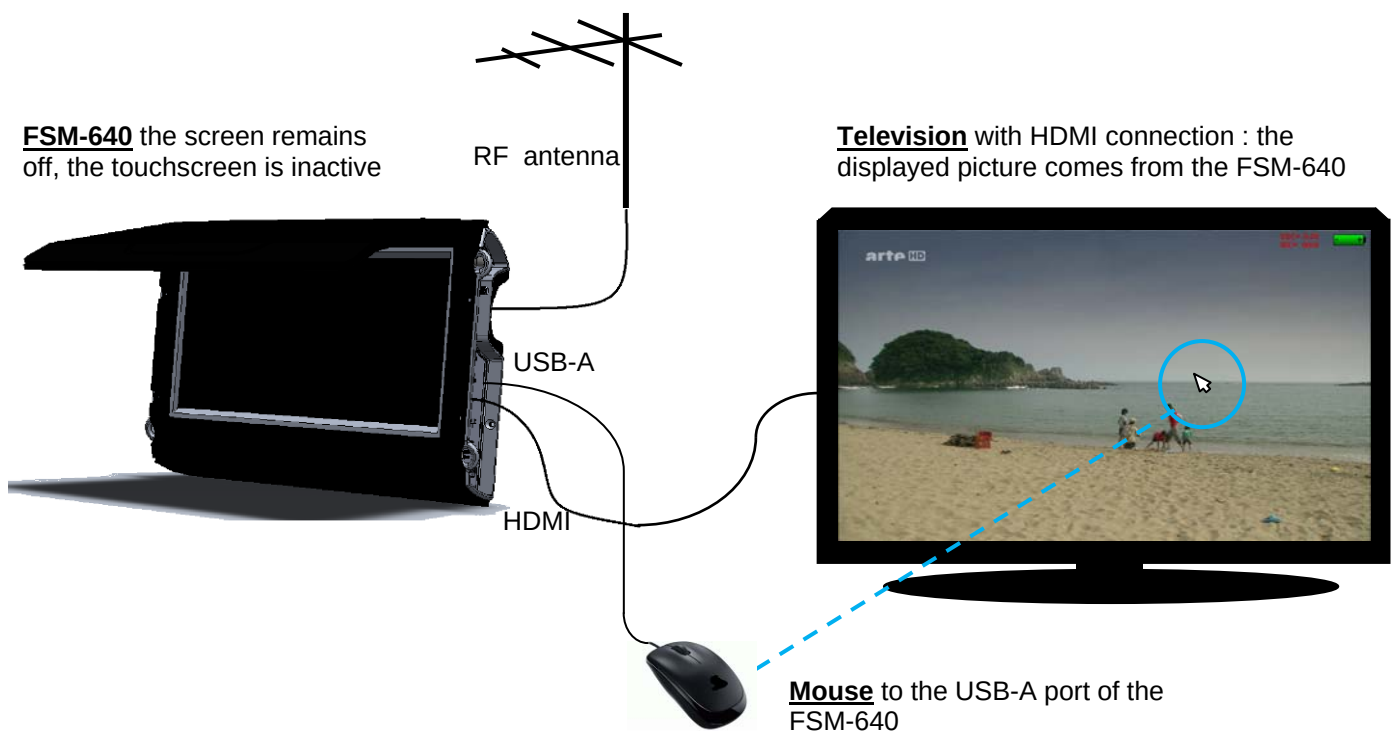

25 Displayed messages


The appliance may display messages while working.

25.1 Alert messages


Low battery: the appliance is about to shut off in a few minutes.



Confirmation request for an important action.

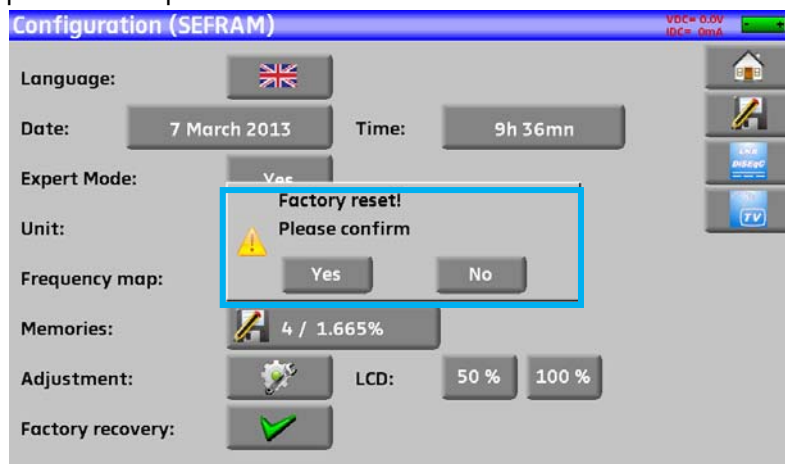

Remote power supply issue: cable under tension or excess intensity above maximum.

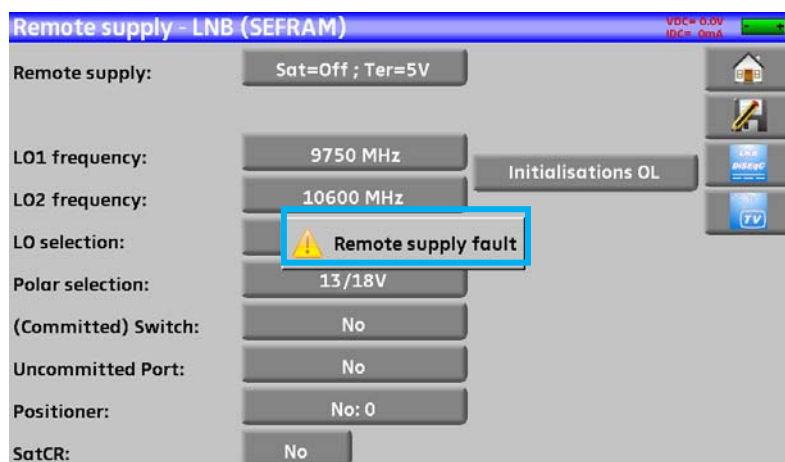

Messages of the same kind may show up; the pop up window is an alert; the corresponding message explains the issue.

25.2 Error messages

A message may show up at the bottom of the screen immediately after updating the software. Do not take it into account as far as it does not show up at a second start-up.

Else, or for any other problem, contact the **ALCAD** technical support.

26 Maintenance

This appliance requires some maintenance to meet its requirements and maintain its general characteristics.

	Consequences	Recommended periodicity of controls	Recommended use limit
BATTERY	Reduction of the battery life		200 charge / discharge cycles or 2 years
STRAPS	Breakdown	At each use Check the holding of the straps	
Back Light SCREEN	Reduction of visibility		2 years
Measurement setting / check	Erroneous measures	Once a year	18 months
CONNECTIONS	Erroneous measures	At any measurement	

This "advice" does not engage the responsibility of ALCAD.

It guarantees the best possible use of the characteristics and the preservation of the product.

Routine maintenance:

The basic maintenance is simply cleaning the outside of the appliance. Any other operation requires a trained personal.

Unplug the appliance before any intervention.

Do not let water flow inside the appliance: risk of electric shock.

Regularly clean the appliance under the following conditions:

- use soapy water
- never use any product containing petrol, benzene, alcohols that would attack silkscreen printings
- wipe out with a soft lint-free cloth
- use a solvent-free antistatic product to clean the screen.

For the carter:


- clean it with a clean dry cloth
- no solvent allowed.

INFORMATION ABOUT THE LCD COLOR SCREEN WITH ACTIVE MATRIX

Your ALCAD field strength meter is equipped with a LCD color screen with active matrix.

This screen is provided by renowned manufacturers. In the current technical conditions of manufacture, they cannot guarantee 100% good functioning pixels in the display zone. They specify a number of possible defective pixels at the surface of the screen.

The ALCAD quality service has preconditioned the mounting of the screen on your instrument to the respect of the acceptance conditions of the manufacturers.

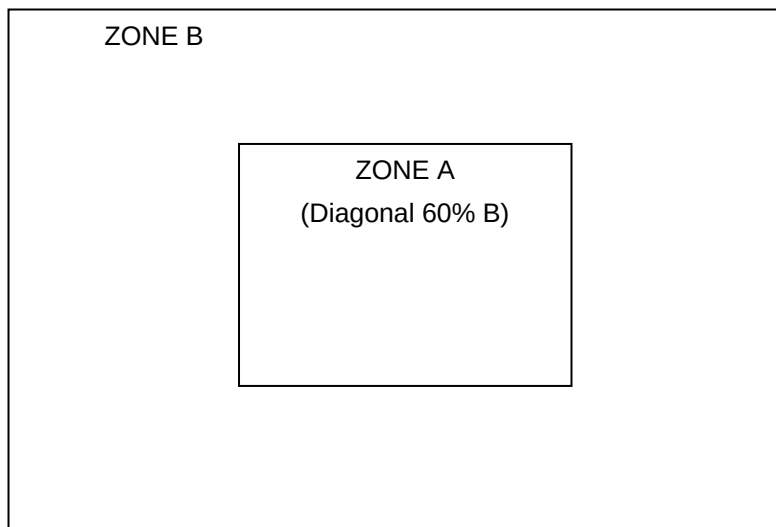

Acceptance criteria:

Zone A (central zone): total less than 5 defective pixels, less than 3 contiguous pixels

Zone B (total surface of the screen): less than 9 defective pixels on the whole surface of the screen, with respect of the conditions prevailing in zone A.

Is considered as defective any pixel on screen that does not light up or lights up in a different color as expected.

The contractual guarantee on your field strength measurer can be exerted only if these criteria are not met, as well at delivery as during the period of guarantee.

27 Technical specifications

27.1 Common specifications

Technical specifications		Terrestrial band	
Frequency range			
Range	5-900 MHz (45-900 for 7871)		
Resolution	Measure: 50 kHz, display 1 kHz		
Level measurements			
Dynamic range	20-120 dBµV (30-120 dBµV pour 5-45MHz)		
Noise floor level	10 dBµV typical		
Units	dBµV, dBmV, dBm, V		
Accuracy	±2dB +/- 0.05dB/°C		
Resolution	0,1dB		
Measurement Filter	Automatic according to standard: 100KHz - 300 kHz - 1 MHz		
Standards	BG, DK, I, L, MN, FM, carrier, DVB-C, DVB-T/H, DVB-T2		
Measurements	RF, C/N		
Digital Measurements	DVB-T/H	DVB-T2	DVB-C
Bit Error rate (BER)	CBER (before Viterbi BERi) VBER (after Viterbi BERO) UNC (lost packets PER) Noise margin	LDPC (BERi) BCH (BERo) FER (frame error PER) Noise margin	BER (before Reed Solomon BERO) UNC (lost packets PER) Noise margin
Modulation error rate (MER)	5 - 35dB	5 - 35dB	20 - 40dB
Symbol rate	-	-	1 to 7.224 Ms/s (J.83A)
Bandwidth	6MHz, 7 MHz, 8 MHz	5MHz, 6MHz, 7 MHz, 8 MHz	-
Mode	-	SISO, MISO, PLP single or multiple	-
FFT type	2k et 8k, auto et manuel	1k, 2k, 4k, 8k, 16k et 32k + extended bandwidth, auto	-
Constellation	QPSK, 16 et 64QAM, auto	QPSK, 16, 64 et 256QAM auto	16, 32, 64, 128 et 256QAM
Viterbi rate	1/2, 2/3, 3/4, 5/6, 7/8 (auto)	1/2, 3/5, 2/3, 3/4, 4/5, 5/6 (auto)	-
Guard interval	auto and manual	auto	-
Inversion of spectrum	auto	auto	auto
HP/LP	yes	-	-
PLP choice	-	yes	-
Standards	ETS 301-701	ETS 302-755	ITU J83-Annexe A
Pre-echoes /Echoes / Impulse response			
Dynamic range	30 dB, 75km (en 8k)	50 dB, -75km +75km (en 8k)	-
Units	µs, km, miles	µs, km, miles	-
Affichage Constellation rapide			
	yes	yes	yes
Fast spectrum analysis			
Ultra fast mode	350 ms typ. (3 times/s)		
Expert mode (7875-7876)	yes, with all information displayed on spectrum		
Filters (according to the span)	100kHz, 300kHz, 1 MHz		
Attenuator	Automatic or manual (0 to 50 dB with 10 dB steps)		
Dynamic range (display)	60 dB (10 dB/div)		
NIT and OSD TV	yes		
Span	5MHz to full span in 1. 2. 5sequences		

Technical specifications		Satellite band
Frequency range		
Range	900-2200 MHz	
Resolution	Measure : 1MHz, display 1MHz	
Level measurements		
Dynamic range	30-110 dB μ V	
Noise floor level	20 dB μ V typical	
Units	dB μ V, dBmV, dBm, V	
Accuracy	$\pm$ 2dB +/- 0.05dB/°C	
Resolution	0,1dB	
Filters	Automatic according to standard: 1MHz - 3MHz - 10MHz	
Standards	PAL, SECAM, NTSC, DVB-S, DVB-S2, DSS	
Measurements	RF, C/N	
Digital measurements	DVB-S, DSS	DVB-S2
Bit Error rate (BER)	CBER (before Viterbi BERi) VBER (after Viterbi BERo) UNC (lost packets PER) Link margin	LDPC (BERi) BCH (BERo) PER Link margin
Modulation Error rate (MER)	0-20dB	
Symbol rate	1 to 45Ms/s	1 to 45Ms/s
Constellation	QPSK	QPSK, 8PSK, 16APSK, 32APSK
Viterbi rate	1/2, 2/3, 3/4, 5/6, 6/7, 7/8 (auto)	2/5, 1/2, 3/5, 2/3, 3/4, 5/6, 8/9, 9/10 (auto)
Inverted spectrum	auto	auto
Standards	ETS 300-421	ETS 302-307
Constellation diagram		
Constellation diagram display	yes	yes
Fast spectrum analysis		
Ultra Fast mode	350 ms typ. (3 times/s)	
Expert mode (7875-7876)	yes, with all information displayed on spectrum	
Filters (according to span)	1MHz, 3MHz, 10MHz	
Attenuator	Automatic or manual (0 to 50 dB with 10 dB steps)	
Dynamic range (display)	60 dB (10 dB/div)	
NIT and OSD TV	yes	

Check sat mode	
	Fast search with NIT, for sigle or dual LNC 30 satellites typical, with Europe table loaded 4 transponders per satellite, user's defined

Remote supply	Terrestrial	Satellite
Voltage	5V/13V/18 V/24V, 500 mA max (300mA for 24V)	13/18 V, 500 mA max
DiSEqC	-	DiSEqC 1.2, control of dish motor, committed & uncommitted switches
Mini DiSEqC (22kHz)	-	22 kHz, ToneBurst
SatCR	-	Extension of DiSEqC protocol can control up to 8 slots max.

Measurement map		
Capacity	Scrolling of 50 setups maximum	
Display	graphical (bargraph), tilt measurement	
Storage		
Memory	Internal in non-volatile memory, or external USB stick (not supplied)	
Data saved	sites, measures (level, BER/MER, measurements map, Spectrum,...)	
Capacity	512 Kb (1000 files max or folders)	
TV picture and sound		
Free to Air digital programs	SD (standard definition) and HD (high definition H.264)	
Sound	MPEG-1, MPEG-2, AAC, HE AAC, Dolby® Digital, Dolby® Digital Plus	
Encrypted programs (*) except 7871	yes	yes
RF input		
Input	75 Ohms, F and BNC (with adaptors supplied)	
Max. permitted voltage	50V DC, 80V rms / 50Hz	
Auxiliary input / output		
Interfaces	USB A, USB mini B, Ethernet 10baseT (RJ45)	
DC supply	5.5 mm jack, 15 V max, 5 A max	
ASI TS input / output (7875-7876)	yes, I/O on BNC plugs	
HDMI ouput	yes	
WiFi antenna input	Factory option	

General specifications	
Display	LCD TFT 10 inch color touch screen, capacitive technology, 16/9, high luminosity backlight 1000 cd/m², 1280x800 dots
External supply	Main adaptor 110/230 VAC, with 5,5mm jack, 15 V 6 A
Battery	LiOn 70W (not removable by user)
Autonomy	4 hours typical, depending of use
Charging time	1,5 hour for 80% of capacity
Operating temperature	-5°C to 45°C
Storage temperature	-10°C to 60°C
EMC and safety	NF-EN 61362-1 / NF-EN 61326-3 / NF-EN 61010-1
Dimensions	280 x 230x 85 mm
Weight	2,9 kg (including battery and protective pouch)

Supplied with: main adaptor, user's manual (CD-ROM), F/F and F/BNC adaptor, protective pouch (mounted) with belt and clip, transportation bag.

(*): the display of encrypted programs is possible for supported encryption, with a valid subscription. Contact our technical department for more information.

27.2 V, dBμV, dBmV et dBm conversion

dBμV (dBmV) is a logarithmic ratio between a measured voltage U_d and a reference voltage U_r .

The reference voltage is $U_r = 1 \mu V$ (1 mV)

$$N = 20 \log (U_d/U_r)$$

dBm is a logarithmic ratio between a measured power P_d and a reference power P_r .

The reference power is $P_r = 1 \text{ mW}$ into 75 ohms.

$N = 10 \log (P_d/P_r)$ with $P_d = U_d^2 / 75$

$U_d = 1 \text{ } \mu\text{V}$	$N = 0 \text{ dB}\mu\text{V}$	$N = -60 \text{ dBmV}$	$N = -108.75 \text{ dBm}$
$U_d = 1 \text{ mV}$	$N = 60 \text{ dB}\mu\text{V}$	$N = 0 \text{ dBmV}$	$N = -48.75 \text{ dBm}$
$U_d = 1 \text{ V}$	$N = 120 \text{ dB}\mu\text{V}$	$N = 60 \text{ dBmV}$	$N = 11.25 \text{ dBm}$

27.3 Typical values for measurements

Values given are indicatives, minimum and maximum for good signal quality

Measurements	Level, power (dB μ V)		C/N (dB)	BER	MER (dB)	modulation
	mini	maxi				
Terrestrial						
Analogue TV	57	74	> 45	-	-	-
FM	50	66	> 38	-	-	-
DVB-T/H	35	70	> 26	VBER < 2^E-4	> 26	8K, 64QAM, 1/32, 2/3
DVB-T2	35	70	> 22	FER < 2^E-7	> 22	32K, 256QAM, 1/8, 2/3
DVB-C	57	74	> 31	BER < 2^E-4	> 31	64QAM
Satellite						
Analogue TV	47	77	> 15	-	-	-
DVB-S, DSS	47	77	> 11	VBER < 2^E-4	> 11	QPSK, 3/4
DVB-S2	47	77	> 8	PER < 1^E-7	> 8	8PSK, 2/3

28 CE Declaration

Instrucciones de seguridad

No exponga el equipo a goteo o proyecciones de agua. No sitúe objetos llenos de líquido, como vasos, sobre el equipo. No sitúe fuentes de llama desnuda, tales como velas encendidas, sobre el equipo. No cubra las aberturas de ventilación del equipo con objetos, tales como periódicos, cortinas, etc. Instale el equipo dejando un espacio libre alrededor para disponer de una ventilación suficiente. Instale el equipo de modo que la clavija de red de alimentación o el conector del equipo sean fácilmente accesibles.

Safety Instructions

Do not place the equipment where water can drip or splash onto it. Do not place objects containing liquid, such as glasses, on the equipment. Do not place sources of naked flame, such as burning candles, on the equipment. Do not block the ventilation slots of the equipment with objects such as newspapers, curtains, etc. When installing the equipment, leave some free space around it to provide adequate ventilation. Install the equipment in such a way that the mains supply plug or the connector of the equipment can be easily reached.

Consignes de sécurité

N'exposez pas l'équipement à des projections ou gouttes d'eau. Ne posez pas d'objets contenant du liquide, tels que des verres, sur l'équipement. Ne mettez pas de source de flamme, comme des bougies, sur l'équipement. Ne bouchez pas les ouvertures de ventilation de l'équipement avec des objets comme des journaux, des rideaux, etc. Installez l'équipement en laissant un espace libre tout autour de lui afin de permettre une ventilation suffisante. Installez l'équipement de telle sorte que la prise d'alimentation d'électricité ou le connecteur de l'équipement soit facilement accessible.



DECLARATION OF CONFORMITY

according to EN ISO/IEC 17050-1:2004

Company Name: ALCAD, S.L.
Company Address: Pol. Ind. Arreche-Ugalde, 1
 Apdo. 455, **20305 IRÚN** (Guipúzcoa), **SPAIN**



declares that the product

Model Number(s): FSM-640
Product Description: FIELD STRENGTH METERS
Product Option(s): INCLUDING ALL OPTIONS
is in conformity with: Safety: EN 61010-1
 EMC: EN 61326-1

The product herewith complies with the requirements of the Low Voltage Directive 2006/95/EC and the EMC Directive 2004/108/EC.

Supplementary Information: To comply with these directives, do not use the products without covers and operate the system as specified.

Especificaciones sujetas a modificación sin previo aviso
 Specifications subject to modifications without prior notice
 Les spécifications sont soumises à de possibles modifications sans avis préalable




Irún(SPAIN), 7 May 2014

Xabier Isasa
General Manager

ALCAD, S.L.
 Tel. 943 63 96 60
 Fax 943 63 92 66
 Int. Tel. +34 - 943 63 96 60
 info@alcad.net
 Apdo. 455 - Pol. Ind. Arreche-Ugalde, 1
20305 IRÚN - Spain

www.alcad.net

FRANCE - Hendaye
 Tel. 00 34 - 943 63 96 60
CZECH REPUBLIC - Ostrova čice
 Tel. +420 546 427 059
UNITED ARAB EMIRATES - Dubai
 Tel. +971 4 887 19 50
TURKEY - Istanbul
 Tel. +90 212 295 97 00



ISO 9001



WARRANTY

Your instrument is guaranteed for two years in parts and work time against any default of manufacture and/or contingencies in the functioning. This guarantee starts at the date of delivery and ends 730 calendar days later.

If the appliance is subject to a guarantee contract, this contract cancels and replaces the above mentioned conditions of guaranty.

This guarantee does not include any fault of use and/or error of handling. In case of use of the guarantee, the user must send back, with its expenses, the concerned appliance to our factory:

ALCAD S.L.
Poligono arreche-Ugalde, Nº1
Apdo. 455
E-20305 IRUN-España-

The accessory items furnished as standard with the appliance (cables, plugs...), consumable items (battery...) and the optional accessory items (bag, case...) are guaranteed for 3 months against any default of manufacture.

The warranty does not apply to LCD, pouch, keypad, etc. Please check our warranty conditions with our sales department. The warranty does not apply when the instrument is shocked.

The factory options in the appliance are guaranteed for the same time as the appliance.

Customer is responsible of shipping back the instrument to the factory. Special care must be taken in the packaging of the instrument to be sure that it will not be damaged during transportation. All necessary insurance must be taken by the customer.

ALCAD can reject any instrument damaged.

What to do in case of malfunction?

In case of malfunction or for any problem of use, please join the technical assistance by ALCAD

S.L.. A technician will take your call in charge and will give you any necessary information to solve your problem.

What to do in case of crash?

In case of crash of the appliance, please join our after-sales service.

METROLOGY

The meteorological conditions of your measurement instrument are defined in the specifications of this notice. Climate and environmental conditions restrict the specifications of your Field Strength Measurer (MDC). ALCAD checks the characteristics of each appliance one by one on an automatic bench during its manufacture. The adjustment and control are guaranteed under conditions of the ISO9001 certification by facilities in connection with the COFRAC (or equivalent in the context of ILAC reciprocity).

The specified characteristics are considered stable for a period of 12 months from the first use under normal conditions of use.

We recommend a check after 12 months and max. 24 months of use, then every 12 months after 24 months.

For any check of the characteristics, the following average climate conditions shall be maintained ($23^{\circ}\text{C} \pm 3^{\circ}\text{C}$ – $50(\pm 20)\% \text{RH}$). The MDC should have been working for 0,5 hour before check.

We recommend that you have this control made by our after-sales service (Service Après-Vente) for the best service and preservation of the measuring quality of your instrument.

When a MDC returns to ALCAD, maximum service is provided with internal updating according to the required adjustments and software updates. In case of shift in the characteristics, your instrument shall be adjusted to recover its original characteristics.

PACKAGING

The packaging of this product is fully recyclable. Its design allows the transport of your instrument under the best possible conditions. Please note that the original packaging should be additionally wrapped in case of transport by air, road or postal.



Tel. 943.63.96.60
Fax 943.63.92.66
Int. Tel. +34 943.63.96.60
info@alcad.net
Polígono Arrece-Ugalde, N° 1
Apdo. 455
E-20305 IRUN - Spain

FRANCE: B.P.60284 - **F-64701 HENDAYE** - Tel. 00 34 - 943.63.96.60 - Fax 00 34 - 943.63.92.66
UNITED ARAB EMIRATES: Middle East FZE - P.O. Box 54830 W5A DAFZA **DUBAI** - Tel. +9714 2146140 - Fax 9714 2146147
CZECH REPUBLIC: nám. V. Mrštíka, 40 - **664 81 OSTROVAČICE** - Tel. 546.427.059 - Fax 546.427.212
TURKEY: Merkez Mah. Ayazma Cad. No.55 Kat:1 **34107 Kağıthane/Istanbul TURKEY** - Tel. +90 212 295 97 00 - Fax +90 212 295 42 43

www.alcad.net



 **25** **ALCAD**
1988/2013

