



# Wireless Optical Mouse

## W /Built in Receiver

### Model NO. M01717-W

### User Manual

©2007 Sakar International, Inc. All rights reserved. iConcepts, the iConcepts logo, and product names referred to herein are the registered trademarks of iConcepts. Windows and the Windows logo are registered trademarks of Microsoft Corporation. All other trademarks are the property of their respective owners.

## Table of Contents

Key Features.....	3
Product Specifications.....	3
Installing Your Mouse.....	4
A. Inserting batteries into your mouse.....	4
B. Connecting your USB receiver.....	4
C. Synchronizing Your Mouse With Your Receiver.....	5
Troubleshooting.....	6
Warranty Card.....	8

## Key Features

- This mouse is compatible with IBM or PC compatible computers running operating systems Windows 98SE or higher. No drivers are necessary to use the mouse, as it will operate as a plug and play device. Simply plug the receiver into one of your computer's USB ports, and it will be properly recognized by your computer's operating system.
- With its compact size, you will find this mouse to be easily portable. It is ideal for a desktop PC or a notebook computer.
- Four modes of operations are used to lower the power consumption.
- This mouse operates using a single channel at a frequency of 27 MHz with 256 IDs to prevent signal interference.
- With a transmission distance of up to 1.5 meters (about five feet) you can work at a comfortable distance from your computer.
- A USB interface allows you to plug the mouse into any USB port on your computer.
- Its amazing 800 DPI optical resolution allows this mouse to be used on most surfaces.

## Product Specifications

Item	Description
Product	Wireless Optical Mouse w/Build in Receiver
Mouse Model Type No.	M01717-W
Movement Sensor	Optical Sensor
Resolution	800dpi
Operating Frequency	27MHz
Distance	Up to 1.5 meters (about 5 feet)
Power Supply	2*AAA Alkaline Batteries (Included)
Power Saving Operation	4 modes
Consuming Current	26mA @ 3V at full speed
Security ID Code	256 Sets
System Requirements	IBM or compatible PC Windows 98SE/ME /2000//XP/Vista
Interface	USB1.1

## **Installing Your Mouse**

### ***A. Inserting Batteries into Your Mouse***

1. When you insert the batteries into the battery compartment please be sure that the batteries are inserted with the correct polarity as indicated in the battery compartment ("+" and "-"). Once the batteries are inserted and your battery compartment is closed, you should see a red light beneath the mouse, as the optical sensor should be switched on.
2. To open the battery compartment when no batteries are inserted, simply hold the mouse upside down, place your thumbs on either side of the mouse and push and slide upwards. (Figure 1). Once batteries are installed opening the panel just requires pushing down on the panel under the scroll wheel (Figure 2).
3. Please note that the mouse will perform poorly when running on weak batteries. Therefore, if you encounter performance issues please remove and replace the current batteries with a new set.

### ***B. Connecting Your USB receiver***

1. First, you will need to take your USB receiver out of the mouse so that it can be plugged into any one of your computer's USB ports. To do so you will have to push the button on top of the mouse. This button is located next to the IConcepts logo on the mouse, and has a symbol with three curved lines and a dot on it. Once you push this button, the USB receiver will swiftly slide out of your mouse.
2. Plug your USB receiver into one of your computer's USB ports. Most computers will have multiple USB ports, and you can plug the receiver into any USB port you choose. Make sure your computer is turned on. When using Windows 98SE/2000, ME, XP, or Vista the mouse should be automatically recognized by the operating system.



Figure 1: If no batteries are already inserted, A. Slide both thumbs upwards to remove battery cover.

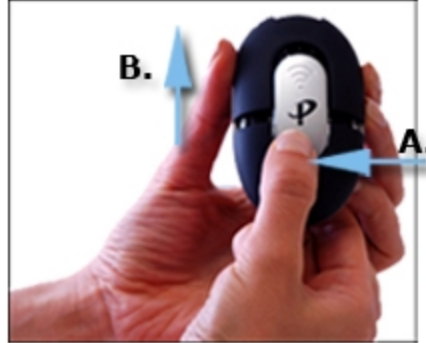


Figure 2: If batteries are already inserted, A. Push button down with your thumb. B. Raise battery cover upwards.

### ***C. Synchronizing Your Mouse with Your Receiver***

1. If you are not getting any response from your mouse after you have plugged in your USB receiver and inserted batteries into your mouse, then you may need to synchronize your mouse. To do this, first note that there is one button on the receiver, and another button underneath the mouse. The button underneath the mouse is recessed and you may need a pen or paperclip to push it. These are the *connect buttons*. To synchronize, first make sure your USB receiver is plugged in. Next, hold the mouse near the receiver. You will then firmly push the connect button on the receiver, let go, and then immediately push the connect button underneath your mouse and let go. Then the mouse and receiver will be synchronized and ready to operate.
2. The mouse and receiver should remain synchronized when rebooting or switching off your computer, or transferring the mouse to another computer. However it will be essential to resynchronize your mouse and receiver when replacing the batteries. (Repeat Installing Your Mouse: Part C, Step 1.)

## Synchronizing Your Mouse With Your Receiver



(Make sure the receiver is properly connected to your computer's USB port and that fresh batteries are installed in the mouse. )

1. Firmly press the Connect button on the receiver.
2. Immediately press the Connect button on the mouse.

NOTE: You may need a pencil tip or other small tip to press the connect button.

**If you are experiencing problems with your mouse please do not return it to the store. Please call Sakar Technical support at (877) 397-8200**

## Troubleshooting

*If you are unable to get your mouse to power on please follow the steps below.*

1. You need to insert 2 AAA batteries into your mouse. Be sure to use fresh batteries. **Do not mix old and new batteries. Do not mix alkaline batteries with rechargeable batteries.**
2. In order to insert your batteries into your mouse, you will need to open your mouse's battery compartment (see below).



Figure 1: If no batteries are already inserted,  
A. Slide both thumbs upwards to remove  
battery cover.

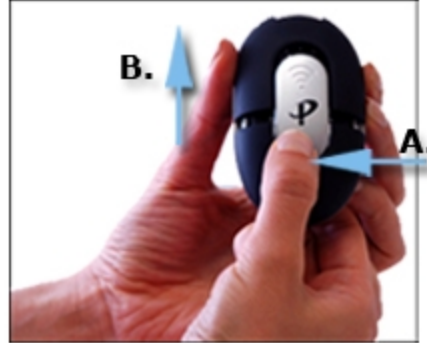


Figure 2: If batteries are already inserted,  
A. Push button down with your thumb.  
B. Raise battery cover upwards.

3. Once the battery compartment is open, you can insert your batteries with the correct polarity as indicated in the battery compartment ("+" and "-"). Once the batteries are inserted and your battery compartment is closed, you should see a red light beneath the mouse, as the optical sensor should be switched on.
4. Please note that the mouse will perform poorly when running on weak batteries. Therefore, if you encounter performance issues please remove and replace the current batteries with a new set.

*If you are unable to get your computer to recognize your mouse please follow the steps below.*

1. Make sure to plug the mouse's receiver into one of your computer's USB ports. Make sure to turn on your computer. Once plugged in, you should see a mouse pointer on your computer screen. If you do not, you might want to try a different USB port on your computer.
2. Once your receiver is plugged in and you see a mouse pointer on your screen, try moving your mouse over a mouse pad or similar surface. If your pointer is not moving when you move your mouse, you may have to synchronize your mouse with your receiver. (see below).

## Synchronizing Your Mouse With Your Receiver



(Make sure the receiver is properly connected to your computer's USB port and that fresh batteries are installed in the mouse. )

1. Firmly press the Connect button on the receiver.
2. Immediately press the Connect button on the mouse.

NOTE: You may need a pencil tip or other small tip to press the connect button.

**If you are experiencing problems with your mouse please do not return it to the store. Please call Sakar Technical support at (877) 397-8200**

### Sakar Warranty Card

This warranty covers for the original consumer purchaser only and is not transferable. Products that fail to function properly **UNDER NORMAL USAGE**, due to defects in material or workmanship. Your product will be repaired at no charge for parts or labor for a period of one year.



**What Is Not Covered by Warranty.**

Damages or malfunctions not resulting from defects in material or workmanship and damages or malfunctions from other than normal use, including but limited to, repair by unauthorized parties, tampering, modification or accident.

**What To Do When Service Is Required**

When returning your defective product (postage pre-paid) for service, your package should include:

1. A detailed written description of the problem.
2. Your return address and telephone number (Daytime)

MAIL TO ADDRESS BELOW:

Sakar International  
Attention: Service Department  
195 Carter Drive  
Edison, NJ 08817

You may also visit [www.sakar.com](http://www.sakar.com) for further assistance if necessary or call our tech support department toll free at (877) 397-8200