



6806 Series Guard Unit

USER MANUAL



Please read this user manual carefully before using the products.
Please keep it for future reference.

Content

1. Preface	1
2. Product Features	1
3. Specifications	1
4. Functions & Appearance	2
5. Operations	4
6. System Setting	3
7. Troubleshooting	14

Announcement

Specification and performance data listed here are subject to change without notice.

VER:1.0
340302000780

Preface

Thank you for using Genway C-5 door entry system. Our guard unit is the core device which is used to achieve the intercom, monitor, alarm, access control function among indoor phone, door station, perimeter gate station and the other guard unit.

Product Features

- ✓ Achiev: Video intercoming the video intercom between user and the guard unit/visitor.
- ✓ s status and'Monitor door station: Real time monitor .s status'perimeter gate station
- ✓ Receiv: Alarm messageing s message to'the alarm zone .s safety'guarantee the community
- ✓ Register the card: Register the card by different methods.
- ✓ Optional(Send message to the indoor phone: Message sending(

Specifications

Operating voltage DC 12V~18V

Quiescent current ~12V (mA)

Operating current ~18V (mA)


LCD screen 7" color LCD Resolution 320*480

Video input: 1Vp-p/75Ω;

Video output: 1Vp-p/75Ω;

Dimension(W/H/D): 357mm*216mm*71mm

Appearance & Functions

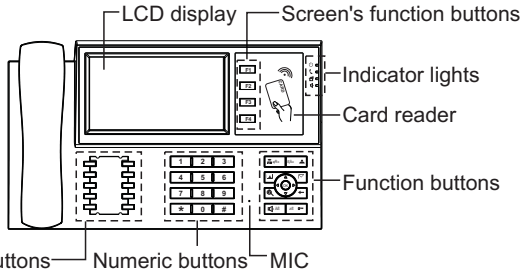


Indicator lights	<ul style="list-style-type: none"> Power supply indicator: This light flickers when power on. Talk indicator light: This light is on when ringing, monitoring or talking. Alarm indicator light: This light flickers when alarm message come or hasn't been read. Hand-free indicator light: This light is on when the guard unit is in the state of hands free.
Function buttons	<ul style="list-style-type: none"> Call button (guard unit): Press this button, then input guard No. to call. Call button (indoor phone): Press this button, then input indoor phone No. to call. Monitor button: Press this button, then input door station No. to monitor. Message send button: Press this button to enter message sending interface and send message to user. Message check button: Press this button to enter message checking interface to check alarm message, picture message, voice message, unlock message and so on. Backspace key: Press this button to hang up, return to previous menu or delete the wrong input letter. Hand-free button: Press this button to enter hand-free talking when in ringing status or talking status. Unlock button: Press this button to unlock the door station or perimeter gate station. Direction key: Press [ok] button to enter system setting interface, then choose the up, down, left or right direction.
Numeric buttons	Digital button ranges from 0-9; * button: Press this button to return the previous interface.
Screen's function buttons	F1/F2/F3/F4: This part's buttons are in accordance with the left part's screen function button.
Short cut buttons	When in monitoring and calling operation, press the shortcut key to enter the corresponding No.. (Note: The user can set 10 common used No..)


Troubleshooting

SYMPTOM	POINTS TO CHECK
No ringing	<ul style="list-style-type: none"> Check whether you have set the disturb type or not-device to anti.
Low talk volume	<ul style="list-style-type: none"> Adjust the talk volume
No picture when talking	<ul style="list-style-type: none"> chroma and contrast, Adjust the brightness
No voice when talking	<ul style="list-style-type: none"> Check whether the sound hole is jammed or not. Get close to microphone when talking.
Display No response when adjust the chroma and brightness	<ul style="list-style-type: none"> Device doesn't connect to the system. then, Operate the monitor operation first proceed with the adjust of the chroma and brightness.

Side

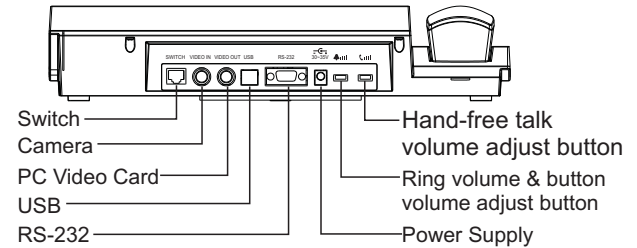

Face

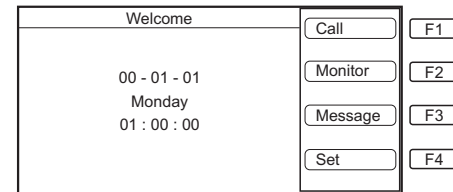


The user can call, monitor, set up and do other operation directly by this function button area. And the user can call, monitor, set up and do other operation by the screen's function button according to the main interface's hint.

Operations

1. Call

When in standby state, press F1 to enter the call interface.

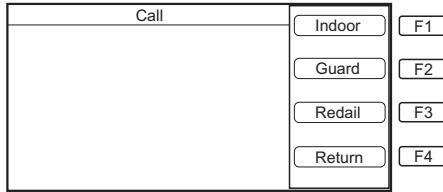

1.1 Call indoor phone


Pick up receiver or press hand-free button, press F1 to enter "Call indoor phone" interface, input "Door station No. + Indoor phone No." to call the corresponding indoor phone.

1.2 Call guard unit

Pick up receiver or press hand-free button, press F2 to enter "Call guard unit" interface, input "Guard unit No." to call the corresponding guard unit.

2. Scan monitor

When in standby state, press F1 to enter the monitor interface.

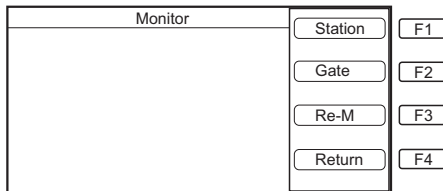

5.2 Hardware function test

In picture (23)'s interface, press F2 to move to "Hardware function test", then press F3 to confirm, or press digital 2 to enter "Hardware function test" interface, show the picture (26):

In the interface, choose the corresponding test type to test the device.

Note: This interface's function test is for the simple malfunction eliminating.

- 0> 1.Indicator test
- 2.Key-press test
- 3. Audio test
- 4.Up-link communication test
- 5.Down-link communication test

(26)

5.3 Call indoor with station No.

In picture (23)'s interface, press F2 to move to "Call indoor with station No.", then press F3 to confirm, or press digital 3 to enter "Call indoor with station No." interface, show the picture (27):

In the interface, input the corresponding number to choose "Call indoor with station No" or not.

Current status station No.

Please choose:

0:Input station No.

1:Not input station No.

(27)

6. Register by card

In "System set"'s interface, press F2 to move to "Register by card", then press F3 to confirm, or press digital 6 to enter "Register by card" interface, show the picture (27):

 
Input the card's attribute device type serial number and card reader's number, then put the card to the guard unit's card register area to register the single card.

Card reader type
0:Computer6:card reader7:gate8:station
Card reader No.
Card No.


(28)

3. Clear guard unit record


In "System set" interface, press F2 to move to "Clear guard unit record", then press F3 to confirm, or press digital 3 to enter "Clear guard unit record" interface, show the picture (20):



 
(20)




(21)

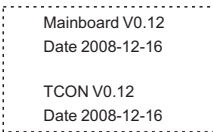


(22)

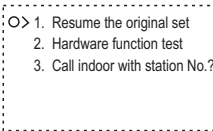

 (23)



 (24)



(25)

4. Software version

In "System set" interface, press F2 to move to "Software version", then press F3 to confirm, or press digital 4 to enter "Software version" interface, show the picture (22):

5. Original set

In "Original set" interface, press F2 to move to "Original set", then press F3 to confirm, or press digital 5 to enter "System setting" interface, show the picture (23):

5.1 Resume the original set

(Please use this operation with caution)

In picture (23)'s interface, press F3 or digital 1 to enter "Resume the original set" interface, show the picture (24):

Input password After Resume the original setting operation, the screen will show the picture (25):

2.1 Monitor door station


Press F1 button to enter "Monitor door station" interface, input "Door station No." to monitor corresponding door station.

2.2 Monitor perimeter gate station

Press F2 button to enter "Monitor perimeter gate station" interface, input "Perimeter gate station No." to monitor corresponding perimeter gate station.

3. Message

When in standby state, press the main interface right side's F3 to enter the message interface.

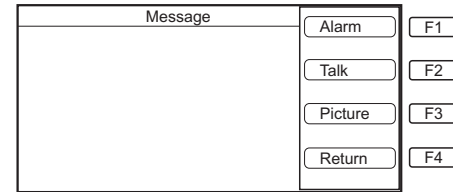

3.1 Alarm message


Press F1 to enter "Alarm message" interface, press F1/F2 to page up/down and check the message.

3.2 Picture message (Option)

3.3 Talk message (Option)

4. Setting

When in standby state, press the main interface right side's F4 to enter the setup interface.

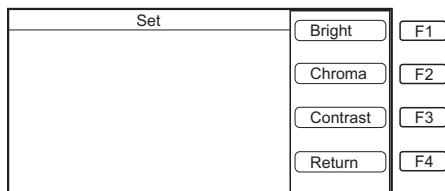

4.1 Brightness adjustment

Press F1 to enter "brightness adjust" interface, press F1/F2 to increase/ decrease the brightness, press F3 to save the adjusting.

4.2 Chroma adjustment

Press F2 to enter "Chroma adjust" interface, the screen display the picture, press F1/F2 to adjust the chroma, press F3 to save the adjusting.

4.3 Contrast adjustment

 
Press F3 to enter "Contrast adjust" interface, the screen display the picture, press F1/F2 to adjust the contrast, press F3 to save the adjusting.

~Note~:

When adjusting the chroma and contrast, the screen will display the picture. The being monitored device is the same as last time's being monitored device.

2.2 Download records

In picture(12)'s interface, press F2 to move to "Download record", then press F3 to confirm, or press the digital 2 to enter "Download record" interface, show the picture (16):




(16)

Press F3 button to confirm download records, when download successful, the screen will show the picture (16):


2.3 Clear record

 In picture(12)'s interface, press F2 to move to "Clear record", then press F3 to confirm, or press the digital 3 to enter "Clear record" interface, show the picture (17): press F3 to confirm, interface show the picture (18):




(17)

 Press F3 button to confirm clear all records, when clear successful, the screen will show the picture (19):



 (18)



(19)

2. Switch setting

In "System setting" interface, press F2 button to move to "Switch setting" interface, then press F3 to confirm, or press the digital button 2 to enter "Switch setting" interface, show the picture (12):

```

O> 1. Add record
    2. Download record
    3. Clear record
    (12)
    
```

2.1 Add records

In picture(12)'s interface, press F2 to move to "Add record", then the interface move to the picture (13), input the device type's corresponding number according to the interface's hint:

0:Door station 1:Guard unit
2:Perimeter gate station

Press the direction button " " move to other option, set the device number, switch's port number (the device connect to which port of the switch),the device and switch's distance. set the device switch number and the switch's port number (the switch connect to the door station) for door station, show the picture (14)

```

O>Device type Gate-way
Device No. 0000
Switch port 00
Distance(100m) 0
Gate-way No. / /
Gate-way port No. / /
Previous
Next
    (13)
    
```

```

O>Device type Gate-way
Device No. 0000
Switch port 00
Distance(100m) 0
Gate-way No. 00
Gate-way port No. 00
Previous
Next
    (14)
    
```

then press the F2 to save the single record, show the picture (15):

Single record download:

Use to download the single record

Single record delete:


Use to delete the single record

```

O>Device type Gate-way
Device No. 0000
Switch port 00
Distance(100m) 0
Gate-way No. 00
Gate-way port No. 00
Previous
Next
Save successful!
    (15)
    
```


System Setting

When in standby state, press "ok" button and input system password to enter "system setting" interface.

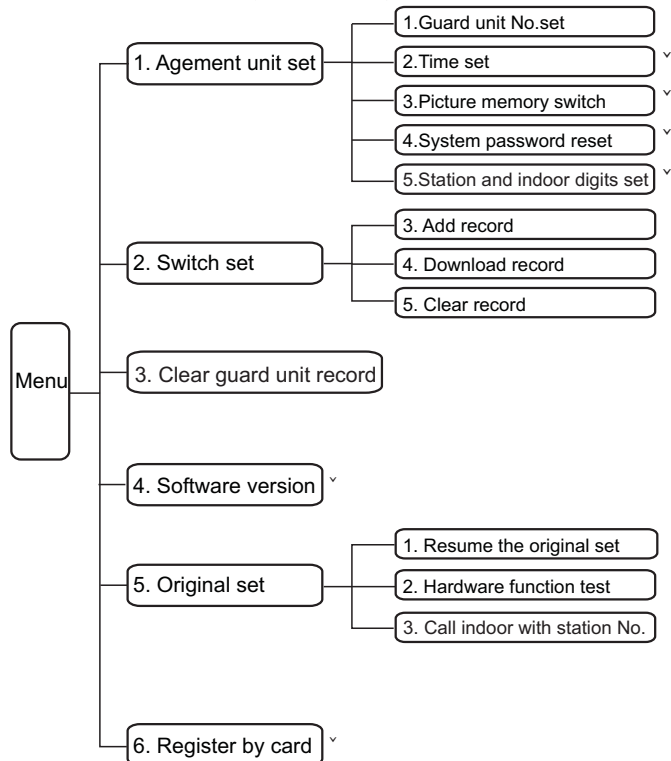

✓ Note ✓ : System original password is 345678


In the above list, the ✓ part can be set according to the user's needs. For the other parts, they are needed for project debugging which should not be changed.

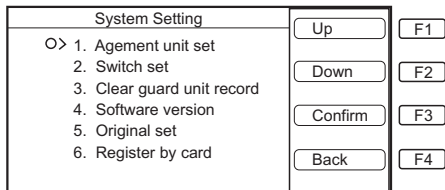

System setting interface


1. Guard unit setting

In "System set" interface, press F3 button or digital button 1 to enter the "Agement unit set" interface, show the picture (1):

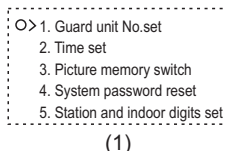


1.1 Guard unit No. setting

In picture (1)'s interface, press F3 or digital button 1 to enter the "Setting guard unit No." interface, show the picture (2):


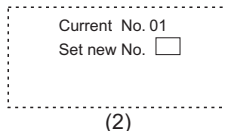


Input guard unit number, when setting successful, the interface will show the picture (3):

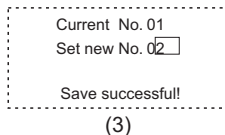


1.2 Time setting

In picture(1)'s interface, press F2 button to move to "Time setting", then press F3 to confirm, or press the digital button 2 to enter "Time setting" interface, show the picture (4): Input the correct time, press F3 button to confirm, the screen will display the picture (5) when setup successful.

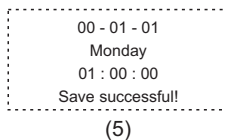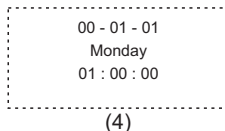


1.3 Picture memory switch

 In picture (1)'s interface, press F2 button to move to "Picture memory switch", then press F3 to confirm, or press the digital button 3 to enter "Picture memory switch" interface, show the picture (6):



(6)

 
Input the on/off's corresponding number, the screen will show the picture (7) when setup successful.



(7)


1.4 System password reset

 In picture (1)'s interface, press F2 button to move to "System password reset", then press F3 to confirm, or press the digital button 4 to enter "System password reset" interface, show the picture (8):



(8)

 Continuous input 6 new digit password twice according to the interface's hint, the screen will show the picture (9) when setup successful.



(9)

1.5 Station and indoor digits set

In picture (1)'s interface, press F2 button to move to "Station and indoor digits set", then press F3 to confirm, or press the digital button 5 to enter "Station and indoor digits set" interface, show the picture (10):



(10)

input new door station digit and new indoor phone digit according to the interface's hint, then the screen will show the picture (11) when setup successful.



(11)