



Deluxe Stainless 4 Slice Toaster

Model CE2024ST

INSTRUCTION MANUAL

PLEASE SAVE THESE INSTRUCTIONS



Dear Valued Customer

Thank you for purchasing a *CASCADA* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADA* product into your home.

Your *CASCADA* appliance is recognized as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADA* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 220-240V ~ 50 Hz – AC only
Rated Power: 1600 Watts

SERVICE

In the unlikely event of failure or for product information please contact the below help lines.

New Zealand call Toll Free 0800 89 85 80

Email: service@opnz.com

Website: www.orientalpacific.com

Australia call Toll Free 1 800 858 011



BEFORE FIRST USE

- Your *CASCADÉ* appliance has been packaged carefully to ensure the product reaches you in good condition. If the product has been damaged, dropped, has a malfunction in any way, or if the supply cord is damaged, immediately contact your retailer for replacement or repair.
- Carefully unpack your *CASCADÉ* appliance. Make sure you do not discard any packaging material until all parts of the appliance have been found.
- Remove any label or sticker. Carefully wipe the exterior of the appliance to remove any dust that may have accumulated. Dry with a dry towel. Do not use harsh abrasive cleaners.
WARNING! Do not immerse in water or any other liquids. Do not place any metal object into the toasting compartment.

OPERATION

Safety.

- Always place the appliance on a level non-slippery stable surface.
- Always place the appliance on a heat resistant surface, as the appliance will reach high temperatures.
- **WARNING! DO NOT LEAVE ON WHILE UNNATENDED. BREAD MAY BURN. DO NOT USE NEAR OR BELOW CURTAINS, UNDER CUPBOARDS OR NEAR WALLS, OR ANY OTHER COMBUSTIBLE MATERIAL. THIS TOASTER MUST BE SUPERVISED WHEN IN USE.**
- **WARNING! DO NOT LET SUPPLY CORD HANG OVER THE EDGE OF ANY BENCH OR TABLETOP. AS THERE MAY BE A RISK OF BURNS, ELECTRIC SHOCK OR OTHER INJURY SHOULD YOUNG CHILDREN PULL THE APPLIANCE FROM THE BENCH OR TABLETOP.**



Function Guide

The following control options are available when using this appliance.

- Normal.** Use for general toasting. There are 9 heat settings available.
- Frozen.** Extended cooking period. For use when toasting frozen bread.
- Reheat.** Shortened cooking time. Use when re-heating cold toast.
- Stop.** Use to cancel cooking process at any time.

Normal Operation

- Ensure the bread carriage levers are in the raised position.
- Insert the power supply plug into an earthed wall socket, corresponding to the power requirements of this toaster. Switch power on at the mains socket.
- Using the up or down control buttons (< / >) set the browning control to a mid point (setting 4). Depending on the thickness of the bread, this may need to be adjusted to suit your personal preference.
- Place bread into the bread carriage slots as desired.
- Lower the bread carriage levers. Toasting will begin. The small heating on **indicator lights** will glow when the bread carriage is lowered indicating heating cycle is ON. During the heating cycle the indicator lights will reduce indicating the cooking time remaining. Toaster will automatically turn off when toasting is complete and the bread carriage levers will rise.
- Press the **STOP** button at any time to stop toasting.

NOTE During the first few times of use, the elements may not heat satisfactorily until they have settled. This is normal as the elements may take 2-3 uses before operating at maximum level.



Reheat function.

Cold toast can be reheated, providing there has been nothing spread on it. To reheat cold toast, place in toaster, lower bread carriage lever as normal and press the REHEAT button. The REHEAT indicator will glow red and toaster will operate for a short period only.

Defrost function.

Frozen bread can be toasted direct from the freezer. Simply place frozen bread in toaster, set to the normal heating setting and lower bread carriage lever. Press the DEFROST button. The DEFROST indicator will glow and the toaster will operate for a longer period than normal.

NOTE: In both cases do not alter the browning control from the normal setting.

Tips

It is recommended that only TOAST size bread should be used in this appliance.

Torn bread should not be used as they may twist and jam the release mechanism thus causing a risk of fire through burning bread.

Always toast bread of a similar size in both heating chambers.

NOTE: The first time you use your appliance; there may be a small amount of smoke and odor. This is normal. It is due to the heating of a protective coating, placed on the heating elements, to protect the heating elements during shipping.



CLEANING AND CARING

- Always allow your appliance to cool completely before final cleaning.
- **WARNING!** Never immerse your appliance in water or other liquids.
- When toaster has completely cooled, wipe the exterior of the appliance with a warm soft damp cloth. Dry with a dry towel.
- Do not use harsh abrasives as they may damage any plastic, non-stick surface or the exterior finish.
- **VERY IMPORTANT** Regularly remove the crumb trays from the rear. Do not allow breadcrumbs to build up in the appliance as they may present a fire hazard.
- Store your appliance in its original box or in a dry cupboard.



IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **WARNING!** Bread may burn, do not use near or below curtains, under any cupboard or nears walls, or any other combustible material.
3. **WARNING! DO NOT LEAVE ANY TOASTER UNATTENDED WHILE IN USE. BREAD MAY BURN.**
4. **VERY IMPORTANT** Do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use if hands are wet.
5. Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.
6. An appliance dropped or damaged should not be used until examined by a service engineer.
7. Do not permit the mains lead to come in contact with hot objects.
8. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person, in order to avoid a hazard.
9. **CAUTION:** Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance. Young children and infirm persons must be supervised to ensure the can operate the appliance safely if they are required to use this appliance.
10. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service Dealer.
11. This appliance is intended for household use only and not for commercial or industrial use.
12. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
13. **WARNING!** Do not let the cord hang over edge of table or counter. There may be a risk of burns; electric shock or personal injury should a child pull the appliance from the bench or tabletop.
14. **WARNING!** An appliance should never be left unattended when plugged in.
15. **WARNING!** Do not touch hot surfaces.
16. **WARNING!** Always place the appliance on a heat resistant surface, as the soleplate will reach high temperatures.
17. **WARNING!** Ensure adequate ventilation; keep an open space of approximately 20 cm all around the appliance.
18. If appliance is to be used by a third party, please supply the instruction manual with it.
19. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.



Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com

Website: www.orientalpacific.com