
GSM 3G Senior Helper Telecare&Telehealth

An Advanced
Programmable
Multifunctional
GSM 3G Telecare
GSM 3G Telehealth
In The Worldwide!

T3

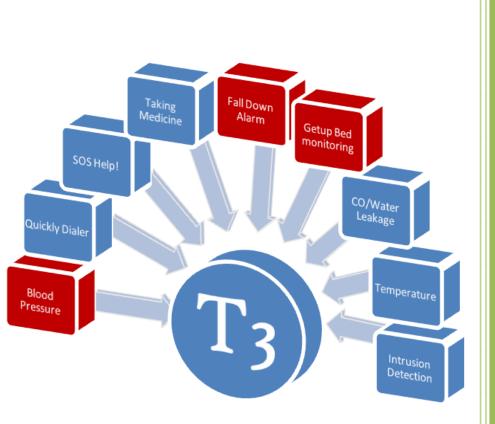

User Manual

Ver 1.1

Date Issued: 2015-06-01

All rights reserved.

King Pigeon Communcation Co.,Ltd

Table of contents

1.Product details	3
2.Safety Directions	4
3.Product Schematic	5
4.Setting by PC software	7
5.Setting/Operating by SMS commands	14
6.Add wireless sensors	15
7.Hot T3 works for elderly?	16
8.Warranty	17

This handbook has been designed as a guide to the installation and operation of K3 Panel.

Statements contained in the handbook are general guidelines only and in no way are designed to supersede the instructions contained with other products.

We recommend that the advice of a registered electrician be sought before any Installation work commences.

The manufacturer, its employees and distributors, accept no liability for any loss or damage including consequential damage due to reliance on any material contained in this handbook.

The manufacturer, its employees and distributors, accept no liability for GSM Network upgrading or SIMCard upgrading due to the technology specifications contained in this handbook.

General SMS Command List

SMS COMMAND	Functions & Actions		
AA	To arm the T3, in this mode, any detector triggered will alarm.		
BB	To disarm the T3, in this mode, detector triggered will not alarm.		
CC	CC To switch ON the Siren output.		
DD	DD To switch OFF the Siren output		
EE	Inquiry the T3 Status and GSM Module IMEI Code.		

^{*}The commands should plus Password, the format is Password+SMS Command.


i.e.: default operate password is 1234, then you can send 1234AA to arm, 1234BB to disarm.

^{*} The command body AA,BB,CC,DD,EE,etc must be Caps Lock.

1. Product details

GSM 3G Senior Helper T3 is an innovation solution of telecare and telehealth that special for the senior, elderly, aged people who live independently.

The GSM 3G Senior HelperT3 can be used as safety protection, temperature monitoring, action monitoring, bedtime monitoring, fall alarm and emergency call system, away stay home monitoring and normal telephone.

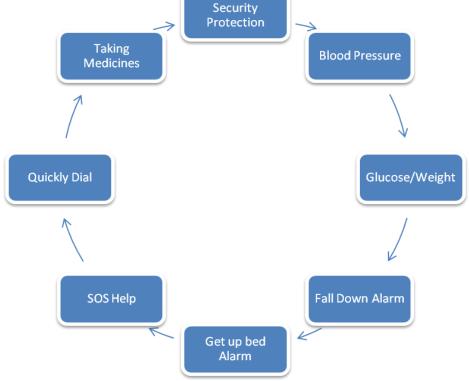

It equips 4 fast dial(speed dial) buttons, which can paste large photo on the buttons, these buttons can be used as Police, Relatives, Taxi, Fire, Doctor, Neighbor or others for fast dial out. Just Press then can dial out, so easy!

The GSM 3G Senior HelperT3 can be used as a telecare system, it can report the elderly daily actions. Includes elderly away/back home time, remind to take medicine, go to sleep and get up time, if not get up in time then can generate alarm over GSM or GPRS or dial the preset numbers.

The GSM 3G Senior HelperT3 can be used as a telehealth unit, it inbuilt blood pressure meter or external blood pressure meter, press one key then can measure the blood pressure and send out over GPRS or SMS or 3G.

Moreover, it can be used as a wireless Alarm system. it supports wireless SOS button, wireless fall detectors, wireless carbon monoxide detector, wireless gas leakage detector, wireless water leakage detector, wireless smoke detector, wireless motion detectors and so on. Once the wireless detectors activated, it will generate alarm over SMS or GPRS or or 3G or dial out immediately. All of these wireless detectors can provide the safety protections to the senior, elderly, aged people who live independently.

The GSM 3G Senior HelperT3 also inbuilt one sensitive thermometer, it can measure the home temperature.

1.1 Features:

- Brevity, Fashion, Neat design;
- Fashion hand free design, large keyboard;
- Large LCD display current time, temperature, and alarm types;
- ➤ GSM SMS/GPRS/3G Transmission, no distance limitation;
- ➤ Bedtime monitoring, if not get up in time can generate alarm;
- Away/Back home time monitoring;
- Daily activities monitoring;
- > Supports variety wireless detectors, includes wireless fall detector, wireless CO detector, wireless smoke detectors and so on;
- > Equips 4 fast dial numbers, and also can dial other numbers by keyboard if required;
- > 3-Timer for alerting to take medicine.
- Backup rechargeable battery.
- Wireless transmit the information over GPRS or 3G network to server or apps.

Setting

PC Software programming;

1.2 Specifications

GSM Frequency	Quad-band 850/900/1800/1900MHz
20.5	900/2100MHz default (T3W)
3G Band	850/1900MHz optional* (T3C)
Wireless zones	32
Wireless Frequency	433.92MHz
Wireless distance	Max.100m in open air
Siren Output	12VDC/1A
DC Power supply	9~24VDC/1A
Power consumption	12V input Max. 50mA/Average 25mA
SIM Card	Supporting 3V SIM Card
Antenna	50 Ω SMA Antenna interface
Temperature range	-20~+60 °C
Humidity range	Relative humidity 90%
Backup battery	3.7V/900mAH
Exterior dimension	22*17*6 cm (8.7*6.7*2.4 inch)
Net Weight	710 g (1.5 lb)

Order Table:

T3: GSM 850/900/1800/1900MHz T3W: 2G: GSM900/1800MHz,

3G WCDMA: 900/2100MHz UMTS; T3C: 2G: GSM850/900/1800/1900MHz, 3G: 850/1900MHz UMTS.

1.3. Standard Packing List

- ✓ Main unit * 1
- ✓ Wireless fall down detector *1
- ✓ Cuff for measure blood pressure *1
- ✓ AC/DC Power adaptor *1,
- ✓ User Manual & PC Software CD x1
- ✓ Packing size: 23.5*18*9.5 cm (9.3*7*3.7 inch)
- ✓ Gross Weight: 1.10 kg (2.4 lb)

1.4 Applications

- > Residential: Home security alarm, elderly living monitoring.
- **Business:** Aging care, telecare, healthcare,etc.

Optional Accessories:

- ✓ PIR Motion Sensor,
- ✓ Glass Break Sensor,
- ✓ Magnetic Window Sensor,
- ✓ Temperature Sensor,
- ✓ Infrared Beam Fence.
- √ Vibration sensor, wireless siren...

2. Safety Directions



Safe Startup

Do not use T3 when using GSM equipment is prohibited or might bring disturbance or danger.



Interference

All wireless equipment might interfere network signals of T3 and influence its performance.



Avoid Use at Gas Station

Do not use T3 at a gas station. Power off T3 when it near fuels or chemicals.



Power it off near Blasting Places

Please follow relevant restrictive regulations. Avoid using the device in blasting places.



Reasonable Use

Please install the product at suitable places as described in the product documentation. Avoid signal shielded by covering the mainframe.



Use Qualified Maintenance Service

Maintenance can be carried out only by qualified maintainer.

3. Products schematic



LCD Display



Back side





4. Installation and Setting by PC software:

- 1) Open the unit's back side cover and insert the SIM card.
- 2) Connect the unit's power supply, Cuff for measure blood pressure ,siren(if needed),and USB cable to PC.
- 3) Switch ON the main unit.
- On computer's desktop,right click "My Computer" >>> "Property" >>> "Hardware" >>> "Device Manager".
- 5) Find "Ports (COM & LPT)", check the port number of "Silicon Labs CP210x USBto UART Bridge", for example:COM3. (Click here to know how to find out the COM Port on your computer)
- 6) Run this configurate software, select the COM Port number, for example: COM3.click "Open Com Port", Click "Enter Setup Mode ", default password is 000000. Fill the new password if you had changed before, then click "OK".
- 7) Click "Read Settings". Configurate the parameters as per you need.
- 8) After finished configrate, Click "Save Settings", configurate finished.


Log in

Steps: Select the COM port>>>Open Com Port>>>Sync PC Time >>>Enter Setup Mode>>>Password verify>>>OK.


(Default password:000000)




Password

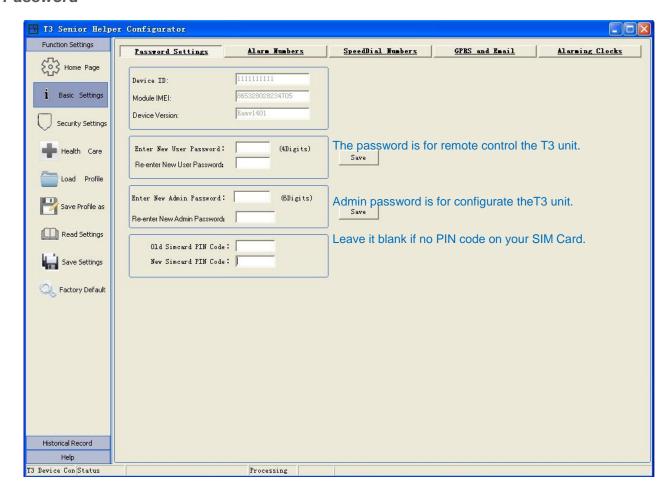


SIM Card & Alarm numbers

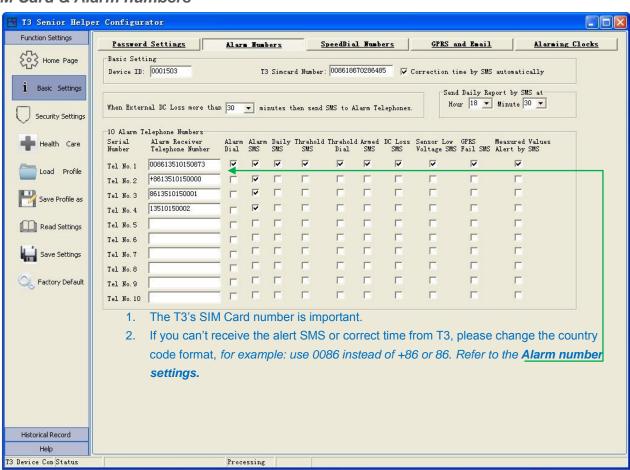


Fast dial numbers

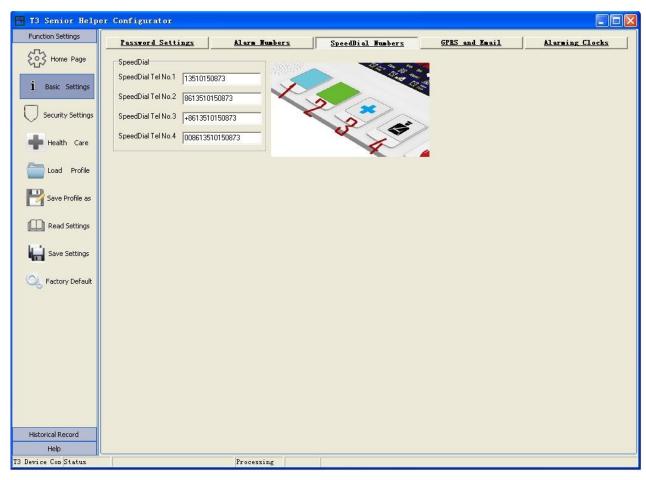


GPRS & E-mail

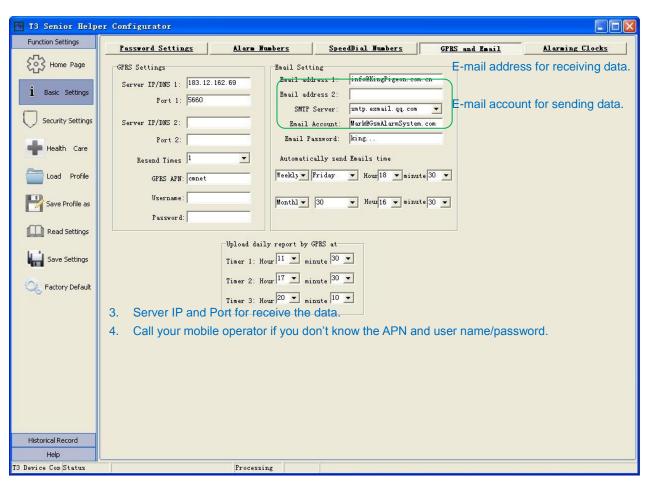


Alarm Clocks

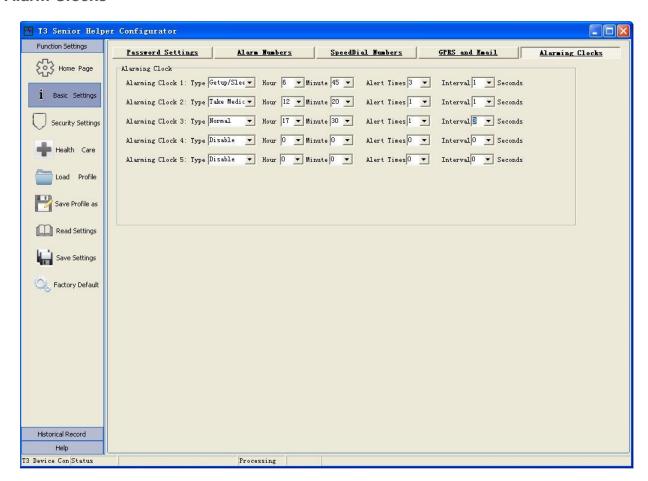


Alarm zones and attributes

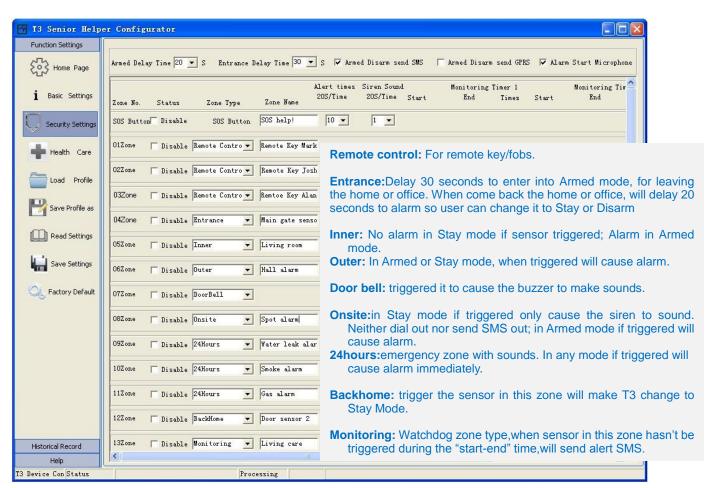


Health Care Alarm

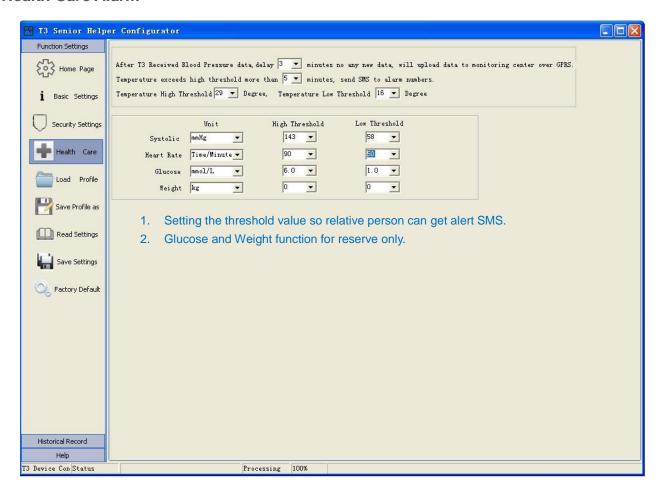


Load/Save profile

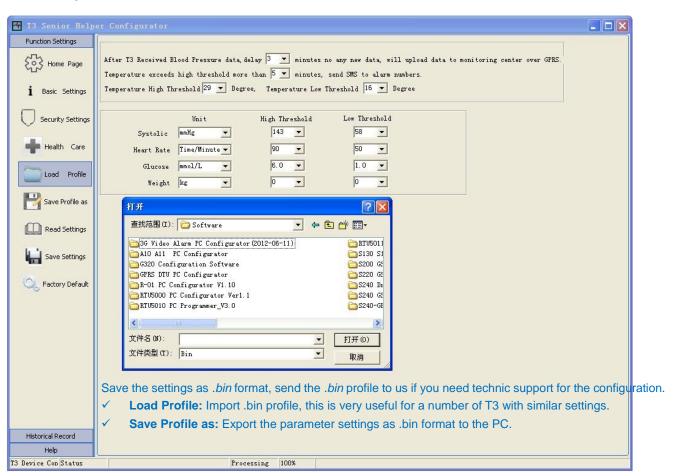


Save Settings

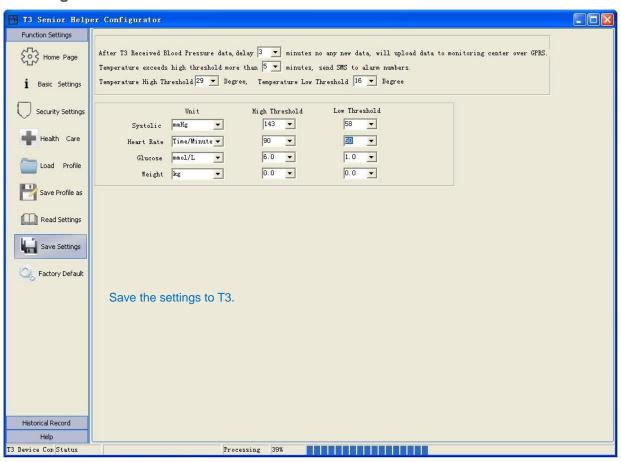

RESET(Caution to click)

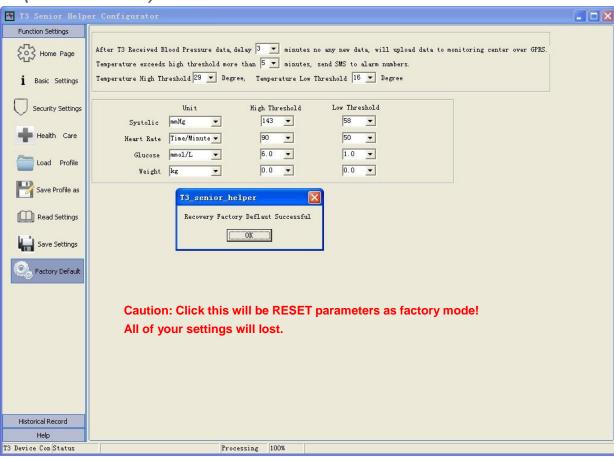

Historical Record

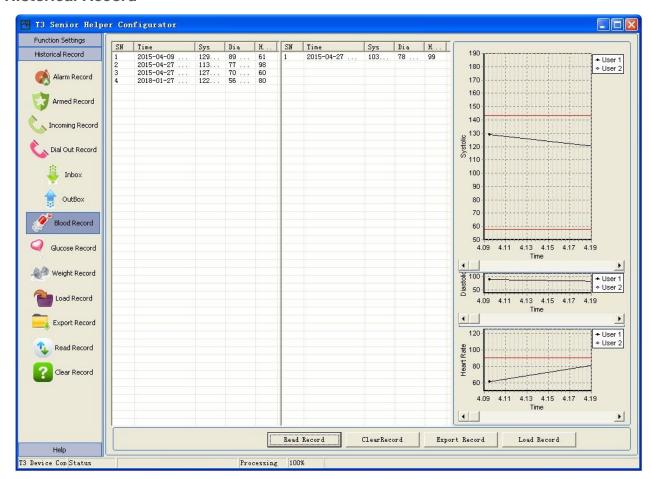


- ✓ Alarm record: Read the alarm records from T3 to the PC software.
- ✓ Arm record: Read the arm records from T3 to the PC software.
- ✓ **Incoming record:** Read the incoming call records from T3 to the PC software.
- ✓ **Dial Out record:** Read the dial out ecords from T3 to the PC software.
- ✓ Inbox: Read the inbox SMS.
- ✓ Outbox: Read the outbox SMS.
- ✓ Dial Out record: Read the dial out ecords from T3 to the PC software.
- ✓ Blood record: Read theBlood presure records from T3 to the PC software.
- ✓ Glucose record: Reserve function.
- ✓ Weight record: Reserve function.
- ✓ **Load record:** Read the historical data profile from PC folder to the software.
- ✓ Export record: Export the historical data to the PC.
- ✓ Read record: Read all of the historical data from T3 to the software.
- Clear record: Click this button will deleta/earse all of the historical data on the T3 unit (Caution to use!)

SMS Command Format Example (Default Parch 1234)	5. Setting & Operation by SMS commands:						
Arm(Away)	Quick operation & Inquiry (1234default password, change it to your new password if modified)						
1234BB	S.N.	Function Description	SMS Command Format	Example (Default Pwd: 1234)			
1234CC	1	Arm(Away)	1234AA	1234AA			
Inquiry current status, GSM Signal, IME 1234EE	2	Disarm	1234BB	1234BB			
	3	Stay	1234CC	1234CC			
	4	Inquiry current status,GSM Signal, IMEI	1234EE	1234EE			
1234E3 10 10 10 10 10 10 10 1	5-1	Inquiry the last alarm record	1234E1	1234E1			
194 Inquiry the last dial out record 1234E4 1234E4 1234E4 1234E4 1234E5 1049	5-2	Inquiry the last arm record	1234E2	1234E2			
1234E5 Inquiry the last SMS of Inbox 1234E6 1234E7 1234E7 1234E7 1234E7 1234E7 1234E8 1234E8 1234E8 1234E8 1234E8 1234E8 1234E9 1234E	5-3	Inquiry the last incoming call record	1234E3	1234E3			
1234E6	5-4	Inquiry the last dial out record	1234E4	1234E4			
1234E7 194 1234E7 1234E7 1234E8 1234E8 1234E8 1234E8 1234E8 1234E8 1234E9 1234	5-5	Inquiry the last SMS of inbox	1234E5	1234E5			
1234E8	5-6	Inquiry the last SMS of outbox	1234E6	1234E6			
Settings 1234E9 1234E9 1234E9 1234FUnew password# 1234PU6666 1234PU6666 1234PU6666 1234T1504251945 (19:45,April 25,2015) 1234T1504251945 (19:45,April 25,2015) 1234T1504251945 (19:45,April 25,2015) 1234A1T00861351000 (The 1st speed number 00661351000) 1234A1T00861351000 (The 1st speed number 00661351000) 1234A	5-7	Inquiry the last blood presure data	1234E7	1234E7			
Settings 5 Setting setting perator's New Password 1234PUnew password# 1234PU6666 7 Setting current date8time 1234Typmmddhhrnm 1234T1504251945 (19.45.April 25.2015) Fast dial number 8 Setting fast dial number 1234Aserial numberTphone number 00861351000 (The 1st speed number 00861351000) 9 Inquiry fast dial number 1234A 123	5-8	Inquiry the last Glucose data (reserve)	1234E8	1234E8			
Setting current date&time 1234PUnew password# 1234PUnew password# 1234PUnew password# 1234PUnew password# 1234PUnew password# 1234T1504251945 (19-45.April 25,2015) Fast dial number Setting fast dial number 1234Aserial numberTphone number 00861351000 (The 1st speed number 00861351000) Inquiry fast dial number 1234A 1234A 1234A Adminstration settings(default password: 000000) Alarm Clocks 000000C serial number HHMM type(1:get up/sleep/2: medcine;3:others) repeat time interval time purpose, make alarm value every 3 seands.) Inquiry alarm clock setting 000000C 133 Delete alarm clock setting 000000C 1434 000000C 244A 1434 00000C 244A	5-9	Inquiry the last Weight data (reserve)	1234E9	1234E9			
Fast dial number Fast dial number Setting fast dial number 1234Aserial number/Tphone number 1234Aserial number 1234A 1234A 1234A	Settings						
Fast dial number	6	Setup operator's New Password	1234PUnew password#	1234PU6666			
Setting fast dial number 1234Aserial numberTphone number 00861351000 (The 1st speed number 00861351000) Inquiry fast dial number 1234A 1234A 1234A Inquiry fast dial number 1234AA 1234AA 1234A Administration settings(default password: 000000) Alarm Clocks Inquiry alarm clock	7	Setting current date&time	1234Tyymmddhhmm	1234T1504251945 (19:45,April 25,2015)			
1234Aserial number		Fast dial number					
Inquiry fast dial number 1234A		Setting fast dial number	1234Aserial numberTphone number	1234A1T00861351000 (The 1 st speed number			
Adminstration settings (default password: 000000) Alarm Clocks 000000C serial number HHMM type(1:get up/sleep;2: medcine;3:others)repeat time interval time purpose,make alarm twice every 3 seonds.) Inquiry alarm clock setting Delete alarm Clock 000000C Alarm Numbers Setting Alarm Numbers 12 Inquiry Alarm Numbers 13 Inquiry Alarm Numbers 14 Setting Alarm Numbers Delete Alarm Number 000000B Delete Alarm Number 00000B Delete Alarm Number	8			00861351000)			
Adminstration settings (default password: 000000) Alarm Clocks 000000C serial number HHMM type(1:get up/sleep;2: medcine;3:others) repeat time interval time purpose, make alarm twice every 3 seonds.) Inquiry alarm clock setting 000000C Alarm Numbers Setting Alarm Numbers 000000B serial number T phone number number: 000000B Inquiry Alarm Numbers 000000B serial number: 000000B Delete Alarm Numbers 000000B serial number: 000000B Delete Alarm Number: 000000B Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) Setting new administration password 000000GON Auto disconnect GPRS (make GPRS online) 000000GPF Setting Server IP and port 000000IP IP address P port number 000000IP II3.92.179.97P4006	9	Inquiry fast dial number	1234A	1234A			
Alarm Clocks Setting alarm clock	10	Delete fast dial number	1234Aserial number	1234A1			
Setting alarm clock up/sleep;2: medcine;3:others)repeat time interval time upwpose,make alarm twice every 3 seonds.) Inquiry alarm clock setting 000000C Delete alarm clock 000000Cserial number 00000C2 Alarm Numbers Setting Alarm Numbers 000000B serial number T phone number number: 000000B Delete Alarm Numbers 000000B 00000B Delete Alarm Numbers 000000B 00000B Delete Alarm Number 000000B 00000B Administration Commands (For engineering only) Setting new administration password 000000GON Auto disconnect GPRS (make GPRS online) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP 113.92.179.97P4006	Adminstration settings(default password: 000000)						
Setting alarm clock up/sleep;2: medcine;3:others)repeat time (The 2 nd alarm clock at 09:30am,for medcine) interval time (Inquiry alarm clock setting) 000000C Inquiry alarm clock setting 000000C Alarm Numbers Setting Alarm Numbers 000000B serial number T phone number (Inquiry Alarm Numbers) 000000B (Inquiry Alarm Numbers) 000000B (Inquiry Alarm Numbers) 000000B (Inquiry Alarm Number) 000000B (Inq		Alarm Clocks					
interval time purpose,make alarm twice every 3 seonds.) Inquiry alarm clock setting 000000C Delete alarm clock 000000Cserial number 00000C2 Alarm Numbers Setting Alarm Numbers 000000B serial number T phone number number: 008613510150873 (The 8th alar number: 008613510150873) Inquiry Alarm Numbers 000000B Delete Alarm Number 000000B 000000B Delete Alarm Number 000000B serial number 000000B2 Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) Setting new administration password 000000PAnew password 000000PA952700 Setting new administration password 000000GON Auto disconnect GPRS if no data Tx/Rx in 10mir Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006			000000C serial number HHMM type(1:get	000000C20930223			
Inquiry alarm clock setting	11	Setting alarm clock	up/sleep;2: medcine;3:others)repeat time	(The 2 nd alarm clock at 09:30am,for medcine			
Delete alarm clock Alarm Numbers Setting Alarm Numbers Unquiry Alarm Numbers Delete Alarm Number Delete Alarm Number Modify alarm zone name Modify alarm zone's name Modify alarm zone's name Modify alarm suministration Commands (For engineering only) Setting new administration password Connect GPRS (make GPRS online) Disconnect GPRS (make GPRS offline) Setting Server IP and port Disconnect GPRS (make GPRS offline) Disconnect GPRS (make GPRS offline) Disconnect GPRS (make GPRS offline) O000000IP IP address P port number Disconnect GPRS (make GPRS offline) O00000IP IP address P port number Disconnect GPRS (make GPRS offline) O00000IP IP address P port number Disconnect GPRS (make GPRS offline) O00000IP IP address P port number Disconnect GPRS (make GPRS offline) O00000IP IP address P port number O00000IP IP address P port number			interval time	purpose,make alarm twice every 3 seonds.)			
Alarm Numbers Setting Alarm Numbers 000000B serial number T phone number number: 008613510150873 (The 8 th alarm number: 008613510150873) Inquiry Alarm Numbers 000000B Delete Alarm Number 000000B serial number 000000B Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) Setting new adminstration password 000000PAnew password 000000PA952700 Be Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 0000000IP113.92.179.97P4006	12	Inquiry alarm clock setting	000000C				
Setting Alarm Numbers 000000B serial number T phone number 000000B8T008613510150873 (The 8 th alar number: 008613510150873) 15 Inquiry Alarm Numbers 000000B Delete Alarm Number 000000B serial number 000000B2 Wireless alarm zone name 16 Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) 17 Setting new adminstration password 000000PAnew password 000000PA952700 18 Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10mir 19 Disconnect GPRS(make GPRS offline) 000000GOFF 20 Setting Server IP and port 000000IP IP address P port number 000000IP IT3.92.179.97P4006	13	Delete alarm clock	000000Cserial number	00000C2			
Setting Alarm Numbers 000000B serial number T phone number 000000B 1.5 Inquiry Alarm Numbers 000000B Delete Alarm Number 000000B serial number 000000B Delete Alarm Number 000000B Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) 1.7 Setting new adminstration password 000000PAnew password 000000PA952700 1.8 Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min 1.9 Disconnect GPRS(make GPRS offline) 000000GOFF 20 Setting Server IP and port 000000IP IP address P port number 000000IP 113.92.179.97P4006		Alarm Numbers					
Inquiry Alarm Numbers Delete Alarm Number Delete Alarm Number O00000B serial number O00000B2 Wireless alarm zone name Modify alarm zone's name O00000M Zone number Zone name O00000M3door alarm! Administration Commands (For engineering only) Setting new adminstration password O0000PAnew password O0000PA952700 Beginner GPRS (make GPRS online) O0000GON Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) O0000GOFF Setting Server IP and port O00000IP IP address P port number O00000IP113.92.179.97P4006	14	Setting Alarm Numbers	000000B serial number T phone number	000000B8T008613510150873 (The 8 th alarn			
Delete Alarm Number 000000B serial number 000000B2 Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) Setting new adminstration password 000000PAnew password 000000PA952700 Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min 000000GOFF Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006			, , , , , , , , , , , , , , , , , , ,	number: 008613510150873)			
Wireless alarm zone name Modify alarm zone's name 000000M Zone number Zone name 000000M3door alarm! Administration Commands (For engineering only) Setting new administration password 000000PAnew password 000000PA952700 Results Connect GPRS(make GPRS online) Disconnect GPRS(make GPRS offline) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) 000000GOFF Consider GPRS (make GPRS offline)	15	Inquiry Alarm Numbers	000000B	000000B			
Modify alarm zone's name O00000M Zone number Zone name O00000M3door alarm! Administration Commands (For engineering only) Setting new administration password O00000PAnew password O00000PA952700 Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) O00000GOFF Setting Server IP and port O00000IP IP address P port number O00000IP113.92.179.97P4006			000000B serial number	000000B2			
Administration Commands (For engineering only) Setting new adminstration password 000000PAnew password 000000PA952700 Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006		Wireless alarm zone name					
Setting new adminstration password 000000PAnew password 000000PA952700 Connect GPRS(make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10min Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006	16	Modify alarm zone's name	000000M Zone number Zone name	000000M3door alarm!			
Connect GPRS (make GPRS online) 000000GON Auto disconnect GPRS if no data Tx/Rx in 10mir Disconnect GPRS (make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006		Administration Commands (For engineering only)				
Disconnect GPRS(make GPRS offline) 000000GOFF Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006	17	Setting new adminstration password	00000PAnew password	000000PA952700			
Setting Server IP and port 000000IP IP address P port number 000000IP113.92.179.97P4006	18	Connect GPRS(make GPRS online)	00000GON	Auto disconnect GPRS if no data Tx/Rx in 10mins			
	19	Disconnect GPRS(make GPRS offline)	000000GOFF				
Setting GPRS upload time (daily report) 000000D hh mm 000000D1730	20	Setting Server IP and port	000000IP IP address P port number	000000IP113.92.179.97P4006			
	21	Setting GPRS upload time (daily report)	000000D hh mm	000000D1730			

000000D

Disable GPRS upload (daily report)

6.Add wireless sensors

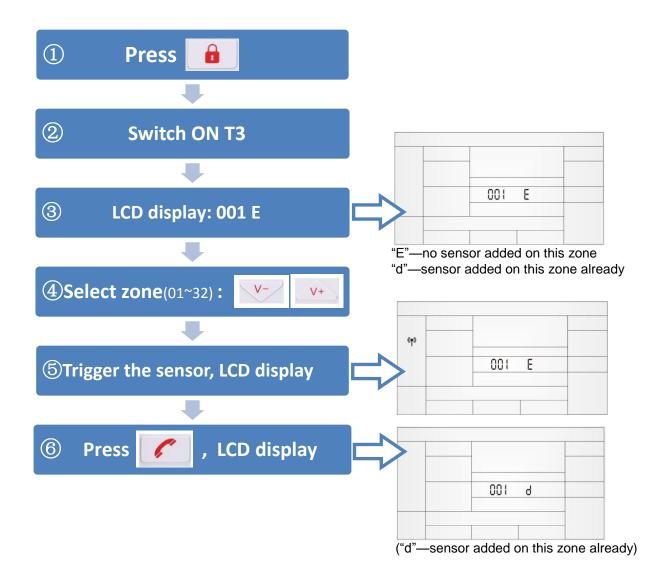

Delete wireless sensor: After step 4,press more than 2 seconds.

Exit: press , or exit "add wireless sensors" mode automatically if no action more than 2 mins.

7. How T3 works for elderly?

Push-to-Talk





Stick a easy recognized photo on the buttons, just push these buttons then make a phone call with families or ask for help.

SOS alarm when under emergency situation





Push the SOS button for 3 seconds,T3 will send SOS alert SMS text and make a phone call to receivers for asking emergency help.

Other Wireless SOS button or fall detectors optional.

Answering phone call

Press



for answer the call in, press



for end calls.

Heath care (Blood pressure measurement)

Press and wear the sphygmomanometer to measure the blood pressure and heart rate, records will save on the T3's memory for download by PC software or upload to CMS or other could server system, relatives can get alert SMS text when the measurement value higher/lower than pre-set threshold too.

24hours safety guard

When smoke,gas,CO or water flood detected,T3 will make audible alarm,send alert SMS text and call to the receivers/CMS.

24hours house security alarm

On status,T3 make audible alarm and send alert SMS text & call when intrusion sensor triggered.

Alarm clocks

T3 will make audible alarm and flash on LCD according to the timing setting. Alarm audio can be stoped by end button .

Audio volume can be adjust by v+ and V- . (the same volume for phone call, alarm too).

Daily life care

T3 will send alert SMS text if no activities detected by PIR/Door sensors during the watchdog time period.

For example, install one door contact sensor on the main gate, setting time period at 16:00~18:00pm, if the main gate not opened during that time, T3 can send alert SMS to receivers.

Temperature monitoring

T3 send alert SMS text to receivers when temperature higher/lower than threshold more than 10mins.

Other care

T3 will send alert SMS text when AC/DC power lost and recovery immediately, back up battery low power, wireless sensor's battery low power (if have).

8. Warranty

- 1) This system is warranted to be free of defects in material and workmanship for one year.
- 2) This warranty does not extend to any defect, malfunction or failure caused by abuse or misuse by the Operating Instructions. In no event shall the manufacturer be liable for any alarm system altered by purchasers.

www.GsmAlarmSystem.com