

This document provides additional assistance with wiring your Extron IP Link enabled product to your device. Different components may require a different wiring scheme than those listed below.

For complete operating instructions, refer to the user's manual for the specific Extron IP Link enabled product or the controlled device manufacturer supplied documentation.

---

---

**Device Specifications:**

Device Type: Audio Processor  
Manufacturer: ClearOne  
Firmware Version: N/A  
Model(s): Converge Pro SR1212A

**Minimum Software and Firmware Requirements:**

IPLink Compiler	IPLink Firmware	GC Version
1.4.0	1.15	3.0.3

**Version History:**

Driver Version	Date	Notes
1	3/30/2010	Initial version.

**Driver Notes:**

Driver must also first be set in the GV webpage with Device ID matching ID set on device for driver to function correctly. Please refer to device manual for Device ID setup.

---

**Control Commands & States:**

<b>Destination Channel</b>	1 – 12	3	
<b>Destination Group</b>	B O F	H P T	J E
<b>Device ID</b>	0 – 7	A – B	
<b>Input Level</b>	-65 to 20 in steps of 1		
<b>Input Select</b>	1 – 12		
<b>Macro</b>	1 – 255		
<b>Mic 1 - 8 (Step)</b>	Up	Down	
<b>Mic 1 - 8 Mute</b>	On	Off	
<b>Mute Input</b>	On	Off	
<b>Mute Output 1 - 12</b>	On	Off	
<b>Mute Process A - H</b>	On	Off	
<b>Output 1 – 12 Level</b>	-65 to 20 in steps of 1		
<b>Preset</b>	1 – 32		
<b>Process A - H Level</b>	-65 to 20 in steps of 1		
<b>Source Channel</b>	1 – 12		
<b>Source Group</b>	R P F	I E R	M L
<b>Take</b>	On <sup>1</sup> Non-Gated <sup>2</sup>	Off Gated <sup>2</sup>	Toggle <sup>1</sup> Pre-AEC <sup>2</sup>

<sup>1</sup> Not valid for Mic sources

<sup>2</sup> Only valid for Mic sources.

**IP Link<sup>™</sup> Device Interface  
Ethernet Communication Sheet****Status Available:**

<b>Connection Status</b>	Connected	Disconnected
<b>Input Level*</b>	-65 to 20 in steps of 1	
<b>Mic 1 - 8 Mute</b>	On	Off
<b>Mute Output 1 - 12</b>	On	Off
<b>Mute Process A - H</b>	On	Off
<b>Output 1 - 12 Level</b>	-65 to 20 in steps of 1	
<b>Process A - H Level</b>	-65 to 20 in steps of 1	

\*Input Level and Mute Input are dependent on Input Select setting.

Instructions for using Matrix portion:

To tie an Input to an Output:

1. Select a Source Channel from (1-12).
2. Select a Source Group (I,M,P,E,L,F,R)
3. Select a Destination Channel (1-12).
4. Select a Destination Group (H,J,O,P,E,F,T,B)
5. Select one of the Take commands (On, Off, Toggle, Non-gated, Gated, Pre-AEC)

If using with a TLP product it is necessary to map the commands mentioned above sequentially to a button.

For further information consult the user's manual under Matrix routing.

**Network communication:**

When configuring the Ethernet driver, be sure device settings match that of the GC configuration.

<b>Port Type:</b>	Ethernet
<b>Logon Credentials Supported:</b>	Yes
<b>Default User Name:</b>	clearone
<b>Default Password:</b>	converge
<b>Default Port:</b>	23
<b>Multi-Connection Capable:</b>	Yes
<b>Port Changeable:</b>	No

---

---

**Ethernet Driver Configuration Description:**

Please refer to the user manual to change IP Settings and the username and password on the Converge Pro SR1212A.

**Notes for the Device:**