Display User's Manual

Image Systems FP1900MBNC Multi-Resolution Analog Display



Model : GEV955IMI



Conformity according to the Council Directive 93/42/EEC concerning Medical Devices.

Use this product after carefully reading this Manual and understanding the contents.



Store this manual with care, as close as possible, so that you can read whenever necessary.

Contents

Contents	
1. Safety Precautions	1
2. Equipment Symbols	4
3. Cleaning Instructions	6
4. Disposal of the Unit	8
5. Connection Method	9
6. Adjustment Method	13
7. Rotating the LCD Panel	14
8. Compatible Signals	32
9. Specifications	33
10. Accessories	34
11. Power Management	35
12. Contact Information	36

The revision letter changes with related comments each time the document is updated.

Revision	Comment	Date
A	Initial release of this document	Jan 09, 2012
В	Add power management	Jan 19, 2012
С	To increase the key lock function	Jun 18, 2012

I CAUTION

Symbol Description

Caution!-This symbol alerts you to important operating considerations or a potential operating condition that could damage equipment. Refer to user's manual or operation's manual for precautionary instructions.

II CLASSIFICATION



Class I :

No applied parts

Protection against harmful ingress of water is IPX0

Not suitable for use in the presence of flammable anesthetic's or oxygen.

Mode of operation: Continuous.

III External Equipment

External equipment intended for connection to signal input / output or other connectors, shall comply with UL/EN 60601-1 for medical electrical equipment. In addition, all such combination system shall comply with the standard IEC 60601-1-1, Safety requirements for medical electrical systems. Equipment not complying with UL/EN/IEC 60601-1 shall be kept outside the patient environment, as defined on the systems standard.

IV Intended Use

The equipment is intended to be used as a component of a medical patient monitoring system.

V FCC FCC Information

FCC(U. S. Federal Communications Commission)

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause unacceptable interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult your dealer or an experienced radio/TV technician for help.

FCC Warning:

To assure continued FCC compliance, the user must use a grounded power supply cord and the provided shielded video interface cable with bonded ferrite cores. Also, any unauthorized changes or modifications to this monitor would void the user's authority to operate this device.

VI Precautions

• Make sure to carefully read the Operating Manual prior to using the monitor in order to properly use the monitor.

• Note that, excluding those cases where a responsibility for legal compensation is recognized, the manufacturer shall bear absolutely no responsibility for damage to this product by a customer or a third party that results from the ignoring of contents entered in this Operating Manual and mistaken use.

• Follow the instructions below for safety use of the LCD Monitor.

- To avoid electric shock, do not attempt to remove any cover or touch the inside of the monitor. Only a qualified service technician should open the monitor case.

- Do not insert metal objects or spill liquid into the LCD monitor through cabinet slots.

They may cause accident fire, electric shock or failure. If a foreign object inserted or water penetrated, unplug the AC cable and have the monitor serviced.

- Do not cover or block the vent holes in the case.

- Disconnect the power plug from the AC outlet if you will not use it for an indefinite period of time.

- Do not touch the screen directly with your fingers. You may damage the screen, and oil from your skin is difficult to move.

- Do not apply pressure to the screen. The LCD is very delicate.

• If your LCD monitor uses an AC/DC Adapter: Only use the Adapter, which accompanied with this device. Use of another AC/DC Adapter may cause a malfunction or danger.

• If your LCD monitor does not operate normally-in particular, if there are any unusual sounds or smells coming from it-**unplug the AC cable** immediately and contact the manufacturer, or authorized service center.

VII Environment

- Place the monitor on a flat and leveled surface.
- Place the monitor in a well-ventilated place.
- Keep the monitor away from:

overly hot, cold or humid places, places directly under sunlight, dusty surroundings, equipment that generate strong magnetic fields.

Equipment Symbols

Electrical and Electronic Equipment Symbols

In addition to the equipment symbols described in your user's manual, the following symbols may be appear on the monitor.

Alternating current.





Equipotentiality. Connect device to a potential equalization conductor.



EC REP European authorized representative.



European Union Declaration of Conformity.



FCC. USA only. Complies with applicable US government (Federal Communications Commission) radio-frequency interference regulations.



Fragile. Handle with care.



Indicates front.



Keep dry. Protect from rain.



Mercury. This product consists of devices that may contain mercury, which must be recycled or disposed of in accordance with local, state, or country laws.



ON. Power connection to the mains.



Recycled materials or may be recycled.



Stacking limit by number.



Standby or power indicator.



This way up.



USB connector port.



This symbol indicates that the waste of electrical and electronic equipment must not be disposed as unsorted municipal waste and must be collected separately. Please contact an authorized representative of the manufacturer for information concerning the decommissioning of your equipment



ATTENTION: Consult accompanying documents.



DANGER - Shock Hazard. Dangerous voltage. To reduce the risk of electric shock, do not remove cover. Refer servicing to qualified service personnel.

Cleaning Instructions

Using a spray applicator, apply any of the approved liquids from the list below and use a soft lint free cloth to clean the screen.

- 1. Water
- 2. Windex Blue (glass surfaces only)
- 3. Mild Soap

Notice:

This monitor has been adjusted specifically for use in the region to which it was originally shipped. If the product is used outside the region, it may not operate in the specifications.

Please wait 20-40 minutes after powering on the monitor before adjusting, as it takes roughly this same amount of time for the optimum performance of the electrical parts.

The screen may have defective pixels. These pixels may appear as slightly light or dark area on the screen. This is due to the characteristics of the panel itself, and not the monitor.

The backlight of the LCD panel has a fixed life span. When the screen becomes dark or begins to flicker, please contact your dealer.

Do not press on the panel or edge of the frame strongly, as this may result in the display malfunction, such as the interference patterns, etc. If pressure is continually applied to the LCD panel, it may deteriorate or damage your LCD panel.

Do not scratch or press on the panel with any sharp objects, such as a pencil or pen as this may result in damage on the panel. Do not attempt to brush with tissues as this may scratch the LCD panel.

When you bring the monitor from cold temperature room into a high temperature room or when your room temperature goes up quickly from low to high, dew condensation may occur inside and outside the monitor. In this case, do not turn on the monitor. Please wait till dew condensation disappears. Otherwise it may cause some damages to the monitor.

Prolonged operation of an LCD with the same content on the same screen area may result in a form of image retention. You can avoid or significantly reduce the occurrence of this phenomenon by using a screen saver. You can activate a screen saver in the "Display Properties" window of your workstation. Canvys recommends setting screen saver activation after 5 minutes of non-usage. In case you are working with the same image or an application with static image elements for several hours continuously (so that the screensaver is not activated); change the image content regularly to avoid image retention of the static elements.

Image retention is a phenomenon inherent to TFT LCD displays technology itself, and as such, the occurrence of this "ghosting" effect is considered normal operation by the LCD glass manufacturer. As a result, Canvys is not responsible for this damage and does not warrant any displays against the occurrence of Image Sticking. We strongly advise that you follow the operating recommendations listed above.

Disposal of the Unit

•Do not dispose of this product with general wastes.

•Follow your local regulations or rules upon dispose of this product.

•Hg WARNING

This product consists of devices that may contain mercury, which must be recycled or disposed of in accordance with local, state, or country laws.

(Within this product, the backlight lamps in the display contain mercury.)

Connection Method

Confirm that your computer is off.

Then, confirm that the main switch of the LCD monitor on the back is off.

Connect the attached power cord into the inlet.

Then, connect the plug into the AC inlet on the back of the LCD monitor.



AC Main Power supply Switch

The AC main power supply switch interrupts the AC input to the display. Placing the switch in the ON (I) position allows display to power-up, if the AC input is connected.

Placing the switch in the OFF (O) position shall cause the display to power down.





BNC Connector_CVBS

Composite signal input. Connect BNC cable to composite video output device.

BNC Connector_HD/CS

For two-line (Sync On Video) input, connect to CS (composite sync signal). For three-line (separate sync signal) input, `connect to HD (horizontal sync signal).

BNC Connector_VD

For three-line (separate sync signal) input, connect to VD (vertical sync signal).

BNC Connector_Video OUT

For one-line (Sync On Video) output when Video IN input (Sync On Video) signal.

BNC Connector_Video IN

For one-line (Sync On Video) input, BNC connector is used as Sync On Video. For two-line (VIDEO + composite sync signal) and three-line inputs, used as Video.

S-Video input connector

S-Video signal input. The attached S-Video signal cable is connected to this and an S-Video output video device.

Connect Signal Cable(VGA)

Attach the VGA signal cable end, which has the ferrite core furthest away from the plug, to the monitor and attach the other end to the graphics card adapter on your computer. Be cautious in inserting the cable properly into both connectors. If the cable does not seem to fit it may be facing the wrong direction. Turn the cable over and try to match the shape of the connector with that of the graphics adapter.

Anti-Theft security device slot

This product has loaded an antitheft security device slot compliant with MicroSaver[®] Security System of Kensington[®] on the back of the monochrome LCD display.

MicroSaver[®] security System can be purchased at PC supply shops.



*Kensington[®] is a registered brand of Kensington

Adjustment Method

Names and Functions of Each Part



Control Dial

The Control Dial is a multi-functional device located behind the LED Indicator on the right side of the front bezel. It has three movements-rotate upward, rotate downward and press inward as a button.

1.Power On/Off

Press the Control Dial to power the unit on from the off stage (the LED is off). To turn the power off, press the Control Dial and hold for at least 3 second until the LED turns off.

2.OSD Control

While the monitor is on (green LED and image on the screen), Pressing on the Control Dial activates the OSD. While the OSD menu is active, use the three way movements of the Control Dial to adjust the monitor.

Rotate Downward: Move Up/Right, Increase, Larger, More Rotate Upward: Move Down/Left, Decrease, Smaller, Less Button Press: Execute, Do, Save

LED Indicator

This LED indicator turns green when the power is switched ON and the power cord is properly attached. It turns amber when the monitor goes into a power saving mode (Active Off).

Rotating the LCD Panel

When setting the color LCD display to vertical display (portrait orientation), lift the LCD panel to the top of the tilt stand as shown in the figure below and rotate it by 90 degrees.

Procedure

- (1) Tilt the LCD panel upward.(Perform this procedure before sliding the panel upward.)
- (2) Lift the LCD panel to the top (The tilt stand will slide about 50mm).
- (3) Rotate the LCD panel by 90 degrees.
- (4) Replace the LCD panel to the bottom while in the vertical position (portrait orientation).



Display in portrait orientation

Pivot,,,

Pivot® software or graphics card that enables portrait orientation is necessary.

* Pivot[®] is a registered brand of Portrait Displays of the United States.

Mounting

The Monitor can be mounted onto the wall or stand.

If you intend to mount the monitor on the wall, we strongly recommend that you use wall mount kits with attached M4*12mm screws and can load more than monitor weight, that you ensure it is securely and safely installed.

CAUTION:

When mounting the monitor, take care to tighten the retention screws or bolts until fully secure, but do not over tighten. Over tightening the retention screws or bolts may cause them to become stripped, rendering them useless.

Wall Mounting Installation

The Monitor has Video Electronics Standards Association (VESA) standard mounting holes tapped into the rear panel. The standard holes are M4 set at 100 mm x 100 mm apart.



To mount the Monitor onto the wall or stand, please follow the steps below.

Step 1: Select the location on the wall for the wall-mounting bracket.

Step 2: Carefully mark the locations of the four screw holes in the bracket on the wall

Step 3: Drill four pilot holes at the marked locations on the wall for the bracket retention screws.

Step 4: Align the wall-mounting bracket screw holes with the pilot holes.

Step 5: Secure the mounting-bracket to the wall by inserting the retention screws into the four pilot holes and tightening them.

Step 6: Insert the four monitor mounting screws provided in the wall mounting kit into the four screw holes on the real panel of the LCD Monitor and tighten until the screw shank is secured against the rear panel.

Step 7: Align the mounting screws on the monitor rear panel with the mounting holes on the bracket.

Step 8: Carefully insert the screws through the holes and gently pull the monitor downwards until the monitor rests securely in the slotted holes. Ensure that all four of the mounting screws fit snuggly into their respective slotted holes.

Step 9: Secure the LCD Monitor by fastening the retention screw of the wall-mounting bracket. **Step 10:** Secure the LCD Monitor by fastening the retention screw of the wall-mounting bracket.

Charts of OSD Adjustment Functions

The charts displays the function tree and brief explanations of the functions. Monochrome, LCD, and other adjustments have submenus under each tree.

• OSD display

Main menu display

• Exit Close the OSD screen

Input Source Settings

Exit	Return to Main Menu
Analog VGA······	Select Analog video input for Main channel
S-video	Select S-video video input for Main channel
CVBS······	Select Composite video input for Main channel
Analog BNC······	Select G, H-sync V-sync or SOG video input for Main channel

Image Settings

ExitReturn to Main Menu
Auto Setup Automatic screen size / position / brightness / contrast adjustment
Black Level Black Level Black Level offset for the Main channel by the range from 0 to 100
Contrast Adjust the contrast for the display image by the range from 0 to 100
Saturation
Hue······ Adjust the hue for the Main channel by the range from 0 to 100
Sharpness Adjust the sharpness for the Main channel by the range from 0 to 24
- Display
Exit Exit Exit Return to Exit of Image Setting page
H. Position Adjust horizontal screen position for Main channel
V. Position Adjust vertical screen position for Main channel
Clock Adjust the clock for the video signals for Main channel
Phase Phase Adjust the phase for the video signals for Main channel
──Video Setup [*] 2
ExitReturn to Exit of Image Setting page
Main MADI Mode Motion adaptive De-interlacing that support Off / Normal / Adaptive three modes
Noise Reduction
Exit Return to Exit of Video Setup of Image Setting page
Dynamic NR mode Dynamic NR mode that support Off / High / Medium / Low / Adaptive five modes
MPEG NR mode···· MPEG NR mode that support On & Off two modes
Film Mode······ Film Mode that support 3:2 & 3:2-2:2 & Off & 2:2 four modes
DCDi

• Color Mode S

Color Mode Settings	
Exit Exit Return to Main Menu	
Color Temp.	
Exit Exit Return to Exit of Color Mode Settings page	
Red Gain User adjusts the gain of Red by the range from 0 to 100	
Green Gain User adjusts the gain of Green by the range from 0 to 100	
Blue Gain User adjusts the gain of Blue by the range from 0 to 100	
Gamma	
Exit Exit Return to Exit of Color Mode Settings page	
Gamma 1.8······· Set Gamma curve to curve 1.8	
Gamma 2.0 [™] 5······ Set Gamma curve to curve 2.0	
Gamma 2.2······· Set Gamma curve to curve 2.2	
Gamma 2.4······· Set Gamma curve to curve 2.4	
Calibration Calibrate monitor setting by using external device	
DICOM Set Gamma curve to DICOM curve	
- Managamant Sattinga	
Management Settings Evit Return to Main Menu	
Exit-	
Scaling	n 6
modes	
Zoom	de)
Her Zoom Adjust the H size for Main channel display (Must under Full scaling mode	.) :)
Ver Zoom Adjust the V size for Main channel display (Must under Full scaling mode)
Recall Initialize to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and delete the specify User setting to the factory settings and the specify User setting to the factory settings and the specify User setting to the factory settings and the specify User setting to the specify User setting	, /ou
saved	00.
Auto Adjustment	
New Timing Search	
Figure Return to Exit of Management Settings page	

Aspect *4	Adjust the displ	av ratio of the vi	deo signals for Main	channel
- Ларссі	rajust the displ	ay radio or the vi	aco signais ior main	onumen

- Clock Main Clock for the video signals for Main channel
- H.Position Adjust horizontal screen position for Main channel
- V.postion 4..... Adjust vertical screen position for Main channel
- H size 4..... Adjust the H size for Main channel display
- V size 4..... Adjust the V size for Main channel display
- Save Timing....... There are Save & Clear for New Timing Setting

Timing Select Timing



*Brightness------ Adjust the backlight of the full screen by the range from 0 to 100 *Notice: Brightness didn't exist at the OSD three, adjust it by rotate up or down by wheel key

- ^{*1} Only VGA and BNC source
- *2 Only support for S-video &CVBS
- ^{*3} This function only support on Analog VGA and BNC source
- ^{*4} This function active after press Execute
- *5 For Recall (Factory defaults)

Charts of OSD Adjustment Functions

The charts displays the function tree and brief explanations of the functions. Color, LCD, and other adjustments have submenus under each tree.

EXIT 1024 x 768 H: 48.3 KHz V: 59.9 Hz Image: System Main : Analog VGA Calibration Operation Hours : 0

Exit

Close the Main Menu.

In addition, this page will show below messages:

(1)Information for input timing of Main channel .

(2)Timing table provide by system.

(3)Indicate which source display for Main channel.

(4)Indicate which source display for Sub channel.

(5)Record how long time display for this monitor already.

Input Source Setting

You can select source for Main channel from Analog VGA , S-video , CVBS , Analog BNC .

EXIT	Input Source Settings
	Input Source Settings Exit Analog VGA S-Video CVBS Analog BNC

* Brightness

Selecting this control allows you to make adjustment to the luminance level of the display screen by the range from 0 to 100.

Press up/down by control dial to adjust the brightness any time while the OSD is off If the image sticking is on, must turn it off then just can let brightness work.

Image Settings

Adjust values of below items for Main channel. Beside Video Setup that only support on S-video & CVBS.



Exit

Return to Main Menu.

VideoSetup

Auto Setup

When you press "Auto Setup" will show "Auto Adjusting" on the screen that do automatically adjust the size, position, brightness, contrast and the like of the screen. When first using this color display or input new timing will perform this adjustment. When Auto Adjusting disappears from the screen, it means it has finished the Auto Setup function.

Þ

Þ

Auto Adjusting

Black Level

Adjust the black level offset for the Main channel by the range from 0 to 100.

Black Level	
	50

Contrast

Adjust the contrast for the Main channel by the range from 0 to 100.



Saturation

Adjust the saturation for the Main channel by the range from 0 to 100.

Saturation		
		50

Hue

Adjust the hue for the Main channel by the range from 0 to 100.



Sharpness

Adjust the sharpness for the Main channel by the range from 0 to 24.



Display

Adjust the Horizontal & Vertical position & clock & phase for Main channel.

EXIT	Image Settings	
ണ		
	H.Position	50
VIDEO	V.Position	50
	Clock	56
R	Phase	42

• Exit

Return to Exit of Image Setting page.

H.Position

Adjust horizontal screen position for Main channel by the range from 0 to 100.

• V.Position

Adjust vertical screen position for Main channel by the range from 0 to 100.

Clock

Adjust the frequency sampling rate of horizontal pixels for Main channel, to equal the video source's value, Thus minimizing artifacts of shimmering vertical lines.

* Notice: Only support on Analog VGA source.

Phase

Adjust ADC sampling clock phase for Main channel, so that the screen image appear crisp and focused.

[•] Notice: Only support on Analog VGA source.

VideoSetup

Adjust below items relate to video setting for Main channel.

* Noti	ce: Only supp	port for S	S-video &	
EXIT	Image Settings			
	Exit			
	Main MADI Mode	Off	\$	
VIDEO	Noise Reduction		•	
	Film Mode	Off	\$	
	DCDi	Off	\$	

• Exit

Return to Exit of Image Setting page.

Main MADI Mode

Motion adaptive De-interlacing that support Off & Normal & Adaptive three modes.

Noise Reduction

This function provide Dynamic NR mode and MPEG NR mode.



Exit

Return to Exit of VideoSetup of Image Setting page.

Dynamic NR mode

Dynamic NR mode that support Off & High & Medium& Low& Adaptive five modes.

MPEG NR mode

MPEG NR mode that support On & Off two modes.

• Film Mode

Film Mode that support 3:2 & 3:2-2:2 & Off & 2:2 four modes.

• DCDi

DCDi support Off & On two modes .

Color Mode Settings

Selecting this control allows you select color mode or adjust six axis for RGBYCM or RGB gain.

EXIT	Color Mode Settings		
ത്ത	Exit		
	Color Temp.	User	•
VIDEO	Gamma	1.8	•
R			

Exit

Return to Main Menu.

Color Temp.

Selecting this control allows you to adjust the Red gain , Green gain and Blue gain individually to match personal preference.



• Exit

Return to Exit of Color Mode Settings page.

Red Gain

You can adjusts the gain of Red by the range from 0 to 100.

Green Gain

You can adjusts the gain of Green by the range from 0 to 100.

Blue Gain

You can adjusts the gain of Blue by the range from 0 to 100.

Gamma

Selecting this control allows you to choose which gamma curve that you want.



• Exit

Return to Exit of Color Mode Settings page.

• Gamma 1.8

Set Gamma curve to curve 1.8

• Gamma 2.0

Set Gamma curve to curve 2.0

• Gamma 2.2

Set Gamma curve to curve 2.2

• Gamma 2.4

Set Gamma curve to curve 2.4

Calibration

Set Gamma curve to calibration mode.

DICOM

Set Gamma curve for medical standards.

Management Settings

Selecting this control allows you to adjust below items settings for display image or OSD setting.



Exit

Return to Main Menu.

Scaling

Support Full & Native Mode & Best Fit & Fit Width & Fit Height & Over Screen 6 modes.



• Exit

Return to Exit of Management Settings page.

• Zoom

Adjust the full size for display image by the range from 0 to 100.

* Notice: Support Zoom must under Full scaling mode for each source.

• Hor.Zoom

Adjust the H size for Main channel display.

* Notice: Support Her. Zoom must under Full scaling mode for each source

Ver.Zoom

Adjust the V size for Main channel display.

* Notice: Support Ver. Zoom must under Full scaling mode for each source.

Recall

Select this function to recall all OSD adjustments to the factory default settings and delete the specify User setting you used.

Ex: If you load User1 from Preset Save page, the system will clear User 1 after you press "recall" when recall is clicked which OSD items are factory reset and to what value.

Auto Adjustment

Select this function to on or off "Auto Adjustment" Function, if you select on, when new timing input will execute Auto Adjustment function, if you select off, when new timing input will not execute Auto Adjustment function.

New Timing Search

This function will auto calculate image according to the input timing data if it wasn't in the preset timing table and as far as possible to display the image that close to the input new timing.

Display a dot on-dot off test pattern or full screen test pattern and press "Execute" to get certain display image.

If new timing search is not still available or does not give satisfactory results, proceed as follows:

1.Entry into "Management Settings" page to adjust clock/H.position.

2.Adjust the image width fits the LCD panel width.

3. Then, press the "Execute", use this function to search new timing again.

4.Save the several timings which have been fine tune successfully. (Refer to the details on page 17 "Save Timing" section)

EXIT	Management Se	ettings	
D	Exit		
	Execute	No	¢
VIDEO	Aspect	1:1	•
	Colck		1331
	H.Position		50
	V.Position		50
	H Size		50
	V Size		50

Return to Exit of Management Settings page.

Execute

Execute New Timing Search that wasn't in the preset timing table.

Aspect

Adjust the display ratio of the video signals for Main channel. (active after press Execute; default was disable this function)

Clock

Adjust the clock for the video signals for Main channel. (active after press Execute; default was disable this function)

H.Position

Adjust horizontal screen position for Main channel. (active after press Execute; default was disable this function)

V.Position

Adjust vertical screen position for Main channel. (active after press Execute; default was disable this function)

Save Timing

There are Save & Clear for New Timing Setting.

If the user makes any additional adjustment, the video signal (with its adjustments) can be stored as user mode.

The next time this video signal is connected and selected, the display recognizes it as one of the user modes and reproduces it with the corresponding adjustments. The signal is recognized by its timing and the type of video input it is connected to. This means a certain video signal connected to the VGA or BNC can be stored as two different user modes.

The display memory can contain maximum 16 different users modes. When the memory is full, user can use "clear timing" to clear some of the 16 modes when a new video signal is adjusted. You can save the new timing after you press Execute, totally can save sixteen timings.

1. Choose save and entry into "Save timing" page.

EXIT	Save Timir	ıg	
	O Exit		
	0	0	
VIDEO	0	0	
	0	0	
	0	0	
	0	0	
	0	0	
	0	0	
	0	0	

2. Move to blank place then press enter you will see below photo and select "Yes" to enter.



3. You will see the new timing have stored in the system and show on the "Save timing" page.

EXIT	Save Tim	ing
D	O Exit	
	O VRes:	768 @ 60Hz O
VIDEO	0	0
	0	0
	0	0
	0	0
	0	0
	0	0
	0	0

You also can clear the new timing after you save.

1. Choose clear and entry into the "Clear timing" page.

EXIT	Clear Tir	ning	
D	O Exit		
	O VRes:	768 @ 60Hz 〇	
VIDEO	0	0	
	0	0	
	0	0	
	0	0	
	0	0	
	0	0	
	0	0	

2. Move to the timing that you want to clear then press enter you will see below photo and select "Yes" to enter.

Correct clea	ar timing data?
O No	Yes

3. You will see the new timing have cleared from the "Clear timing" page.

EXIT	Clear Tim	ing	
	<mark>⊙</mark> Exit		
	0	0	
VIDEO	0	0	
	0	0	
	0	0	
	0	0	
168	0	0	
	0	0	
	0	0	

Timing Select

Select this function to select timing.

OSD Misc.

Selecting this control allows you to adjust below items settings for OSD.



Exit

Return to Main Menu.

OSD Position

Selecting this control allows you to adjust position for OSD.

EXIT	OSD Misc.	
	Exit	
	OSD H.Position	50
VIDEO	OSD V.Position	50

• Exit

Return to Exit of OSD Misc.

OSD H.Position

Adjust the H position for OSD by the range from 0 to 100.

OSD V.Position

Adjust the V position for OSD by the range from 0 to 100.

Language

Selecting this control allows you to choose below languages that you want to display for OSD.

EXIT	OSD Misc.
D	Exit
VIDEO	English
	Francais
	Deutsch
	Italiano
	Espanol
	日本 語

• Exit

Return to Exit of OSD Misc.

• English

Display OSD in English.

• Francais

Display OSD in French.

Deutsch

Display OSD in German.

Italiano

Display OSD in Italian.

Español

Display OSD in Spanish.

• 日本語

Display OSD in Japanese.

OSD Timer

Adjust OSD display time that support 5 & 10 & 15 & 20 & 25 & 30 OSD will not disappear if set to 5. OSD will disappear after 5 sec if set to 5 (just like that for 10 & 15 & 20 & 25 & 30)

Transparent

Adjust OSD display transparent from 0 to 7 by one step.

Key Lock

OSD adjustment lock function.

Compatible Signals

1.Applicable Signals Timings

%The display may not work correctly with timings other than listed below.

 \bigcirc : Recommended timing

 \bigcirc : Applied timing

	Resolution		Frequency		
Display mode	Horizontal	Vertical	Horizontal (kHz)	Vertical (Hz)	19"
	640	480	37.9	72	\bigcirc
	640	480	37.5	75	\bigcirc
	640	480	43.3	85	\bigcirc
	800	600	35.1	56	\bigcirc
	800	600	37.9	60	\bigcirc
	800	600	48.1	72	\bigcirc
	800	600	46.9	75	\bigcirc
VESA	800	600	53.7	85	\bigcirc
	1024	768	48.4	60	\bigcirc
	1024	768	56.5	70	\bigcirc
	1024	768	60.0	75	\bigcirc
	1024	768	68.7	85	0
	1280	1024	64.0	60	0
	1280	1024	80.0	75	0

%A large number of additional custom timings have been added. Contact Canvys for details.

Specifications

Product name :19" Monochrome LCD Display

Items	Specifications			
LCD display device	49cm (19inch)Monochrome TFT Normally Black			
Pixel pitch	Horizontal 0.294mm x Vertical 0.294mm			
Display area	Horizontal 376.3mm x Vertica	l 301.1mm		
Pixel	1280 x 1024 pixels			
Supported Grayscale	8-bit per 1, sub-pixel			
Standard viewing angle	Horizontal : 170 deg. Vertical : 170 deg.			
Input signal	 (1) VGA Connector (2) S-Video Connector (3) BNC Connector Video-In: 0.7Vp-p/75 ohm (Sync On Green, 0.3Vp-p sync negative) HD/CS: Horizontal sync, TTL level / CS sync input VD: Vertical sync, TTL level input CVBS: Composite Signal input (0.714 Vp-p / 75 ohm, NTSC / PAL / SECAM) Output signal: BNC Connector x 1 			
Temperature	Temperature Humidity(non-condensation) : Air pressure	Operation 10~40°C 30~75% 700~1060hPa	Storage -20~60°C 10~90% 500~1060hPa	
Power Supply	AC100~240V, 50/60Hz, 1.2-0.9A			
Consumption current	Approx.80W Max./ Less than 8W when power management on.			
External dimensions	Width 432mm x Depth 251mm x Height 467mm(landscape).			
Mass	Approx.8.1kg (net weight)			
International standards	UL/cUL, FCC-B, CE			

External Dimensions Landscape(longer side at the top)





Accessories

- 1. US Power cord
- 2. VGA cable
- 3. S-Video cable

Power Management

This Power Management System helps you to save energy by switching your monitor into a low-power consumption mode when it has not been used for a certain period of time. Power Management System operates with VESA DPMS compliant video card installed in your Workstation. Canvys highly recommends setting DPMS to activate after 15 minutes of non-usage in order to optimize your displays lifetime and to avoid **Image retention damage**. We also recommend users:

Not to leave the same image or viewing frame too long in one position.

Frequently changing and moving of image and viewing frame will help to avoid Image Retention (also called "Image Sticky"). Image Retention is a phenomenon inherent to TFT LCD display technology itself, and as such, the occurrence of this "Ghosting" effect is considered normal operation by all LCD glass manufacturers. As a result, Canvys is not responsible for this damage & does not warrant any displays against the occurrence of Image Sticking. We strongly advise that you follow the operating recommendations listed above.

Contact Information

1.Contact Information:

Technical Support and Sales – Contact CanvysTekLink via: TekLink Website at (http://teklink.canvys.com) Support Phone Toll Free at (800) 235-2125 Sales Phone Toll Free at (888) 735-7373

Manufactured for Canvys by DIVA Laboratories Ltd, Taiwan.

2.Copyright Notice

This document is copyrighted. All rights are reserved. Neither this document, nor any part of it, may be reproduced or copied in any form or by any means-graphical, electronic, or mechanical including photocopying, taping or information storage and retrieval systems without written permission of Canvys a division of Richardson Electronics

© 2012 Canvys a division of Richardson Electronics. All rights reserved.

Consult your dealer for technical support.

MDLP9PR01B