



9 Litre Mini Oven Model CE068MO

Dear Valued Customer

Thank you for purchasing a *CASCADÉ* appliance.

We understand the importance of your purchasing decision, and appreciate your final choice to introduce this *CASCADÉ* product into your home.

Your *CASCADÉ* appliance is recognised as a quality product at an affordable price, and is proudly supported by our after sales service team. We encourage you and your friends to choose from the range of *CASCADÉ* appliances available exclusively to The Warehouse.

TECHNICAL INFORMATION

Please make sure that your house installation voltage corresponds to the voltage marked on the unit.

Mains supply: 230-240V ~ 50 Hz – AC only
Rated Power: 1300 Watts

INSTRUCTION MANUAL

SAVE THESE INSTRUCTIONS

IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed including the following:

1. Carefully read these instructions before using your appliance.
2. **CAUTION** keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.
3. **VERY IMPORTANT** do not immerse in water or other liquids or use near washbasins or sinks. Ensure that the appliance does not get wet (water splashes etc.) and do not use it with wet hands.
4. Unplug from Mains outlet when appliance is not in use, before attaching or removing accessories, and before cleaning.
5. An appliance dropped or damaged should not be used until examined by a service engineer.
6. Do not permit the mains lead to come in contact with hot objects. If the supply cord is damaged, it must be replaced by the manufacturer, or its service agent or a similarly qualified person in order to avoid a hazard.
7. Use this appliance only for its intended use. Use only genuine attachments supplied by an authorised Service-Dealer.
8. The appliance should not be used outdoors, placed near a hot gas or electrical burner or placed in a heated oven.
9. Do not let the cord hang over edge of table or counter.
10. **WARNING** an appliance should never be left unattended when plugged in.
11. This appliance is intended for household use only and not for commercial or industrial use.
12. If appliance is to be used by a third party, please supply the instruction manual with it.
13. No liability can be accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.
14. **WARNING** do not touch hot surfaces. Use oven gloves for removing food, oven pan, or touching any hot parts.
15. **WARNING** always place the mini oven on a heat resistant surface, as the body will reach high temperatures. The temperature of the oven door or the outer surface may be high during operation of the oven.
16. **WARNING** to ensure adequate ventilation, keep an open space of approximately 20 cm all around the oven.
17. **WARNING** do not use the oven near flammable materials such as curtains, walls or under cupboards. Do not place any item on top of the oven. Do not put anything flammable inside the oven such as cardboard or paper.

CAUTION

Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel. If the supply cord is damaged, it must be replaced by the manufacturer, or its service agent or a similarly qualified person in order to avoid a hazard.

BEFORE FIRST USE

1. Your CASCADE Mini Oven has left the factory in good working order. Should the carton be damaged or the product dropped, damaged or malfunction in any way, or if the flexible cord is damaged, immediately contact your retailer for replacement or repair.
2. Carefully unpack your CASCADE Mini Oven. Make sure you do not discard any packaging material until all parts of the oven have been found.
3. Carefully wipe the exterior of the oven with a damp cloth to remove any dust that may have accumulated. Dry with a dry towel. Do not use abrasive cleaners.
WARNING do not immerse in water or any other liquids.
4. Wash the accessories, wire rack and pan, in hot soapy water. Dry with a dry towel.
5. The appliance is now ready for operation.

OPERATION

- Before using the appliance for the first time, or after long periods of storage, clean the appliance thoroughly. (See BEFORE FIRST USE.)
- Always place the oven on a flat, clean and non-slippery surface before operating it.
- Always place the oven on a heat resistant surface as the oven reaches high temperatures.
- **WARNING** always leave a gap of approximately 20 cm around the exterior of oven. Never use near curtains, walls, under cupboards or other flammable materials.
- Place wire rack into oven. Tilt upwards slightly, slide into the two rack grooves at either side of oven chamber and push straight backwards into oven. Ensure that the automatic door hooks are in the correct position to push the wire rack towards the rear of the chamber.

- **WARNING** the oven crumb tray must be in place when oven is in use. Damage to bench top may occur if the crumb tray is not in place correctly.
- **WARNING** never operate the oven with the door open unless grilling.
- **WARNING** never place the pan or any other accessory, directly onto the top of lower heating elements.
- Plug the power cord into a suitable mains outlet corresponding to the supply requirements of your oven.
Mains supply: 230-240V-50Hz – AC only
Rated power: 1300 Watts
- Your CASCADE mini oven is now ready for use.
NOTE The first time you use your mini oven, there may be a small amount of smoke and smell. This is normal. It is due to a protective coating, placed on the heating elements, to protect the heating elements during shipping.

Toasting.

- Always remove the pan when toasting.
- Place selected toast bread onto wire rack.
- Rotate the temperature dial clockwise to 'Toast' position
- Choose your toasting color level by rotating the timer clockwise to slightly past the 'dark' setting and then back to the desired light, medium or dark setting as required.
- When the toast cycle has finished a bell will ring and the power will automatically switch off.
- To stop the cycle at any time, turn timer dial anti clockwise to the off position.

Baking.

- Slide pan into slide rails under wire rack. **NOTE** Always use the pan when baking. Pan will catch any drippings.
- Place selected food on wire rack.
- Rotate the temperature dial clockwise to the desired temperature.
- Rotate the timer dial clockwise to the desired cooking time.
- For longer cooking time, rotate the timer dial clockwise to 'OVEN ON' setting. The cooking time will remain on until the timer is manually turned to the 'off' position. **WARNING** carefully monitor the food at this setting. Do not overcook or leave oven on continuously.
- When cooking for less than 5 minutes, always rotate the timer slightly past the 5-minute mark and the move it back to desired cooking time.

Grilling.

- Remove wire rack from middle shelf. Position into top shelf position. Slide pan into slide rails under wire rack as for Baking. **NOTE** always use oven gloves when oven is hot.
- Position food on wire rack. Select time and temperature as desired.
- Leave door open whilst grilling. Ideal for grilling toppings to sandwiches, such as cheese on toast.

Temperature Conversion Table

The oven markings are in Celsius. The following guide can be used for conversion to Fahrenheit.

70° C	-	150F
120° C	-	250F
170° C	-	350F
220° C	-	450F

CLEANING AND CARING FOR YOUR OVEN

- Always disconnect your CASCADE mini oven from the mains supply before cleaning.
- Always allow your mini oven to cool completely before cleaning.
- Never immerse your mini oven in water or other liquids.
- Wipe the exterior of the mini oven with a damp cloth. Dry with a dry towel.
- Wipe the oven door glass inside and out with a damp soapy cloth. Dry with a dry towel. Do not use harsh abrasives as this may damage the glass surface.
- Remove the wire rack and pan. Wash in hot soapy water, dry with a dry towel. Replace the wire rack.
- Wipe the inside of the oven with a damp cloth. Dry with a dry towel.
- **IMPORTANT** clean the crumb tray after each use. Place oven on its back, pull crumb tray forward and remove any crumbs or food particles. Wipe with a damp cloth and dry with a dry towel. Return crumb tray to its correct position and secure in place. **WARNING** never operate the oven with the crumb tray removed as this may damage the bench surface.

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com