

WWW.PROLIGHT.CO.UK



SPECTRA PAR

ORDER CODE: LEDJ88

USER MANUAL

WARNING

FOR YOUR OWN SAFETY, PLEASE READ THIS USER MANUAL CAREFULLY BEFORE YOUR INITIAL START-UP!



SAFETY INSTRUCTIONS

Every person involved with the installation, operation & maintenance of this equipment should:

- Be competent
- Follow the instructions of this manual



Before your initial start-up, please make sure that there is no damage caused during transportation. Should there be any, consult your dealer and do not use the equipment.

To maintain the equipment in good working condition and to ensure safe operation, it is necessary for the user to follow the safety instructions and warning notes written in this manual.

Please note that damages caused by user modifications to this equipment are not subject to warranty.

LEDJ Exterior Spectra Par

IMPORTANT:

The manufacturer will not accept liability for any resulting damages caused by the non-observance of this manual or any unauthorised modification to the equipment.

- Never let the power-cable come into contact with other cables. Handle the power-cable and all mains voltage connections with particular caution!
- Never remove warning or informative labels from the equipment.
- Do not open the equipment and do not modify the equipment.
- Do not connect this equipment to a dimmer-pack.
- Do not switch the equipment on and off in short intervals, as this will reduce the system's life.
- Do not expose to flammable sources, liquids or gases.
- Always disconnect the power from the mains when equipment is not in use or before cleaning! Only handle the power-cable by the plug. Never pull out the plug by pulling the power-cable.
- Make sure that the available voltage is between 220v/240v.
- Make sure that the power-cable is never crimped or damaged. Check the equipment and the power-cable periodically.
- If the equipment is dropped or damaged, disconnect the mains power supply immediately. Have a qualified engineer inspect the equipment before operating again.
- If your product fails to function correctly, discontinue use immediately. Pack the unit securely (preferably in the original packing material), and return it to your Prolight dealer for service.
- Only use fuses of same type and rating.
- Repairs, servicing and power connection must only be carried out by a qualified technician. THIS UNIT CONTAINS NO USER SERVICEABLE PARTS.
- WARRANTY; One year from date of purchase.

OPERATING DETERMINATIONS

If this equipment is operated in any other way, than those described in this manual, the product may suffer damage and the warranty becomes void.

Incorrect operation may lead to danger e.g.: short-circuit, burns, electric shocks, lamp failure etc.

Do not endanger your own safety and the safety of others! Incorrect installation or use can cause serious damage to people and property.

LEDJ Extreior Spectra Par

The outdoor DMX Spectra Par together with the IR remote control can produce colourful and dynamic lighting effects. It can be used in a wide variety of venues and for outdoor building illumination.




DMX Values and Functions:

CHANNEL	VALUE	FUNCTION
CH1	000-255	DIMMER
CH2	000-255	RED
CH3	000-255	GREEN
CH4	000-255	BLUE
CH5	000-255	FLASH ($000 = $ slowest to $255 = $ fastest)

LEDJ Exterior Spectra Par

Notice:

• Be sure to follow figures 2 & 3 when making your own cables. Do not connect the cable's shield conductor to the ground lug or allow the shield conductor to come in contact with the XLR's outer casing. Grounding the shield could cause a short circuit and erratic behaviour.

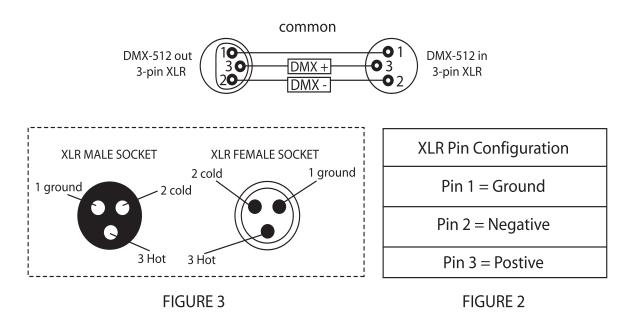

Special Note: Line termination:

• When longer runs of cable are used, you may need to use a terminator on the last unit to avoid erratic behaviour.



Termination reduces signal transmission problems and interferance. it is always advisable to connect a DMX terminal, (resistance 120 Ohm 1/4 W) between pin 2 (DMX-) and pin 3 (DMX+) of the last fixture.

Using a cable terminator (part number CABL90) will decrease the possibilities of erratic behaviour.

5-Pin XLR DMX Connectors:

Some manufactures use 5-pin XLR connectors for data transmission in place of 3-pin. 5-Pin XLR fixtures may be implemented in a 3-pin XLR DMX line. When inserting standard 5-pin XLR connectors in to a 3-pin line a cable adaptor must be used. The Chart below details the correct cable conversion.

3- Pin XLR to 5-PIN XLR Conversion			
Conductor	3-Pin XLR out	5-Pin XLR in	
Ground shield	Pin 1	Pin 1	
Negative (-)	Pin 2	Pin 2	
Positive (+)	Pin 3	Pin 3	

LEDJ Exterior Spectra Par

Exterior Spectra Par Specifications:

- Input power: AC120V 60HZ or 240V50HZ
- Power consumption: 20W
- LED's: 144 ultra bright 10mm LED's (R: 30pcs G: 56pcs B: 58pcs)
- Beam angle: 40 degree (20degree optional)
- IR signal and DMX signal available.
- Selectable built-in programmes, Auto run, DMX mode, M/S mode, Sound activated, by IR remote (please read manual for IR remote controlling)
- IP rateing: IP65
- Dimensions: 205 x 205 x 240mm
- Weight: 4.65Kg