



USB Dongleserver **myUTN-800** Quick Installation Guide

Overview [en]

This Quick Installation Guide provides a description of the installation of the myUTN-800. It contains the following information:

-	-	Ľ	٩.	
-	-		-	
			٠	
-				
-	-	-		
-	_	-		

General Information

Safety Regulations

Hardware Installation

Software Installation

Getting Started

Configuring the UTN Server

Locking the UTN Server

🗒 Mounting in a Rack

Please note the table of contents on page 3. Should you have any further questions, please contact our support hotline.



Monday - Thursday Friday +49 (0)521 94226-44

P



Überblick [de]

Dieser Quick Installation Guide beinhaltet eine Beschreibung der Installation des myUTN-800. Sie erhalten die folgenden Informationen:



UTN-Server abschließen

🗒 Im Serverschrank einbauen

Beachten Sie das Inhaltsverzeichnis auf Seite 23. Falls Sie noch Fragen haben, kontaktieren Sie unsere Support-Hotline.

8:00 a.m. to 4:45 p.m. and 8:00 a.m. to 3:15 p.m. (CET)



General Information	. 4
Scope of Supply	4
Technical Data	6
LED Display Display panel	7 7
Safety Regulations	8
Hardware Installation	9
Software Installation	10
Getting Started: SEH UTN Manager Starting the SEH UTN Manager Assigning an IP Address to the UTN Server Adding the UTN Server to the Selection List Connecting the USB Dongle to the Client.	
Configuring the UTN Server	17
Locking the UTN Server	18
Mounting the UTN Server in a Rack Tools Required Prior to Mounting Mounting the UTN server	

General Information

Purpose

The Dongleserver 'myUTN-800' gives network participants access to USB dongles. The USB dongles will be connected to the USB ports of the myUTN-800. The software tool 'SEH UTN Manager' handles the access to the USB dongles.

The SEH UTN Manager is installed on all clients that are intended to access a USB dongle in the network. The SEH UTN Manager shows the availability of all UTN servers in the network and establishes a connection between the client and the USB port including the connected USB dongle.

The lockable housing cover on the Dongleserver allows for a central and safe storage of the USB dongles. The myUTN-800 itself can be mounted in a 19" server rack.

The administration of the myUTN-800 is done via the 'myUTN Control Center'.

Scope of Supply

Please check the package content before getting started:

	UTN server	Dongleserver 'myUTN-800'
	Quick Installation Guide	The Quick Installation Guide provides a brief description of the installation of the myUTN-800. (This document)
V	2 Power cords	Power supply cable
	2 Mounting brackets	65.5 mm × 43 mm × 29.8 mm
0	4 Screws	M4 × 4 mm
	SD card	Inserted into SD card reader.

Accessories

Value-adding accessories for your myUTN-800 are optionally available from SEH.

myUTN-800 Service^{plus} package



The 'myUTN-800 Service^{plus} package' extends the manufacturer's guarantee of your myUTN-800 from 36 to 60 months. In addition, you will receive quickly and easily an advance replacement device in case of a defect!

http://www.seh-technology.com/services/ service-packages/myutn-800.html



Scan this QR code using your smart phone to get direct access to the homepage.

RMK3 (Rack Mount Kit Type 3)



For a perfect and safe storage of your myUTN-800 we recommend the Rack Mount Kit RMK3. Using the Rack Mount Kit, you can mount the myUTN-800 into 19" server racks. Contrary to the mounting brackets included in delivery, the RMK3 allows for a comfortable access to the UTN server via telescopic slides.

http://www.seh-technology.com/products/ rack-mount-kits.html



Scan this QR code using your smart phone to get direct access to the homepage.

Technical Data



Properties		Values
Network connection	logical: hysical:	- IEEE 802.3 (1000BaseT, 100BaseTX and 10BaseT) - 2 x RJ-45
Device connection		- 20 × USB 2.0 Hi-Speed - 1 × SD Card reader
Current input	r supply	max 1.3 A at 100–240 VAC (with full load on the USB ports)
Operating environment		 Ambient temperature: 5–40 °C Relative humidity: 20–80 %
Dimensions		 Width: 422 mm Height: 44 mm Depth: 243 mm Weight: 2950 g with housing cover, without mounting brackets (Suitable for 19" server racks.)

LED Display

The LEDs of the UTN server provide information about its status.

LED	Action	Color	Description
Activity	permanently off	-	If the status LED blinks periodically at the same time, the BIOS mode is signalized.
Status	permanently off	-	If the activity LED blinks periodically at the same time, the BIOS mode is signalized.
	blinks 3 times	green	Indicates the assignment of a ZeroConfig IP address.
	blinks 2 times	green	Indicates the assignment of an IP address that does not correspond to 0.0.0.0 or that comes from outside the ZeroConf range.
USB ports 1–20	permanently off	-	No USB dongle is connected to the respective port.
	permanently on	green	A USB dongle is connected to the respective port.
	permanently on	orange	The connection to the respective port and the attached USB dongle is activated.

Display panel

The display panel on the front of the UTN server provides status information.

Text	Description
DS	(Identifier) The Dongleserver is ready to operate.
E1	One of the two power supplies is not working. Which connection is not working is indicated by a glowing dot (left dot, left power supply; right dot, right power supply).
E2	The SD card is formatted with an unsupported file system respectively cannot be read and be written to.
E3	The SD card is read-only.
E4	No SD card is available in the card reader.
E5	One or both network connections have no link.

Safety Regulations

UTN servers are network devices for use in office environments. The myUTN-800 is designed for the integration of USB dongles into TCP/IP networks.

Before starting the initial setup procedure and during the operation of the UTN server, please note the following safety regulations. Their purpose is to protect yourself and others from personal injuries, and avoid damage to the equipment.

- Read the documentation and make sure that your system meets the requirements listed therein.
- The device must only be connected to the mains and to the network by qualified personnel.
- Avoid contact with humidity or liquids.
- The device must only be connected and operated if it is in perfect condition.
- Make sure that no-one steps on or stumbles over the cables.
- If the supplied power cords cannot be used in your country, acquire two appropriate power cords that suit national provisions. For more information, please consult your retailer.
- The device must be connected to two sockets with safety contact.
- Position the device in a way that guarantees that the two sockets for the connection of the power cords are in the proximity of the device and are easily accessible. Make sure that the device can be separated easily from the mains. A damaged power cord must be replaced immediately. For more information, please consult your retailer.
- To disconnect the device from the mains, both power cords must be separated from the device.
- Do not connect telephone cables to the RJ-45 connectors. The RJ-45 connectors may only be connected to SELV voltages. For the connection to the RJ-45 connectors only STP cabling (category 5 or better) may be used. The shielding must fit flushly to the connectors.
- Do not open the housing. Unauthorized modifications to the device can affect the product certification and are forbidden.

You can directly connect up to twenty USB dongles to the UTN server (myUTN-800).





- Proceed as follows:
- Connect the USB dongle to a USB port of the UTN server. (Repeat this step if you want to connect more than one USB dongle.)



- 2. Connect the two network cables (RJ-45) to the UTN server.
- 3. Connect the two power cords to the UTN server.

Do not remove the SD card from the UTN server.

Upon delivery, the SD card is already inserted into the SD card reader and ready for use (installation or formatting are not required).

Software Installation

The software tool SEH UTN Manager handles the access to the USB dongles. The SEH UTN Manager is available in two versions:

- Complete version
- Minimal version (only command-line interface)

The complete version has a graphical user interface and offers additional features. A detailed description can be found in the myUTN User Manual.

The SEH UTN Manager is installed on all clients that are intended to access a USB dongle in the network. Different installation files are available, depending on the operating system.

First, you have to download the installation file for the SEH UTN Manager from the homepage of SEH Computertechnik GmbH:

http://www.seh-technology.com/services/downloads/ download-dongleserver/myutn-800.html



Scan this QR code using your smart phone to get direct access to the homepage.

System requirements:

- Windows XP or later; OS X 10.8.x or later
- The installation can only be carried out by users with administrative rights.

The SEH UTN Manager is also available for selected Linux systems. All information necessary for installing and using the SEH UTN Manager in Linux environments can be found in the myUTN User Manual Linux. The documentation is available via the link given above.

- Proceed as follows:
- 1. Start the installation file.
- 2. Install the complete version of the SEH UTN Manager (including graphical user interface). Follow the installation routine.
- ✤ The SEH UTN Manager is installed on your client.

Getting Started: SEH UTN Manager

After the SEH UTN Manager is started, the network will be scanned for connected UTN servers. The network range to be scanned is freely definable.

All UTN servers found will be shown in the 'network list' together with the connected USB dongles. The required UTN servers will be selected and added to the 'selection list'. The UTN servers listed in the selection list and the connected USB dongles can then be used by the user.

This chapter describes the first steps with the program.

- 'Starting the SEH UTN Manager' ⇒
 ■13
- 'Assigning an IP Address to the UTN Server' ⇒ ■14
- 'Adding the UTN Server to the Selection List' ⇒ ■15
- 'Connecting the USB Dongle to the Client' ⇒ ■16

Detailed information on how to use the SEH UTN Manager can be found in the Online Help. To start the Online Help, select Help – Online Help from the menu bar.



Client and UTN server communicate via the UTN port 9200. This port must not be blocked by a firewall. If necessary, you can change the port number and use a secure UTN SSL port. A detailed description can be found in the myUTN User Manual.

Starting the SEH UTN Manager

<u>Windows</u>

Start the SEH UTN Manager on your client via the Windows start menu. (Start \rightarrow All Programs \rightarrow SEH Computertechnik GmbH \rightarrow SEH UTN Manager)

<u>Mac</u>

To start the program, double-click the 'SEH UTN Manager.app' file. (Applications \rightarrow SEH UTN Manager.app)



During the initial configuration, client and UTN server must be assigned to the same local network segment.

Assigning an IP Address to the UTN Server

Once the UTN server is connected to the network, it checks whether an IP address can be obtained from the boot protocols BOOTP or DHCP. If this is not the case, the UTN server assigns itself an IP address via ZeroConf from the address range (169.254.0.0/16) which is reserved for ZeroConf.

The UTN servers found by the program will be displayed in the network list. You can change the TCP/IP parameters of the UTN server.



Proceed as follows:

1. Confirm the note dialog 'Your Selection List seems to be empty' by clicking Yes.

If no note dialog is available and the main dialog appears, select Selection List - Edit from the menu bar.

The Edit Selection List dialog appears.

- Select the UTN server from the network list. 2.
- Select Set IP Address from the shortcut menu. 3 The Set IP Address dialog appears.
- 4. *Enter the relevant TCP/IP parameters.*
- Click **OK** 5
- The settings are saved. P

Administrator: SEH UTN Manager		
Program 🔬 Edit Selection List		? x
Put together a selection list with your prefer	red devices.	
Network List	ection List	
Scan Select Options Select Configure	🗟 Set IP Address	? ×
Re	Define the TCP/IP Pa	arameters of the UTN Server.
	IP address	192.168. 0.140
	Subnet mask	255.255.255.0
Act Add >	Gateway	192.168. 0. 4
Deat		OK Cancel

Adding the UTN Server to the Selection List

The selection list displays the UTN servers and the USB dongles connected to their USB ports.

Define the devices you want to use. To do this, you must add the UTN server (and the connected USB dongles) shown in the network list to the selection list.

📴 Proceed as follows:

- 1. Select Selection List Edit from the menu bar. The Edit Selection List dialog appears.
- 2. Select the UTN server from the network list.
- 3. Click Add.

(Repeat steps 2 and 3, if necessary.)

- 4. Click OK.
- \checkmark The UTN servers are shown in the selection list.

A Edit Selection List	? <mark>×</mark>
Put together a selection list wit	h your preferred devices.
Network Network List	Selection List
Scan 4 = 192.168.0.140	192.168.0.140
 ▷ Dongle (Port 1) ▲ □ 10.168.1.167 ▷ USB flash drive (Port 1) ▷ USB flash drive (Port 2) 	Dongle (Port 1)
Add >	Remove
	OK Cancel

You can extend the search for UTN servers to any network range. To do this, change the search parameters for the network scan. Windows: via the **Options** dialog in the **Program** menu. Mac: via the **Preferences** dialog in the **SEH UTN Manager** menu.

Connecting the USB Dongle to the Client

To use a USB dongle, a connection is established between the client and the USB port of the UTN server to which the USB dongle is connected.



Make sure that:

- All provisions (driver installation, etc.) that would be necessary to operate the USB dongle locally (i.e. connected directly to the client) have been met on the client. Ideally, the USB dongle has been connected and operated on the client locally according to the instructions of the manufacturer.
- The USB port is <u>not</u> connected to another client. A USB dongle that was made available by the UTN server can only be used by one network participant at a time.

Proceed as follows:

- 1. Select the port from the selection list.
- 2. Select Port Activate from the menu bar.
- \clubsuit The connection will be established.

ogram Selection Lis	t UTN server Po	ort Help				
		Activate				
LITAL	N /1	Deactivate				<u>_</u>
UIN	IVIAI	Request			SH SH	н
		Remove Del			JL	
Coloction List		Create UTN Action				-
Selection List	UTN Server/Devi		tatus	Properties		
Refresh	a 🧰 192.168	Settings		Port name	Dongle	
	Dongle (Po	ort 1)	Available	Port number	1	
Edit				Port status	Available	
				Additional features		
Port				Encryption	Off	6
				Automatisms		1
Activate				Auto-Connect	Off	
Deactivate				Print-On-Demand	Off	
Deactivate				Devices connected		
				▷ Name	il ok Portable secure storage for software licenses	

Close the connection to the USB port when the connected USB dongle is no longer needed. Select **Port – Deactivate** from the menu bar.

Configuring the UTN Server

The UTN server can be configured and monitored via the myUTN Control Center. The myUTN Control Center is stored in the UTN server and can be launched by means of a browser (Internet Explorer, Mozilla Firefox, Safari).

- Proceed as follows:
- 1. Open your browser.
- 2. Enter the IP address of the UTN server as the URL.
- ✤ The myUTN Control Center appears in the browser.

If the myUTN Control Center is not displayed, check the proxy settings of your browser.

ttp://192.168.0.140	index_en.html			🕆 Cl 🔡 - Google	P 🕁	自 🕴 1
					Product & Co	mpany Stem
UTN (Contro	I Cent	ter			SE
START	NETWORK	DEVICE	SECURITY	MAINTENANCE		
	myUTN-800					
	UTN server			Network		«-> ()
UEFEAD	Default name	ICOD 1F0B		IP address	192 168 0 140	
Iglish	Serial number	25020110900016		Subnet mask	255.255.255.0	
eutsch	Host name			Gateway	192.168.0.4	
ançais	Software	14.2.1		UTN port	9200	
spañol	Firmware	353.10				
aliano	Contact person			SD card		
ortuguês	Date/Time	2015-01-20 14:21:15		Name		
本語						
体中文	Attached devi	ces (0/40)				
(B)(D)(Y)	Port Name		Status			VLAN
20	1 -		No device	connected		
	2 -		No device	connected		
			No device	connected		
	3 -		No device	connected		
	4 -		No device	connected		
	5 -		No device	connected		
	6 -		No device	connected		•
	7 -		No device	connected		
	8 -		No device	connected		
	9 -		No device	connected		
	10 -		No device	connected		
	11 -		No device	connected		
	10		his design	connected		
	12 -		No device	Connected		
	13 -		No device	connected		•
	14 -		No device	connected		
	15 -		No device	connected		•
	16 -		No device	connected		
	17 -		No device	connected		
	18 -		No device	connected		
	19 -		No device	connected		

Detailed information about the configuration of the UTN server can be found in the Online Help of the myUTN Control Center. To start the Online Help, click the '?' icon.

Locking the UTN Server

The lockable housing cover on the dongle server allows for a central and safe storage of the connected USB dongles.

To close the cover, insert the three straps of the housing cover into the notches of the housing. Use the key provided to activate the locking mechanism.



Mounting the UTN Server in a Rack

For a perfect and safe storage of the UTN server, we recommend installing it in a 19" server rack:

- You can mount the UTN server myUTN-800 in a 19" server rack with the two mounting brackets included in delivery.

Mounting the UTN server in a 19" server rack using the mounting brackets included in delivery must only be done in the way described in this document.

Tools Required:

- 2 mounting brackets (included in delivery)
- 4 screws (M4 × 4 mm) (included in delivery)
- Slotted screwdriver
- Phillips screwdriver
- Fasteners for mounting the UTN server in the server rack (not included in delivery)

Prior to Mounting:

📴 Proceed as follows:

- 1. Read and observe the safety regulations about the UTN server (⇔ 8) and server rack.
- 2. Check the size and settings of your rack unit and compare the data with those of the mounting brackets.
- 3. Remove both power cords from the UTN server (interrupt the power supply).
- 4. Remove both network cables (RJ-45) from the UTN server.
- 5. Place the UTN server upside down on a solid surface.
- 6. Remove all rubber feet of the UTN server: Remove the pin from each rubber foot using a small slotted screwdriver. The rubber foot detaches automatically.

(Please keep the pins and rubber feet in a safe place for potential future use.)

7. Turn the myUTN-800 around again.

Mounting the UTN server:



- 1. Place the UTN server on a solid surface.
- 2. Hold one mounting bracket to the side of the UTN server in such a way that the two holes in the mounting bracket align with the holes in the UTN server. The short mounting bracket wing faces away from the UTN server.
- 3. Fasten the mounting bracket to the UTN server by inserting and tightening two provided screws ($M4 \times 4 \text{ mm}$) in the holes of the UTN server.
- 4. Repeat steps 2 and 3 on the opposite side of the UTN server.



- 5. Install the UTN server in the server rack. To do this, fasten the mounting brackets of the UTN server to the server rack posts.
- 6. Connect the network cables (RJ-45) to the UTN server.
- 7. Connect the power cords to the UTN server (establish the power supplies).

Allgemeine Information	24
Verwendungszweck	.24
Lieferumfang	.24
Optionales Zubehör	.25
Technische Daten	.26
LED-Anzeige	.27
Anzeigefeld	.27
Sicherheitsvorschriften	28
Hardware-Installation	29
Software-Installation	30
Erste Schritte mit dem SEH UTN Manager	32
SEH UTN Manager starten.	.33
UTN-Server eine IP-Adresse zuweisen	.34
UTN-Server der Auswahlliste hinzufügen	.35
USB-Dongle mit Client verbinden	.36
UTN-Server konfigurieren	37
UTN-Server abschließen	38
UTN-Server in einen Serverschrank einbauen Das benötigen Sie Vor dem Einbau	39 .39 .39
Linbau	.40

Verwendungszweck

Der Dongleserver 'myUTN-800' stellt den Zugriff auf USB-Dongles mehreren Netzwerkteilnehmern zur Verfügung. Dazu werden die USB-Dongles an die USB-Ports des myUTN-800 angeschlossen. Die Zugriffsverteilung der USB-Dongles erfolgt über das Software-Tool 'SEH UTN Manager'.

Der SEH UTN Manager wird auf allen Clients installiert, die auf einen im Netzwerk bereitgestellten USB-Dongle zugreifen sollen. Der SEH UTN Manager zeigt die Verfügbarkeit aller im Netzwerk eingebundenen UTN-Server an und stellt die Verbindung zwischen Client und USB-Port inklusive dem daran angeschlossenen USB-Dongle her.

Der abschließbare Gehäusedeckel am Dongleserver ermöglicht eine zentrale und sichere Aufbewahrung der USB-Dongles. Der myUTN-800 selbst kann fest in einem 19-Zoll-Serverschrank verbaut werden.

Die Verwaltung des myUTN-800 erfolgt über das 'myUTN Control Center'.

Lieferumfang

Bitte überprüfen Sie den Packungsinhalt auf Vollständigkeit, bevor Sie die Installation beginnen:

	UTN-Server	Dongleserver 'myUTN-800'
	Quick Installation Guide	Der Quick Installation Guide beinhaltet eine kurze Beschreibung der Installation des myUTN-800. (Dieses Dokument)
V	2 Netzkabel	Stromversorgungskabel
	2 Befestigungs- winkel	65,5 mm × 43 mm × 29,8 mm
No.	4 Schrauben	M4 × 4 mm
	SD-Karte	In SD-Card-Reader eingesteckt.

Optionales Zubehör

Als praktische Ergänzung zu Ihrem myUTN-800 bietet SEH optional erhältliches Zubehör an.





Das 'myUTN-800 Service^{plus}-Paket' verlängert die Herstellergarantie Ihres myUTN-800 von 36 auf 60 Monate. Zudem erhalten Sie im Falle eines Defektes bequem und schnell ein Vorab-Austausch-Gerät.

http://www.seh.de/services/service-pakete/ myutn-800.html



Scannen Sie diesen QR-Code mit Ihrem Smartphone, um direkt zur Homepage zu gelangen.

RMK3 (Rack Mount Kit Type 3)



Für die optimale und sichere Aufbewahrung Ihres myUTN-800 empfehlen wir den Montagesatz 'RMK3'. Der Montagesatz ermöglich den Einbau des myUTN-800 in 19-Zoll-Serverschränke. Im Gegensat zu den beigelegten Befestigungswinklen ermöglicht das RMK3 einen komfortablen Zugang zum UTN-Server über ausziehbare Teleskopschienen.

> http://www.seh.de/produkte/ rack-mount-kits.html



Scannen Sie diesen QR-Code mit Ihrem Smartphone, um direkt zur Homepage zu gelangen.

Technische Daten



Eigenschaften		Werte		
Netzwerkanschluss	Logisch: Physisch:	- IEEE 802.3 (1000BaseT, 100BaseTX und 10BaseT) - 2 x RJ-45		
Geräteanschluss		- 20 × USB 2.0 Hi-Speed - 1 × SD-Card-Reader		
Stromaufnahme pro Anschluss		max. 1,3 A bei 100–240 VAC (bei Volllast auf den USB-Ports)		
Betriebsumgebung		- Umgebungstemperatur: 5–40 °C - Relative Luftfeuchtigkeit: 20–80 %		
Abmessungen		 Breite: 422 mm Höhe: 44 mm Tiefe: 243 mm Gewicht: 2950 g mit Gehäusedeckel, ohne Montagewinkel (Passend für 19-Zoll-Serverschränke.) 		

LED-Anzeige

Durch die Interpretation des LED-Leuchtverhaltens kann der Zustand des UTN-Servers ermittelt werden.

LED	Aktion	Farbe	Beschreibung
Activity	Dauer-Aus	-	Bei gleichzeitigem zyklischen Blinken der Activity-LED wird der BIOS-Modus signalisiert.
Status	Dauer-Aus		Bei gleichzeitigem zyklischen Blinken der Activity-LED wird der BIOS-Modus signalisiert.
	3 x Blinken	grün	Signalisiert die Vergabe einer ZeroConfig-IP- Adresse.
	2 x Blinken	grün	Signalisiert die Vergabe einer IP-Adresse, die nicht 0.0.0.0 entspricht oder aus dem Bereich ZeroConfig kommt.
USB-Port 1-20	Dauer-Aus	-	Es ist kein USB-Dongle am betreffenden Port angeschlossen.
	Dauer-An	grün	Es ist ein USB-Dongle am betreffenden Port angeschlossen.
	Dauer-An	orange	Die Verbindung zum betreffenden Port und dem daran angeschlossenen USB-Dongle ist aktiviert.

Anzeigefeld

Das Anzeigefeld an der Vorderseite des UTN-Servers stellt Statusinformationen zur Verfügung.

Text	Beschreibung
DS	(Kennung) Der Dongleserver ist betriebsbereit.
E1	Eine der beiden Stromversorgungen ist ausgefallen. Welcher Anschluss betroffen ist, zeigt der leuchtende Punkt (linker Punkt, linke Stromversorgung; rechter Punkt, rechte Stromversorgung).
E2	Die SD-Karte ist in einem nicht unterstützten Dateisystem formatiert bzw. ist nicht lesbar und nicht beschreibbar.
E3	Die SD-Karte ist lesbar aber nicht beschreibbar.
E4	Es ist keine SD-Karte im SD-Card-Reader vorhanden.
E5	Eine oder beide Netzwerkverbindungen sind getrennt.

Sicherheitsvorschriften

UTN-Server sind Netzwerkgeräte für den Gebrauch in Büroumgebungen. Der myUTN-800 dient dem Einbinden von USB-Dongles in TCP/IP-Netzwerken.

Beachten Sie vor Inbetriebnahme und beim Betrieb des UTN-Servers die folgenden Sicherheitsvorschriften, um sich und andere vor Personenschäden zu schützen sowie Beschädigungen am Gerät zu vermeiden.

- Lesen Sie die Dokumentation und stellen Sie sicher, dass Ihr System den aufgeführten Anforderungen entspricht.
- Das Gerät darf nur von qualifiziertem Fachpersonal angeschlossen und mit dem Netzwerk verbunden werden.
- Das Gerät darf nicht mit Feuchtigkeit oder Flüssigkeit in Berührung kommen.
- Das Gerät darf nur in unversehrtem Zustand angeschlossen und betrieben werden.
- Verlegen Sie alle Kabel so, dass niemand darauf treten oder darüber stolpern kann.
- Falls die beiliegenden Netzkabel für Ihr Land nicht einsetzbar sind, beschaffen Sie zwei passende Netzkabel mit der jeweiligen nationalen Zulassung. Fragen Sie hierzu Ihren Fachhändler.
- Das Gerät muss an zwei Steckdosen mit Schutzkontakt angeschlossen werden.
- Stellen Sie das Gerät so auf, dass die zwei Steckdosen für den Anschluss der Netzkabel in der Nähe des Gerätes und leicht zugänglich sind. Das Gerät muss leicht vom Netz zu trennen sein. Ein beschädigtes Netzkabel muss sofort ersetzt werden. Fragen Sie hierzu Ihren Fachhändler.
- Zum Trennen des Gerätes vom Netz müssen beide Netzkabel vom Gerät entfernt werden.
- Schließen Sie keine Telefonleitungen an die zwei RJ-45-Stecker an. An diese darf nur Sicherheitskleinspannung angeschlossen werden. Verwenden Sie für den Anschluss an die RJ-45-Stecker nur STP-Kabel (Kategorie 5 oder besser). Kabelschirm und Steckerschirm der Kabel müssen flächig verbunden sein.
- Öffnen Sie nicht das Gehäuse. Eigenmächtige konstruktive Veränderungen am Gerät können die Produktzertifizierung beeinträchtigen und sind verboten.

Hardware-Installation

Am UTN-Server (myUTN-800) können bis zu zwanzig USB-Dongles direkt angeschlossen werden.





- 📴 Gehen Sie wie folgt vor:
- Stecken Sie den USB-Dongle an einen USB-Port des UTN Servers. (Wiederholen Sie diesen Schritt je nach Anzahl der anzuschließenden USB-Dongles.)



- 2. Verbinden Sie die zwei Netzwerkkabel (RJ-45) mit dem UTN-Server.
- 3. Verbinden Sie die zwei Netzkabel mit dem UTN-Server.

Entfernen Sie nicht die SD-Karte aus dem UTN-Server.

Die SD-Karte befindet sich bei Auslieferung bereits im SD-Card-Reader und ist betriebsbereit (kein Anschließen oder Formatieren erforderlich).

Software-Installation

Die Zugriffsverteilung der USB-Dongles wird über das Software-Tool SEH UTN Manager organisiert. Der SEH UTN Manager ist in zwei Varianten verfügbar:

- Vollständige Variante
- Minimal-Variante (reine Kommandozeilen-Version)

Die vollständige Variante verfügt über eine grafische Bedienoberfläche und bietet zusätzliche Funktionen. Detaillierte Beschreibungen finden Sie in der myUTN-Benutzerdokumentation.

Der SEH UTN Manager wird auf allen Clients installiert, die auf einen im Netzwerk bereitgestellten USB-Dongle zugreifen sollen. Je nach Betriebssystem sind verschiedene Installationsdateien verfügbar.

Bitte laden Sie zuerst die Installationsdatei für den SEH UTN Manager von der SEH Computertechnik GmbH-Homepage:

http://www.seh.de/services/downloads/downloaddongleserver/myutn-800.html



Scannen Sie diesen QR-Code mit Ihrem Smartphone, um direkt zur Homepage zu gelangen.

🧭 Systemvoraussetzungen:

- Windows XP oder höher; OS X 10.8.x oder höher
- Die Installation kann ausschließlich durch Benutzer mit administrativen Rechten durchgeführt werden.

Der SEH UTN Manager ist auch für ausgewählte Linux-Systeme verfügbar. Alle Informationen für die Installation und den Einsatz in Linux-Umgebungen finden Sie in der myUTN-Benutzerdokumentation Linux. Die Dokumentation finden Sie unter dem oben angegebenen Link.

- 📴 Gehen Sie wie folgt vor:
- 1. Starten Sie die Installationsdatei.
- 2. Installieren Sie die vollständige Version des SEH UTN Managers (inkl. grafischer Benutzeroberfläche). Folgen Sie hierzu der Installationsroutine.
- 😓 Der SEH UTN Manager ist auf Ihrem Client installiert.

Erste Schritte mit dem SEH UTN Manager

Nach dem Start des SEH UTN Managers wird das Netzwerk nach angeschlossenen UTN-Servern gescannt. Der zu scannende Netzwerkbereich ist frei definierbar.

Nach dem Scannen des Netzwerks werden alle gefundenen UTN-Server und deren angeschlossene USB-Dongles in der 'Netzwerkliste' angezeigt. Die benötigten UTN-Server werden ausgewählt und der 'Auswahlliste' hinzugefügt. Die in der Auswahlliste aufgeführten UTN-Server und die daran angeschlossenen USB-Dongles können dann vom Benutzer verwendet werden.

Dieses Kapitel informiert über die ersten Handlungsschritte mit dem Programm.

- 'SEH UTN Manager starten' ⇒ ■33

Detaillierte Informationen zur Bedienung des SEH UTN Managers entnehmen Sie der Online Hilfe. Um die Online Hilfe zu starten wählen Sie im Menü Hilfe den Befehl **Online Hilfe**.



Client und UTN-Server kommunizieren über den UTN-Port 9200. Dieser Port darf nicht durch eine Sicherheitssoftware (Firewall) blockiert werden. Bei Bedarf kann die Portnummer geändert und ein sicherer UTN-SSL-Port verwendet werden. Detaillierte Beschreibungen finden Sie in der myUTN-Benutzerdokumentation.

SEH UTN Manager starten

<u>Windows</u>

Starten Sie auf Ihrem Client den SEH UTN Manager über das Windows-Startmenü. (Start \rightarrow Alle Programme \rightarrow SEH Computertachnik (SmhH \rightarrow SEH UTN Manager)

(Start \rightarrow Alle Programme \rightarrow SEH Computertechnik GmbH \rightarrow SEH UTN Manager)

<u>Mac</u>

Zum Starten des Programms doppelklicken Sie auf die Datei 'SEH UTN Manager.app'. (Programme \rightarrow SEH UTN Manager.app)

- 0 23 Administrator: SEH UTN Manager Programm Auswahlliste UTN-Server Port Hilfe X SEH UTN Manager Ihre Auswahlliste ist leer Auswahlliste Um USB-Geräte zu verwenden, müssen Sie den UTN-Server an den sie angeschlossen sind der Auswahlliste zuordnen. Sie können Ihre UTN-Server Aktualisieren entweder jetzt auswählen oder die Auswahlliste später bearbeiten, indem Sie auf 'Bearbeiten' links im Programm-Hauptfenster klicken. Bearbeiten Möchten Sie Ihre USB-Geräte und UTN-Server jetzt auswählen? Ja Nein Aktivieren Deaktivieren

Während der Erstkonfiguration müssen Client und UTN-Server demselben lokalen Netzwerksegment zugeordnet sein.

UTN-Server eine IP-Adresse zuweisen

Nachdem der UTN-Server an das Netzwerk angeschlossen ist, überprüft der UTN-Server, ob er eine IP-Adresse über die Bootprotokolle BOOTP oder DHCP erhält. Ist das nicht der Fall, gibt sich der UTN-Server über ZeroConf selbst eine IP-Adresse aus dem für ZeroConf reservierten Adressbereich (169.254.0.0/16).

Die vom Programm gefundenen UTN-Server werden in der Netzwerkliste angezeigt. Sie haben die Möglichkeit, die TCP/IP-Parameter am UTN-Server zu ändern.



📷 Gehen Sie wie folgt vor:

- Bestätigen Sie den Hinweisdialog 'Auswahlliste ist leer' mit Ja. 1 Falls kein Hinweisdialog vorhanden ist und der Hauptdialog angezeigt wird, wählen Sie im Menü Auswahlliste den Befehl Bearbeiten. Der Dialog Auswahlliste bearbeiten erscheint.
- Markieren Sie den UTN-Server in der Netzwerkliste. 2
- 3 Wählen Sie IP-Adresse definieren im Kontextmenii Der Dialoa IP-Adresse definieren erscheint.
- Geben Sie die entsprechenden TCP/IP-Parameter ein. 4
- 5 Wählen Sie die Schaltfläche OK an.
- P Die Einstellungen werden gespeichert.

Administrator: SEH UTN Manager		
Administrator: SEH UTN Manager Programm Auswahlliste bearbeiten Stellen Sie eine Auswahlliste mit Ihren t Netzwerk Suche Optionen Austr Aktua Bear	bevorzugten Geräten zusammen. Auswahlliste eren CP/IP-Parameter am UTN-Sen	Ver definieren.
Akti Hinzufügen >	IP-Adresse 192.16 Netzwerkmaske 255.25 Gateway 192.16	3. 0.140 5.255. 0 3. 0. 4
		Abbrechen

UTN-Server der Auswahlliste hinzufügen

Die Auswahlliste zeigt die UTN-Server und die an ihre USB-Ports angeschlossenen USB-Dongles an.

Definieren Sie die Geräte, die Sie nutzen möchten. Fügen Sie hierzu den in der Netzwerkliste angezeigten UTN-Server mitsamt seinen angeschlossenen USB-Dongles der Auswahlliste hinzu.

- 📴 Gehen Sie wie folgt vor:
- 1. Wählen Sie im Menü Auswahlliste den Befehl Bearbeiten.
- 2. Der Dialog Auswahlliste bearbeiten erscheint.
- 3. Markieren Sie den UTN-Server in der Netzwerkliste.
- 4. Wählen Sie die Schaltfläche Hinzufügen an. (Wiederholen Sie die Schritte 2-3 nach Bedarf.)
- 5. Wählen Sie die Schaltfläche OK an.
- Solution Die UTN-Server werden in der Auswahlliste angezeigt.

	Stellen Sie eine Auswahlliste mit Ihren b	evorzugten Geräten zusammen.
– Netzwerk –	Netzwerkliste	Auswahlliste
Suche	192.168.0.140	In 192.168.0.140
	Dongle (Port 1)	Dongle (Port 1)
Optionen	IO.168.1.167	
	USB-Speicherstick (Port 1)	
	USB-Speicherstick (Port 2)	
	Hinzufügen >	Entfernen
		OK Abbrecher

Die Suche nach UTN-Servern kann auf beliebige Netzwerkbereiche erweitert werden. Ändern Sie hierzu die Suchparameter für den Netzwerkscan. Windows: Im Menü **Programm** über den Dialog **Optionen**. Mac: Im Menü **SEH UTN Manager** über den Dialog **Einstellungen**.

USB-Dongle mit Client verbinden

Um einen USB-Dongle zu nutzen, wird eine Verbindung zwischen dem Client und UTN-Servers hergestellt, an den dem USB-Port des der USB-Donale angeschlossen ist.



😿 Stellen Sie folgende Punkte sicher:

- Auf dem Client sind alle Vorbereitungen (Treiberinstallation usw.) getroffen worden, die notwendig wären, um den USB-Dongle lokal (also direkt an dem Client angeschlossen) zu betreiben. Idealerweise ist der USB-Dongle zuvor lokal am Client nach der Anleitung des Herstellers angeschlossen und betrieben worden
- Der USB-Port ist nicht bereits mit einem anderen Client verbunden. Ein über den UTN-Server zur Verfügung gestellter USB-Dongle kann zeitgleich nur von einem Netzwerkteilnehmer genutzt werden.
- 🛜 Gehen Sie wie folgt vor:
- Markieren Sie den Port in der Auswahlliste. 1
- Wählen Sie im Menü Port den Befehl Aktivieren. 2
- P Die Verbindung wird hergestellt.



Deaktivieren Sie die Verbindung zum USB-Port, sobald Sie den angeschlossenen USB-Dongle nicht mehr benötigen. Wählen Sie hierzu im Menü Port den Befehl Deaktivieren.

UTN-Server konfigurieren

Über das myUTN Control Center kann der UTN-Server konfiguriert und überwacht werden. Das myUTN Control Center ist in dem UTN-Server gespeichert und kann mit einem Internet-Browser (Internet Explorer, Firefox, Safari) aufgerufen werden.

- 🚰 Gehen Sie wie folgt vor:
- 1. Öffnen Sie Ihren Browser.
- 2. Geben Sie als URL die IP-Adresse des UTN-Servers ein.
- Das myUTN Control Center wird im Browser dargestellt. Falls das myUTN Control Center nicht angezeigt wird, überprüfen Sie die Proxy-Einstellungen Ihres Browsers.

http://192.168.0.140	/index_de.html			🔻 🤁 = Google	P 1	1 🖬 🖡 👘
					Produkt & Unt	ernehmen Stomag
NUTN (Contro	l Cer	nter			SE
START	NETZWERK	GERĂT	SICHERHEIT	WARTUNG		
	myUTN-800					
IC0D1F0B	UTN-Server			Netzwerk		<> <>
Faalish	Default-Name	IC0D1F0B		IP-Adresse	192.168.0.140	
Deutsch	Seriennummer	250201109000	16	Netzwerkmaske	255,255,255,0	
Francais	Software	14.2.1		UTN-Port	9200	
Español	Firmware	353.10				
Italiano	Beschreibung			SD-Karte		
Português	Datum/Zeit	2015-01-20 14	00.56	Name		
日本語						
算体中文	Angeschlosse	ne Gerate (0/40)			
繁璧中文	Port Name		Status			VLAN
1 연극이	1 -		Kein Ge	ät angeschlossen		
	2 -		Kein Ge	ät angeschlossen		
	3 -		Kein Ger	ät angeschlossen		A.
	4 -		Kein Ge	ät angeschlossen		
	5 -		Kein Ge	ät angeschlossen		
	6 -		Kein Ge	äl angeschlossen		
	7 -		Kein Ge	äl angeschlossen		×.
	8 -		Kein Ge	ät angeschlossen		
	9 -		Kein Ge	ät angeschlossen		
	10 -		Kein Ger	äl angeschlossen		
	11 -		Kein Ge	ät angeschlossen		
	12 -		Kein Ge	ät angeschlossen		
	13 -		Kein Gei	at angeschlossen		
	14 -		Kein Ger	at angeschlossen		
	15 -		Kein Gei	at angeschlossen		
	16 -		Kein Gei	at angeschlossen		
	17 -		Kein Gei	at angeschlossen		
	18 -		Kein Gei	at angeschlossen		
	19 -		Kein Ger	at angeschlossen		
	20 -		Kein Co	M anoaschlassen		

Detaillierte Informationen zur Konfiguration des UTN-Servers entnehmen Sie der Online Hilfe des myUTN Control Centers. Um die Online Hilfe zu starten wählen Sie das '?'-Symbol an.

UTN-Server abschließen

Der abschließbare Gehäusedeckel am Dongleserver ermöglicht eine zentrale und sichere Aufbewahrung der angeschlossenen USB-Dongles.

Zum Schließen werden die drei Laschen des Gehäusedeckels in die Nuten des Gehäuses eingeführt. Mit dem mitgelieferten Schlüssel kann die Schließvorrichtung aktiviert werden.



🖹 UTN-Server in einen Serverschrank einbauen

Für die optimale und sichere Aufbewahrung des UTN-Servers empfehlen wir, den UTN-Server myUTN-800 in einen 19-Zoll-Serverschrank einzubauen:

- Mit den mitgelieferten Befestigungswinkeln kann der UTN-Server myUTN-800 fest in einem 19-Zoll-Serverschrank verbaut werden.

Der Einbau des UTN-Servers in einen 19-Zoll-Serverschrank mithilfe der Befestigungswinkel darf nur auf die in diesem Dokument beschriebene Weise erfolgen.

Das benötigen Sie:

- 2 Befestigungswinkel (im Lieferumfang enthalten)
- 4 Schrauben (M4 × 4 mm) (im Lieferumfang enthalten)
- Schlitzschraubenzieher
- Kreuzschlitzschraubenzieher
- Material zur Befestigung im Serverschrank (nicht im Lieferumfang enthalten)

Vor dem Einbau:

📴 Gehen Sie wie folgt vor:

- Lesen und beachten Sie die Sicherheitsvorschriften zu Ihrem UTN-Server (⇔ 28) und Ihrem Serverschrank.
- 2. Überprüfen Sie die Maße und Gegebenheiten (Einstellungen) Ihres Serverschranks und vergleichen Sie die Daten mit denen der Einbauwinkel.
- 3. Entfernen Sie beide Netzkabel vom UTN-Server (Stromzufuhr unterbrechen).
- 4. Lösen Sie beide Netzwerkkabel (RJ-45) vom UTN-Server.
- 5. Platzieren Sie den UTN-Server kopfüber auf eine feste Auflage.
- 6. Entfernen Sie alle Füße des UTN-Servers: Hebeln Sie mit einem kleinen Schlitzschraubenzieher den Stift aus jedem Fuß heraus. Der Fuß löst sich automatisch.

(Bewahren Sie Stifte und Füße für einen eventuellen zukünftigen Einsatz gut auf.)

7. Drehen Sie den UTN-Server wieder herum.

Einbau

📴 Gehen Sie wie folgt vor:

- 1. Platzieren Sie den UTN-Server auf einer festen Auflage.
- 2. Halten Sie einen Befestigungswinkel seitlich neben den UTN-Server, so dass die zwei Löcher im Befestigungswinkel an den Bohrungen im UTN-Server ausgerichtet sind. Der kurze Flügel zeigt vom UTN-Server weg.
- 3. Fixieren Sie die den Befestigungswinkel mit 2 mitgelieferten Schrauben $(M4 \times 4 \text{ mm})$ an den Bohrungen im UTN-Server.
- 4. Wiederholen Sie die Schritte 2 und 3 auf der gegenüberliegenden Seite des UTN-Servers.



- 5. Installieren Sie den myUTN-800 im Serverschrank. Fixieren Sie dazu den UTN-Server mit den Befestigungswinkeln am Lochraster des Serverschranks.
- 6. Verbinden Sie die Netzwerkkabel (RJ-45) mit dem UTN-Server.
- 7. Verbinden Sie die Netzkabel mit dem UTN-Server (Stromzufuhr herstellen).

The latest version of the EC declaration of conformity can be downloaded from the homepage of SEH Computertechnik GmbH: <u>http://www.seh-technology.com/services/ce-notifications.html</u>

Manufacturer's Name SEH Computertechnik GmbH Manufacturer's Address Suedring 11 33647 Bielefeld Germany Phone ++49 (0) 521 - 94226-0	SEH
EC – Declaration of Con	formity
Herewith SEH Computertechnik GmbH declares t	nat
Product: USB Dongle Server	
Type designation: myUTN-800	
Serial No.: 278yyyymmnnnnn (yyyy = yea	ar, mm = month, nnnnn = seq. no.)
is in conformity with the provisions of the	
DIRECTIVE 2004/108/EC OF THE EUROPEAN PARLIA on the approximation of the laws of the Member Stat	MENT AND OF THE COUNCIL OF DEC. 15, 2004 es relating to electromagnetic compatibility
DIRECTIVE 2006/95/EC OF THE EUROPEAN PARLIAI on the harmonisation of the laws of Member States r within certain voltage limits	IENT AND OF THE COUNCIL OF DEC. 12, 2006 elating to electrical equipment designed for use
DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAI on the restriction of the use of certain hazardous sul	IENT AND OF THE COUNCIL OF 8 JUNE 2011 ostances in electrical and electronic equipment
Standards applied:	
EN 55024:2010 EN 55022:2010 Class B EN 60950-1:2006+A11:2009+A12:2011+A2:2013 EN 50581:2012	
The named device is not intended for use in domes	tic environments.
To meet the above specifications, the user has to o enclosed manual <i>Quick Installation Guide</i> .	omply with all instructions defined in the
Bielefeld, June 18, 2014 DiplIng. Rain	er Ellerbrake, General Manager

Federal Communication Commission (FCC) Notice				
The user has to comply with all instructions defined in this manual. It is not allowed to do product modifications not expressly approved by SEH.				
Note:				
This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation.				
This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.				
If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:				
 Reorient or relocate the receiving antenna. 				
 Increase the separation between the equipment and receiver. Connect the equipment into an outlet on a circuit different from that to which the receiver is connected. 				
 Consult the dealer or an experienced radio/TV technician for help. 				

Manufactured by: SEH Computertechnik GmbH Suedring 11 33647 Bielefeld Germany Phone: +49 (0)521 94226-29 Fax: +49 (0)521 94226-99 Support: +49 (0)521 94226-44 Email: info@seh.de Web: http://www.seh.de



Scan this QR code (meCard) using your smart phone.

Document: Type: Quick Installation Guide Title: myUTN-800 Version: 1.4 Order number: MHAB-QI-myUTN800

Online Links to important Internet Resources:

Support Contacts and Information:	http://www.seh-technology.com/support
Sales Contacts and Information:	http://www.seh-technology.com/sales
Downloads:	http://www.seh-technology.com/services/
	<u>downloads.num</u>

CE

© 2015 SEH Computertechnik GmbH

All trademarks, registered trademarks, logos and product names are property of their respective owners. This product uses 'Open Source Software'. For further information, please contact <u>http://www.seh.de</u>. The product documentation gives you valuable information about your product. Keep the documentation for further reference during the life cycle of the product.