



iPad Solutions



Contacts



Notes





Maps

iPad Solutions

Lobbies & check-in counters



Bars & restaurants

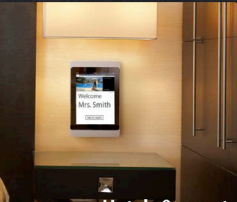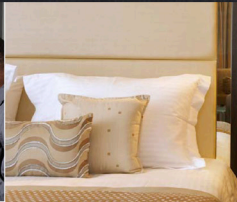

Hotels & resorts



Museums & exhibitions



Retail stores

Showrooms & info centers



Conference & meeting rooms



Trade shows

iFlamingo™

user manual




APC Contech
01480 226622
sales@apc-contech.co.uk



Flamingo™


Congratulations. You have chosen the market's most robust, elegant and easy to use iPad® stand.

Use your Flamingo™ to transform your iPad® into a floor standing information center for reception areas, exhibitions, conference halls and more.

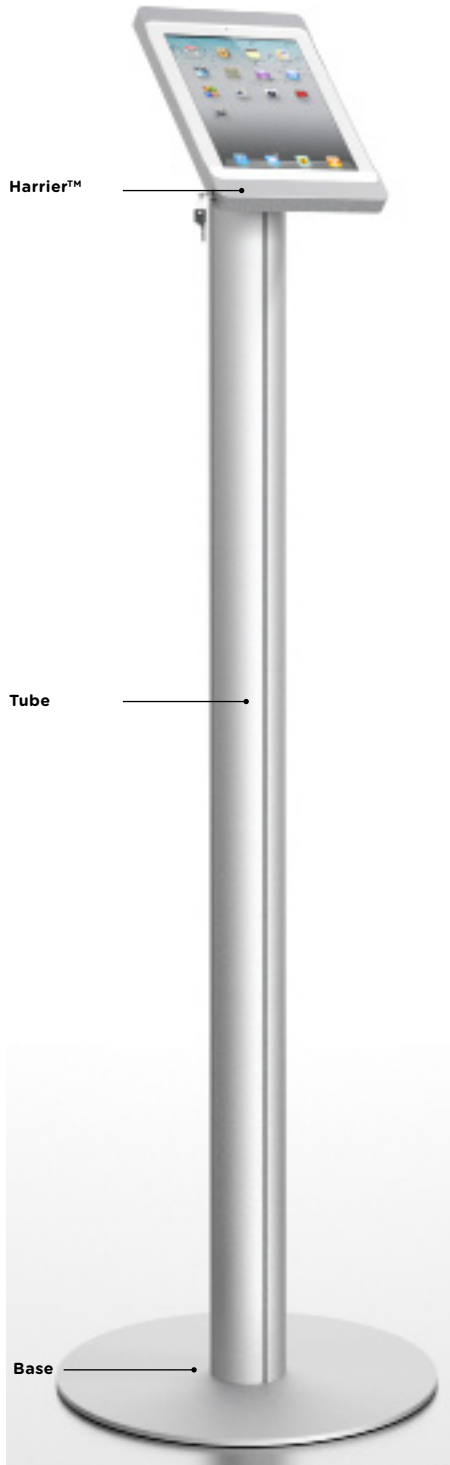


Fix the tube to the base

Insert the M8 screw (supplied) into the center hole underneath the baseplate and tighten it to the base tube.

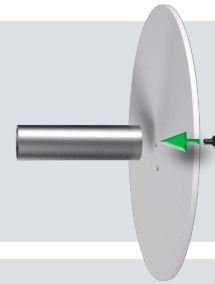

Fix the Harrier™ to the VESA plate

Place the Harrier™ flat on the VESA plate and attach the items with the four M3 screws (supplied). Do not tighten the two parts fully.

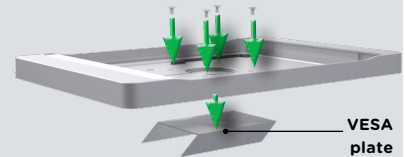


If using the 30 pin connector (charging cable)

First pull the cable through the base and inside the tube.
Let the power socket with the power adapter hang out from the top of the pole.


Pull the 30 pin connector charging cable through the Harrier™ and the VESA plate. Let 7 inches of the 30 pin connector stay inside of the Harrier™.

Connect the USB connector to the power adapter. Let the power adapter and the power socket slide down into the pole.

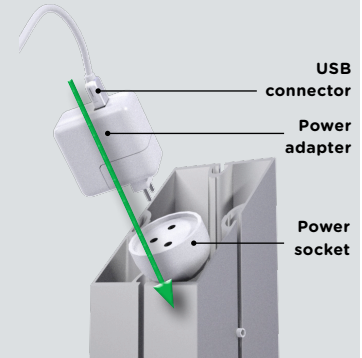

Fix the tube to the base

Slide the tube over the base tube and use the 4 pinol screws to tighten the tube to the base.

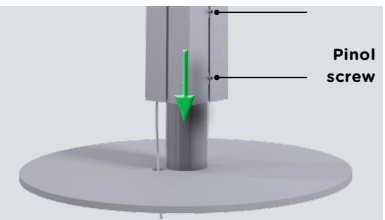


Fix the Harrier™ to the tube

Slide the VESA plate mounted at the back of the Harrier™ into the top part of the tube. Tighten the two parts together with the two pinol screws located at the upper side of the tube.

Finally tighten the four M3 screws inside the Harrier™

Place the iPad® inside the Harrier™ according to separate Harrier™ manual next page -.

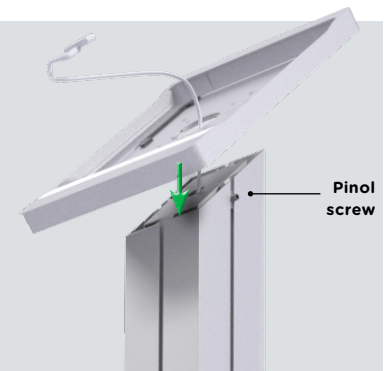

30 pin connector


2) Pull the 30 pin connector charging cable through the Harrier™ and the VESA plate. Let 7 inches of the 30 pin connector stay inside of the Harrier™.

3) Connect the USB connector to the power adapter. Connect the power adapter to the power socket.

Let the power adapter and the power socket slide down into the pole.

1) Pull the power cable through the base and inside the tube, to the top of the pole.

Attach the power socket to the power cable.

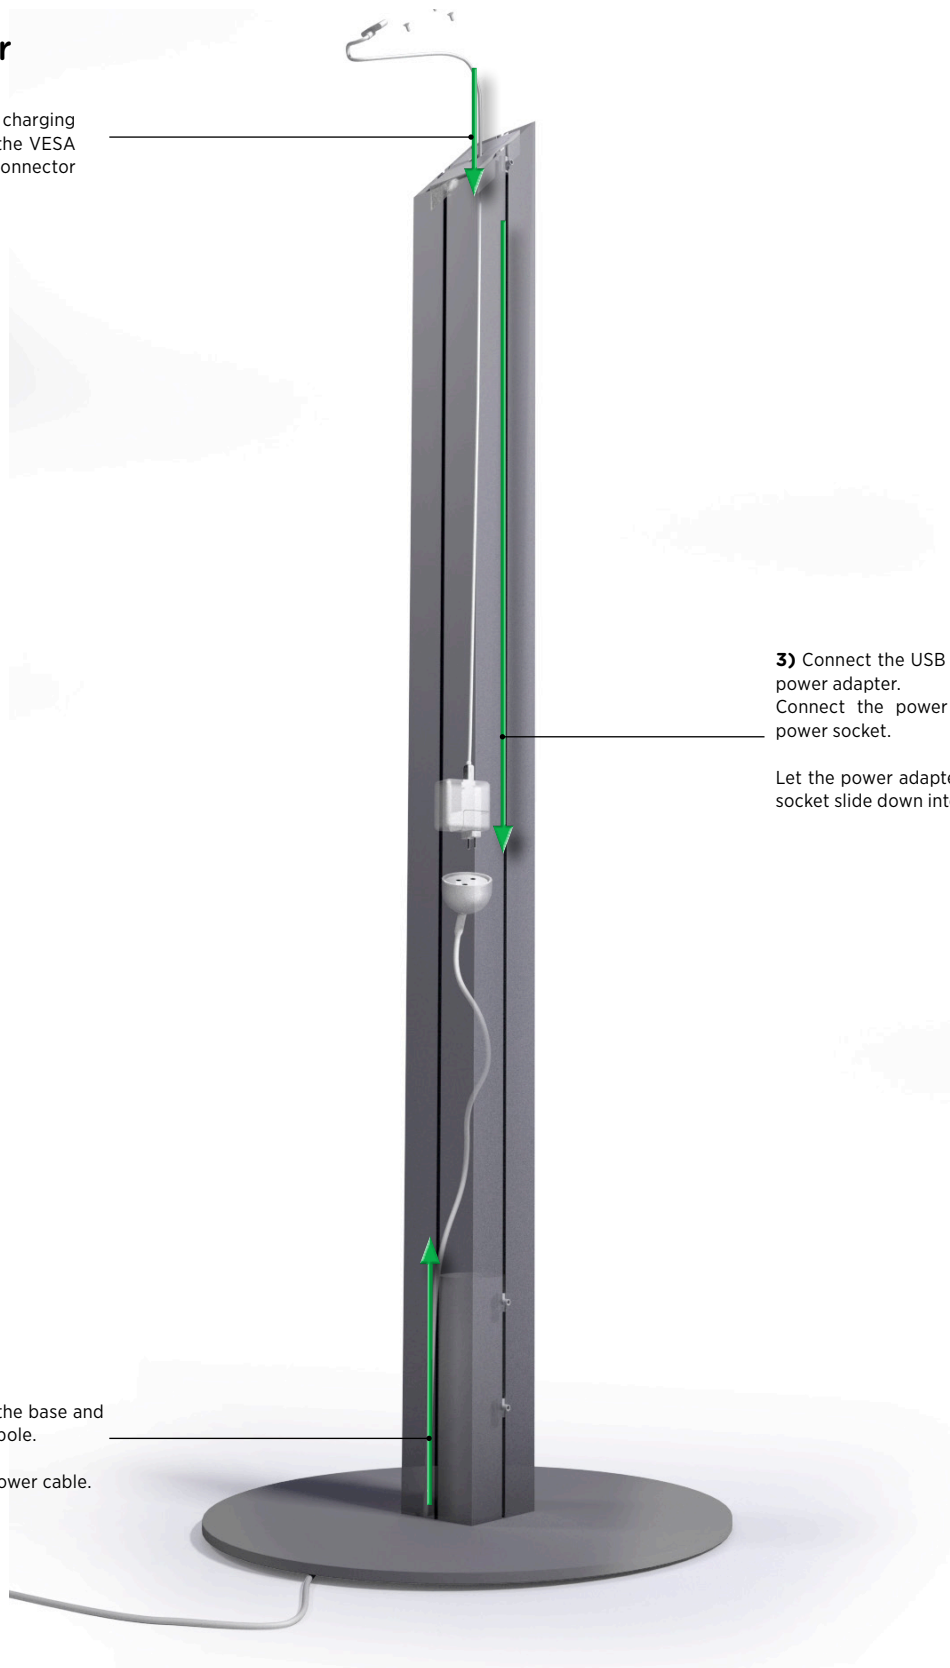

APC Contech
01480 226622
sales@apc-contech.co.uk