

# SanDisk®

## sansa® Shaker™ MP3 Player

Quick Start Guide

**Age 8+**  
Not intended  
for use by  
children  
younger than 8



Technical Support

U.S.: 1-866-SANDISK (726-3475)

Worldwide: [www.sandisk.com/techsupport](http://www.sandisk.com/techsupport)



80-36-02774

**Not intended for use by children younger than 8 years old. We recommend that adult supervision be given to read the Quick Start Guide and User Manual to support children in using the Sansa Shaker for a safe and fun experience**

## **Safety Instructions**

 
1. Read the safety instructions carefully before using your Sansa.
2. Read this entire manual to ensure proper usage.
3. Keep this User Guide for future reference.
4. Do not use Headphones/Earphones while driving, cycling, or operating any motorized vehicle. This may create a traffic hazard and may be illegal in some areas. It can also be dangerous to play your music with Headphones/Earphones at high volume while walking, or engaged in other activities. You should exercise extreme caution and discontinue use in potentially hazardous situations.
5. Avoid using Headphones/Earphones at high volume. Keep the volume at a moderate level, so that you are better able to hear outside sound, and to be considerate of the people around you.
6. Keep your player away from sinks, drinks, bathtubs, showers, rain, and other sources of moisture. Moisture can cause electric shocks with any electronic device.
7. Do not disassemble, crush, short-circuit or incinerate your battery as it may cause fire, injury, burns or other hazards.
8. Follow these tips to keep your player working well for a long time:
  - Clean your player with a soft lint-free cloth used on glass lenses.
  - Do not allow young children to use your player unsupervised.
  - Never force any connector into the ports of your player or your computer. Make sure your connectors are the identical shape and size before you connect.

## Disposal Instructions

Do not dispose of this device with unsorted household waste. Improper disposal may be harmful to the environment and human health. Please refer to your local waste authority for information on return and collection systems in your area.

## Location of Controls

|    |                         |
|----|-------------------------|
| 1  | Built-in Speaker        |
| 2  | Top Twist - Volume      |
| 3  | Dual Headphone Jacks    |
| 4  | Strap Eyelet            |
| 5  | Power/Play/Pause Button |
| 6  | Bottom Twist            |
| 7  | Bottom Cap              |
| 8  | USB Connect Port        |
| 9  | SD Card Slot            |
| 10 | Battery Cover           |

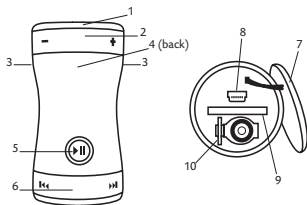

## Battery Installation

One AAA size battery is needed to power the Sansa Shaker player. Please execute the following steps installing the battery:

- 1) Twist open the Sansa Shaker™ cap at the bottom
- 2) Open the battery cover
- 3) Remove the old battery
- 4) Insert the new battery

*Note: Insert the **Negative (-)** end first.*

- 4) Close the battery cover

*Note: You should hear a click sound when the battery cover is closed properly.*



 
## Transfer Music to Shaker Player

To transfer music to the Sansa Shaker™ player, please execute the following steps:

- 1) Twist open the Sansa Shaker™ cap at the bottom.
- 2) Insert an SD card into the Sansa Shaker™ player.

*Note: The SD card's label must face down and the Sansa Shaker's Power/Play/Pause button should face up while inserting the SD card.*

- 3) Connect the small end of the USB cable to Sansa Shaker™ player.
- 4) Connect the larger end of the USB cable to an available USB port on the computer.
- 5) To transfer music files to the Sansa Shaker™, simply drag and drop them from your computer to it.

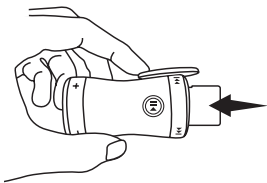

## Removing Music Files from Shaker Player

To delete music files from the Sansa Shaker™ player, please execute the following steps:

- 1) Remove the Sansa Shaker™ Cap at the bottom.
- 2) Insert an SD card into the Sansa Shaker™ player.

*Note: The SD card's label must face down and the Sansa Shaker's Power/Play/Pause button should face up while inserting the SD card.*

- 3) Connect the small end of the USB cable to Sansa Shaker™ player.
- 4) Connect the larger end of the USB cable to an available USB port on the computer.



- 5) Select **Open folder to view files using Windows Explorer** on initial connection to the computer.



- 6) A window will open. Highlight the file/s you want to delete then press the **Delete** button on the computer keyboard to delete selected file/s.

## Safely Remove Sansa Shaker from Computer

To safely remove the Sansa Shaker™ player from your computer, please execute the following steps:

 
- 1) Make sure you are not in the middle of transferring music or data files to/from your computer.
- 2) Click on the **Safely Remove Hardware** icon from the System Tray.



- 3) Select the appropriate drive letter that represents your Sansa Shaker™ player and click on it.
- 4) Wait until **'The USB Mass Storage Device can now be safely removed from the system'** message appears.
- 5) Remove the USB cable from the Sansa Shaker™ player and the computer.

## Turn Shaker Player On

To turn on the Sansa Shaker™ player, press and hold the **Power/Pause/Play** button for approximately 2 seconds or until you hear a 'Drum Roll Up' sound.

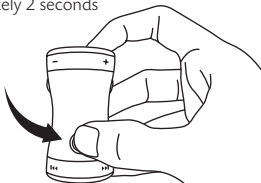


## Turn Shaker Player Off

To turn off the Sansa Shaker™ player, press and hold the **Power/Play/Pause** button for approximately 5 seconds or until hear a short 'Drum Roll Down' sound.

## Listen to Music

- 1) Plug the headphones (included) into the Headphone jacks on either the sides of the unit.
- 2) Turn on the Sansa Shaker™ player. The music will automatically start playing shortly.
- 3) To pause, press the **Power/Play/Pause** button once.
- 4) To resume playing, press the **Power/Play/Pause** button again.

 *Note: The Sansa Shaker player will only play MP3 files.*




## Turn Up or Down the Volume

- 1) To turn up the volume, turn the **Top Twist** to the right.
- 2) Turn the volume up fast, turn the **Top Twist** to the right and hold it.
- 3) To turn down the volume, turn the **Top Twist** to the left.
- 4) Turn the volume down fast, turn the **Top Twist** to the left and hold it.



## High-Speed Music Search

 During playback, twist and hold the **Bottom Twist** to the left or right to move songs backwards or forwards. The player will move songs backward or forward at high speed as long as the bottom twist is held. When you release the bottom twist, normal music playback will resume.

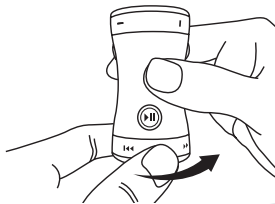

## Randomly Skip the Songs

The shake feature is used to skip to the next song randomly. Please execute the following steps to enable the shake feature.

- 1) Turn on your Sansa Shaker™ player.
- 2) Start listening to music.
- 3) Hold the player with the speaker facing up.
- 4) Press and hold the **Power/Play/Pause** button.
- 5) Shake the player up and down once. You should hear a **shutter** sound indicating that the player had successfully skipped to the next song.

