

Electric Fan: Model EV2073PF

INSTRUCTION MANUAL – IMPORTANT INSTRUCTIONS RETAIN FOR FUTURE USE - READ FULLY BEFORE USE

Pictures or product specifications may vary slightly from those indicated due to ongoing product improvement.



Safety Instructions

Carefully read this manual in full before using this electric fan.

Ensure that you know how the fan functions and how to operate it.

Maintain the fan in accordance with the instructions to ensure that it functions properly.

Keep this manual with the fan. If the fan is to be used by a third party, this instruction manual

must be supplied with it. The safety instructions do not by themselves eliminate any danger

completely and proper accident prevention measures must always be used. No liability can be

accepted for any damage caused by non-compliance with these instructions or any other improper use or mishandling.

Package Contents

1 x Instruction Manual	1 x Fan Motor Assembly
1 x Fan Blade	1 x Height Adjusting Tube
1 x Base Plate	1 x Safety Guard

CAUTION. Confirm all parts before disposing of packaging. Safely dispose of all plastic bags and other packaging components. They may be potentially dangerous to children.

Assembly and Installation

Assembly

a. Undo the large securing bolt and washer from the bottom end of the height adjusting tube. Place the height adjusting tube through the base plate centre hole and secure with the large bolt and washer. Ensure the bolt is tightened securely.

b. Undo and remove the transit bolt (through lower section of height adjusting tube).

c. Adjust the height adjusting tube upwards by loosening the clamping knob and pulling the inner tube upwards. Clamp in place by tightening the clamping knob.

d. Remove the motor fixing bolt from the height adjusting tube upper end and fit the motor assembly. Bolt in place securely. Adjust the angle of the fan blade at this point by loosening the large bolt, adjusting to desired angle and then tightening bolt to hold in place.

e. Remove the four safety guard fixing bolts from the fan assembly. Align the rear safety guard so that the one fixing bolt / nut is located at the lowest point. Fit the rear safety guard and secure in place with the four guard fixing bolts.

f. Remove the plastic protection sleeve from the motor spindle. Attach the fan blade and secure in place with the clamping bolt.

WARNING! The fan blade must be aligned to ensure the clamping bolt is in line with the flat flange area of the motor spindle.

g. Fit the front safety guard and secure with the small bolt and nut.

h. Fix the supply cord to the height adjusting tube using the clamp attached. **WARNING!** Allow enough free cord movement during oscillation mode.

The fan assembly is now complete.

Warning! Ensure that all safety guards are correctly fitted before use.

Warning! Ensure that all fan blades are securely fitted before use.

Warning! Ensure that the fan is switched OFF from the mains supply before removing the guard.

Warning! For fans installed at a high level. Ensure that the fan is installed so that the blades are more than 2.1m above the floor.

Warning! To reduce the risk of electric shock, do not use this fan with any solid state speed control device unless that device has been specifically supplied for this fan.

Warning! Avoid contact with moving parts. Do not insert objects or body parts into the safety grill when the fan is operating.

Warning! Do not cover the safety grill or place near curtains.

Warning! This fan should not be placed in the immediate vicinity of water, such as bathtub, wash bowls, swimming pool or other area where splashing may occur.

Operation.

Once the electric fan has been assembled correctly connect the supply plug to a suitable 230-240V AC 50 Hz power outlet. Ensure the On/Off switch is set to 'Off' setting before plugging in. Select fan speed using the variable speed selector switch located on the motor assembly. 0 – Off 1 – Low 2 – Med 3 - High



IMPORTANT SAFETY INFORMATION

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury including the following.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply

This electric appliance must be connected to a suitable 230-240 V ~ 50Hz power supply. If using an extension cord, ensure that the extension cord is of a suitable 10-amp power rating. Fully unwind the supply cord when in use as a coiled cord may overheat. Do not abuse or damage the power cord. If the supply cord is damaged, it must be replaced by the manufacturer or its service agent or a similarly qualified person in order to avoid a hazard. **Warning! Always unplug from the mains supply when not in use.**

Children

Caution. Keep out of reach of children. This appliance is not intended for use by young children or infirm persons. Young children must be supervised by a responsible person to ensure that they can operate the appliance safely. Young children should be supervised to ensure that they do not play with the appliance

Use and environment

Do not use outdoors. Do not leave in direct sunlight as this may damage the plastic. This appliance is for household use only, not commercial or industrial use. The power socket must be readily accessible so that the appliance can be unplugged in an emergency.

Damaged or dropped

Always inspect your fan before use. Do not use this fan if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair.

Water

Do not immerse in water or other liquids or use near washbasins or sinks or wet environments. Ensure that the fan does not get wet (water splashes etc.) and do not use it with wet hands.

Danger to children

Safely dispose of plastic bags and other components of the packaging. They may be potentially dangerous to children.

CLEANING

Before cleaning.

When not in use or before cleaning, always disconnect the fan from the mains supply.

Warning! Ensure that the fan is switched OFF from the mains supply before removing any guard.

Carefully wipe the outer surface with a damp cloth, dry with a dry towel. Do not use harsh abrasives, solvents, chemical cleaners, petrol or similar to clean this appliance as these may damage the plastics. Always replace any guard before use.

Store in a safe place

When not in use store your appliance and instruction manual in a safe and dry place.

Warranty

This product is for household use only. This product is guaranteed against faulty materials and workmanship for a period of 24 months from the date of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts when the product is returned freight prepaid to the retailer. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from whom this product was purchased.

Model No.: _____ Purchase date: _____ Product Purchased From: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer or importer. If service is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged.