



Instruction Booklet



SY-PL700

# POPCORN MAKER

Please read this instruction manual carefully before connecting or operating this product. Please retain this instruction booklet for future reference. Product may vary from pictures shown.

## LOCATION OF THE POPCORN MAKER

- A. Measuring Spoon
- B. Top Cover
- C. Popcorn Inlet
- D. Aluminum Heat Chamber
- E. Spout
- F. Body
- G. Switch



## IMPORTANT SAFETY INSTRUCTIONS

### ALWAYS

- Always ensure hands are dry before handling the plug or the Popcorn Maker.
- Always operate the Popcorn Maker on a secure, dry, level surface.
- Always allow adequate air space above and on all sides for air circulation. Do not allow the Popcorn Maker to touch curtains, wall coverings, clothing, dishtowels or other flammable materials during use. Do not use under cupboards or curtains.
- Caution is required on surface where heat may cause a problem – an insulated heat pad is recommended.
- Always be sure to unplug from the socket when not in use and before cleaning.
- Always allow the Popcorn Maker to cool before cleaning and storing.
- Carry out regular checks of the supply cord to ensure no damage is evident.
- Return the Popcorn Maker after a malfunction, or if it has been damaged in any circumstances, please ask authorized electrician for examination, repair or adjustment as special purpose tools are required.

- This appliance includes an auto over heating protection. In the case the unit gets too hot due to the intake or exhaust being covered, the unit will automatically cut off. In this case “Off” the unit and let it cool down for a few minutes before restarting.

**CAUTION: THE POPCORN MAKER LID AND BODY BECOME EXTREMELY HOT DURING USE. ALLOW THE UNIT TO COOL FOR 5 MINUTES BEFORE HANDLING.**

**THIS APPLIANCE IS NOT A TOY – IT IS NOT INTENDED FOR USE BY CHILDREN OR INFIRM PERSON WITHOUT SUPERVISION**

#### **NEVER**

- The surfaces are liable to get hot during use, so never touch hot surfaces.
- Never use this appliance outdoors.
- Never use this appliance for any purpose other than its intended use. This appliance is for household use only.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge, unless they are supervised or have been given instruction concerning the use of the Popcorn Maker by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Never leave the appliance unattended.
- Never allow the power cord to overhang the edge of a table or bench top or touch any hot surface.
- Never place this appliance on or near a hot gas or electric burner or where it could touch a heated oven or microwave oven.
- Never immerse the Popcorn Maker’s cord set or plug in water or any other liquid to protect against electrical hazards.
- Never place any part of this appliance in a dishwasher.
- Never operate the appliance with a damaged cord or plug, after it malfunctions, or if it has been damaged in any circumstances.
- If the supply cord is damaged, it must be replaced by the manufacturer, its

service agent or similarly qualified persons in order to avoid a hazard.

- The Popcorn Maker is not intended to be operated by means of an external timer or separate remote-control system. The use of an extension cord is not recommended.

#### **OPERATION GUIDELINES**

**NOTE: Before using Popcorn Maker for the first time, we recommend you clean the unit following the instructions under CARE AND CLEANING.**

- Remove the transparent cover from the main body.
- Using the measuring spoon provided, measure one level spoon of popping corn and place it into the main chamber. One measuring spoon of kernels will make approximately 3 cups of popped corn. Do not use more than one spoon of corn in your Popcorn Maker at once. **NEVER PLACE BUTTER OR OIL IN THE POPPING CHAMBER.**
- Reposition the transparent cover so it sits firmly on the body of the unit.
- Place the measuring spoon in position on the top of the transparent cover.
- If butter is required, place up to 2 tablespoons of chopped up butter in the measuring spoon. While the corn is popping, the butter will begin to melt. When popping has stopped, turn the unit off and allow the butter to melt for a further 3 minutes on top of the unit. For best result, we recommend the use of butter kept at room temperature.
- Place a large bowl beneath the Popcorn Makers chute to catch the popped corn.
- Inset the plug into an AC220-240V, 50Hz power outlet and switch the power on.
- Turn the ON/OFF switch to the ON position.
- The Popped corn will shoot out the chamber and into the bowl.

**CAUTION: DO NOT TOUCH THE POPCORN MAKER COVER DURING OR IMMEDIATELY AFTER OPERATION. THE UNIT WILL BE EXTREMELY HOT.**

**DO NOT OPERATE THE POPCORN MAKER FOR MORE THAN 5 MINUTES AT A TIME. ALLOW A 10 MINUTES BREAK BETWEEN COOKING A SECOND CYCLE OF POPPED CORN. THIS WILL ALLOW THE UNITS MOTOR TO COOL DOWN.**

## OPERATING YOUR POPCORN MAKER CONTINUED...

- When the rate of popping becomes less than about 1 per second, turn the ON/OFF switch to the OFF position. Allow the unit to cool for at least 2 minutes before removing the transparent cover. We recommend oven mitts are used to remove the cover. Due to variations in the kernels, you may find not all kernels have popped.
- Ensure the appliance is turned off after use. Allow to cool before re-using, cleaning or storing.

## HELPFUL HINTS

- This product uses hot air circulation in the popping chamber to pop the kernels. To avoid damaged to your Popcorn Maker, never add butter, oil or any other substance to the popping chamber.
- Never use microwave popcorn in your Popcorn Maker.
- Use only fresh popcorn kernels. Old or stale kernels may cause scorching or smoking during operation.
- Take care when selecting the bowl for catching your popcorn.
  - A metal bowl may become hot, exercise caution when moving the bowl.
  - If using a plastic bowl, ensure it can withstand the heated air which flows from the Popcorn Maker while in use.

## CARE AND CLEANING

- Turn the Popcorn Maker's ON/OFF switch to the OFF position and ensure it is unplugged from the power supply.
- Ensure the unit has cooled fully prior to cleaning, reusing or storing.
- Wash the transparent cover and measuring spoon in warm soapy water, rinse and dry thoroughly.
- Use a soft, dry cloth to wipe the internal popping chamber.
- Clean the base of the unit with a damp cloth and dry thoroughly.
- Never immerse the Popcorn Maker's body, cord set or plug in water or any other liquid. Do not place any part of the appliance in a dishwasher.
- Do not use abrasive cleaning products on this appliance.
- Store the assembled appliance in a clean, dry area.

## SPECIFICATIONS

Model No.: SY-PL700

Supply Voltage: AC220-240V~ 50Hz

Power consumption: 1200W

We reserve the right due to possible changes to design to alter the instruction manual without prior notice.



This symbol is known as the 'Crossed-out wheellie bin Symbol'. When this symbol is marked on product/batteries, it means that the product/batteries should not be disposed of with your general household waste. Only discard electrical/electronic/battery items in separate collection schemes, which cater for the recovery and recycling of materials contained within. Your cooperation is vital to make sure the success of these schemes and for the protection of the environment.

## DECLARATION OF CONFORMITY

Manufacturer Name: Satyatrade S. L.

Address: Pol. Ind. La Raya. C/ Guadalquivir, 2.

Camarma de Esteruelas, 28816 Madrid

Tel: 902 430 967

Fax: 91 8864285

NIF: B83254763

Manufacturing country: China

Sytech® SY-PL700 complies with the following directives:

CE standard: EMC Directive 2004/108/EC

EN 55014-1: 2006

EN 55014-2: 1997/+A1:2001/+A2:2008

EN 61000-3-2: 2006

EN 61000-3-3:2008

Low Voltage:

EN 60335-2-9:2003+A1+A2+A12

EN 60335-1:2002+A11+A12+A2+A13

EN 62233:2008

ROHS standard: 2002/95/EC Restriction of Hazardous Substance

Signed: Ajeet Nebhwani Utamchandani

Sole Administrator

