

User manual

ΔTIZ



BookDriveTM

Automatic Page-turning Scanner

BookDrive
User's Guide

All rights reserved.
2005 Atiz Innovation Co., Ltd.

Under the copyright laws, this manual may not be copied, in whole or in part, without the written consent of Atiz.

Atiz and BookDrive are trademarks of Atiz Innovation Co., Ltd., registered in the U.S. and other countries. Use of the Atiz logo or BookDrive logo for commercial purposed without the prior written consent of Atiz may constitute trademark infringement and unfair competition in violation of federal and state laws.

Every effort has been made to ensure that the information in this manual is accurate.

Atiz is not responsible for printing or clerical errors.

Atiz Innovation Co., Ltd.

www.atiz.com

Table of contents

Chapter 1 General Information

1.1	Introduction _____	1
1.2	Copyright Notice _____	2
1.3	Safety Precautions _____	3

Chapter 2 Getting to Know BookDrive

2.1	Components _____	6
2.2	Part Identification _____	7
2.3	Control Panel _____	8

Chapter 3 Installation

3.1	Dimension & Weight _____	9
3.2	Location _____	10

Chapter 4 Getting Started

4.1	Installing a Roller _____	11
4.2	Installing the Software _____	12
4.3	Setting Up _____	13
4.4	Loading the Book _____	15

Table of contents

Chapter 5	Software	21
Chapter 6	Maintenance	
6.1	Maintenance & Normal Care _____	22
6.2	Cleaning the Outer Part of the Scanner _____	23
6.3	Cleaning the Inner Part of the Scanner _____	24
Chapter 7	Troubleshooting	
7.1	Replacing a Roller _____	25
7.2	When BookDrive appears to malfunction _____	26
7.3	After a power shortage _____	27
7.4	When the machine is on _____	28
7.5	Problems With the Connection _____	29

1.1 Introduction

Thank you for choosing the Atiz BookDrive. This machine has a modern design and combines advanced technology with simplicity and ease of use.

This manual will assist you in becoming familiar with the machine. It contains all the necessary information for the start-up, its functions and the replacement of the consumables.

1.2 Copyright Notice

The use of this scanner is subject to the applicable copyrights for the documents you are scanning. Please observe the copyright laws very carefully.

Any use of this scanner that infringes the copyright of others are strictly prohibited.

Any violation of these rights may lead to criminal prosecution.

1.3 Safety Precautions

1**For Installation & Relocation**

- ▶▶ Do not place the machine in a hot, humid, dusty, or poorly ventilated environment. Prolonged exposure to these adverse conditions can cause fire or electric shock.
- ▶▶ Do not place the machine near heaters or volatile, flammable, or combustible materials that may catch fire.
- ▶▶ Place the machine on a level and sturdy surface that can withstand the machine weight.
- ▶▶ The machine weighs 30 kg. for a standard configuration. Use at least two persons to carry it. One person face the left side of the machine and the other face the right side of the machine.
- ▶▶ Firmly grasp the bottom part of both sides. To avoid possible injuries to your back, never try to lift the machine by one person. When lifting, get a firm footing, hold BookDrive close to your body, and bend your knees.
- ▶▶ The machine has air ventilation holes on the right side panel. Ensure that the machine is installed with a minimum clearance of 30 cm or 12 inches from the right side panel to the wall. A poorly ventilated machine can cause excessive internal heat and fire.
- ▶▶ When moving the machine, be sure to unplug the power cord from the outlet and unplug the USB cord from the PC connected.
- ▶▶ When moving the machine, do not tilt it more than 10 degrees. If tilted excessively, it may cause some parts in the machine to dislocate and malfunction.

2 For Power & Earth Connection

- ▶▶ Use only the power cord provided with the machine. Using a different cord may cause fire or electric shock.
- ▶▶ This scanner comes with a convertible adapter that accepts 110 - 240 V electricity.
- ▶▶ Do not pull, bend, chafe or otherwise damage the power cord. A damaged cord can cause fire or electric shock.
- ▶▶ Always pull at the plug, never at the wire, when you want to disconnect the machine from the power supply. Forcibly pulling on a cord can damage it and cause fire or electric shock.
- ▶▶ Connect the machine directly to a wall outlet. If you need to use an extension cord, make sure it can handle the required power.
- ▶▶ Never touch a power cord with wet hands. Danger of electric shock exists.
- ▶▶ Stop operation immediately if you machine produces smoke, excessive heat, unusual noise, or smell, or if liquid is spilt onto the machine. These conditions can cause fire. In such cases, Immediately switch off and unplug the machine, and contact our Customer Support Center.
- ▶▶ If the power cord is broken or insulated wires are exposed, stop from using the machine. Ask our Customer Support Center or your dealers for a replacement. Using a damaged cord can cause fire or electric shock.
- ▶▶ Do not unplug the machine while it is on.
- ▶▶ When the machine is not used over an extended period of time, switch it off and unplug it. If an unused machine is left connected to a power source for a long period, degraded insulation can cause electric shock, current leakage, or fire.

- ▶▶ Do not unscrew any parts of the machine. Never open or remove any covers that are secured with screws unless specifically instructed in the manual. A high voltage component can cause electric shock. Leave this work only to a certified technician. Access to machine's interior can cause electric shock.
- ▶▶ Once a month, unplug the machine and check the power cord for the following:
 - The power cord is plugged firmly into a receptacle.
 - The plug is not excessively heated, rusted, or bent.
 - The plug and receptacle are free of dust.
 - The cord is not cracked or frayed.
- ▶▶ If you notice any unusual conditions, contact our Customer Support Center or your dealers immediately.



3

For Machine Operation


- ▶▶ Do not place any liquid container such as a coffee cup on the machine. Spilt water can cause fire or electric shock.
- ▶▶ Make sure no objects fall into the machine. Do not place any objects on the machine. If an object gets into the operation area, switch off and unplug the machine to remove it. Do not attempt to remove the object if it gets inside the electronic panel area on the right side of the machine or any area that involves unscrewing any parts of the machine. For such those cases, contact our Customer Support Center or your dealers.
- ▶▶ Do not attempt to alter the machine configuration, or modify any parts. An unauthorized modification is prohibited. It can cause smoke or fire.

Your BookDrive is an automatic page-turning scanner.
Your BookDrive includes the following components:


2.1 Component

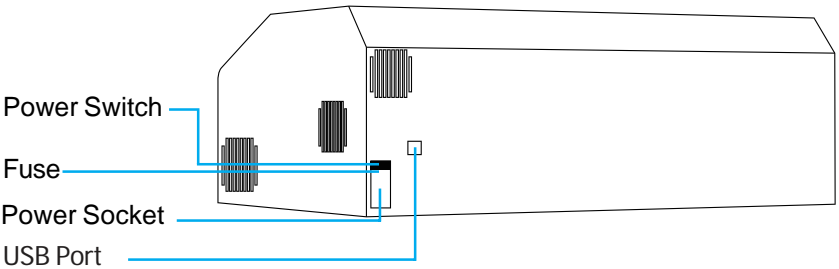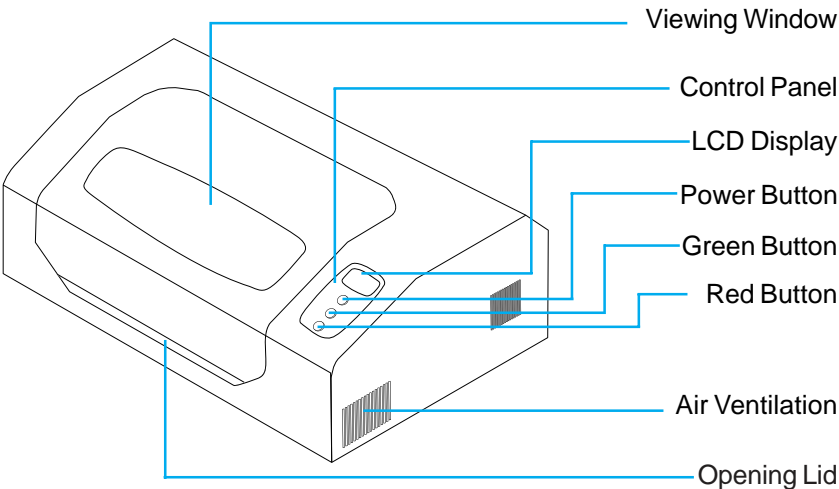


2.2 Part Identification

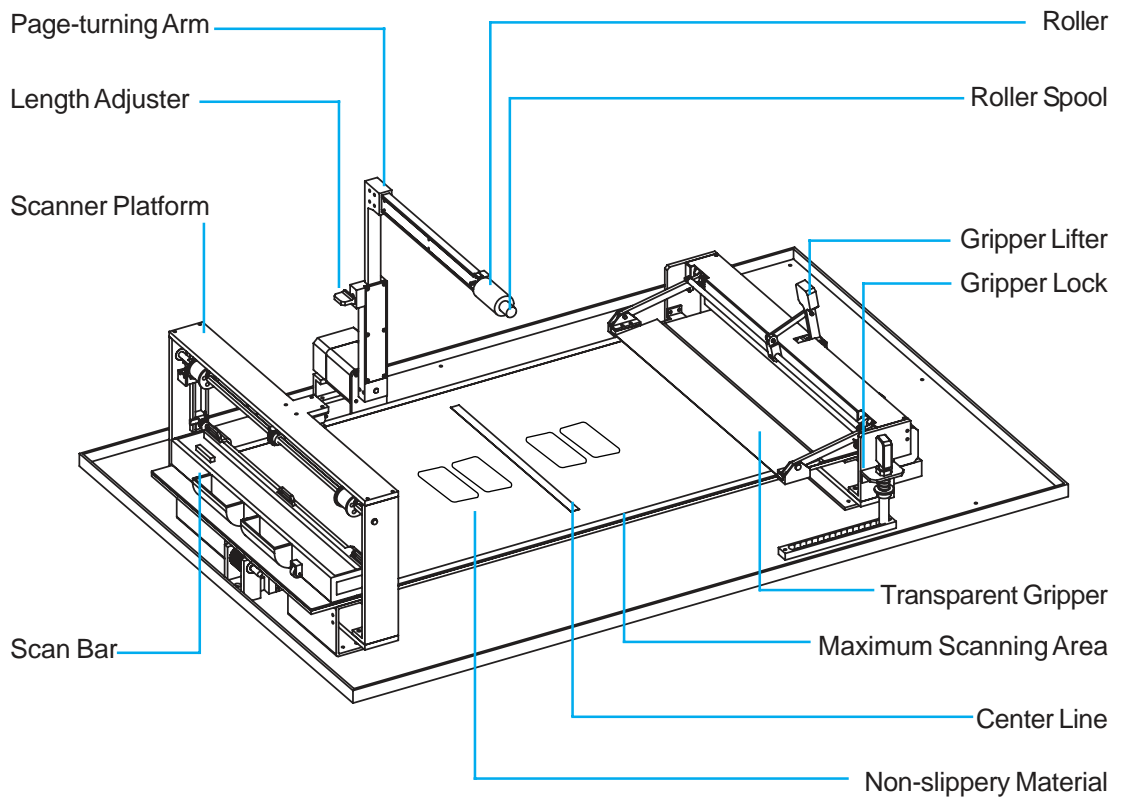

2.3 Control Panel

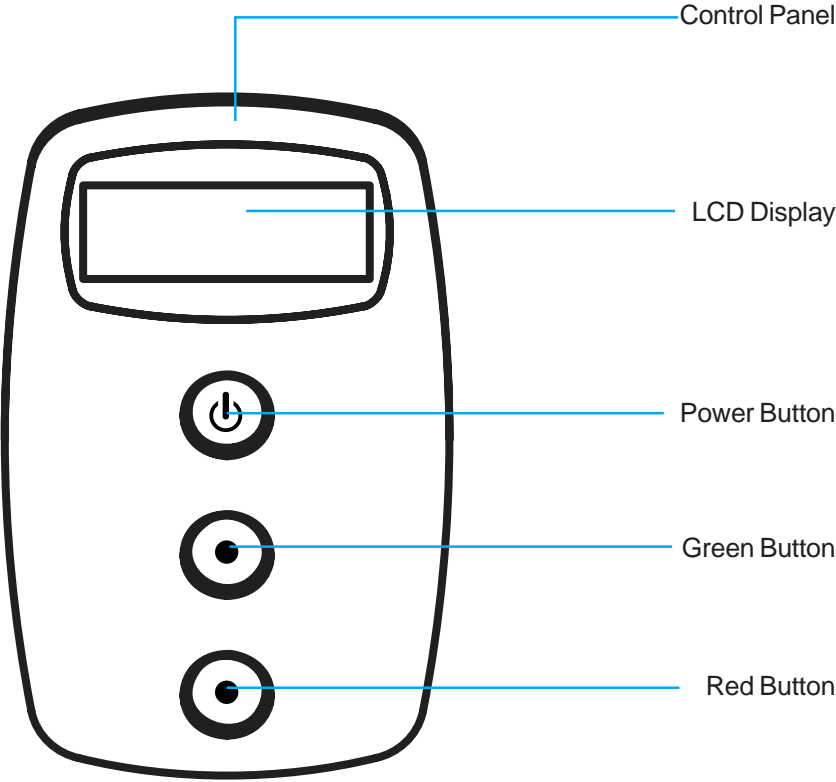

3.1 Dimension & Weight

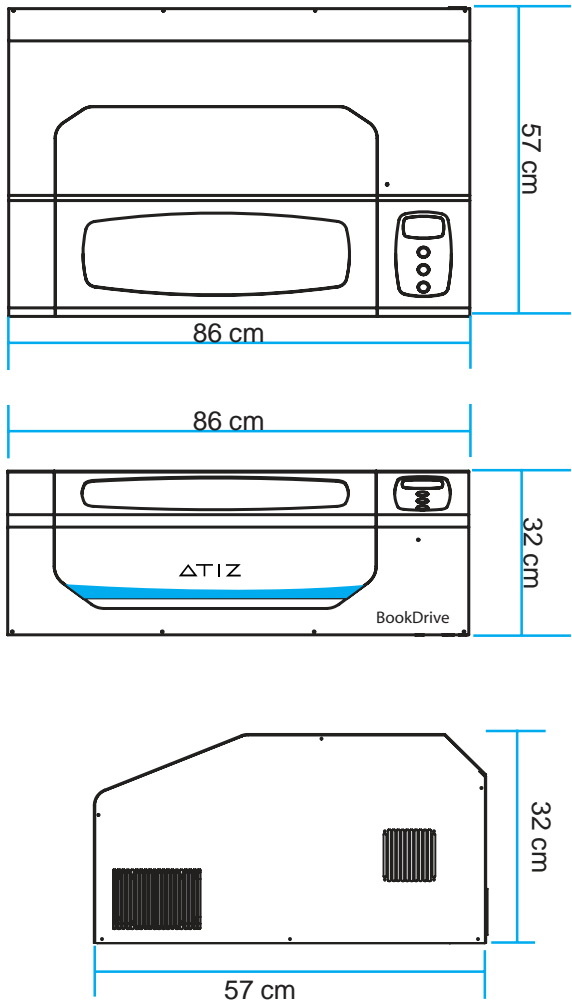


Dimensions (W x D x H)
34" x 22" x 13" (86 x 57 x 32 cm)


Weight
66 lb (30 kg)

3.2 Location


- 1 The table to put BookDrive on top must be at least 86 x 57 cm. or 34" x 22".

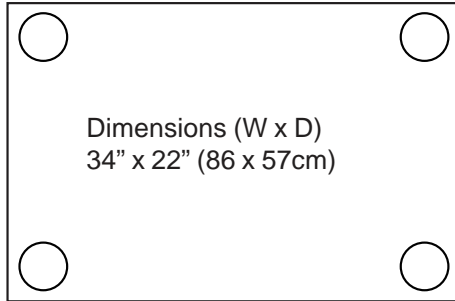


- 2 The table must be firm and is able to withstand a minimum weight of 30 kg. or 66 lbs.

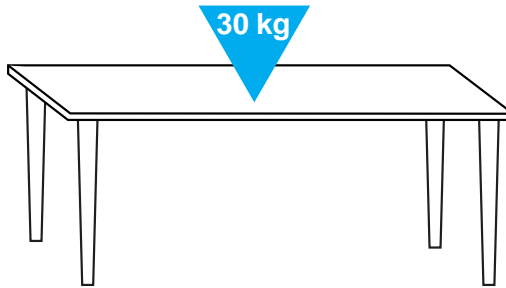



- 3 Keep BookDrive in a clean area. Avoid an area that is wet, too humid, or has extreme temperatures.

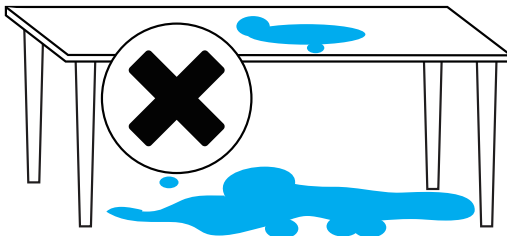


4.1 Installing a Roller

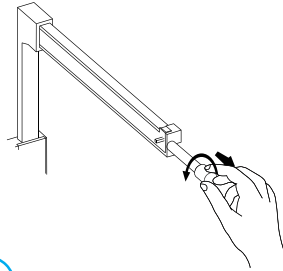

 
- 1 Release the roller spool by turning counter-clockwise.

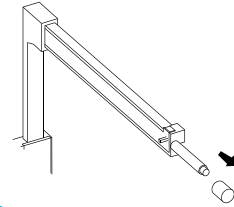


- 2 Remove the roller spool.

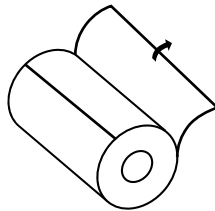

- 3 Peel off the new roller.

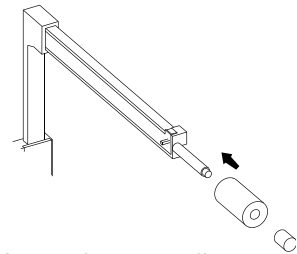


- 4 Insert the new roller into the page-turning arm.

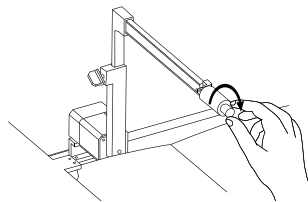

- 5 Tight the roller spool by turning clockwise.


4.2 Installing Software

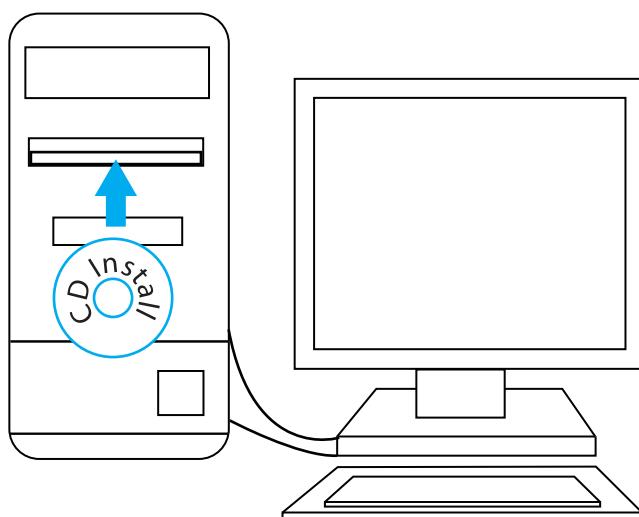


Install the software supplied by Atiz before connecting the scanner to you computer. Follow the installation procedures until finish.

4.3 Setting Up


- 1 Connecting BookDrive to a PC.

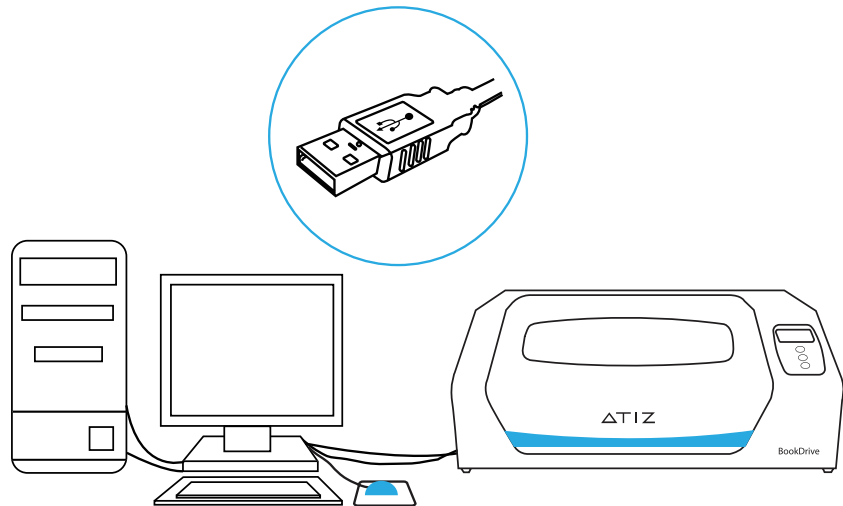


- 2 Turn on the power switch at the back.

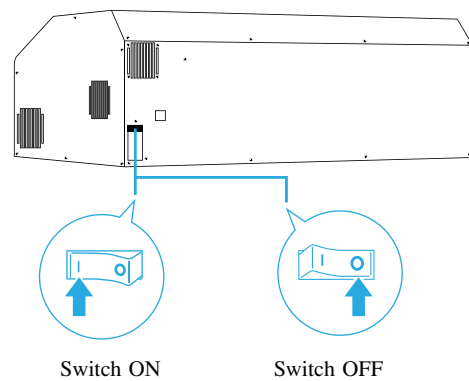

- 3 The message on the LCD display showing that it is in standby mode.

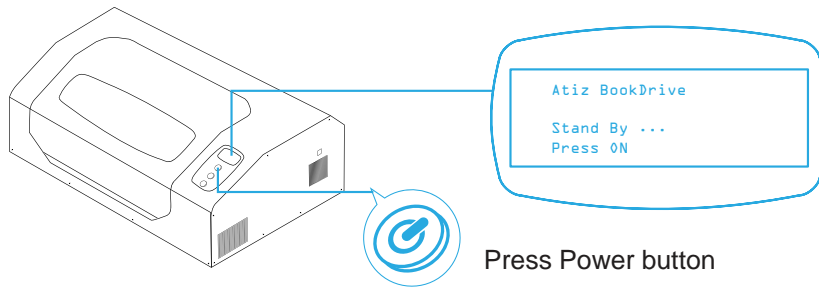


- 4 Open the Lid.

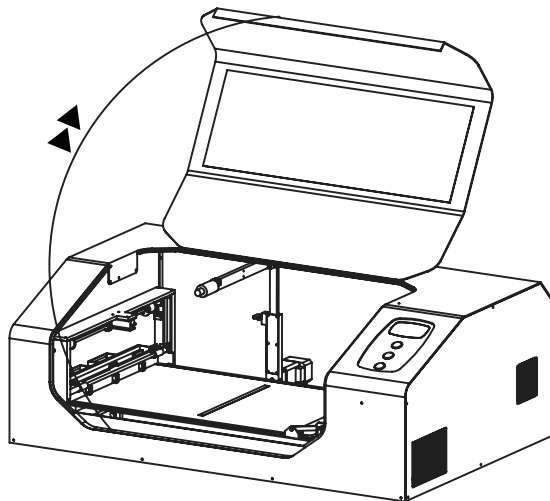

4.4 Loading the Book


- 1 Turn to the first page you want to scan.

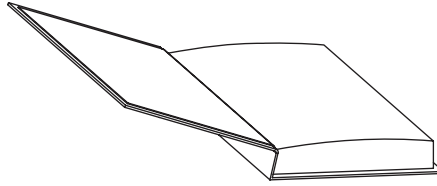


Tip

If the book is new, you can help BookDrive by making the pages of the book not stick to one another.

- 2 Inside BookDrive, notice the center line. Make sure that the scanner platform is on the left side and gripper is on the right side.

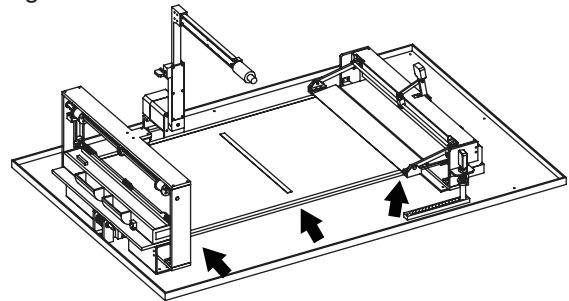


- 3 Putting the book on the surface as show.

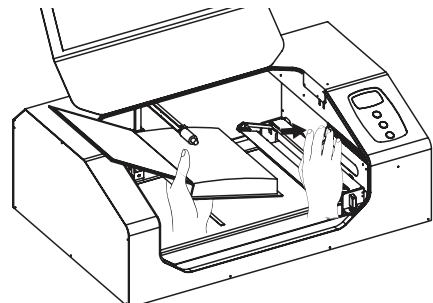


4


Approximately 2/3 of the transparent gripper should be on top of the book, moderately pressing the book to keep book stationary.

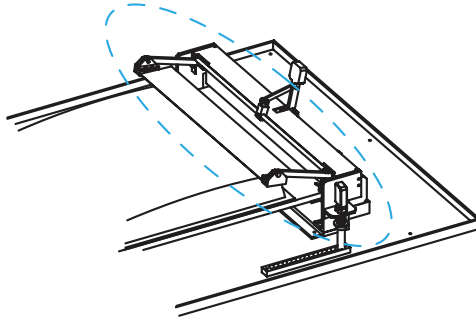


Positioning the Gripper

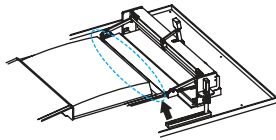

 Books come in various sizes. The purpose of the gripper is to keep the book stationary during the entire scanning process and to help keep the page from flipping spontaneously. The position of the gripper is re-adjustable. You have to set a proper position for the gripper to support the size of the book you intend to scan.




 To change the gripper position, first release the gripper lock by pulling the bolt up. Then reposition the gripper set to the left or right side as desired.




Adjust the position of the gripper so that the transparent gripper is on top of the page. Adjust it so that 2/3 of the transparent gripper is on top of the right page. The gripper should be firmly on top of the book.

- 5 Once you have done this, the book should lie open on the center of the surface as illustrated here.

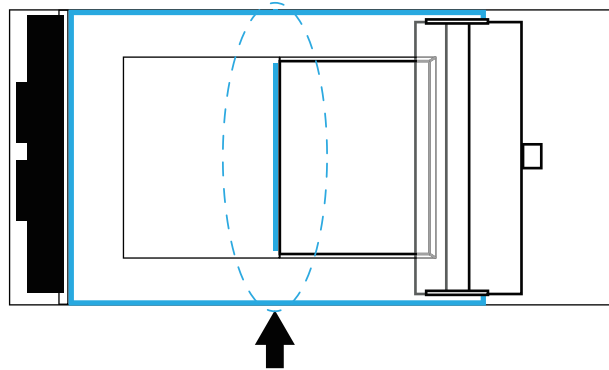


The center of the book should be at the center line of the surface.

- 6 Reposition the scanner platform so that it is over the left rim of the book.

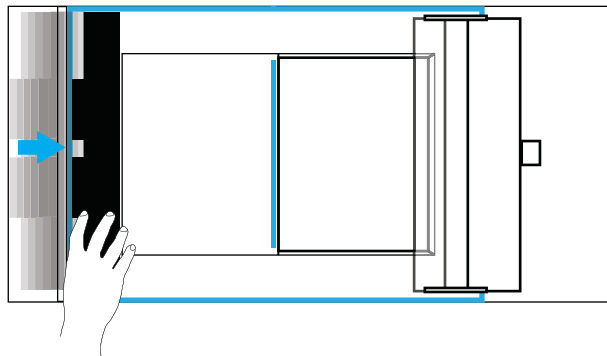


This is to tell the scanner how big the size of the book is.


- 7 Press the green button.

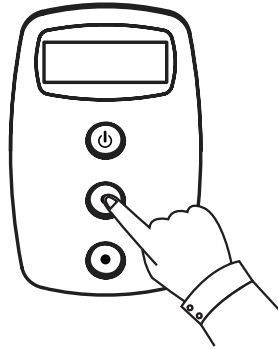


- 8 Once you pressed the green button, the scanner platform will move from the left edge of the book to the right side.

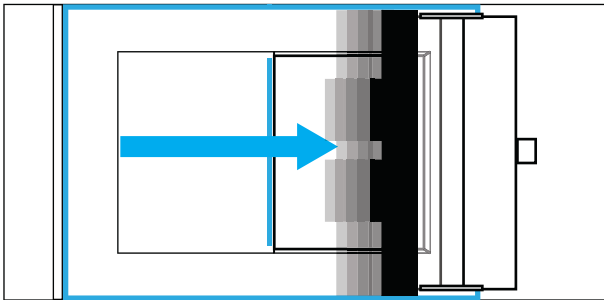


- 9 Adjust the length of the page-turning arm so that the roller is near **but does not touch** any part of the scanner platform.

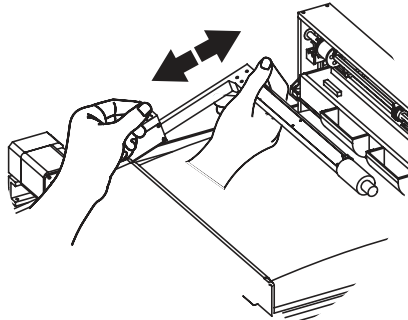

- 10 Once you have set an appropriate length for the page-turning arm, pivot it back to its original upright position.

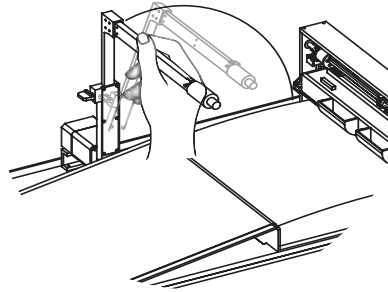


- 11 Now the book setup is done, BookDrive is ready for your further instruction from a PC. Close the lid for safety and the quality of scanning. The lid shields the external ambient light from interfering the scanning.

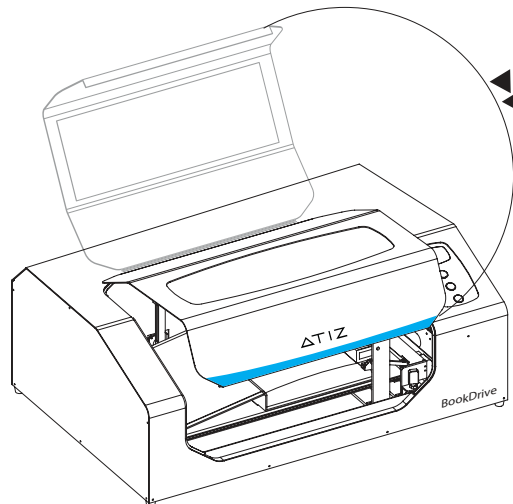


- 12 Now come to the PC. The PC should already be connected with the BookDrive via USB connection. If not, please make it so.



- 13 The BookDrive controller software will appear on the PC.

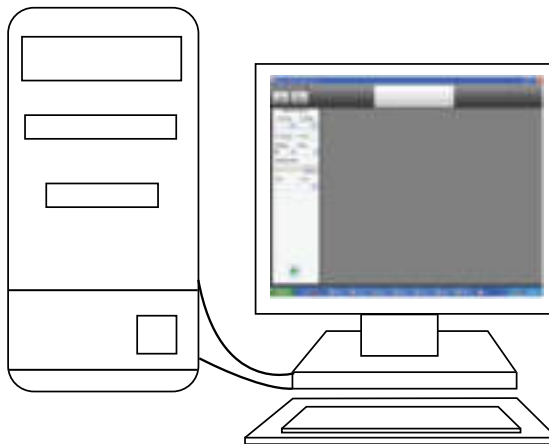


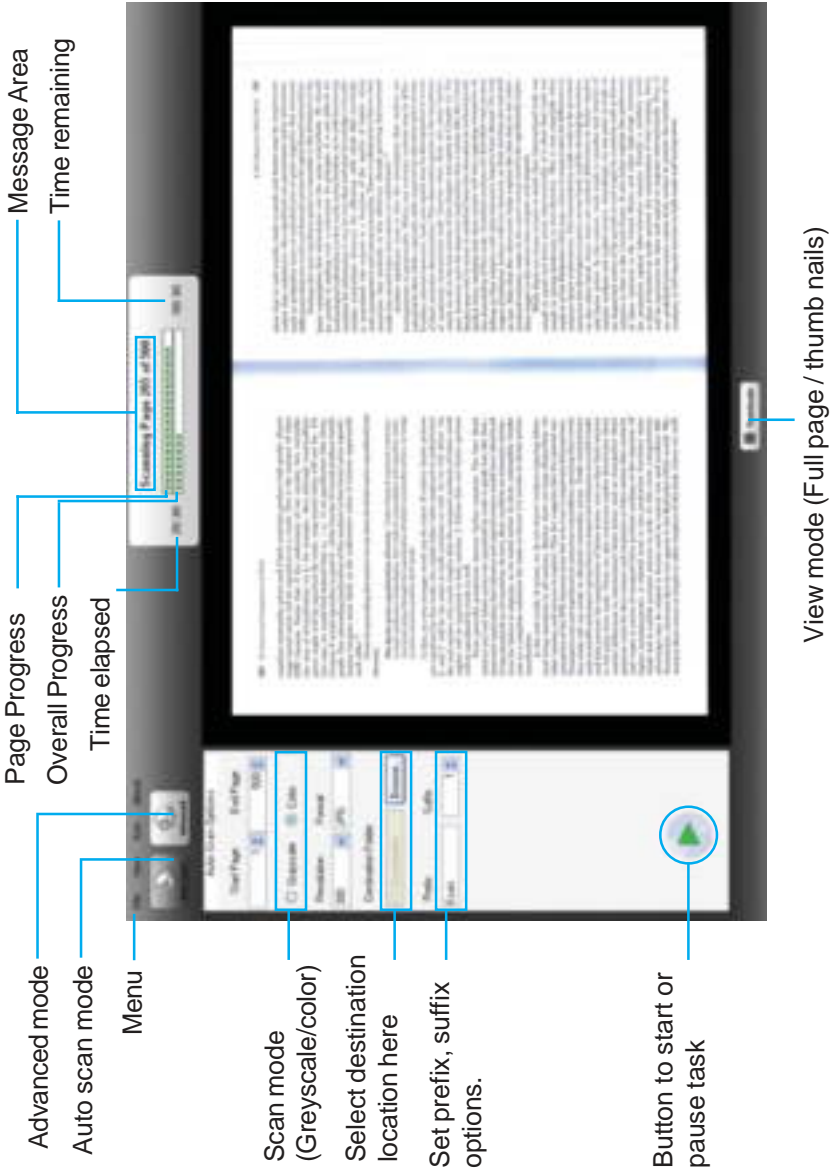

6.1 Maintenance & Normal Care


1

Avoid putting BookDrive in a wet or humid area.

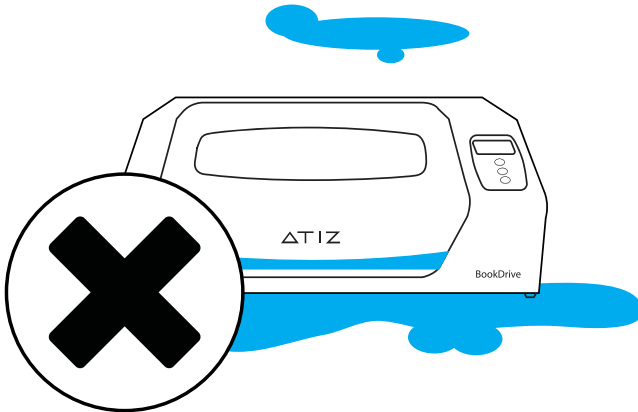

2


Avoid putting BookDrive in a dusty area. Keep BookDrive free of dust.

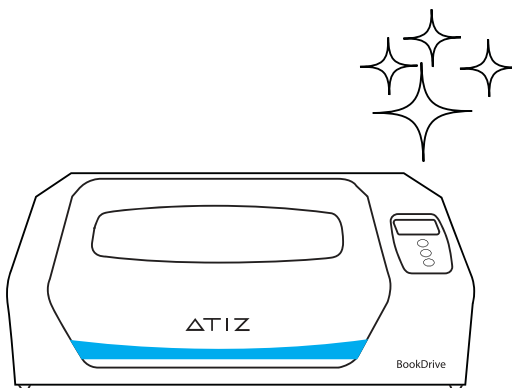

6.2 Cleaning the Outer Part of BookDrive


1

Use only dry cloth free of dust to clean BookDrive.

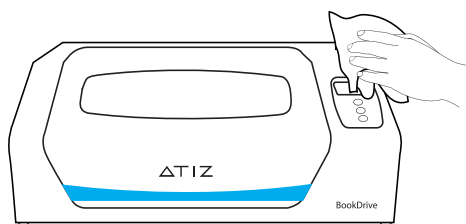

2


Do not use wet cloth to clean the machine because it may damage the machine or cause electric shock.

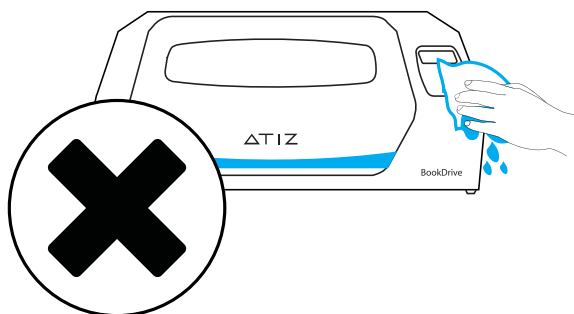

6.3 Cleaning the Inner Part of BookDrive


1

Use clean, dry cloth to clean the inner part of BookDrive and make it free of dust.

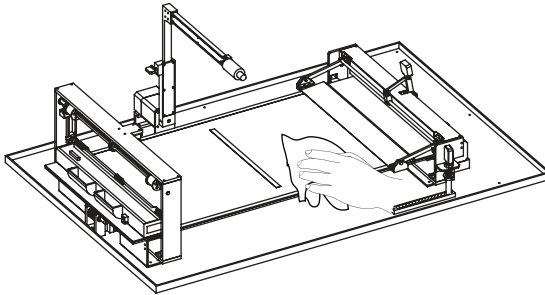


2



Avoid using water to clean BookDrive because it can damage the machine or cause electric shock. Make sure the machine is turned off and the plug is removed from the power outlet before attempting to clean.

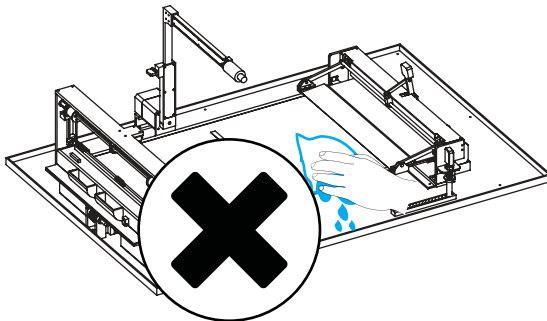


7.1 Replacing Roller

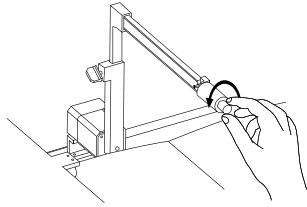


 
- 1 Release the roller spool by turning counter clockwise.

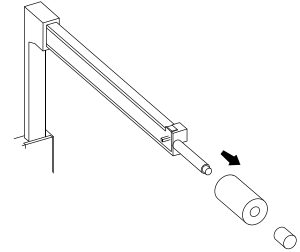

- 2 Remove the used-up roller from the page-turning arm.

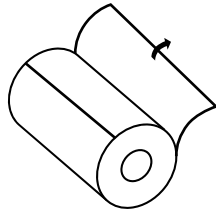


- 3 Peel off the new roller.

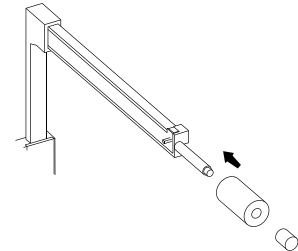 

- 4 Insert the new roller into the page-turning arm.

- 5 Tight the roller spool by turning clockwise.

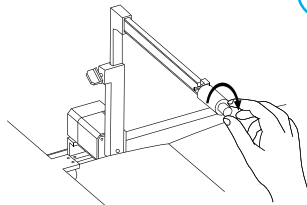


7.2 When BookDrive appears to malfunction

Please check the problem from this manual. If you could not find it anywhere on this manual such as the machine seems to hang, or stop functioning properly, please contact our customer support center or your dealers. For more information, visit www.atiz.com/support.php

Please review manual if there is a problem with BookDrive. If you are unable to solve the problem, please contact our customer support center or your certified BookDrive dealer.


7.3 After a power shortage

- 1 After a power shortage or a blackout, please switch off the machine.

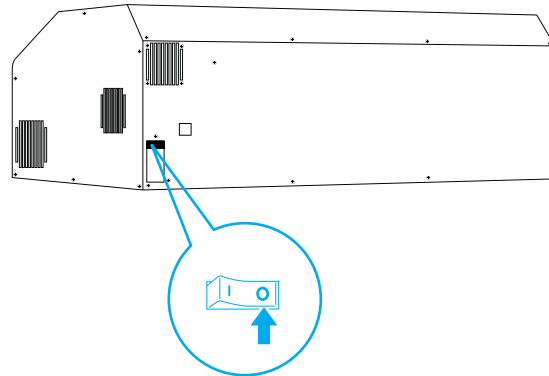


Switch OFF

- 2 Open the lid to check if the page-turning arm is in the middle of turning the page. If the page is stuck with the roller, remove it and set the positions of all the components to their normal, original position.

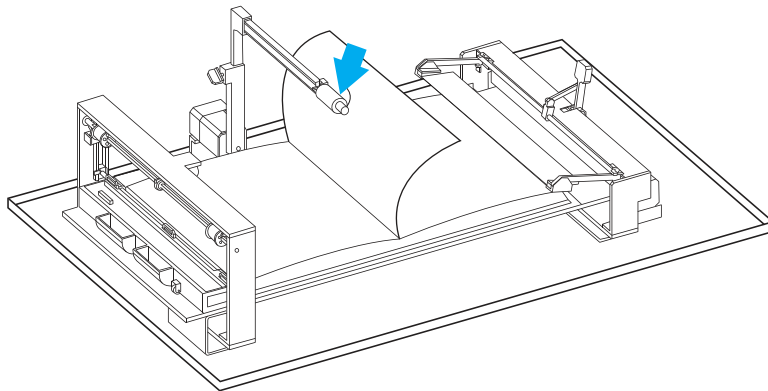


7.4 When the machine is on

But the message on the LCD appears blank and does not respond when you press any button, please get rid of the and ensure that the that power cord is securely plugged into its socket.

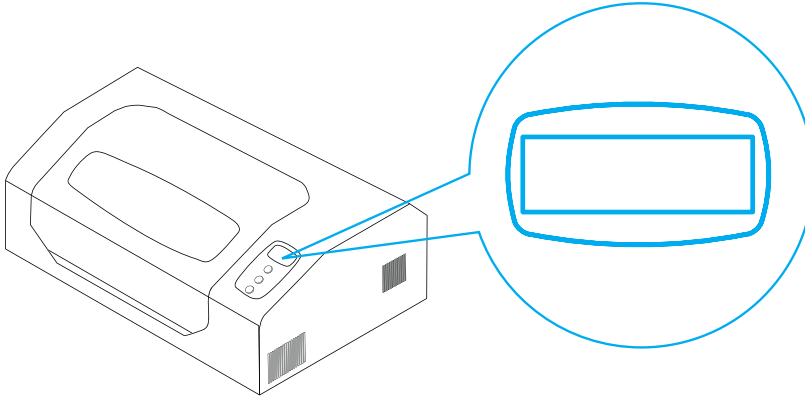

1

Check the fuse box at the back of the machine. If it appears to be broken, please contact your dealer or our support center.

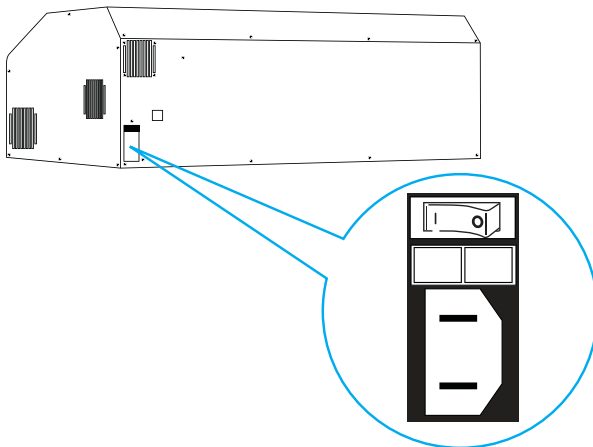

7.5 Problems with the Connection

Only use BookDrive with a PC that supports USB 2.0 Hi-speed.

Note: BookDrive is not compatible with USB 1.0 or USB 1.1.

It is important that the PC you use meets the minimum requirements set forth by the instruction.

