



*The New Edge in Fragrance Technology*

# ScentZone 100 User Manual



Eco-Scent is an affiliate of



[www.eco-scent.com](http://www.eco-scent.com)  
256-229-5551



© 2009 SnowMasters

This manual provides instructions for the panel operation of the ScentZone 100 Fragrance Delivery System. Please read all the instructions.

General Notes: The Presets (Up) and Duration (Down) buttons scroll through available options. The Enter button is used to implement the desired option.


**1** With the machine plugged into a power source, turn on the red power switch on the right side of the unit. The LCD panel will light and the opening display will alternate between "Eco-Scent ScentZone 100 " and the current time/date & Preset. Also, the green power light will glow.



**2** At the opening screen, press the Menu button once.



"Presets" appears on the display. The Up and Down arrows may now be used to scroll through this and other options, including "Manual Override", and "Set Time & Date", "Preset Configuration" and "Information". See the following steps for details on these options.

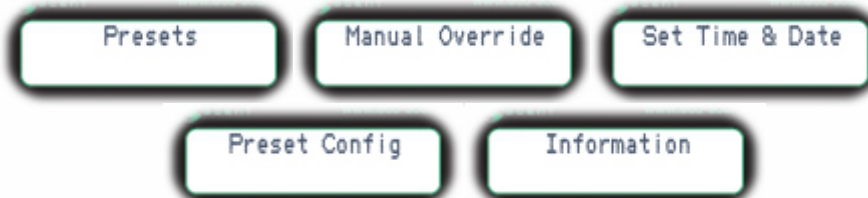

**3** With the "Presets" option visible, click the Enter button.



Now use the Up and Down arrows to scroll through the available Presets. When the desired Preset is displayed, press Enter. The display returns to the opening screen.



Preset Times	
Restaurant	11:00am - 9:00pm
Hotel	6:30am - 9:30am & 2:30pm - 9:30pm
Retail	9:30am - 6:30pm
Home	M-F: 6:30am - 9:30am & 4:00pm - 8:00pm Sa-Su: 7:00am - 4:00pm

(NOTE: The "Presets" may also be directly accessed by pressing the Presets button at the opening screen.)



- 4 With the "Manual Override " option visible, press Enter.

Manual Override

Use the Up and Down arrows to scroll through the available Manual Override options. The options are from "OFF" up to 12 hours ("12h 00m"), in 15 minute increments. When the desired option is displayed, press Enter. The display returns to the opening screen.

Manual Override  
OFF

Manual Override  
15m - 12h

- 5 With the "Set Time & Date" option visible, press Enter.

Set Time & Date

The date appears on the screen with 2 arrows above the month. Use the Up and Down arrows to change the number & then press Enter. Do the same with the day, the year, and the time. When Enter is pressed the last time, the display returns to the opening screen.

↓↓  
08/05/2008 11:00am

- 6 With the "Preset Config" option visible, click the Enter button.

Preset Config

Now use Up and Down to choose either "Preset Option Custom 1" or "Preset Option Custom 2". Press Enter. The display shows "Start Time:" and a time. Use Up and Down to change the time (by 1 hour increments). Press Enter twice. The display now shows "Stop Time:" and a time. Set and Enter the desired time. The display returns to "Preset Custom #".

Preset Option  
Custom 1

Preset Option  
Custom 2

Start Time:  
12:00am

Stop Time:  
12:00am

- 7 With the "Information" option visible, press Enter.

Information

The installed software version is displayed, "Firmware Version 2.5.A". Press Enter. The display returns to "Information".

Firmware Version  
2.5.A

- 8 At the opening screen, press the Duration button once.



The current "Duration" setting appears on the display. Press Up and Down to choose from durations of "Short" (60 sec on, 180 sec off), "Medium" (60 sec on, 60 sec off), or "Long" (180 sec on, 60 sec off). Press Enter. The display returns to the opening screen.

Duration  
Short

Duration  
Medium

Duration  
Long

- 9 At the opening screen, press the Enter/Fan Speed button once.



The current "Fan Speed" setting appears on the display. Press Up and Down to choose from speeds of "1" to "8". Press Enter. The display returns to the opening screen.



---

**Additional Notes:**

- 1) The light with the label "Active" will glow when scent is being dispensed.
- 2) If the machine malfunctions, turn the power off, wait 30 seconds, and turn it back on. If it continues to malfunction, call our 24 Hour Technical Support at 1-800-745-8599.