

E-Race v3

User Manual

Original Author: Bruno CELDRAN

Last Editor: Bruno CELDRAN

Revision: 1

1. INSTALLATION	3
1.1. DISTRIBUTION KIT.....	3
1.2. DIRECTORIES	3
1.3. FIRST USE	3
2. DATA MANAGER	5
3. CHANNELS.....	6
3.1. CHANNELS DISPLAY	6
3.2. CHANNELS PROPERTIES.....	6
3.3. CHANNEL TOOLS	7
4. DATA ANALYSIS	8
4.1. MAIN MENU.....	8
4.2. DISPLAY INTERFACE	8
CHANNELS TABLE.....	8
TRACED CHANNELS.....	8
ZOOM	9
TIME/DISTANCE TOGGLE	9
FLOATING PANELS	9
SCREEN CONFIGURATIONS.....	9
LAPS	10
KEYBOARD SHORTCUTS	10
4.3. TABS	10
OVERVIEW.....	10
TIME/DISTANCE GRAPHS.....	10
X/Y GRAPHS	11
STATISTICS GRAPHS.....	11
5. MAPS.....	12
5.1. OVERVIEW	12
5.2. MAP OPTIONS	12
5.3. MAP CREATION	12
5.4. MAP SELECTION	12
6. LAPS.....	14
6.1. LAPS DISPLAY	14
6.2. LAP TOOLS	14
SPLIT.....	14
MERGE.....	14
SHIFT	14
RESTORE.....	14
7. OPTIONS.....	15
7.1. USER INTERFACE	15
7.2. LANGUAGE	15
7.3. GRAPHS.....	15
8. SESSION INFORMATION	16
9. USER INTERFACE CUSTOMIZATION	17
9.1. GENERAL	17
9.2. TABS	17
9.3. LAYOUTS.....	17

1. Installation

1.1. Distribution kit


E-Race software is distributed as a set of 6 files :

	Dossier de fichiers Dossier de fichiers Dossier de fichiers 1 Ko Fichier ID 1 876 Ko Application 2 Ko Paramètres de confi...	28/08/2008 11:13 28/08/2008 11:13 28/08/2008 11:13 28/08/2008 11:13 07/04/2006 18:19 28/08/2008 11:13
--	---	--


Launch the setup.exe program to install E-Race.

The installation software will detect if E-Race is already installed, and automatically upgrade what's needed.

At the end of the installation, the following window should appear:

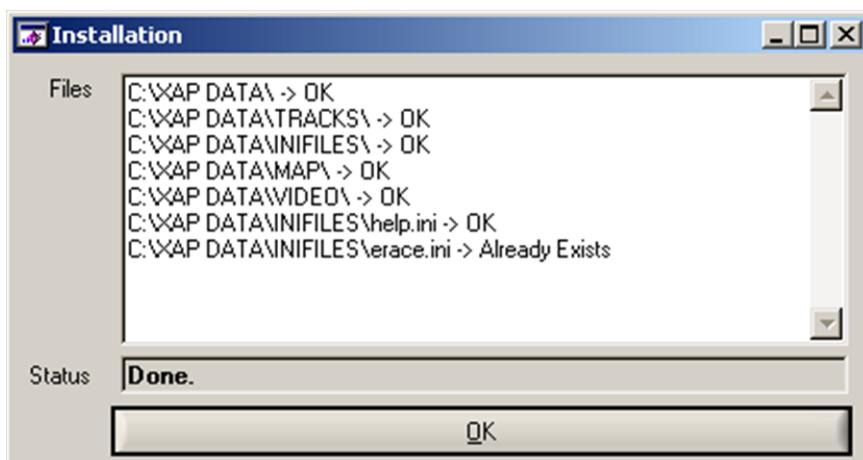

This is the report of the directory creation utility. If at this point you have any error, please contact us.

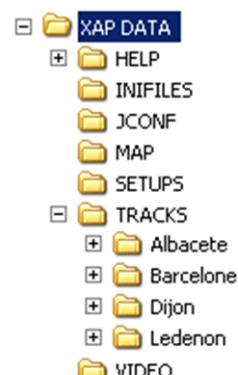

1.2. Directories

E-Race uses the C:\XAP DATA\ directory as root.

Each track and session created with E-Link are placed under this root. The Maps extracted will be saved under the MAP directory.



1.3. First Use

At the first use of the software you have to choose the language of the user interface.


You'll be able to change the language later using the **Options\Language** Menu.

Then you have to select the default user interface you'll use.



These are a set of tabs used for displaying data.


Now the software is ready for use.

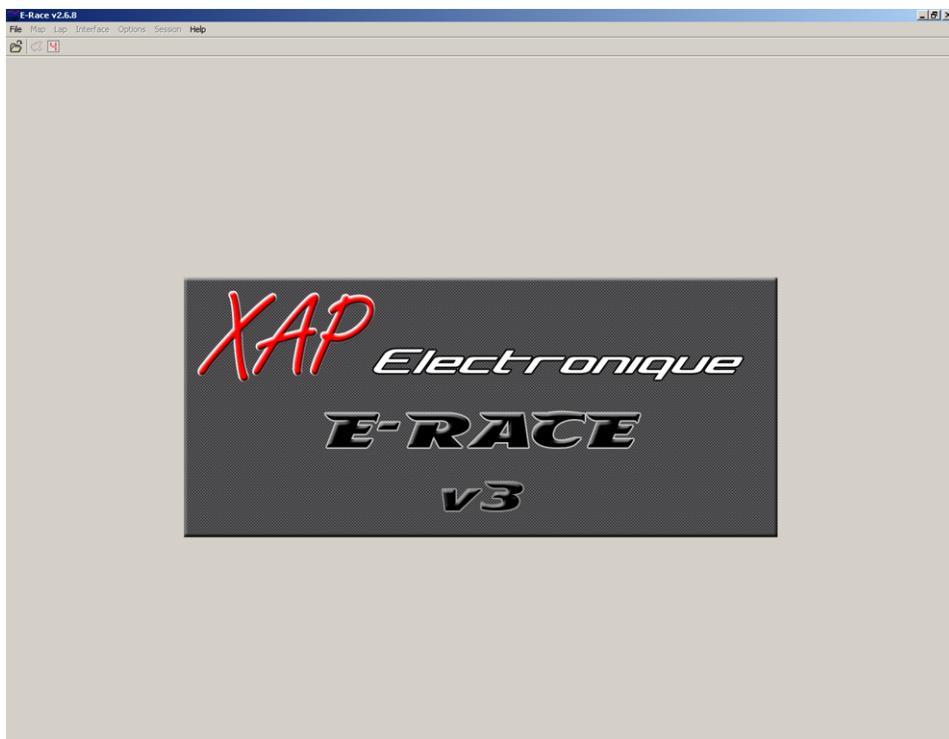

2. Data Manager


When E-Race is started the only available menu is the Data Manager, which allows you to open the data files.

It presents the Tracks and Session on the left, in a tree form.

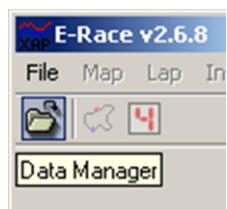


Sessions	Length	Laps	Date	Comments
Leedenon				
270408_C2				
V15	01h 33min	31	28/04/2008 18:21	
V1_DELLEUS	35min 42s	17	30/05/2008 15:25	
Lap 01	13:46.560			
Lap 02	01:29.840			
Lap 03	01:24.640			
Lap 04	01:23.860			
Lap 05	01:23.670			
Lap 06	01:23.740			
Lap 07	01:23.580			
Lap 08	01:24.200			
Lap 09	01:23.120			
Lap 10	01:23.470			
Lap 11	01:23.900			
Lap 12	01:23.700			
Lap 13	01:23.680			
Lap 14	01:23.820			
Lap 15	01:25.030			

Items legend:

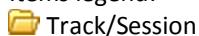

Track/Session

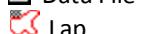

Data File




Lap



The following actions can be taken:

- Left single click on a line selects a file or a specific lap.
- Left double click on a file: opens the file in single or compare mode (depending on the chosen option).
- Left double click on a lap: open the corresponding file and points on the selected lap.
- Right click on a line: shows the following popup menu

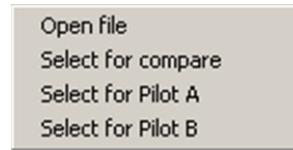

Open file : Opens the selected file.

Select for compare : Opens twice the selected file for comparison.

Select for Pilot A : Adds the selected file as Pilot A.

Select for Pilot B : Adds the selected file as Pilot B.

When either a Pilot A, or a Pilot A and a Pilot B are selected, you can click on OK to open the files.

3. Channels

3.1. Channels Display

Once at least one file is opened, the **Sessions\Channels** menu is available. You can display the channel table of a specific file (Pilot A or Pilot B).

This reflects exactly the channel table as it appears in the file.

For each channel, you can edit the linear conversion (or enter a specific conversion table), change the filtering level, and Min/Max values.

Channel table											
Channels											
Num	Name	Unit	Freq.	Conv.	A	B	Edit	Min	Max	Filtering	Type
1	RPM		50	Linear ▾	1.00	0.00		0.00	0.00	None ▾	CHANNEL
2	GEAR		10	Linear ▾	1.00	0.00		0.00	0.00	None ▾	CHANNEL
3	OILP	bar	50	Linear ▾	0.00	0.00		0.00	0.00	None ▾	CHANNEL
4	WATER_T	°C	2	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
5	AIRT	°C	2	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
6	PAP	%	50	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
7	PEDALE	%	50	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
8	VBATT	V	20	Linear ▾	0.00	0.00		0.00	0.00	None ▾	CHANNEL
9	FUEL_P	bar	50	Linear ▾	0.00	0.00		0.00	0.00	None ▾	CHANNEL
10	OILT	°C	2	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
11	TOILBV	°C	2	Linear ▾	0.10	0.00		0.00	0.00	None ▾	CHANNEL
12	ADMP	mbar	20	Linear ▾	1.00	0.00		0.00	0.00	None ▾	CHANNEL
13	SPEED	km/h	20	Linear ▾	1.00	0.00		0.00	0.00	None ▾	CHANNEL
14	SPEEDGPS	km/h	5	Linear ▾	0.19	0.00		0.00	0.00	None ▾	CHANNEL
15	H_UTC		1	Linear ▾	1.00	0.00		0.00	0.00	None ▾	CHANNEL

Every channel is computed from its original binary value to its real value with the formula:


$$Y = A \cdot X + B.$$

To enter a specific conversion table :

- First change the "Conv." Option to "By Parts". It will make the "Edit" button available and the edition of A and B impossible.
- Click on the "Edit" button (8th column).

This panel appears.

- The first step is to set the Min and Max value of the channel
- Then set the first corresponding value on the left with the blue cursor, and the second with the red one.
- If you need more parts, add them with the "Nb of points" control. You can have up to 5 points.
- Click OK to save and exit.

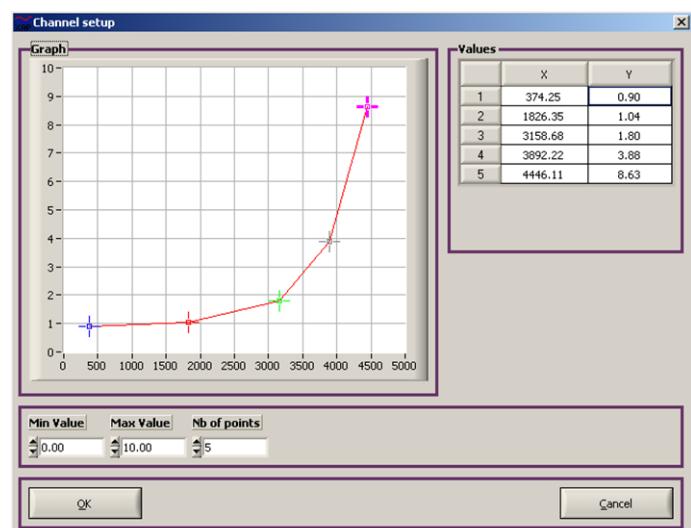

Restriction: This function has been designed to convert values from 0-5V sensors, so the values are computed from a 0-5000 mV range.

3.2. Channels properties


This panel comes by right-clicking on the label of a traced channel, and mostly contains the same information than the data channel table, plus trace-specific options, like the numbers of decimals.

Data Configuration	
Pilot A	
Name	SPEEDGPS
Unit	km/h
<input type="checkbox"/> Min/Max Min = 0.00 Max = 0.00	
A =	0.1850
B =	0.0000
Y = A * X + B	
Nb of decimals	1
Frequency	5
Filtering	None
OK	Cancel

3.3.Channel tools


By right-clicking on the 2nd (or 3rd) column of the channel table, this menu allows to:

- Realize a “Zero to Cursor” operation: you have to select first the new reference value on a graph. Only the “B” value of the channel will be modified.
- Bring up the Channel setup panel.
- Add in to the data window: it's small floating panel able to contain some channels and display their values.

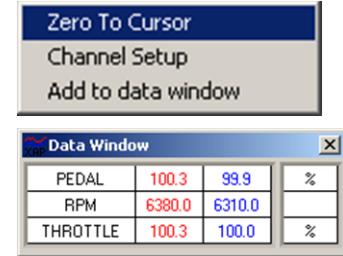

4. Data Analysis

4.1. Main Menu

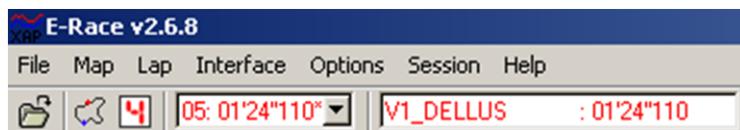

After opening the files, the main menu bar is undimmed, as the first tab of Analysis interface is opened. The following two controls make the floating tool windows appear. And the list boxes change the laps you are visualizing.

4.2. Display interface

The interface is made of a top control bar, including the basic controls, such as Time/Distance, Zoom, Shift, Screens, and a set of tabs containing the graphs.



This is fully user-editable, up to 4 graphs on one tab, up to 16 tabs in one configuration.

The available channels are in the table at the right of the screen.

Channels table

This table may have up to 4 tabs, depending on the channels present in the file :

- The Data tab contains the default physical channels.
- The Maths tab contains only computed channels.
- The Diag tab is filled with the diagnostic channels.
- The Susp tab contains the suspension channels.

It always indicates the value of the channel at the position of the cursor.

Channel	A	B
AIRT	25.4	25.4
PF_AV	9.4	9.4
ATMP	1004.7	1004.7
BARREL	1005.3	1005.3
FUEL_P	4.8	4.8
GEAR	5.0	5.0
MAP	999.0	999.0
OIL_P	2.8	2.8
OILT	117.8	117.8
PEDAL	37.1	37.1
RPM	5940.0	5940.0
THROTTLE	21.2	21.2
TPCARTE	1673.2	1673.2
VBATT	13.8	13.8
WATERTL	67.2	67.2
WSPEED	148.0	148.0



Traced Channels

Right-Clicking on a channel label make this menu appear :

The first button calls the “Channel Setup” tool. See below.

Second button realizes the Zero to Cursor operation.

The third button brings up a popup window with the Min and Max value for the selected data.


The “Go To Min” and “Go To Max” buttons set the cursor position to the Min and Max of the data.

The “Delete” button deletes the trace from the graph.

The third button shows the “Trace Properties” panel.

To make this menu disappear without clicking a button, click the right mouse button or press the Escape Key.

The Trace Properties panel allows you to change the color of a trace, or delete it. There is also the possibility to use the value itself for the Y-scale of the graph. Then click on the **Close** button, or press the Escape key.

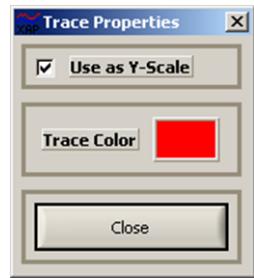

Zoom

The zoom controls allows you to zoom around the current cursor, by dividing the scale by 2. You can also obtain the same result as the **PLUS** button when left-double-clicking on a graph. The **RESTORE** button will restore the original scaling.



The black bar on the right symbolizes the position of the zoomed data in the selected lap, including its percentage.

You can drag the bar horizontally to navigate into the data.

Time/Distance toggle

This toggle allows to choose the X-Axis mode, time or distance. If there is no distance channel available, this item is dimmed.




Floating Panels

The **SHOW MAP** button make the map panel to appear. The red and blue of the two pilots, at the time or distance selected by the graph cursors.



cursors indicate the position


The localization of the cars on the maps depend on the beacon position. In **Track Mode**, if the data and the map position don't correspond, you can double-RIGHT-click the map to use the **Map Setup** tool.

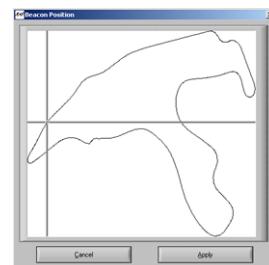

on

This tool allows you to change the position of the beacon, to a more accurate position.


Screen configurations

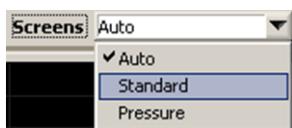

E-Race allows you to save your favorites screen configuration (graphs and channel traces on them), up to 16 different configurations. The last configuration used is stored in the "Auto" screen.

You can choose any saved screen configuration,

or save the current screen.

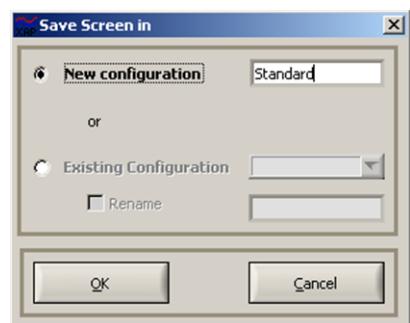

Click on the **Interface\Save Current Screen** menu :


A new panel will appear. If you want to create a new screen configuration, enter its name.

Or choose an existing configuration from the list, clicking on rename if it's needed.

Laps

The lap control allows you to choose the lap you want to display, for each pilot. The Best Lap is indicated with an asterisk.

This control only shows the **Enabled** laps. By default, all laps are **Enabled**.

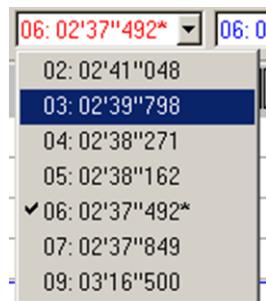

Keyboard shortcuts

You can use the **left/right arrows** to move the cursors on the graphs. If you are zooming, the arrow will make the graphs slide horizontally.


Pressing the **SHIFT** key and the arrows key, when the screen is zoomed, will slide the graphs page by page.

The **Page-Up** and **Page-Down** keys allow to change the current lap for the last used Pilot Lap control.

F1 will bring the contextual help.

4.3.Tabs

Overview

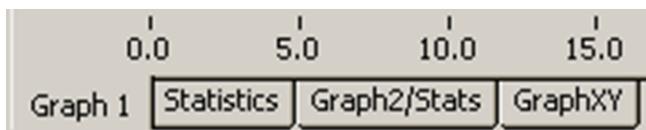


Each interface consists in a set of tabs (here, 4). You can navigate through them by clicking on their labels, at the bottom of the screen.

On each tab, there is up to 4 graph controls, of 3 different types :

- Time/Distance graphs: the data is traced against time or distance
- X/Y graphs: a channel is traced against another one.
- Statistics graphs: a 10 bars histogram of the data, computed on the current zoom level.

Time/Distance Graphs

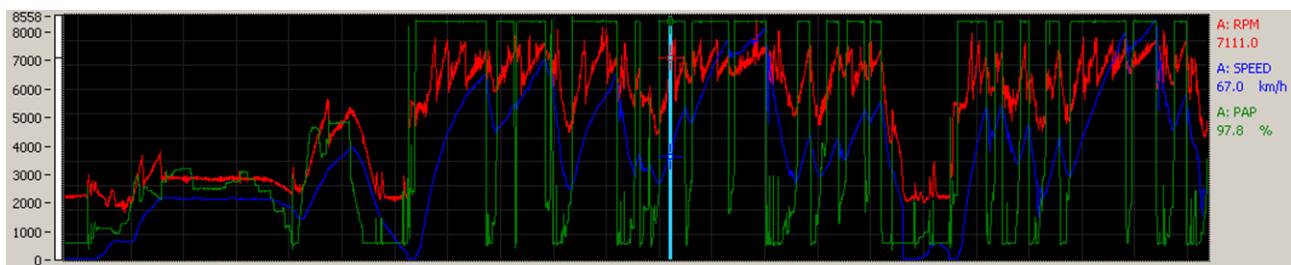

On these graphs the data is plotted against time or distance.

To plot a data channel on a Time/Distance graph, drag and drop the channel on the graph control from:

- the first column of the table (label) to erase all traces
- the second or third column to add a trace to the graph

Note: if there is more than one file opened, the first option traces the data for the two Pilots.

Restrictions: You can only overlay different channels from a given pilot, or different pilots for a given channel.


The default trace colors are red, blue, green and magenta. You can change the trace color with the Trace Properties panel (see above).

X/Y Graphs

This graph allows to plot one data against another one, typically oil pressure versus engine RPM, or pedal signal versus throttle position.

To put a data channel on the X axis, you have to drop it in the lower right part of the graph. The Y data has to be dropped in the upper left part.

The trace is also automatically adjusted when the zoom level changes, or when another part of data is selected with the zoom bar.

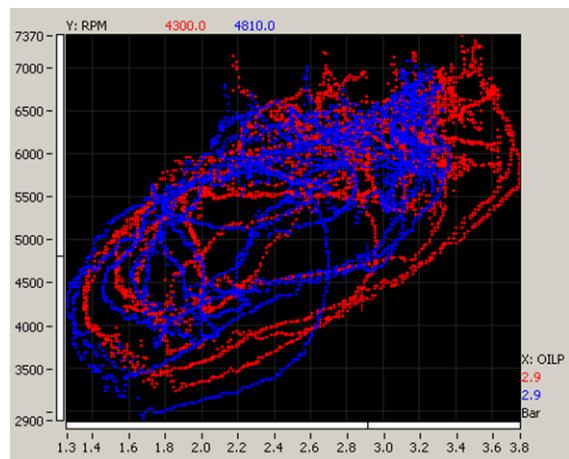

Statistics Graphs


This graph offers a histographic representation of data, for the selected lap or all laps.

On the left of the screen, there are the intervals, and on the right the % of time for this interval, and the total time.

For example in the capture beside, the **Pilot A** has been between 7280 and 6874 RPM 2.1% of time, 1.8s, and the **Pilot B** 2.6% of time, 2.2s.

You can display the channel of your choice with drag and drop from the channel table.

If you want to see all the values for the entire time of the session, use the **All Session** lap.

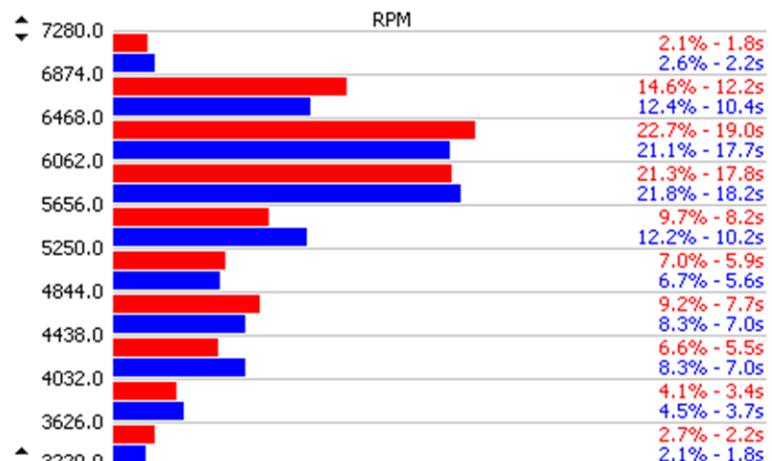

5. Maps

5.1. Overview

The localization of the vehicle can be made in two ways:

- Track mode: the position on the track is calculated with the distance channel, and traced on a pre-recorded map.
- Rallye mode: the position is computed in real time with the GPS data in the file.

The first mode is interesting when the GPS can't be fitted permanently in the vehicle. Otherwise, it's recommended to use the second mode.

5.2. Map Options




Click on **Options\Map** to display the Map Options panel.

You can set here the two modes previously presented.

The colors are those displayed on the floating map panel.

The external link is a new feature, working only in Rallye Mode. By putting the switch "ON", and launching the Google Earth application, the position of the vehicle is automatically displayed on its map, in real time. It's strongly recommended to use two different screens, one for E-Race, the other for Google Earth.


5.3. Map Creation

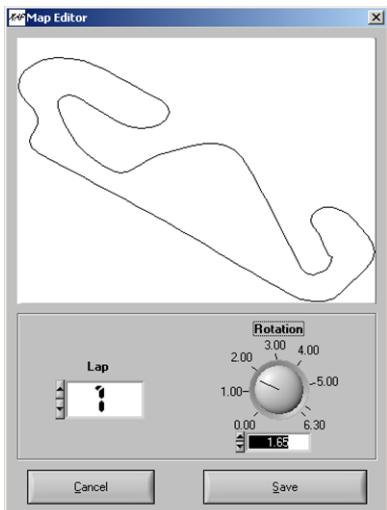

If the file you opened contains GPS data, you can use the **MAP\CREATE MAP** tool. Click on the arrows on the left of the numeric control **LAP** to visualize the GPS Data. When you have a good-looking map, you can rotate it with the **ROTATION** control on the right.

When you've finished, click on **SAVE**.

The software will ask you for the name of the map. If you give the name that already exists, it will be overwritten.

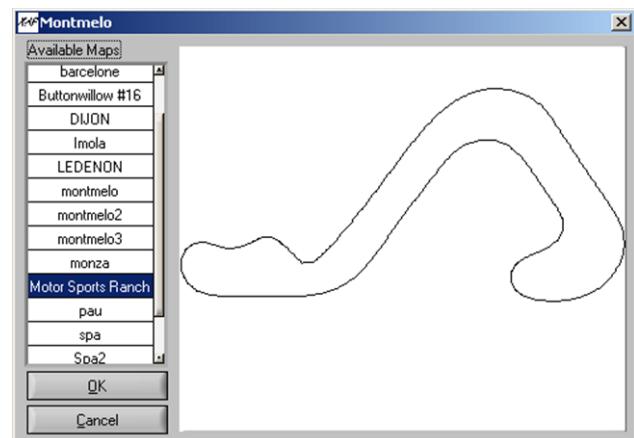

5.4. Map Selection

When you open a MAP file on a given track, the software take automatically by default the previous map selected for this track.

You also have the possibility to select another map, from all the maps you created.

Use the **MAP\SELECT MAP** item :

Now double-click on the list on the left to choose the map you want to use on this track. Click OK when you've chosen the right map.

6. Laps

6.1. Laps Display



In some cases, the laps recorded by the data logging system are inaccurate. They appear in the lap time list, but are not representatives of any pilot performance.

So you may want to disable them, as they disturb the analysis of the good laps.

Use the **Lap\Display** menu item to show this window.

Choose the Pilot you want to modify the laps in the list control on the top of the window. His lap time list appears in the table below.

Then double-click on the lap time you want to disable. The cell will become grey, as the lap is disabled. To re-enable a lap just double-click on it.

The effect is immediate. Click on OK to close this window.



6.2. Lap tools

In the Lap menu, you'll access the different lap tools.

Split

First, you have to position the cursor on the point you want the current lap splitted. Then click on Laps\Split\Pilot X, when X is the name of the "Pilot" you want to split the lap.

You can make adjustment on the time, or the distance if it's available.

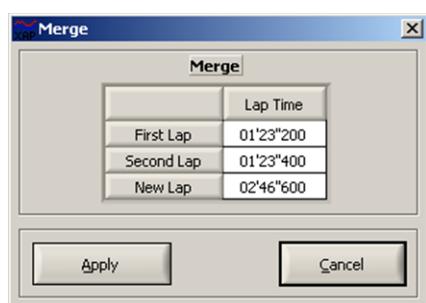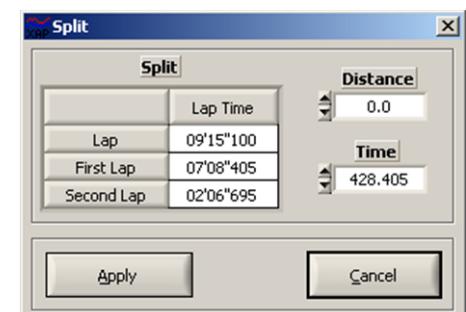

Merge

Select the first lap you want to merge and click on Lap\Merge\Pilot X. A panel appears with a summary of the action.

Click OK to merge the laps.

Shift

The shift tool allows to correct the lap shifting between two XAP files. Between the two sessions, the beacon may have been displaced, so you have to shift the starting of all laps.


You have first to shift the Pilot B data. Then click on Lap\Shift\Pilot B. The current shifting is saved in the file.

Restore

This item just restores the laps as they were in the original file, cancelling the modifications made with the lap tools.

7. Options

7.1. User Interface

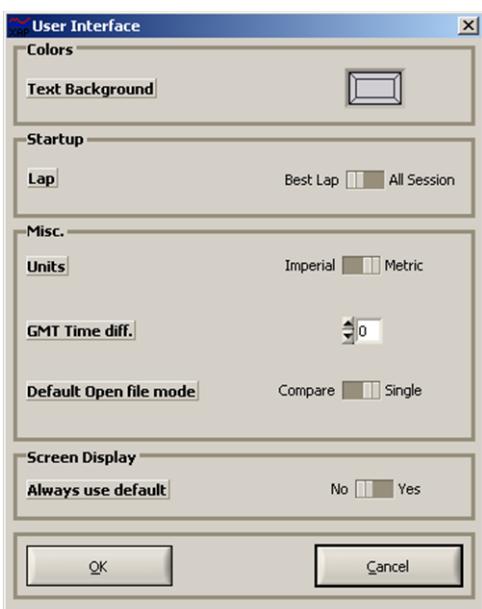

Click on Options\User Interface.

You can set :

- The color of the text labels background (default: transparent)
- The startup lap, Best Lap, or All Session
- The units, Imperial or metric
- The GMT Time difference, if it hasn't been set correctly in the data logging system
- The default opening file mode, while double-clicking on a file in the data manager
- The display to use at the opening of a file, the last one used or the default one defined in the configuration.

7.2. Language


You can change the language of the E-Race User Interface. Clicking OK will automatically close the software. The new language will be effective on the next use.



7.3. Graphs

In this box you can hide or show the grid of the graphs, and change traces from lines to dots (very slow).

You can also choose any color you like for the grid, the graph background and the main vertical cursor.

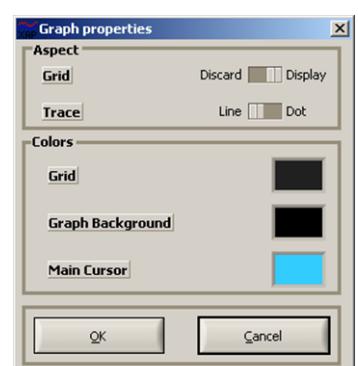


8. Session Information

The **Session Information** Tool allows you to access all information in the XAP file, as the pilot name, date, wheel perimeter...

The **Pilot Name, Date and Time** are only informational, and have no effect on the data.

The **Wheel Perimeter** field will influence the calculated Speed and Distance.

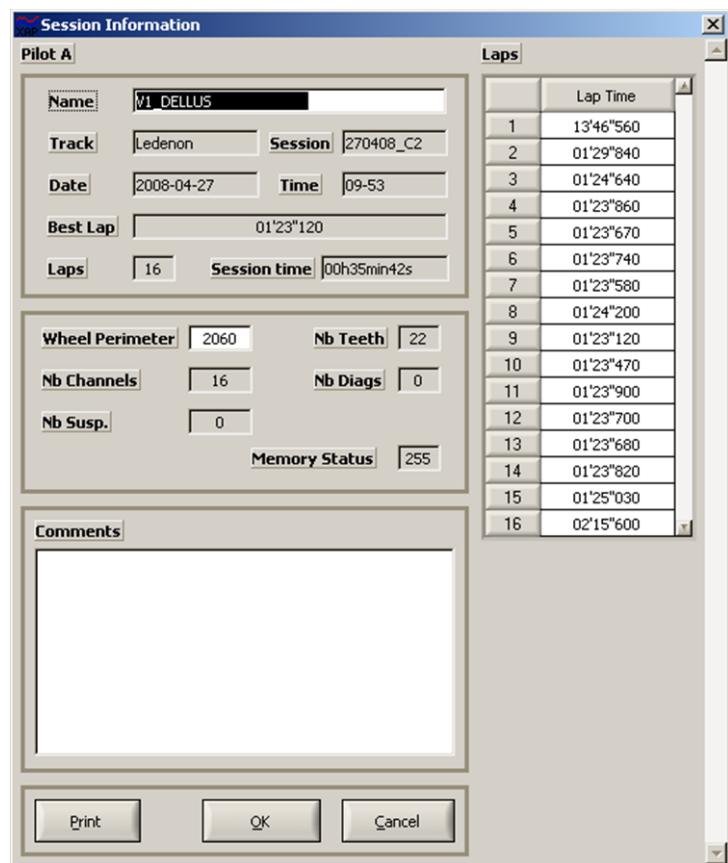

9. User Interface customization

Click on Interface>Edit to bring up the Interface Setup Panel.


9.1.General

Here you can set up a new background picture, shown when you launch E-Race. The picture file should be left in the E-race program files directory.

You can also set a new name for the interface.

9.2.Tabs

This is the list of the tabs present in the interface. Use the buttons below to create, delete, and move tabs.

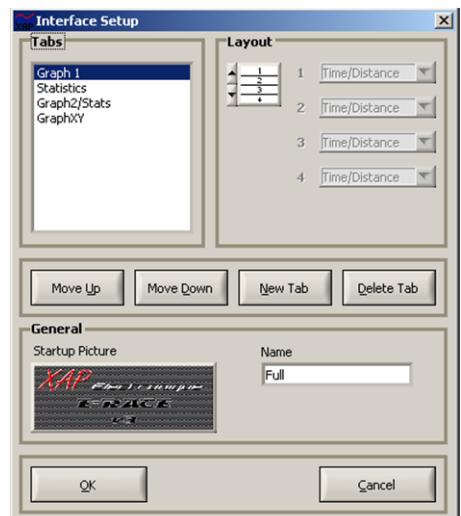

9.3.Layouts

Here are the available layouts:



$\frac{1}{2}$
 $\frac{3}{ }$ 1, 2 can be either Stats or X/Y Graphs. 3 is a Time/Distance graph.

$\frac{1}{2}$
 $\frac{3}{4}$ 1, 2, 3, 4 can be either Stats or X/Y Graphs.