chatterbox

chatterbox USER MANUAL

Dear Customer.

Thank you for choosing the Chatterbox. Please carefully read the user's manual before using the product so that you will use the Chatterbox correctly. Please keep the manual for future reference.

NOTICES

- The Chatterbox may malfunction if used or stored under certain conditions. Please avoid:
 - a. Long-term exposure to direct sun.
 - b. High temperature or humid environment.
 - c. Dirty environment.
 - d. Close proximity to strong magnetic currents or fields.
- The Chatterbox's power is supplied by three AAA size batteries (4.5V), included. Please use three AAA size batteries (4.5V) for replacement. When the product is no longer working properly or the LCD does not display clearly, please remove the batteries and reinstall after ten seconds. If it is still not working, please replace the batteries
- Please do not apply too much pressure to the Chatterbox's exterior (either on the buttons, LCD window, or plastic casing) to avoid damaging the product.
- Please use a clean, soft and dry cloth to clean the product. Never use water or other chemical liquid to clean.

BATTERY INSTALLATION

- Rotate the Chatterbox in a vertical direction so that you are facing its back side (the Chatterbox will now be upside down).
- Use thumb to lightly apply pressure to thumb grip of batter cover and slide cover to the right. When the teeth on the underside of the cover cause the cover to stop, pull cover out towards you.
- Install three AAA size batteries according to the polarity indicated on the plastic casing (the negative terminal of each battery will be installed against each spring, while the positive connection will make contact with the opposite side).
- Replace the battery cover and rotate the Chatterbox in a vertical direction so that you are once again facing the product's front side.

SPECIFICATIONS

- 1. Value:」றிற்கிகூறியில்
- 1. Beat: 0-9 beat
- 2. Tempo: 30-280 bmp
- 3. Metronome, Time, Alarm Clock, Temperature, Humidity Display
- 4. Power: 3V (3 pcs AAA batteries)
- 5. Attachment: manual, AAA batteries

BATTERY REPLACEMENT

Please be sure that the batteries are installed according to the polarities displayed on the plastic casing of the battery compartment. If the Chatterbox experiences operational issues, please remove the batteries for several seconds and re-install. If the Chatterbox continues having issues, please replace the old batteries with fresh ones.

M&M Distributing Co. www.mandmdistributing.com

DASHBOARD MODE

As soon as you have successfully installed three AAA batteries, the Chatterbox's LCD display will enter into Dashboard Mode. This is the default mode for when the unit is not in use. The clock will start up at 12:00.

TO SET THE TIME: Press the BEAT button, and press the UP/DOWN arrow buttons to set the hour. Once you have selected the correct hour, press the BEAT button again and press the UP/DOWN arrow buttons to set the minute. Once you have selected the correct minute, press the BEAT button again to set the time and exit from TIME SETTING mode.

TO SET THE ALARM CLOCK: Press the TONE button to enter into ALARM CLOCK SETTING Mode. Press the TONE button again, and press the UP/DOWN arrow buttons to set the hour. Once you have selected the correct hour, press the TONE button again and press the UP/DOWN arrow buttons to set the minute. Once you have selected the correct minute, press the BEAT button to return to time on the display, and exit from ALARM CLOCK SETTING mode.

TO TURN THE ALARM CLOCK ON OR OFF: Press the eighth-note RHYTHM button to turn the Alarm Clock on. A Bell icon will then appear on the Chatterbox's LCD display above the colon of the Clock. To turn the alarm clock off, press the eight-note RHYTHM button again. The Bell icon will disappear.

TO STOP THE ALARM CLOCK FROM RINGING ONCE IT GOES OFF: Press any button to stop Alarm.

TO SET THE TEMPERATURE SCALE: Hold the eighth-note RHYTHM button for two seconds to alternate between Celsius or Fahrenheit.

Note: Hygrometer is pre-adjusted. No user adjustment is possible.

METRONOME MODE

TO INITIATE METRONOME MODE: Hold down the POWER button to initiate Metronome Mode. The display will change to Metronome Mode.

TO SELECT A TIME SIGNATURE WITH BEAT ACCENT: Press the BEAT button to select the number of beats per measure (0-9).

TO SELECT THE UNIT OF THE BEAT OR ANY PREFERRED SUBDIVISIONS: JD 前角珊角丸加頭少 Press the eighth-note RHYTHM button to select the unit/sub-division of the beat.

TO SELECT THE TEMPO: Use the UP/DOWN arrow buttons to select the Tempo (30-280 BPMs).

TO SELECT THE SOUND OF THE BEAT: Press the TONE button to alternate between Human Voice Counting, Guiro, Drum, or Mechanical Metronome Sound (please note that the Human Voice Counting sound will not work when the Beat is set to "0").

TO START OR START METRONOME: Press the POWER button to start or stop metronome.

TO EXIT METRONOME MODE: Hold the POWER button to exit METRONOME Mode and return to DASHBOARD. If the METRONOME is not in use for 60 seconds, the Chatterbox will automatically exit METRONOME Mode and return to the energy-saving DASHBOARD (please note that the Chatterbox does not turn "Off" into a blank LCD screen; it will always be in DASHBOARD Mode when not in use).

