



Ultrasonic Cleaner

Thank you for choosing to purchase one of our **CASCADA** products, we appreciate your business and believe that we have provided you with a product that is both reliable and value for money. We encourage you and your friends to choose from our range of **CASCADA** products again in future.

PACKAGE CONTENTS

- 1 x Ultrasonic cleaning unit
 - 1 x Plastic Basket
 - 2 x Plastic divider
 - 1 x Instruction manual
- Confirm all parts before disposing of carton.



SAFETY INSTRUCTIONS

Carefully read this manual before using this appliance. Make sure that you know how the appliance functions and how to operate it. Maintain the appliance in accordance with the instructions to ensure that it functions properly. Keep this manual with the appliance. If the appliance is to be used by a third party, this instruction manual must be supplied with it. The safety instructions, by themselves, do not eliminate danger completely, and proper accident prevention measures must always be used.

BEFORE INITIAL USE

Remove all packaging. Carefully wipe the outer case with a soft damp cloth and dry it afterwards with a dry towel. Do not immerse the appliance in water or any other liquid. Check for any damage that may have occurred during transit. Do not use if the appliance is damaged in any way or if the supply cord is damaged. Immediately contact the details at the front of this manual for assistance.



USERS MANUAL
Model: CE2136SC

ULTRASONIC CLEANER



USE

The Ultrasonic Cleaner is best used for cleaning items such as Jewellery, waterproof watches, watch chains, glass, spectacles, dentures, coins, cutlery, combs, toothbrushes, small metal parts and other similar items.

The water inside this unit will vibrate, causing ultrasonic waves that clean dust, smears and dirt.


Note: If cleaning items such as watches, ensure these are waterproof before submerging into the water. The supplier takes no responsibility to water damage of such items, as it is the users responsibility to ensure that the items being cleaned are suitable for ultrasonic cleaning. If you are in doubt, contact the manufacturer of the item to be cleaned.

OPERATION

This appliance has been designed for general indoor household use only.

Caution! Before placing any item into this appliance for cleaning ensure that it is not damaged in any way and that it is not likely to suffer damage through this cleaning process. If in any doubt consult the supplier of the article for confirmation of its suitability.

- Open the lid. Place items to be cleaned into cleaning container.

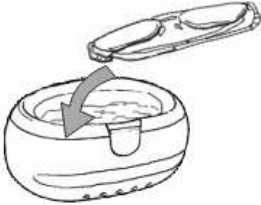

- Fill with water sufficient to cover the items (do not exceed the maximum water level indicator).



WARNING! Use without water may damage the appliance.



- Close the lid. Insert the supply cord plug into a suitable power outlet. The power indicator lamp (Blue) will glow.
- Press the ON button to start. The ON (Red) indicator lamp will glow.
- After 3 minutes the appliance will automatically stop. During operation a small amount of noise will be heard, this is normal.



- At any time the appliance may be turned OFF simply pressing the OFF button.

Note: Repeating the cleaning cycle can enhance the cleaning effect.

WARNING! After cleaning always check that small parts and or accessories have not come off. Check for damage. Ultrasonic cleaning may dislodge loose components, parts or decorations.


Note: For hard to remove stains a small amount of mild detergent may be added to the water.

Caution! Do not leave water inside the appliance when not in use. Do not leave items inside the appliance.

CARE AND CLEANING

Before cleaning.

When not in use or before cleaning, always disconnect the appliance from the mains supply.

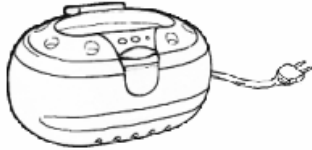

Cleaning guide.

Regularly clean the outside of the unit and the cleaning compartment with a soft damp cloth and dry it with a dry towel. Do not immerse in water. Do not use harsh solvents to clean the plastic components. **Warning! Do not immerse in water or other liquid.**

Storage

When not in use store the appliance, its accessories and these instructions in a dry place.



ELECTRICAL SAFETY

When using electric appliances always observe safety regulations where applicable to reduce the risk of fire, electric shock and personal injury.

Always check that the power supply corresponds to the voltage on the rating plate.

Supply cord and plug.

Always fully unwind any cord to avoid overheating. Never allow the supply cord to come in contact with hot objects. Do not carry the appliance by the cord or yank the cord to disconnect it from the mains supply. Disconnect by first switching off the outlet, grasping the plug and pulling it out gently. Do not let the supply cord hang over the edge of a table or counter.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or a similarly qualified person in order to avoid a hazard.

Children.

Caution. Keep out of reach of children.

This appliance is not intended for use by young children or infirm persons. Young children must be supervised to ensure that they do not play with the appliance.

Water.

Do not immerse..

Do not immerse any part of this appliance or supply cord in water or other liquid. Do not use with wet hands or use in damp situations.

Handling.

Do not drop the appliance. Do not use this appliance if it has been damaged in any way, immersed in water, the supply cord is damaged or the operation is faulty. Contact with any damaged appliance could result in electric shock.

Unattended.

Do not leave the appliance unattended while in use. Disconnect from the power supply.


When using electric appliances basic safety precautions should always be followed to reduce the risk of fire, electric shock and personal injury. Read all these instructions before attempting to use the appliance.

Consider the environment.

Do not use in damp or wet conditions. Do not use without adequate light. Do not use near flammable or hazardous materials. Do not use outdoors. Do not leave unattended while connected to the power supply.

Damaged or dropped.

Always inspect your appliance before use. Do not use this appliance if it has been damaged, dropped, left outdoors or dropped in water. Return it to an authorised service dealer for examination and repair. Do not attempt to service this appliance yourself. Refer servicing to qualified service personnel.

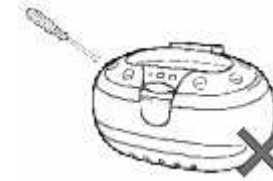

Liability.

No liability can be accepted for any damage or personal injury caused by non-compliance with these instructions or any other improper use or mishandling. This appliance is intended for household use only.

TECHNICAL SPECIFICATIONS

Supply Voltage	230-240V ~ AC 50 Hz
Power	50 Watts
Automatic Timer Setting	3 Minutes
Cycle Wave Energy	42,000 waves

Warranty Card

This product is guaranteed against faulty materials and workmanship for a period of two years from the date of purchase with proof of purchase. The obligation to the purchaser under this warranty is limited to servicing the unit and replacing defective parts or refund when the product is returned freight prepaid to the retailer with proof of purchase. This warranty becomes void if the product has been tampered with, damaged by accident, damaged in any other way by improper use or has been purchased second hand. All production orders have quality inspections. In the unlikely event of a deficiency, please contact the retailer from which this product was purchased.

WARRANTY FOR APPLIANCES USED COMMERCIALY LIMITED TO 90 DAYS

Type of Appliance: _____

Model No.: _____ Purchase Date: _____

Product Purchased From: _____

Your Name: _____

Address: _____

_____ Phone Number: _____

IMPORTANT!

Please retain this warranty card along with your purchase receipt. Please do not post to the retailer. If service or a warranty claim is required, both of these documents are to be returned with the appliance to your retailer, otherwise a fee may be charged or warranty declined. For technical help contact the helpline.

Technical Assistance Helpline

New Zealand call Toll Free 0800-898580

Australia call Toll Free 1-800-858011

Email service@orientalpacific.com